INTERNATIONAL STANDARD



INTERNATIONAL ORGANIZATION FOR STANDARDIZATION МЕЖДУНАРОДНАЯ ОРГАНИЗАЦИЯ ПО СТАНДАРТИЗАЦИИ ORGANISATION INTERNATIONALE DE NORMALISATION

Plastics — PVC resins for general use — Determination of plasticizer absorption at room temperature

Plastiques — Résines de polychlorure de vinyle à usages généraux — Détermination de la prise de plastifiant à froid

First edition -- 1977-10-01

- Détern - Détern - Détern - Détern - Détern - Click to viænn the full STANDARDSISO. COM. . Click to viænn the full - Click to viænn the full

UDC 678.743.22:678.01:541.183.03

Descriptors: plastics, polyvinyl chloride, tests, determination, plasticizer absorption.

Ref. No. ISO 4608-1977 (E)

FOREWORD

ISO (the International Organization for Standardization) is a worldwide federation of national standards institutes (ISO member bodies). The work of developing International Standards is carried out through ISO technical committees. Every member body interested in a subject for which a technical committee has been set up has the right to be represented on that committee. International organizations, governmental and non-governmental, in liaison with ISO, also take part in the work.

Draft International Standards adopted by the technical committees are circulated to the member bodies for approval before their acceptance as International Standards by the ISO Council.

International Standard ISO 4608 was developed by Technical Committee ISO/TC 61, *Plastics*, and was circulated to the member bodies in December 1975.

It has been approved by the member bodies of the following countries.

Romania

Australia Ireland Austria Israel Belgium Italy Brazil Japan Canada Mexico Finland Netherlands France New Zealand Germany Peru Hungary Poland India Portugal

South Africa, Rep. of

OF 01150 A608:191

Spain Sweden Switzerland Turkey

United Kingdom

U.S.A. U.S.S.R. Yugoslavia

No member body expressed disapproval of the document.

Iran

Plastics — PVC resins for general use — Determination of plasticizer absorption at room temperature

1 SCOPE AND FIELD OF APPLICATION

This International Standard specifies a method for determining plasticizer absorption at room temperature. It is applicable to general purpose resins (designated "G" in ISO 1060, Plastics — Designation of polyvinyl chloride resins).

The object of the test is to determine the quantity of plasticizer absorbed by a resin at room temperature to give a dry mixture.

The results give a general indication of the plasticizer absorption of the resins at room temperature. They indicate the usefulness of resins for the manufacture of plasticized dry blends, particularly when taken in conjunction with the results of plasticizer absorption tests under hot conditions.

2 PRINCIPLE

Addition of an excess of di-2-ethylhexyl phthalate (DOP) to a specific amount of resin. Centrifuging of the mixture under defined conditions and calculation of the amount of plasticizer retained by the resin.

- 3 REAGENT
- 3.1 Di-2-ethylhexyl phthalate (DOP).
- 4 APPARATUS

Usual laboratory apparatus, and the following:

- 4.1 Balance, accurate to 0,1 mg.
- 4.2 Burette, for example 50 ml, graduated in 0,1 ml.
- **4.3 Centrifuge**, whose rotor turns in a horizontal plane and which has an acceleration under the test conditions of 24 500 to $29\,500\,\mathrm{m\cdot s^{-2}}$ measured at the level of the bottom of the tube, with, if necessary, a cooling system to prevent the temperature of the mixture from exceeding 30 °C at the end of centrifuging for 60 min.

NOTE — It is permissible to use higher acceleration to reduce the centrifuging time, for example 34 500 m s⁻² and 30 min, provided that it has been verified that the results obtained are equivalent.

- 4.4 Centrifuge tubes, to fifthe centrifuge used, consisting of a tube, usually of glass, with a conical bottom pierced by a hole of about 0,8 mm diameter. See the figure.
- 4.5 Plastic sheaths (polyamide, polyethylene, etc.) with a piece of polyvinyl chloride pipe at the bottom to support the centrifuge tube. See the figure.

Dimensions in millimetres

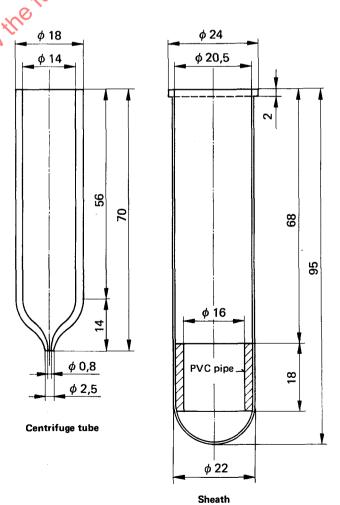


FIGURE - Example of centrifuge tube and sheath