

NFPA[®]

99

Health Care Facilities Code

2018



IMPORTANT NOTICES AND DISCLAIMERS CONCERNING NFPA® STANDARDS

NOTICE AND DISCLAIMER OF LIABILITY CONCERNING THE USE OF NFPA STANDARDS

NFPA® codes, standards, recommended practices, and guides (“NFPA Standards”), of which the document contained herein is one, are developed through a consensus standards development process approved by the American National Standards Institute. This process brings together volunteers representing varied viewpoints and interests to achieve consensus on fire and other safety issues. While the NFPA administers the process and establishes rules to promote fairness in the development of consensus, it does not independently test, evaluate, or verify the accuracy of any information or the soundness of any judgments contained in NFPA Standards.

The NFPA disclaims liability for any personal injury, property, or other damages of any nature whatsoever, whether special, indirect, consequential or compensatory, directly or indirectly resulting from the publication, use of, or reliance on NFPA Standards. The NFPA also makes no guaranty or warranty as to the accuracy or completeness of any information published herein.

In issuing and making NFPA Standards available, the NFPA is not undertaking to render professional or other services for or on behalf of any person or entity. Nor is the NFPA undertaking to perform any duty owed by any person or entity to someone else. Anyone using this document should rely on his or her own independent judgment or, as appropriate, seek the advice of a competent professional in determining the exercise of reasonable care in any given circumstances.

The NFPA has no power, nor does it undertake, to police or enforce compliance with the contents of NFPA Standards. Nor does the NFPA list, certify, test, or inspect products, designs, or installations for compliance with this document. Any certification or other statement of compliance with the requirements of this document shall not be attributable to the NFPA and is solely the responsibility of the certifier or maker of the statement.

REVISION SYMBOLS IDENTIFYING CHANGES FROM THE PREVIOUS EDITION

Text revisions are shaded. A  before a section number indicates that words within that section were deleted and a  to the left of a table or figure number indicates a revision to an existing table or figure. When a chapter was heavily revised, the entire chapter is marked throughout with the  symbol. Where one or more sections were deleted, a • is placed between the remaining sections. Chapters, annexes, sections, figures, and tables that are new are indicated with an .

Note that these indicators are a guide. Rearrangement of sections may not be captured in the markup, but users can view complete revision details in the First and Second Draft Reports located in the archived revision information section of each code at www.nfpa.org/docinfo. Any subsequent changes from the NFPA Technical Meeting, Tentative Interim Amendments, and Errata are also located there.



ALERT: THIS STANDARD HAS BEEN MODIFIED BY A TIA OR ERRATA

Users of NFPA codes, standards, recommended practices, and guides (“NFPA Standards”) should be aware that NFPA Standards may be amended from time to time through the issuance of a Tentative Interim Amendment (TIA) or corrected by Errata. An official NFPA Standard at any point in time consists of the current edition of the document together with any TIAs and Errata then in effect.

To determine whether an NFPA Standard has been amended through the issuance of TIAs or corrected by Errata, go to www.nfpa.org/docinfo to choose from the list of NFPA Standards or use the search feature to select the NFPA Standard number (e.g., NFPA 13). The document information page provides up-to-date document-specific information as well as postings of all existing TIAs and Errata. It also includes the option to register for an “Alert” feature to receive an automatic email notification when new updates and other information are posted regarding the document.

IMPORTANT NOTICES AND DISCLAIMERS CONCERNING NFPA® STANDARDS

ADDITIONAL NOTICES AND DISCLAIMERS

Updating of NFPA Standards

Users of NFPA codes, standards, recommended practices, and guides (“NFPA Standards”) should be aware that these documents may be superseded at any time by the issuance of new editions or may be amended from time to time through the issuance of Tentative Interim Amendments or corrected by Errata. An official NFPA Standard at any point in time consists of the current edition of the document together with any Tentative Interim Amendments and any Errata then in effect. In order to determine whether a given document is the current edition and whether it has been amended through the issuance of Tentative Interim Amendments or corrected through the issuance of Errata, consult appropriate NFPA publications such as the National Fire Codes® Subscription Service, visit the NFPA website at www.nfpa.org, or contact the NFPA at the address listed below.

Interpretations of NFPA Standards

A statement, written or oral, that is not processed in accordance with Section 6 of the Regulations Governing the Development of NFPA Standards shall not be considered the official position of NFPA or any of its Committees and shall not be considered to be, nor be relied upon as, a Formal Interpretation.

Patents

The NFPA does not take any position with respect to the validity of any patent rights referenced in, related to, or asserted in connection with an NFPA Standard. The users of NFPA Standards bear the sole responsibility for determining the validity of any such patent rights, as well as the risk of infringement of such rights, and the NFPA disclaims liability for the infringement of any patent resulting from the use of or reliance on NFPA Standards.

NFPA adheres to the policy of the American National Standards Institute (ANSI) regarding the inclusion of patents in American National Standards (“the ANSI Patent Policy”), and hereby gives the following notice pursuant to that policy:

NOTICE: The user’s attention is called to the possibility that compliance with an NFPA Standard may require use of an invention covered by patent rights. NFPA takes no position as to the validity of any such patent rights or as to whether such patent rights constitute or include essential patent claims under the ANSI Patent Policy. If, in connection with the ANSI Patent Policy, a patent holder has filed a statement of willingness to grant licenses under these rights on reasonable and nondiscriminatory terms and conditions to applicants desiring to obtain such a license, copies of such filed statements can be obtained, on request, from NFPA. For further information, contact the NFPA at the address listed below.

Law and Regulations

Users of NFPA Standards should consult applicable federal, state, and local laws and regulations. NFPA does not, by the publication of its codes, standards, recommended practices, and guides, intend to urge action that is not in compliance with applicable laws, and these documents may not be construed as doing so.

Copyrights

NFPA Standards are copyrighted. They are made available for a wide variety of both public and private uses. These include both use, by reference, in laws and regulations, and use in private self-regulation, standardization, and the promotion of safe practices and methods. By making these documents available for use and adoption by public authorities and private users, the NFPA does not waive any rights in copyright to these documents.

Use of NFPA Standards for regulatory purposes should be accomplished through adoption by reference. The term “adoption by reference” means the citing of title, edition, and publishing information only. Any deletions, additions, and changes desired by the adopting authority should be noted separately in the adopting instrument. In order to assist NFPA in following the uses made of its documents, adopting authorities are requested to notify the NFPA (Attention: Secretary, Standards Council) in writing of such use. For technical assistance and questions concerning adoption of NFPA Standards, contact NFPA at the address below.

For Further Information

All questions or other communications relating to NFPA Standards and all requests for information on NFPA procedures governing its codes and standards development process, including information on the procedures for requesting Formal Interpretations, for proposing Tentative Interim Amendments, and for proposing revisions to NFPA standards during regular revision cycles, should be sent to NFPA headquarters, addressed to the attention of the Secretary, Standards Council, NFPA, 1 Batterymarch Park, P.O. Box 9101, Quincy, MA 02269-9101; email: stds_admin@nfpa.org.

For more information about NFPA, visit the NFPA website at www.nfpa.org. All NFPA codes and standards can be viewed at no cost at www.nfpa.org/docinfo.

Copyright © 2017 National Fire Protection Association®. All Rights Reserved.

NFPA® 99

Health Care Facilities Code

2018 Edition

This edition of NFPA 99, *Health Care Facilities Code*, was prepared by the Technical Committees on Electrical Systems, Fundamentals, Health Care Emergency Management and Security, Hyperbaric and Hypobaric Facilities, Mechanical Systems, Medical Equipment, and Piping Systems, released by the Correlating Committee on Health Care Facilities, and acted on by NFPA at its June Association Technical Meeting held June 4–7, 2017, in Boston, MA. It was issued by the Standards Council on August 17, 2017, with an effective date of September 6, 2017, and supersedes all previous editions.

This document has been amended by one or more Tentative Interim Amendments (TIAs) and/or Errata. See “Codes & Standards” at www.nfpa.org for more information.

This edition of NFPA 99 was approved as an American National Standard on September 6, 2017.

Origin and Development of NFPA 99

The idea for this document grew as the number of documents under the original NFPA Committee on Hospitals grew. By the end of 1980, there existed 12 documents on a variety of subjects, 11 directly addressing fire-related problems in and about health care facilities. These documents covered health care emergency preparedness, inhalation anesthetics, respiratory therapy, laboratories in health-related institutions, hyperbaric facilities, hypobaric facilities, inhalation anesthetics in ambulatory care facilities, home use of respiratory therapy, medical–surgical vacuum systems in hospitals, essential electrical systems for health care facilities, safe use of electricity in patient care areas of health care facilities, and safe use of high-frequency electricity in health care facilities.

A history on the documents that covered these topics can be found in the “Origin and Development of NFPA 99” in the 1984 edition of NFPA 99. What was then the Health Care Facilities Correlating Committee reviewed the matter beginning in late 1979 and concluded that combining all the documents under its jurisdiction would be beneficial to those who used those documents, for the following reasons:

- (1) The referenced documents were being revised independently of each other. Combining all the individual documents into one document would place all of them on the same revision cycle.
- (2) It would place in one unit many documents that referenced each other.
- (3) It would be an easier and more complete reference for the various users of the document (e.g., hospital engineers, medical personnel, designers and architects, and the various types of enforcing authorities).

To learn if this proposal was desired or desirable to users of the individual documents, the Committee issued a request for public comments in the spring of 1981, asking whether purchasers of the individual documents utilized more than one document in the course of their activities and whether combining these individual documents would be beneficial. Seventy-five percent of responses supported such a proposal, with 90 percent of health care facilities and organizations supportive of it. Based on this support, the Correlating Committee proceeded with plans to combine all the documents under its jurisdiction into one document.

In January, 1982, a compilation of the latest edition of each of the 12 individual documents under the jurisdiction of the correlating committee was published. It was designated NFPA 99, *Health Care Facilities Code*. The correlating committee also entered the document into the revision cycle reporting to the 1983 Fall Meeting for the purpose of formally adopting the document.

For the 1984 edition of NFPA 99, in addition to technical changes, administrative and organizational changes were made.

For the 1987 edition of NFPA 99, the third and final step in the process of combining the previous individual documents took place — that of integrating the content of these individual documents into a cohesive document. In addition, there were again technical changes made. The 1987 edition also saw the incorporation of NFPA 56F, *Standard on Nonflammable Medical Piped Gas Systems*, into NFPA 99.

For the 1990 edition of NFPA 99, some structural changes were made and some modifiers were added to make it easier to determine where requirements are applicable. Technical changes made included correlation with NFPA 101®, *Life Safety Code*®, changes for compressed medical air systems on the use of gas-powered medical devices operating at a gauge pressure of 200 psi and piped gas systems in general, clarification that patient care areas and wet locations are mutually exclusive, and further guidance on the effects of a disaster on staff.

For the 1993 edition of NFPA 99 there were further efforts to make the document more user-friendly (e.g., placing all “recommended” guidance either in notes or in the appendix). Significant technical changes included adding requirements and recommendations to further prevent or minimize fires in operating rooms. There were also major changes to requirements for installing, testing, inspecting, verifying, and maintaining nonflammable medical piped gas systems. New sections on dental compressed air and dental vacuum requirements were added. For the 1996 edition of NFPA 99, further changes to make the document more user-friendly were made. These included restructuring Chapters 3 and 4 so that all requirements for a Type 1, 2, or 3 essential electrical system, or a Level 1, 2, 3, or 4 piped gas or vacuum system, were contained in one section.

Other technical changes included moving requirements on flammable anesthetizing locations and the use of flammable inhalation anesthetics to a new Appendix 2. The subject of emergency preparedness was changed from guidance to a new chapter containing requirements. A new chapter on home health care was added. Requirements for storage rooms containing gas cylinders and containers totaling less than 3000 ft³ were also added. For the 1999 edition, some significant technical and structural changes were made. Chapters on ambulatory health care centers, clinics, and medical/dental offices, were replaced completely by a new Chapter 13 covering health care facilities other than hospitals, nursing homes, and limited care facilities as defined in the document. A new chapter on freestanding birthing centers was added.

The 2002 edition included format and technical revisions. The *Manual of Style for NFPA Technical Committee Documents*, April 2000 edition, was applied to the document, resulting in changes to its structure and format. Introductory material in Chapter 1 was formatted for consistency among all NFPA documents. Referenced publications that apply to the document were relocated from the last chapter to Chapter 2, resulting in the renumbering of chapters. Informational references remained in the last annex. Appendices were designated as annexes. Definitions in Chapter 3 were reviewed for consistency with definitions in other NFPA documents, were systematically aligned, and were individually numbered. Paragraph structuring was revised with the intent of one mandatory requirement per section, subsection, or paragraph. Information that often accompanied many of the requirements was moved to Annex A, Explanatory Material. Exceptions were deleted or rephrased in mandatory text, unless the exception represented an allowance or required alternate procedure to a general rule when limited specified conditions existed. The reformatted appearance and structure provided continuity among NFPA documents, clarity of mandatory text, and greater ease in locating specific mandatory text.

The occupancy Chapters 13–21 stated what is required, while Chapters 4–12 prescribed how those requirements are achieved. Each chapter began with a section explaining applicability. Information concerning the nature of hazards was moved to Annex B. Annexes A and C retained explanatory information, and Annexes 1 and 2 became Annexes D and E. Informational references were in Annex F.

The changes made to the 2005 edition were mainly for clarity and were editorial in nature. A centralized computer was allowed to be used in lieu of one of the master alarms for medical gas and vacuum systems. Stainless steel tubing was added as an approved material for vacuum systems.

The 2012 edition went through a major overhaul. The premise of an occupancy-based document was modified to become a risk-based document. NFPA 99 was changed to a “code” instead of a “standard” to reflect how the document is used and adopted. This change was made to reflect how health care is delivered. The risk to the patient does not change for a given procedure. If the procedure is performed in a doctor’s office versus a hospital, the risk remains the same. Therefore, NFPA 99 eliminated the occupancy chapters and transitioned to a risk-based approach. New Chapter 4 outlined the parameters for this approach. The *Code* now reflected the risk to the patient in defined categories of risk.

Chapter 5, Gas and Vacuum Systems, went through some editorial changes in the 2012 edition as well as adding new material on the testing and maintenance of gas and vacuum systems. In addition, the administrative details for care, maintenance, and handling of cylinders moved to chapters under the responsibility of the new Technical Committee on Medical Equipment. Several new chapters were added for the 2012 edition on Information Technology and Communications Systems; Plumbing; Heating, Ventilation, and Air Conditioning; Security Management; and Features of Fire Protection. Many of these systems were not previously addressed by NFPA 99. These are important systems and protection features in health care and needed to be addressed. The Technical Committees on Gas Delivery Equipment and the Technical Committee on Electrical Equipment were combined into a single Technical Committee on Medical Equipment. The hyperbaric chapter had relatively minor changes for clarity.

The 2015 edition of NFPA 99 built upon the major change that the 2012 edition presented. The way that risk categories are defined was revised to be more inclusive, and the categories could now be applied to equipment and activities, rather than being applicable only to chapters that deal with systems. The requirements for Category 3 medical gas and vacuum systems, while originally aimed specifically for dental applications, were expanded to include the possibility that other gases might fall under Category 3, based on the facility's risk assessment.

The Technical Committee on Electrical Systems continued the task of correlating requirements with *NFPA 70®*, *National Electrical Code®*, and Chapter 6, and they removed the requirements for Level 3 essential electrical systems (EES), determining that if there was not a need for a Level 1 or 2 EES, then the requirements in *NFPA 70* that apply to all buildings would provide the necessary level of safety. Each of the technical committees made a concerted effort to specifically identify how each chapter was to apply to existing buildings or installations and to list the sections that applied.

The 2018 edition of the code features numerous technical changes as well as provisions for new technologies and materials. Some of the most major or noteworthy changes are as follows:

- (1) The requirements addressing the risk assessment in Chapter 4 have been revised to clarify the responsibility for conducting a risk assessment and determining risk categories. It further stresses, through annex language, that determining risk should be a collaborative effort.
- (2) Chapter 5 includes requirements that now allow for the use of oxygen concentrators as central supply sources for piped systems.
- (3) Corrugated medical tubing is now a permitted material for medical gas and vacuum systems.
- (4) Chapter 6 has been reorganized to be structured in a more logical manner. This better groups related requirements and allows for the deletion of duplicated requirements for different types of EES.
- (5) Chapter 7 now includes requirements for wireless phone and paging integration as well as for clinical information systems.
- (6) Chapter 14 has compiled all of the requirements for inspection, testing, and maintenance for hyperbaric facilities into one section.
- (7) A new Chapter 15, Dental Gas and Vacuum Piping Systems, was added to the *Code*. After several editions of trying to work the requirements for dental systems into Chapter 5, it was decided to create a chapter dedicated to the application of piped gas and vacuum systems for these systems that do not always readily fall under the requirements for medical gas and vacuum as addressed in Chapter 5.

Correlating Committee on Health Care Facilities

Michael A. Crowley, *Chair*
JENSEN HUGHES, TX [SE]

Chad E. Beebe, ASHE - AHA, WA [U]
Constance Bobik, B&E Fire Safety Equipment Inc., FL [IM]
Wayne L. Brannan, Medical University of South Carolina, SC [U]
Bruce D. Brooks, Noelker and Hull Associates, Inc., VA [SE]
 Rep. American Institute of Architects
Gordon D. Burrill, Teegor Consulting Inc., Canada [U]
 Rep. Canadian Healthcare Engineering Society
David A. Dagenais, Wentworth-Douglass Hospital, NH [U]
 Rep. NFPA Health Care Section
Keith Ferrari, Praxair, Inc., NC [M]
Daniel P. Finnegan, Siemens Industry, Inc., IL [M]

Robert M. Gagnon, Gagnon Engineering, MD [SE]
Ronald E. Galloway, Moses Cone Health System, NC [U]
Sharon S. Gilyeat, Koffel Associates, Inc., MD [SE]
Ken L. Gregory, TSIG Consulting, TN [SE]
Frank L. Keisler, Jr., CNA Insurance Company, GA [I]
Dale L. Lyman, Greeley Fire Department, CO [E]
Denise L. Pappas, Valcom, Inc., VA [M]
 Rep. National Electrical Manufacturers Association
Ronald A. Schroeder, ASCO Power Technologies, LP, NJ [M]
Joseph H. Versteeg, Versteeg Associates, CT [E]
 Rep. DNV Health Care Inc.

Alternates

H. Shane Ashby, West Tennessee Healthcare, TN [U]
 (Alt. to Wayne L. Brannan)
Esteban Cota, Siemens Industry, Inc., IL [M]
 (Alt. to Daniel P. Finnegan)
William E. Koffel, Koffel Associates, Inc., MD [SE]
 (Alt. to Sharon S. Gilyeat)

Rodger Reiswig, Tyco/SimplexGrinnell, FL [M]
 (Alt. to Denise L. Pappas)
Eric R. Rosenbaum, JENSEN HUGHES, MD [SE]
 (Alt. to Michael A. Crowley)

Nonvoting

James Bell, Intermountain Healthcare, UT [U]
 Rep. TC on Hyperbaric and Hypobaric Facilities
Jason D'Antona, Thompson Consultants, Inc., MA [SE]
 Rep. TC on Electrical Systems
Donald D. King, Pleasant Hill, CA [SE]
 Rep. TC on Medical Equipment
David P. Klein, U.S. Department of Veterans Affairs, DC [U]
 Rep. TC on Fundamentals
Jonathan Hart, NFPA Staff Liaison

James K. Lathrop, Koffel Associates, Inc., CT [SE]
 Rep. TC on Piping Systems
Susan B. McLaughlin, MSL Health Care Partners, IL [U]
 Rep. TC on Health Care Emergency Management & Security
Michael P. Sheerin, TLC Engineering for Architecture, FL [SE]
 Rep. TC on Mechanical Systems
Marvin J. Fischer, Monroe Township, NJ [SE]
 (Member Emeritus)

This list represents the membership at the time the Committee was balloted on the final text of this edition. Since that time, changes in the membership may have occurred. A key to classifications is found at the back of the document.

NOTE: Membership on a committee shall not in and of itself constitute an endorsement of the Association or any document developed by the committee on which the member serves.

Committee Scope: This Committee shall have primary responsibility for documents that contain criteria for safeguarding patients and health care personnel in the delivery of health care services within health care facilities: a) from fire, explosion, electrical, and related hazards resulting either from the use of anesthetic agents, medical gas equipment, electrical apparatus, and high frequency electricity, or from internal or external incidents that disrupt normal patient care; b) from fire and explosion hazards; c) in connection with the use of hyperbaric and hypobaric facilities for medical purposes; d) through performance, maintenance and testing criteria for electrical systems, both normal and essential; and e) through performance, maintenance and testing, and installation criteria: (1) for vacuum systems for medical or surgical purposes, and (2) for medical gas systems; and f) through performance, maintenance and testing of plumbing, heating, cooling, and ventilating in health care facilities.

Technical Committee on Electrical Systems

Jason D'Antona, *Chair*

Thompson Consultants, Inc., MA [SE]

Nancy W. Chilton, Schneider Electric, NC [M]

Dan Chisholm, Jr., MGI Systems, Inc., FL [IM]

James H. Costley, Jr., Newcomb & Boyd, GA [SE]

Rep. NFPA Health Care Section

Charles Cowles, American Society Of Anesthesiologists, TX [C]

David A. Dagenais, Wentworth-Douglass Hospital, NH [U]

Daniel T. DeHanes, Ascom Wireless Solutions, FL [M]

Rep. National Electrical Manufacturers Association

Chris M. Finen, Eaton Corporation, TN [M]

William T. Fiske, Intertek Testing Services, NY [RT]

Rep. National Electrical Code Correlating Committee

Pamela Gwynn, UL LLC, NC [RT]

Gary J. Krupa, U.S. Department of Veterans Affairs, NE [U]

Stephen M. Lipster, The Electrical Trades Center, OH [L]

Rep. International Brotherhood of Electrical Workers

Anderson Martino, Massachusetts General Hospital, MA [U]

Terrance L. McKinch, Mortenson Construction, MI [IM]

James E. Meade, U.S. Army Corps of Engineers, MD [U]

Hugh O. Nash, Jr., Nash-Consult, TN [SE]

Thomas J. Parrish, Telgian Corporation, MI [SE]

John W. Peterson, Utility Service Corporation, AL [IM]

Rep. InterNational Electrical Testing Association

Vincent M. Rea, TLC Engineering for Architecture, FL [SE]

Brian E. Rock, Hubbell Incorporated, CT [M]

Christopher M. Romano, New York State Department of Health, NY [E]

Steve R. Sappington, Caterpillar Inc., GA [M]

Ronald M. Smidt, Carolinas HealthCare System, NC [U]

Rep. American Society for Healthcare Engineering

Walter N. Vernon, IV, Mazzetti, CA [SE]

Leonard W. White, Stanford White Associates Consulting Engineers, Inc., NC [SE]

Herbert V. Whittall, Electrical Generating Systems Association, FL [M]

Rep. Electrical Generating Systems Association

Robert Wolff, BRE Engineers, NC [SE]

Alternates

Gary A. Beckstrand, Utah Electrical JATC, UT [L]

(Alt. to Stephen M. Lipster)

Chad E. Beebe, ASHE - AHA, WA [U]

(Alt. to Ronald M. Smidt)

H. David Chandler, Newcomb & Boyd, GA [SE]

(Alt. to James H. Costley, Jr.)

Dan Chisholm, Sr., MGI Systems, Inc., FL [IM]

(Alt. to Dan Chisholm, Jr.)

Herbert H. Daugherty, Electric Generating Systems Association, FL [M]

(Alt. to Herbert V. Whittall)

Jan Ehrenwerth, Yale University, CT [C]

(Alt. to Charles Cowles)

Steven A. Elliott, U.S. Department of Veterans Affairs, CA [U]

(Alt. to Gary J. Krupa)

Jonathan Hart, NFPA Staff Liaison

Paul David Evers, UL LLC, FL [RT]

(Alt. to Pamela Gwynn)

Michael S. Goodheart, Ascom (US), FL [M]

(Alt. to Daniel T. DeHanes)

Chad Kennedy, Schneider Electric, SC [M]

(Alt. to Nancy W. Chilton)

Gary A. Spivey, U.S. Army Corps of Engineers, VA [U]

(Alt. to James E. Meade)

Mark J. Sylvester, Telgian Corporation, AZ [SE]

(Alt. to Thomas J. Parrish)

Edward Treveiler, Eaton, NC [M]

(Alt. to Chris M. Finen)

Bogue M. Waller, Gresham Smith & Partners, TN [SE]

(Alt. to Hugh O. Nash, Jr.)

This list represents the membership at the time the Committee was balloted on the final text of this edition. Since that time, changes in the membership may have occurred. A key to classifications is found at the back of the document.

NOTE: Membership on a committee shall not in and of itself constitute an endorsement of the Association or any document developed by the committee on which the member serves.

Committee Scope: This Committee shall have primary responsibility for documents or portions of documents covering the minimum requirements for performance, testing, maintenance, operations, and failure management of electrical systems, low voltage systems, wireless technologies, informatics, and telemedicine to safeguard patients, staff, and visitors within health care facilities based on established risk categories.

Technical Committee on Fundamentals

David P. Klein, *Chair*

U.S. Department of Veterans Affairs, DC [U]
Rep. U.S. Department of Veterans Affairs

Bruce L. Abell, U.S. Army Corps of Engineers, VA [U]

Chad E. Beebe, ASHE - AHA, WA [U]
Rep. American Society for Healthcare Engineering

Jeff N. Besel, Obermiller Nelson Engineering, MN [M]
Rep. Automatic Fire Alarm Association, Inc.

Bruce D. Brooks, Noelker and Hull Associates, Inc., VA [SE]
Rep. American Institute of Architects

Gordon D. Burrill, Teegor Consulting Inc., Canada [U]
Rep. Canadian Healthcare Engineering Society

Michael A. Crowley, JENSEN HUGHES, TX [SE]

Richard L. Day, Michigan State Fire Marshal's Office, MI [E]

Carl J. Ferlitch, Jr., Chubb Group of Insurance Companies, PA [I]

Michael S. Jensen, U.S. Department of Health & Human Services, AZ [E]

Frank L. Keisler, Jr., CNA Insurance Company, GA [I]

Henry Kowalenko, Illinois Department of Public Health, IL [E]

James K. Lathrop, Koffel Associates, Inc., CT [SE]

Stephen M. Lipster, The Electrical Trades Center, OH [L]
Rep. International Brotherhood of Electrical Workers

Dale L. Lyman, Greeley Fire Department, CO [E]

Michael W. Major, University of California-Davis Health System, CA [U]

Bret M. Martin, Carolinas Healthcare Systems, NC [U]

Thomas G. McNamara, Northwell Health - Southside Hospital, NY [U]

James S. Peterkin, TLC Engineering, PA [SE]

Milosh T. Puchovsky, Worcester Polytechnic Institute, MA [SE]

Pamela Reno, Telgian, OH [SE]

Robert Sontag, State of Colorado, CO [E]

Frank L. Van Overmeiren, Fire Protection & Code Consultants, LLC, IN [SE]

John L. Williams, Washington State Department of Health, WA [E]

Alternates

Beth A. Alexander, FP&C Consultants, Inc., IN [SE]
(Alt. to Frank L. Van Overmeiren)

Gary A. Beckstrand, Utah Electrical JATC, UT [L]
(Alt. to Stephen M. Lipster)

Roger N. Dahozy, U.S. Department of Health & Human Services, AZ [E]
(Alt. to Michael S. Jensen)

Allison C. Ellis, Koffel Associates, Inc., MD [SE]
(Alt. to James K. Lathrop)

Daniel P. Finnegan, Siemens Industry, Inc., IL [M]
(Voting Alt.)
Rep. Automatic Fire Alarm Association, Inc.

Lindsay Hahn, Illinois Department of Public Health, IL [E]
(Alt. to Henry Kowalenko)

Jonathan Hart, NFPA Staff Liaison

Peter Leszczak, U.S. Department of Veterans Affairs, CT [U]
(Alt. to David P. Klein)

Michael Mansfield, CNA Insurance Company, IL [I]
(Alt. to Frank L. Keisler, Jr.)

Kevin A. Scarlett, Washington State Department of Health, WA [E]
(Alt. to John L. Williams)

Sean Schwartzkopf, State of Colorado, CO [E]
(Alt. to Robert Sontag)

Jennifer Zaworski, Jensen Hughes/AON Fire Protection Engineering, MD [SE]
(Alt. to Michael A. Crowley)

This list represents the membership at the time the Committee was balloted on the final text of this edition. Since that time, changes in the membership may have occurred. A key to classifications is found at the back of the document.

NOTE: Membership on a committee shall not in and of itself constitute an endorsement of the Association or any document developed by the committee on which the member serves.

Committee Scope: This Committee shall have primary responsibility for documents or portions of documents on the scope, application, and intended use of documents under the Health Care Facilities Project, including reference standards, performance, the protection from fire and explosion hazards, protection of special hazards, establishing criteria for levels of health care services based on risk, as well as definitions not assigned to other committees in the Health Care Facilities Project.

Technical Committee on Health Care Emergency Management and Security

Susan B. McLaughlin, *Chair*

MSL Health Care Partners, IL [U]

Rep. American Society for Healthcare Engineering

Robert M. Becker, Incident Management Solutions, Inc., NY [SE]

Pete Brewster, U.S. Department of Veterans Affairs, WV [U]

David A. Dagenais, Wentworth-Douglass Hospital, NH [U]

Scott R. Fernhaber, Johnson Controls, Inc., WI [M]

Nicholas E. Gabriele, Russell Phillips & Associates, LLC, CT [SE]

Sharon S. Gilyeat, Koffel Associates, Inc., MD [SE]

Jeffrey E. Harper, JENSEN HUGHES, IL [SE]

Frank L. Keisler, Jr., CNA Insurance Company, GA [I]

Dale L. Lyman, Greeley Fire Department, CO [E]

John Maurer, The Joint Commission, IL [E]

James L. Paturas, Yale New Haven Health System, CT [U]

Jack Poole, Poole Fire Protection, Inc., KS [SE]

Ronald C. Reynolds, Virginia State Fire Marshal's Office, VA [E]

Kevin A. Scarlett, Washington State Department of Health, WA [E]

James P. Simpson, Electrical Training Alliance, MN [L]

Rep. International Brotherhood of Electrical Workers

Michael D. Widdekind, Zurich Services Corporation, MD [I]

Alternates

Chad E. Beebe, ASHE - AHA, WA [U]

(Alt. to Susan B. McLaughlin)

Myron Lee Draper, Koffel Associates, MD [SE]

(Alt. to Sharon S. Gilyeat)

Zachary Goldfarb, Incident Management Solutions, Inc., NY [SE]

(Alt. to Robert M. Becker)

Valerie Miller, Zurich North America, PA [I]

(Alt. to Michael D. Widdekind)

John Pelazza, Yale New Haven Health System, CT [U]

(Alt. to James L. Paturas)

Eric R. Rosenbaum, JENSEN HUGHES, MD [SE]

(Alt. to Jeffrey E. Harper)

Nonvoting

Reginald D. Jackson, U.S. Department of Labor, DC [E]

Chelsea Tuttle, NFPA Staff Liaison

This list represents the membership at the time the Committee was balloted on the final text of this edition. Since that time, changes in the membership may have occurred. A key to classifications is found at the back of the document.

NOTE: Membership on a committee shall not in and of itself constitute an endorsement of the Association or any document developed by the committee on which the member serves.

Committee Scope: This Committee shall have primary responsibility for documents or portions of documents covering the framework for emergency management and security of health care facilities proportionate to the risk of the patient and health care staff. This Committee shall have primary responsibility for the elements of planning over a continuum from minor incidences to catastrophic events, including: management controls, mitigation practices, incident response, continuity of services, recovery, stored capacity, staff training, and program evaluation based on established risk categories.

Technical Committee on Hyperbaric and Hypobaric Facilities

James Bell, *Chair*

Intermountain Healthcare, UT [U]

Michael W. Allen, Life Support Technologies Group Inc., PA [U]

Peter Atkinson, Royal Brisbane and Womens Hospital, Australia [C]
Rep. Hyperbaric Technicians & Nurses Association Inc.

Richard C. Barry, Healogics, FL [SE]

Chad E. Beebe, ASHE - AHA, WA [U]
Rep. American Society for Healthcare Engineering

W. Robert Bryant, Perry Baromedical Corporation, TX [M]

Mario Caruso, Hyperbaric Consulting LLC, FL [SE]

Keith Ferrari, Praxair, Inc., NC [M]

W. T. Gurnée, OxyHeal Medical Systems, Inc., CA [M]

Barry E. Newton, WHA International, Inc., NM [SE]

Kevin A. Scarlett, Washington State Department of Health, WA [E]
Rep. NFPA Health Care Section

Robert B. Sheffield, International ATMO, Inc., TX [U]

John M. Skinner, Medical Equipment Technology, Inc., GA [IM]

Deepak Talati, Sechrist Industries, Inc., CA [M]

Viky G. D. Verna, US Food and Drug Administration, MD [E]

Wilbur T. Workman, Undersea & Hyperbaric Medical Society, TX [U]

Alternates

Justin Callard, Hyperbaric Technicians & Nurses Association Inc., Australia [C]

(Alt. to Peter Atkinson)

Paul Mario Caruso, Hyperbaric Consulting LLC, FL [SE]

(Alt. to Mario Caruso)

Mark Chipps, Life Support Technologies Group Inc., NY [U]
(Alt. to Michael W. Allen)

Kevin I. Posey, International ATMO, Inc., TX [U]
(Alt. to Robert B. Sheffield)

Chelsea Tuttle, NFPA Staff Liaison

This list represents the membership at the time the Committee was balloted on the final text of this edition. Since that time, changes in the membership may have occurred. A key to classifications is found at the back of the document.

NOTE: Membership on a committee shall not in and of itself constitute an endorsement of the Association or any document developed by the committee on which the member serves.

Committee Scope: This Committee shall have primary responsibility for documents or portions of documents covering the construction, installation, testing, performance, and maintenance of hyperbaric and hypobaric facilities for safeguarding staff and occupants of chambers.

Technical Committee on Mechanical Systems

Michael P. Sheerin, *Chair*

TLC Engineering for Architecture, FL [SE]

Chad E. Beebe, ASHE - AHA, WA [U]

Christopher Bernecker, H. T. Lyons, Inc., PA [IM]

Gordon D. Burrill, Teegor Consulting Inc., Canada [U]
Rep. Canadian Healthcare Engineering Society

Luke Cummings, Mayo Clinic, MN [U]

Raj Daswani, Arup, CA [SE]

Keith Ferrari, Praxair, Inc., NC [M]

Chelsea Tuttle, NFPA Staff Liaison

Ronald E. Galloway, Moses Cone Health System, NC [U]

Phil Gioia, Mazzetti & Associates Inc., CO [SE]

Jonathan Hartsell, Rodgers, NC [IM]

Roger W. Lautz, Affiliated Engineers, Inc., WI [SE]

Charles Seyffer, Camfil Farr, NY [M]

Allan D. Volz, OSF HealthCare System, IL [U]

This list represents the membership at the time the Committee was balloted on the final text of this edition. Since that time, changes in the membership may have occurred. A key to classifications is found at the back of the document.

NOTE: Membership on a committee shall not in and of itself constitute an endorsement of the Association or any document developed by the committee on which the member serves.

Committee Scope: This committee shall have primary responsibility for documents or portions of documents covering the performance, operations, testing, and maintenance, for air quality, temperature, humidity, critical space pressure relationships, water and waste water, and their associated systems based on established risk categories.

Technical Committee on Medical Equipment

Donald D. King, *Chair*
Pleasant Hill, CA [SE]

Barry E. Brown, Airgas, Inc., GA [IM]
Lisa Carr, Christiana Care Health Services, DE [U]
Charles Connor, Detroit Medical Center, MI [U]
Charles Cowles, American Society Of Anesthesiologists, TX [C]
David A. Dagenais, Wentworth-Douglass Hospital, NH [U]
 Rep. NFPA Health Care Section
Keith Ferrari, Praxair, Inc., NC [M]
 Rep. Compressed Gas Association
Gerald R. Goodman, Texas Woman's University, TX [SE]
Pamela Gwynn, UL LLC, NC [RT]

Alan Lipschultz, HealthCare Technology Consulting LLC, MD [M]
 Rep. Association for the Advancement of Medical
 Instrumentation
John Maurer, The Joint Commission, IL [E]
Ronald C. Reynolds, Virginia State Fire Marshal's Office, VA [E]
Ezra R. Safdie, U.S. Department of Veterans Affairs, DC [U]
Lawrence S. Sandler, Bonita Springs, FL [SE]
Kevin A. Scarlett, Washington State Department of Health, WA [E]
Robert M. Sutter, B&R Compliance Associates, PA [SE]

Alternates

Gary L. Bean, Air Products & Chemicals, Inc., GA [M]
 (Alt. to Keith Ferrari)
Chad E. Beebe, ASHE - AHA, WA [U]
 (Voting Alt.)
Corky Bishop, Airgas CB, OK [IM]
 (Alt. to Barry E. Brown)

Paul David Evers, UL LLC, FL [RT]
 (Alt. to Pamela Gwynn)
Kenneth Gerard Funk, Environmental Technologies Associates
 (ETA), Inc., GA [SE]
 (Alt. to Robert M. Sutter)

Chelsea Tuttle, NFPA Staff Liaison

This list represents the membership at the time the Committee was balloted on the final text of this edition. Since that time, changes in the membership may have occurred. A key to classifications is found at the back of the document.

NOTE: Membership on a committee shall not in and of itself constitute an endorsement of the Association or any document developed by the committee on which the member serves.

Committee Scope: This committee shall have primary responsibility for documents or portions of documents covering the maintenance, performance, and testing of electrical medical equipment and portable patient-related gas equipment for the purpose of safeguarding patients and health care personnel within patient care areas of health care facilities from the hazards of fire, explosion, electricity, nonionizing radiation, heat, and electrical interference based on established risk categories.

Technical Committee on Piping Systems

James K. Lathrop, *Chair*
Koffel Associates, Inc., CT [SE]

Mark W. Allen, Beacon Medaes, SC [M]
Grant A. Anderson, Bard, Rao & Athanas Consulting Engineers, LLC, MA [SE]
Chad E. Beebe, ASHE - AHA, WA [U]
Rep. American Society for Healthcare Engineering
Barry E. Brown, Airgas, Inc., GA [IM]
Dana A. Colombo, PIPE/National ITC Corporation, LA [L]
Charles Cowles, American Society Of Anesthesiologists, TX [C]
Mark Fasel, Viega LLC, IN [M]
Keith Ferrari, Praxair, Inc., NC [M]
Rep. Compressed Gas Association
Michael Frankel, Utility Systems Consultants, FL [SE]
Rep. American Society of Plumbing Engineers
Neil Gagné, Wm. G. Frank Medical Gas Testing & Consulting, LLC, NH [SE]
Ed Golla, TRI/Air Testing, TX [RT]
John C. Gregory, HDR Architecture Inc., AZ [SE]
Scott Hamilton, ASSE International, IL [U]
Rep. International Association of Plumbing & Mechanical Officials
Daniel Patrick Kelly, New York-Presbyterian/Weill Cornell, NY [U]

Edward A. Litvin, U.S. Department of Veterans Affairs, DC [U]
Rep. U.S. Department of Veterans Affairs
Anthony Lowe, Allied Hospital Systems, MD [IM]
James L. Lucas, Tri-Tech Medical Inc., OH [M]
John Maurer, The Joint Commission, IL [E]
Jeffery F. McBride, Red Lion Medgas Consultants, Inc., DE [SE]
Donald R. McIlroy, Providence Health System, OR [U]
Spiro Megremis, Chicago, IL [U]
Rep. American Dental Association
David B. Mohile, Medical Engineering Services, LLC., WV [SE]
Kevin A. Scarlett, Washington State Department of Health, WA [E]
Sean Schwartzkopf, State of Colorado, CO [E]
Ronald J. Schwipps, Hill-Rom, Inc., IN [M]
E. Daniel Shoemaker, Accutron Inc., AZ [M]
Ronald M. Smidt, Carolinas HealthCare System, NC [U]
Rep. NFPA Health Care Section
Allan D. Volz, OSF HealthCare System, IL [U]
Kevin J. Walsh, EM Duggan Inc., MA [IM]
Rep. Mechanical Contractors Association of America, Inc.
Jonathan C. Willard, Acute Medical Gas Services, NH [SE]

Alternates

Gary L. Bean, Air Products & Chemicals, Inc., GA [M]
(Alt. to Keith Ferrari)
Corky Bishop, Airgas CB, OK [IM]
(Alt. to Barry E. Brown)
Gary Currence, Allied Hospital Systems, MD [IM]
(Alt. to Anthony Lowe)
David A. Dagenais, Wentworth-Douglass Hospital, NH [U]
(Alt. to Chad E. Beebe)
Marc Dodson, C-Scan Technologies, Inc., AZ [SE]
(Alt. to John C. Gregory)
P. L. Fan, Santa Fe, NM [U]
(Alt. to Spiro Megremis)

Mark T. Franklin, Sherman Engineering Company, PA [M]
(Alt. to Mark W. Allen)
Robert G. Loeb, University of Arizona, AZ [C]
(Alt. to Charles Cowles)
Edward J. Lyczko, The Cleveland Clinic, OH [U]
(Alt. to Daniel Patrick Kelly)
Bret M. Martin, Carolinas Healthcare Systems, NC [U]
(Alt. to Ronald M. Smidt)
Thomas J. Mraulak, Plumbing Industry Training Center, MI [L]
(Voting Alt. to IAPMO Rep.)
Paul Rumbos, Major Medical Hospital Services, Inc., NJ [SE]
(Alt. to Jonathan C. Willard)

Jonathan Hart, NFPA Staff Liaison

This list represents the membership at the time the Committee was balloted on the final text of this edition. Since that time, changes in the membership may have occurred. A key to classifications is found at the back of the document.

NOTE: Membership on a committee shall not in and of itself constitute an endorsement of the Association or any document developed by the committee on which the member serves.

Committee Scope: This Committee shall have primary responsibility for documents or portions of documents covering the performance, maintenance, installation, and testing of medical and dental related gas piping systems and medical and dental related vacuum piping systems based on established risk categories.

Contents

Chapter 1 Administration	99– 14	10.2 Performance Criteria and Testing for Patient Care–Related Electrical Appliances and Equipment.	99– 90
1.1 Scope.	99– 14	10.3 Testing Requirements — Patient Care–Related Electrical Appliances and Equipment.	99– 91
1.2 Purpose.	99– 15	10.4 Nonpatient Electrical Appliances and Equipment.	99– 92
1.3 Application.	99– 15	10.5 Administration.	99– 92
1.4 Equivalency.	99– 15		
1.5 Units.	99– 15	Chapter 11 Gas Equipment	99– 96
1.6 Code Adoption Requirements.	99– 15	11.1 Applicability.	99– 96
Chapter 2 Referenced Publications	99– 15	11.2 Cylinder and Container Source.	99– 96
2.1 General.	99– 15	11.3 Cylinder and Container Storage Requirements. ...	99– 96
2.2 NFPA Publications.	99– 15	11.4 Performance Criteria and Testing.	99– 97
2.3 Other Publications.	99– 16	11.5 Administration.	99– 98
2.4 References for Extracts in Mandatory Sections. ...	99– 18	11.6 Operation and Management of Cylinders.	99– 99
Chapter 3 Definitions	99– 18	11.7 Liquid Oxygen Equipment.	99– 101
3.1 General.	99– 18	Chapter 12 Emergency Management	99– 101
3.2 NFPA Official Definitions.	99– 18	12.1 Applicability.	99– 101
3.3 General Definitions.	99– 19	12.2 Responsibilities.	99– 102
3.4 BICSI Definitions.	99– 27	12.3 Emergency Management Categories.	99– 102
Chapter 4 Fundamentals	99– 27	12.4 General.	99– 102
4.1 Risk Categories.	99– 27	12.5 Emergency Management Category 1 and Emergency Management Category 2 Requirements.	99– 102
4.2 Risk Assessment.	99– 27		
4.3 Application.	99– 27	Chapter 13 Security Management	99– 106
4.4 Materials.	99– 27	13.1 Applicability.	99– 106
Chapter 5 Gas and Vacuum Systems	99– 28	13.2 Security Management Plan.	99– 106
5.1 Category 1 Piped Gas and Vacuum Systems.	99– 28	13.3 Security Vulnerability Assessment (SVA).	99– 106
5.2 Category 2 Piped Gas and Vacuum Systems.	99– 67	13.4 Responsible Person.	99– 106
5.3 Category 3 Piped Gas and Vacuum Systems.	99– 68	13.5 Security-Sensitive Areas.	99– 106
Chapter 6 Electrical Systems	99– 69	13.6 Access and Egress Security Measures.	99– 107
6.1 Applicability.	99– 69	13.7 Media Control.	99– 107
6.2 Nature of Hazards.	99– 69	13.8 Crowd Control.	99– 107
6.3 General.	99– 69	13.9 Access Control Equipment.	99– 108
6.4 Category 1 Spaces.	99– 74	13.10 Employment Practices.	99– 108
6.5 Category 2 Spaces.	99– 74	13.11 Security Operations.	99– 108
6.6 Category 3 and 4 Spaces.	99– 74	13.12 Program Evaluation.	99– 108
6.7 Essential Electrical Systems.	99– 74	Chapter 14 Hyperbaric Facilities	99– 108
Chapter 7 Information Technology and Communications Systems	99– 83	14.1 Scope.	99– 108
7.1 Applicability.	99– 83	14.2 Construction and Equipment.	99– 109
7.2 Reserved.	99– 83	14.3 Administration and Maintenance.	99– 118
7.3 Category 1 Systems.	99– 83	Chapter 15 Dental Gas and Vacuum Systems	99– 122
7.4 Category 2 Systems.	99– 86	15.1 Applicability.	99– 122
7.5 Category 3 Systems.	99– 87	15.2 Nature of Hazards of Gas and Vacuum Systems. ...	99– 122
Chapter 8 Plumbing	99– 87	15.3 Category 1 Dental Gas and Vacuum Systems.	99– 122
8.1 Applicability.	99– 87	15.4 Category 2 Dental Gas and Vacuum Systems.	99– 125
8.2 System Category Criteria.	99– 87	15.5 Category 3 Dental Gas and Vacuum Systems.	99– 138
8.3 General Requirements.	99– 87	Chapter 16 Features of Fire Protection	99– 142
8.4 Category 1. (Reserved)	99– 88	16.1 Applicability.	99– 142
8.5 Category 2. (Reserved)	99– 88	16.2 Construction and Compartmentation.	99– 142
8.6 Category 3. (Reserved)	99– 88	16.3 Special Hazard Protection for Flammable Liquids and Gases.	99– 142
Chapter 9 Heating, Ventilation, and Air Conditioning (HVAC)	99– 88	16.4 Laboratories.	99– 142
9.1 Applicability.	99– 88	16.5 Utilities.	99– 142
9.2 System Category Criteria.	99– 88	16.6 Waste Chutes, Incinerators, and Linen Chutes.	99– 143
9.3 General.	99– 88	16.7 Fire Detection, Alarm, and Communications Systems.	99– 143
9.4 Category 1. (Reserved)	99– 90	16.8 Automatic Sprinklers and Other Extinguishing Equipment.	99– 144
9.5 Category 2. (Reserved)	99– 90	16.9 Manual Extinguishing Equipment.	99– 144
9.6 Category 3. (Reserved)	99– 90		
Chapter 10 Electrical Equipment	99– 90		
10.1 Applicability.	99– 90		

16.10 Compact Storage.	99– 144	Annex B	Additional Explanatory Notes	99– 199
16.11 Compact Mobile Storage.	99– 144	Annex C	Sample Ordinance Adopting NFPA 99	99– 217
16.12 Maintenance and Testing.	99– 144	Annex D	Informational References	99– 218
16.13 Fire Loss Prevention in Operating Rooms.	99– 144	Index		99– 223
Annex A Explanatory Material	99– 145			

NFPA 99

Health Care Facilities Code

2018 Edition

IMPORTANT NOTE: This NFPA document is made available for use subject to important notices and legal disclaimers. These notices and disclaimers appear in all publications containing this document and may be found under the heading “Important Notices and Disclaimers Concerning NFPA Standards.” They can also be viewed at www.nfpa.org/disclaimers or obtained on request from NFPA.

UPDATES, ALERTS, AND FUTURE EDITIONS: New editions of NFPA codes, standards, recommended practices, and guides (i.e., NFPA Standards) are released on scheduled revision cycles. This edition may be superseded by a later one, or it may be amended outside of its scheduled revision cycle through the issuance of Tentative Interim Amendments (TIAs). An official NFPA Standard at any point in time consists of the current edition of the document, together with all TIAs and Errata in effect. To verify that this document is the current edition or to determine if it has been amended by TIAs or Errata, please consult the National Fire Codes® Subscription Service or the “List of NFPA Codes & Standards” at www.nfpa.org/docinfo. In addition to TIAs and Errata, the document information pages also include the option to sign up for alerts for individual documents and to be involved in the development of the next edition.

NOTICE: An asterisk (*) following the number or letter designating a paragraph indicates that explanatory material on the paragraph can be found in Annex A.

A reference in brackets [] following a section or paragraph indicates material that has been extracted from another NFPA document. As an aid to the user, the complete title and edition of the source documents for extracts in mandatory sections of the document are given in Chapter 2 and those for extracts in informational sections are given in Annex D. Extracted text may be edited for consistency and style and may include the revision of internal paragraph references and other references as appropriate. Requests for interpretations or revisions of extracted text shall be sent to the technical committee responsible for the source document.

Information on referenced publications can be found in Chapter 2 and Annex D.

Chapter 1 Administration

1.1 Scope.

1.1.1 The scope of this code is to establish minimum criteria as follows in 1.1.2 through 1.1.14.

1.1.2 Fundamentals. Chapter 4 establishes criteria for levels of health care services or systems based on risk to the patients, staff, or visitors in health care facilities.

1.1.3 Gas and Vacuum Systems.

1.1.3.1 Chapter 5 covers the performance, maintenance, installation, and testing of the following:

- (1) Nonflammable medical gas systems with operating pressures below a gauge pressure of 2068 kPa (300 psi)
- (2) Vacuum systems in health care facilities
- (3) Waste anesthetic gas disposal (WAGD) systems, also referred to as scavenging

- (4) Manufactured assemblies that are intended for connection to the medical gas, vacuum, or WAGD systems (also referred to as scavenging)

1.1.3.2 Requirements for portable compressed gas systems are covered in Chapter 11.

1.1.4 Electrical Systems.

1.1.4.1 Chapter 6 covers the performance, maintenance, and testing of electrical systems (both normal and essential) in health care facilities.

Δ 1.1.4.2 The following areas are not addressed in this code, but are addressed in other NFPA documents:

- (1) Specific requirements for wiring and installation of equipment are covered in NFPA 70.
- (2) Requirements for illumination and identification of means of egress in health care facilities are covered in NFPA 101.
- (3) Requirements for installation, testing, and maintenance of fire protection signaling systems are covered in NFPA 72.
- (4) Requirements for installation of fire pumps are covered in NFPA 20, except that the alternate source of power are permitted to be the essential electrical system.
- (5) Requirements for installation of stationary engines and gas turbines are covered in NFPA 37.

1.1.5 Information Technology and Communications Systems. Chapter 7 covers the performance, maintenance, and testing of information technology and communications systems in health care facilities.

1.1.6 Plumbing. Chapter 8 covers the performance, maintenance, and testing of plumbing systems in health care facilities.

1.1.7 HVAC Systems. Chapter 9 covers the performance, maintenance, and testing of heating, cooling, and ventilating in health care facilities.

1.1.8 Electrical Equipment. Chapter 10 covers the performance, maintenance, and testing of electrical equipment in health care facilities.

1.1.9 Gas Equipment. Chapter 11 covers the performance, maintenance, and testing of gas equipment in health care facilities.

1.1.10* Emergency Management. Chapter 12 establishes criteria for emergency management in the development of a program for effective disaster preparedness, response, mitigation, and recovery in health care facilities.

1.1.11 Security Management. Chapter 13 establishes criteria for security management, including management controls, mitigation practices, staff training, and program evaluation in health care facilities.

Δ 1.1.12* Hyperbaric Facilities. Chapter 14 establishes criteria for design and operation of hyperbaric chambers and facilities. Chapter 14 covers electrical, fire, pressure, and gas hazards associated with hyperbaric facilities that are used, or intended to be used, for medical and experimental procedures at gauge pressures from 0 kPa to 690 kPa (0 psi to 100 psi).

N 1.1.13 Dental Gas and Vacuum System. Chapter 15 covers the performance, maintenance, and testing of dental gas and vacuum systems in health care facilities.

1.1.14 Features of Fire Protection. Chapter 16 covers the performance, maintenance, and testing of fire protection equipment in health care facilities.

1.2 Purpose. The purpose of this code is to provide minimum requirements for the installation, inspection, testing, maintenance, performance, and safe practices for facilities, material, equipment, and appliances, including other hazards associated with the primary hazards.

1.3 Application.

1.3.1 This code shall apply to all health care facilities other than home care and veterinary care.

1.3.1.1 This document is intended for use by those persons involved in the design, construction, inspection, and operation of health care facilities and in the design, manufacture, and testing of appliances and equipment used in patient care rooms of health care facilities.

1.3.2 Construction and equipment requirements shall be applied only to new construction and new equipment, except as modified in individual chapters.

1.3.2.1 Only the altered, renovated, or modernized portion of an existing system or individual component shall be required to meet the installation and equipment requirements stated in this code.

1.3.2.2 If the alteration, renovation, or modernization adversely impacts the existing performance requirements of a system or component, additional upgrading shall be required.

1.3.2.3 An existing system that is not in strict compliance with the provisions of this code shall be permitted to be continued in use, unless the authority having jurisdiction has determined that such use constitutes a distinct hazard to life.

1.3.3 Policies.

1.3.3.1 The health care organization shall ensure that policies are established and maintained that permit the attending physician to satisfy the emergency needs of any patient that supersede the requirements of this code.

1.3.3.2 Each such special use shall be clearly documented and reviewed to attempt to have future similar needs met within the requirements of this code.

1.3.4 Patient Care Spaces.

Δ 1.3.4.1 The health care facility's governing body or its designee shall establish the following areas in accordance with the type of patient care anticipated (see 3.3.135, *Patient Care Space*):

- (1) Category 1 spaces
- (2) Category 2 spaces
- (3) Category 3 spaces
- (4) Category 4 spaces

1.3.4.2 Anesthesia. It shall be the responsibility of the health care facility's governing body to designate anesthetizing locations.

1.3.4.3 Wet Procedure Locations. It shall be the responsibility of the health care facility's governing body to designate wet procedure locations.

1.4 Equivalency.

1.4.1 Nothing in this code is intended to prevent the use of systems, methods, or devices of equivalent or superior quality, strength, fire resistance, effectiveness, durability, and safety to those prescribed by this code. Technical documentation shall be submitted to the authority having jurisdiction to demonstrate equivalency. The system, method, or device shall be approved for the intended purpose by the authority having jurisdiction.

1.4.2 Alternative systems, methods, or devices approved as equivalent by the authority having jurisdiction shall be recognized as being in compliance with this code.

1.4.3 The authority having jurisdiction shall be permitted to grant exceptions to this code.

1.5* Units. Primary units will be trade units, and secondary units will be the conversion.

1.6 Code Adoption Requirements.

1.6.1 The effective date of application of any provision of this document is not determined by the National Fire Protection Association. All questions related to applicability shall be directed to the authority having jurisdiction.

1.6.2 Enforcement. This code shall be administered and enforced by the authority having jurisdiction. (*See Annex C for a sample wording for enabling legislation.*)

Chapter 2 Referenced Publications

2.1* General. The documents referenced in this chapter, or portions of such documents, are referenced within this code and shall be considered part of the requirements of this code, and the following shall also apply:

- (1) Documents referenced in this chapter, or portion of such documents, shall only be applicable to the extent called for within other chapters of this code.
- (2) Where the requirements of a referenced code or standard differ from the requirements of this code, the requirements of this code shall govern.
- (3) Existing buildings or installations that do not comply with the provisions of the codes or standards referenced in this chapter shall be permitted to be continued in service, provided that the lack of conformity with these documents does not present a serious hazard to the occupants as determined by the authority having jurisdiction. [101: 2.1]

Δ 2.2 NFPA Publications. National Fire Protection Association, 1 Batterymarch Park, Quincy, MA 02169-7471.

NFPA 10, *Standard for Portable Fire Extinguishers*, 2017 edition.

NFPA 13, *Standard for the Installation of Sprinkler Systems*, 2016 edition.

NFPA 14, *Standard for the Installation of Standpipe and Hose Systems*, 2016 edition.

NFPA 20, *Standard for the Installation of Stationary Pumps for Fire Protection*, 2016 edition.

NFPA 25, *Standard for the Inspection, Testing, and Maintenance of Water-Based Fire Protection Systems*, 2017 edition.

NFPA 30, *Flammable and Combustible Liquids Code*, 2018 edition.

NFPA 31, *Standard for the Installation of Oil-Burning Equipment*, 2016 edition.

NFPA 37, *Standard for the Installation and Use of Stationary Combustion Engines and Gas Turbines*, 2018 edition.

NFPA 45, *Standard on Fire Protection for Laboratories Using Chemicals*, 2015 edition.

NFPA 54, *National Fuel Gas Code*, 2018 edition.

NFPA 55, *Compressed Gases and Cryogenic Fluids Code*, 2016 edition.

NFPA 58, *Liquefied Petroleum Gas Code*, 2017 edition.

NFPA 70®, *National Electrical Code®*, 2017 edition.

NFPA 72®, *National Fire Alarm and Signaling Code*, 2016 edition.

NFPA 82, *Standard on Incinerators and Waste and Linen Handling Systems and Equipment*, 2014 edition.

NFPA 90A, *Standard for the Installation of Air-Conditioning and Ventilating Systems*, 2018 edition.

NFPA 91, *Standard for Exhaust Systems for Air Conveying of Vapors, Gases, Mists, and Particulate Solids*, 2015 edition.

NFPA 96, *Standard for Ventilation Control and Fire Protection of Commercial Cooking Operations*, 2017 edition.

NFPA 101®, *Life Safety Code®*, 2018 edition.

NFPA 110, *Standard for Emergency and Standby Power Systems*, 2016 edition.

NFPA 111, *Standard on Stored Electrical Energy Emergency and Standby Power Systems*, 2016 edition.

NFPA 170, *Standard for Fire Safety and Emergency Symbols*, 2015 edition.

NFPA 211, *Standard for Chimneys, Fireplaces, Vents, and Solid Fuel-Burning Appliances*, 2016 edition.

NFPA 259, *Standard Test Method for Potential Heat of Building Materials*, 2013 edition.

NFPA 260, *Standard Methods of Tests and Classification System for Cigarette Ignition Resistance of Components of Upholstered Furniture*, 2013 edition.

NFPA 261, *Standard Method of Test for Determining Resistance of Mock-Up Upholstered Furniture Material Assemblies to Ignition by Smoldering Cigarettes*, 2013 edition.

NFPA 286, *Standard Methods of Fire Tests for Evaluating Contribution of Wall and Ceiling Interior Finish to Room Fire Growth*, 2015 edition.

NFPA 701, *Standard Methods of Fire Tests for Flame Propagation of Textiles and Films*, 2015 edition.

NFPA 750, *Standard on Water Mist Fire Protection Systems*, 2015 edition.

NFPA 853, *Standard for the Installation of Stationary Fuel Cell Power Systems*, 2015 edition.

NFPA 1600®, *Standard on Disaster/Emergency Management and Business Continuity/Continuity of Operations Programs*, 2016 edition.

NFPA 2001, *Standard on Clean Agent Fire Extinguishing Systems*, 2015 edition.

NFPA 5000®, *Building Construction and Safety Code®*, 2018 edition.

2.3 Other Publications.

2.3.1 ANSI Publications. American National Standards Institute, Inc., 22 West 43rd Street, 4th Floor, New York, NY 10036.

ANSI B57.1, *Compressed Gas Cylinder Valve Outlet and Inlet Connections*, 1965.

ANSI Z136.3, *American National Standard for Safe Use of Lasers in Health Care*, 2011.

ANSI/AAMI ES60601-1, *Medical Electrical Equipment*, 2012.

2.3.2 ASHRAE Publications. ASHRAE Inc., 1791 Tullie Circle, NE, Atlanta, GA 30329-2305.

ASHRAE 90.1, *Energy Standard for Buildings Except Low-Rise Residential Buildings*, 2010.

ASHRAE 170, *Ventilation of Health Care Facilities*, 2013, including Addenda a, b, d, e, g, ae.

2.3.3 ASME Publications. American Society of Mechanical Engineers, Two Park Avenue, New York, NY 10016-5990.

ASME A.17.1, *Safety Code for Elevators and Escalators*, 2013.

ASME A.17.3, *Safety Code for Existing Elevators and Escalators*, 2011.

ASME B1.20.1, *Pipe Threads, General Purpose, Inch*, 2013.

ASME B16.22, *Wrought Copper and Copper Alloy Solder-Joint Pressure Fittings*, 2013.

ASME B16.26, *Cast Copper Alloy Fittings for Flared Copper Tubes*, 2013.

ANSI/ASME B16.50, *Wrought Copper and Copper Alloy Braze-Joint Pressure Fittings*, 2013.

ASME B31.3, *Pressure Process Piping*, 2014.

ASME B40.100, *Pressure Gauges and Gauge Attachments*, 2013.

ASME Boiler and Pressure Vessel Code, Sections VIII and IX, 2014.

ANSI/ASME PVHO-1, *Safety Standard for Pressure Vessels for Human Occupancy*, 2012.

2.3.4 ASSE Publications. ASSE International, 18927 Hickory Creek Drive, Suite 220, Mokena, IL 60448.

ASSE 6010, *Professional Qualifications Standard for Medical Gas Systems Installers*, 2015.

ASSE 6020, *Professional Qualifications Standard for Medical Gas Systems Inspectors*, 2015.

ASSE 6030, *Professional Qualifications Standard for Medical Gas Systems Verifiers*, 2015.

ASSE 6035, *Professional Qualifications Standard for Bulk Medical Gas Systems Verifiers*, 2015.

ASSE 6040, *Professional Qualifications Standard for Medical Gas Maintenance Personnel*, 2015.

2.3.5 ASTM Publications. ASTM International, 100 Barr Harbor Drive, P.O. Box C700, West Conshohocken, PA 19428-2959.

ASTM A240/A240M, *Standard Specification for Chromium and Chromium-Nickel Stainless Steel Plate, Sheet, and Strip for Pressure Vessels and for General Applications*, 2015b.

ASTM A269/A269M, *Standard Specification for Seamless and Welded Austenitic Stainless Steel Tubing for General Service*, 2015a.

ASTM A312/A312M, *Standard Specification for Seamless, Welded, and Heavily Cold Worked Austenitic Stainless Steel Pipes*, 2016.

ASTM B32, *Standard Specification for Solder Metal*, 2008, reapproved 2014.

ASTM B88, *Standard Specification for Seamless Copper Water Tube*, 2014.

ASTM B103, *Standard Specification for Phosphor Bronze Plate, Sheet, Strip, and Rolled Bar*, 2015.

ASTM B280, *Standard Specification for Seamless Copper Tubing for Air Conditioning and Refrigeration Field Service*, 2016.

ASTM B819, *Standard Specification for Seamless Copper Tube for Medical Gas Systems*, 2000, reapproved 2011.

ASTM B828, *Standard Practice for Making Capillary Joints by Soldering of Copper and Copper Alloy Tube and Fittings*, 2002, reapproved 2010.

ASTM D5/D5M, *Standard Test Method for Penetration of Bituminous Materials*, 2013.

ASTM D1785, *Standard Specification for Poly(Vinyl Chloride) (PVC) Plastic Pipe, Schedules 40, 80, and 120*, 2015.

ASTM D2466, *Standard Specification for Poly(Vinyl Chloride) (PVC) Plastic Pipe Fittings, Schedule 40*, 2015.

ASTM D2467, *Standard Specification for Poly(Vinyl Chloride) (PVC) Plastic Pipe Fittings, Schedule 80*, 2015.

ASTM D2672, *Standard Specification for Joints for IPS PVC Pipe Using Solvent Cement*, 2014.

ASTM D2846/D2846M, *Standard Specification for Chlorinated Poly(Vinyl Chloride) (CPVC) Plastic Hot- and Cold-Water Distribution Systems*, 2014.

ASTM D4359, *Standard Test Method for Determining Whether a Material Is a Liquid or a Solid*, 1990, reapproved 2012.

ASTM E84, *Standard Test Method for Surface Burning Characteristics of Building Materials*, 2015b.

ASTM E136, *Standard Test Method for Behavior of Materials in a Vertical Tube Furnace at 750°C*, 2016.

ASTM E1537, *Standard Test Method for Fire Testing of Upholstered Furniture*, 2015.

ASTM E1590, *Standard Test Method for the Fire Testing of Mattresses*, 2013.

ASTM E2652, *Standard Test Method for Behavior of Materials in a Tube Furnace with a Cone-shaped Airflow Stabilizer at 750°C*, 2016.

ASTM F438, *Standard Specification for Socket-Type Chlorinated Poly(Vinyl Chlorinated) (CPVC) Plastic Pipe Fittings, Schedule 40*, 2015.

ASTM F439, *Standard Specification for Chlorinated Poly(Vinyl Chlorinated) (CPVC) Plastic Pipe Fittings, Schedule 80*, 2013.

ASTM F441/F441M, *Standard Specification for Chlorinated Poly(Vinyl Chloride) (CPVC) Plastic Pipe, Schedules 40 and 80*, 2015.

ASTM F493, *Solvent Cements for CPVC Pipe and Fittings*, 2014.

2.3.6 AWS Publications. American Welding Society, 8669 NW 36 Street, #130, Miami, FL 33166-6672.

ANSI/AWS A5.8M/A5.8, *Specification for Filler Metals for Brazing and Braze Welding*, 2011, Addendum 1, 2014.

AWS B2.2/B2.2M, *Standard for Brazing Procedure and Performance Qualification*, 2010.

2.3.7 BICSI Publications. BICSI, 8610 Hidden River Parkway, Tampa, FL 33637-1000.

The BICSI Information Transport Systems (ITS) Dictionary, 3rd edition.

2.3.8 CDA Publications. Copper Development Association Inc., 260 Madison Avenue, New York, NY 10016.

Copper Tube Handbook, 2010.

2.3.9 CGA Publications. Compressed Gas Association, 14501 George Carter Way, Suite 103, Chantilly, VA 20151-2923.

CGA C-7, *Guide to Classification and Labeling of Compressed Gases*, 2014.

CGA G-4, *Oxygen*, 2015.

CGA G-4.1, *Cleaning Equipment for Oxygen Service*, 2009.

CGA G-6.1, *Standard for Insulated Carbon Dioxide Systems at Consumer Sites*, 2013.

CGA G-6.5, *Standard for Small, Stationary, Insulated Carbon Dioxide Supply Systems*, 2013.

CGA G-8.1, *Standard for Nitrous Oxide Systems at Customer Sites*, 2013.

CGA M-1, *Standard for Medical Gas Supply Systems at Health Care Facilities*, 2013.

CGA O2-DIR, *Directory of Cleaning Agents for Oxygen Service*, edition 4.

CGA P-2.5, *Transfilling of High Pressure Gaseous Oxygen Used for Respiration*, 2011.

CGA P-2.6, *Transfilling of Liquid Oxygen Used for Respiration*, 2011.

CGA P-18, *Standard for Bulk Inert Gas Systems at Consumer Sites*, 2013.

CGA V-1, *Standard for Compressed Gas Cylinder Valve Outlet and Inlet Connections (ANSI B57.1)*, 2013.

CGA V-5, *Diameter-Index Safety System (Noninterchangeable Low Pressure Connections for Medical Gas Applications)*, 2008, reaffirmed 2013.

2.3.10 CSA Publications. Canadian Standards Association, 178 Rexdale Blvd., Toronto, M9W 1R3, Canada.

CSA C22.2 No. 0.3, *Test Methods for Electrical Wires and Cables*, 2009, reaffirmed 2014.

2.3.11 FGI Publications. Facility Guidelines Institute, 1919 McKinney Avenue, Dallas, TX 75201.

Guidelines for Design and Construction of Hospitals and Outpatient Facilities, 2014.

2.3.12 ISA Publications. International Society of Automation, 67 T.W. Alexander Drive, P.O. Box 12277, Research Triangle Park, NC 27709.

ANSI/ISA S-7.0.01, *Quality Standard for Instrument Air*, 1996.

2.3.13 MSS Publications. Manufacturer's Standardization Society of the Valve and Fittings Industry, Inc., 127 Park Street NE, Vienna, VA 22180-4602.

SP-58, *Pipe Hangers and Supports — Materials, Design, Manufacture, Selection, Application and Installation*, 2009.

■ 2.3.14 State of California Publications. State of California, Department of Consumer Affairs, 3485 Orange Grove Avenue, North Highlands, CA 95660-5595.

California Technical Bulletin 117, *Requirements, Test Procedure and Apparatus for Testing the Flame Retardance of Resilient Filling Materials Used in Upholstered Furniture*, 2000.

California Technical Bulletin 129, *Flammability Test Procedure for Mattresses for Use in Public Buildings*, 1992.

California Technical Bulletin 133, *Flammability Test Procedure for Seating Furniture for Use in Public Occupancies*, 1991.

2.3.15 TC Publications. Transport Canada, 330 Sparks Street, Ottawa, ON, K1A 0N5, Canada.

Transportation of Dangerous Goods Regulations.

2.3.16 TIA Publications. Telecommunications Industry Association, 1320 North Courthouse Road, Suite 200, Arlington, VA 22201.

TIA/EIA 568-B, *Commercial Building Telecommunications Cabling Standard*, 2012.

TIA/EIA 606-B, *Administration Standard for Commercial Telecommunications Infrastructure*, 2009.

■ 2.3.17 USP–NF Publications. U.S. Pharmacopeial Convention, 12601 Twinbrook Parkway, Rockville, MD 20852-1790.

Monograph: Oxygen USP 93.

Monograph: Oxygen USP.

2.3.18 UL Publications. Underwriters Laboratories Inc., 333 Pfingsten Road, Northbrook, IL 60062-2096.

ANSI/UL 723, *Standard for Test for Surface Burning Characteristics of Building Materials*, 2008, 2013.

ANSI/UL 1069, *Safety Standard for Hospital Signaling and Nurse Call Equipment*, 2007, revised 2015.

UL 1685, *Standard for Vertical-Tray Fire-Propagation and Smoke-Release Test for Electrical and Optical-Fiber Cables*, 2015.

▲ 2.3.19 U.S. Government Publications. U.S. Government Publishing Office, 732 North Capitol Street, NW, Washington, DC 20401-0001.

Department of Energy STD-3020, *Specification for HEPA Filters Used by DOE Contractors*, 2005.

Title 16, Code of Federal Regulations, Part 1632, "Standard for the Flammability of Mattresses and Mattress Pads (FF 4-72)."

21 USC 9, United States Food, Drug, and Cosmetic Act.

2.3.20 Other Publications.

Merriam-Webster's Collegiate Dictionary, 11th edition, Merriam-Webster, Inc., Springfield, MA, 2003.

2.4 References for Extracts in Mandatory Sections.

NFPA 10, *Standard for Portable Fire Extinguishers*, 2018 edition.

NFPA 13, *Standard for the Installation of Sprinkler Systems*, 2016 edition.

NFPA 30, *Flammable and Combustible Liquids Code*, 2018 edition.

NFPA 55, *Compressed Gases and Cryogenic Fluids Code*, 2016 edition.

NFPA 70®, *National Electrical Code®*, 2017 edition.

NFPA 99B, *Standard for Hypobaric Facilities*, 2018 edition.

NFPA 101®, *Life Safety Code®*, 2018 edition.

NFPA 110, *Standard for Emergency and Standby Power Systems*, 2016 edition.

NFPA 1670, *Standard on Operations and Training for Technical Search and Rescue Incidents*, 2017 edition.

NFPA 5000®, *Building Construction and Safety Code®*, 2018 edition.

Chapter 3 Definitions

3.1 General. The definitions contained in this chapter shall apply to the terms used in this code. Where terms are not defined in this chapter or within another chapter, they shall be defined using their ordinarily accepted meanings within the context in which they are used. *Merriam-Webster's Collegiate Dictionary*, 11th edition, shall be the source for the ordinarily accepted meaning.

3.2 NFPA Official Definitions.

3.2.1* Approved. Acceptable to the authority having jurisdiction.

3.2.2* Authority Having Jurisdiction (AHJ). An organization, office, or individual responsible for enforcing the requirements of a code or standard, or for approving equipment, materials, an installation, or a procedure.

3.2.3* Code. A standard that is an extensive compilation of provisions covering broad subject matter or that is suitable for adoption into law independently of other codes and standards.

3.2.4 Guide. A document that is advisory or informative in nature and that contains only nonmandatory provisions. A guide may contain mandatory statements such as when a guide can be used, but the document as a whole is not suitable for adoption into law.

3.2.5 Labeled. Equipment or materials to which has been attached a label, symbol, or other identifying mark of an organization that is acceptable to the authority having jurisdiction and concerned with product evaluation, that maintains periodic inspection of production of labeled equipment or materials, and by whose labeling the manufacturer indicates compliance with appropriate standards or performance in a specified manner.

3.2.6* Listed. Equipment, materials, or services included in a list published by an organization that is acceptable to the authority having jurisdiction and concerned with evaluation of products or services, that maintains periodic inspection of production of listed equipment or materials or periodic evaluation of services, and whose listing states that either the equipment, material, or service meets appropriate designated

standards or has been tested and found suitable for a specified purpose.

3.2.7 Shall. Indicates a mandatory requirement.

3.2.8 Should. Indicates a recommendation or that which is advised but not required.

3.2.9 Standard. An NFPA Standard, the main text of which contains only mandatory provisions using the word “shall” to indicate requirements and that is in a form generally suitable for mandatory reference by another standard or code or for adoption into law. Nonmandatory provisions are not to be considered a part of the requirements of a standard and shall be located in an appendix, annex, footnote, informational note, or other means as permitted in the NFPA Manuals of Style. When used in a generic sense, such as in the phrase “standards development process” or “standards development activities,” the term “standards” includes all NFPA Standards, including Codes, Standards, Recommended Practices, and Guides.

3.3 General Definitions.

3.3.1 Adiabatic Heating. The heating of a gas caused by its compression. (HYP)

3.3.2 Aerosol. An intimate mixture of a liquid or a solid in a gas; the liquid or solid, called the dispersed phase, is uniformly distributed in a finely divided state throughout the gas, which is the continuous phase or dispersing medium. (MED)

3.3.3 Alarm System.

3.3.3.1 Area Alarm System. A warning system within an area of use that provides continuous visible and audible surveillance of Category 1 and Category 2 medical gas and vacuum systems. (PIP)

3.3.3.2 Category 3 Alarm System. A warning system within an area of use that provides continuous visible and audible surveillance of Category 3 medical gas systems. (PIP)

3.3.3.3 Local Alarm System. A warning system that provides continuous visible and audible surveillance of medical gas and vacuum system source equipment at the equipment site. (PIP)

3.3.3.4 Master Alarm System. A warning system that monitors the operation and condition of the source of supply, the reserve source (if any), and the pressure in the main lines of each medical gas and vacuum piping system. (PIP)

3.3.4 Alternate Power Source. One or more generator sets, or battery systems where permitted, intended to provide power during the interruption of the normal electrical service; or the public utility electrical service intended to provide power during interruption of service normally provided by the generating facilities on the premises. (ELS)

3.3.5 Ambulatory Health Care Occupancy. An occupancy used to provide services or treatment simultaneously to four or more patients that provides, on an outpatient basis, one or more of the following: (1) treatment for patients that renders the patients incapable of taking action for self-preservation under emergency conditions without the assistance of others; (2) anesthesia that renders the patients incapable of taking action for self-preservation under emergency conditions without the assistance of others; (3) treatment for patients who, due to the nature of their injury or illness, are incapable of

taking action for self-preservation under emergency conditions without the assistance of others. [101, 2018] (FUN)

3.3.6 Ampacity. The maximum current, in amperes, that a conductor can carry continuously under the conditions of use without exceeding its temperature rating. [70, 2017] (ELS)

3.3.7 Anesthetic. As used in this code, applies to any inhalational agent used to produce sedation, analgesia, or general anesthesia. (MED)

3.3.8 Appliance. Utilization equipment, generally other than industrial, normally built in standardized sizes or types, that is installed or connected as a unit to perform one or more functions. (MED)

Δ 3.3.9 Applicable Code. The building code, fire code, or NFPA 101 adopted by the jurisdiction, or NFPA 101 where no such code has been adopted by the jurisdiction.

3.3.10* Applicator. A means of applying high-frequency energy to a patient other than by an electrically conductive connection. (MED)

3.3.11 Area of Administration. Any point within a room within 4.3 m (15 ft) of oxygen equipment or an enclosure containing or intended to contain an oxygen-enriched atmosphere. (MED)

3.3.12* Atmosphere. The pressure exerted by, and gaseous composition of, an environment. (HYP)

3.3.12.1 Atmosphere Absolute (ATA). The pressure of the earth's atmosphere, 760.0 mmHg, 101.325 kPa, or 14.7 psia. Two ATA = two atmospheres. (See also 3.3.12, Atmosphere.) (HYP)

3.3.12.2* Atmosphere of Increased Burning Rate. Any atmosphere containing a percentage of oxygen or oxygen and nitrous oxide greater than the quotient of 23.45 divided by the square root of the total pressure in atmospheres. (HYP)

3.3.12.3 Chamber Atmosphere. The environment inside a chamber. (HYP)

3.3.13 Automatic. Providing a function without the necessity of human intervention. (ELS)

3.3.14 Bathrooms. An area including a basin with one or more of the following: a toilet, a urinal, a tub, a shower, a bidet, or similar plumbing fixtures. [70, 2017] (FUN)

3.3.15 Battery-Powered Lighting Units. Individual unit equipment for backup illumination consisting of a rechargeable battery, battery-charging means, provisions for one or more lamps mounted on the equipment, or with terminals for remote lamps, or both, and relaying device arranged to energize the lamps automatically upon failure of the supply to the unit equipment. [70, 2017] (ELS)

3.3.16 Bends. Decompression sickness; caisson worker's disease. (HYP)

3.3.17 Branch Circuit. The circuit conductors between the final overcurrent device protecting the circuit and the outlet(s). [70, 2017] (ELS)

3.3.18 Branch Line. See 3.3.144, Piping.

3.3.19 Bulk System. An assembly of equipment for supplying compressed gas (consisting of, but not limited to, storage

containers, pressure regulators, pressure relief devices, vaporizers, manifolds, and interconnecting piping) that terminates where the gas, at service pressure, first enters the main line. The storage containers are either stationary or movable and include unconnected reserves on hand at the site, and the source gas is stored as a compressed gas or cryogenic fluid.

3.3.19.1 Bulk Inert Gas System. A bulk system with a storage capacity of more than 566 m³ [20,000 ft³ (scf)] of inert gas.

3.3.19.2 Bulk Nitrous Oxide System. A bulk system with a storage capacity of more than 1452 kg (3200 lb) [approximately 793 m³ (28,000 ft³) at normal temperature and pressure] of nitrous oxide (PIP).

3.3.19.3* Bulk Oxygen System. A bulk system with a storage capacity of more than 566 m³ (20,000 ft³) at normal temperature and pressure of oxygen.

3.3.19.4 Micro-Bulk Cryogenic System. An assembly of equipment including a container that is permanently installed through anchoring to a foundation, pressure regulators, pressure relief devices, vaporizers, manifolds, and interconnecting piping that is designed to be filled at the health care facility with a cryogenic gas, that has a storage capacity of less than or equal to 566 m³ [20,000 ft³ (scf)] of oxygen, including unconnected reserves on hand at the site, and that terminates at the source valve.

3.3.20 Category 3 Drive Gas System. An assembly of component parts including, but not limited to, the source, pressure and operating controls, filters and purification equipment, valves, alarm warning systems, alarm wiring, gauges, and a network of piping and suitable outlets that produces and distributes compressed air from cylinders, compressed air from compressors, or nitrogen from cylinders less than 1100 kPa gauge (less than 160 psi gauge) to power devices (hand pieces, syringes, cleaning devices, delivery system chairs, and so forth) as a power source. The system includes the compressor intakes and ends with the service outlet where the user connects their clinical equipment. (PIP)

3.3.21 Category 3 Vacuum System. A Category 3 vacuum distribution system that can be either a wet system designed to remove liquids, air-gas, or solids from the treated area; or a dry system designed to trap liquid and solids before the service inlet and to accommodate air-gas only through the service inlet. (PIP)

N 3.3.22* Central Supply System. The complete source of supply for a medical gas or vacuum system or a medical support gas system.

N 3.3.23 Clean Agent. Electrically non-conducting, volatile, or gaseous fire extinguishant that does not leave a residue upon evaporation. [10, 2018]

N 3.3.24* Clinical IT Network. An information technology video, voice, and data communication network that is dedicated for shared use by medical devices, nurse call, clinical information systems, patient-critical applications, and clinical wireless communication equipment. (ELS)

3.3.25 Combustible. Capable of undergoing combustion. (MED)

3.3.26* Combustible Liquid. Any liquid that was a closed-cup flash point at or above 37.8°C (100°F). Combustible liquids are classified as follows: (a) Class II liquid. Any liquid that has a

flash point at or above 37.8°C (100°F) and below 60°C (140°F); (b) Class IIIA liquid. Any liquid that has a flash point at or above 60°C (140°F) and below 93°C (200°F); (c) Class IIIB liquid. Any liquid that has a flash point at or above 93°C (200°F).

3.3.27* Combustion. A chemical process of oxidation that occurs at a rate fast enough to produce heat and usually light in the form of either a glow or flame. [5000, 2018] (HYP)

3.3.28 Compact Storage. Storage on solid shelves not exceeding 0.9 m (36 in.) in total depth, arranged as part of a compact storage module, with no more than 0.76 m (30 in.) between shelves vertically and with no internal vertical flue spaces other than those between individual shelving sections. [13, 2016] (FUN)

3.3.29 Container. A low-pressure, vacuum-insulated vessel containing gases in liquid form. (MED)

3.3.29.1 Liquid Oxygen Ambulatory Container. A container used for liquid oxygen not exceeding 1.5 L (0.396 gal) specifically designed for use as a medical device as defined by 21 USC Chapter 9, the United States Food, Drug and Cosmetic Act, that is intended for portable therapeutic use and to be filled from its companion base unit, which is a liquid oxygen home care container. (MED)

3.3.29.2 Liquid Oxygen Base Reservoir Container. A container used for liquid oxygen not exceeding 60 L (15.8 gal) specifically designed for use as a medical device as defined by 21 USC Chapter 9, the United States Food, Drug and Cosmetic Act, that is intended to deliver gaseous oxygen for therapeutic use, transfilling, or both. (MED)

3.3.29.3 Liquid Oxygen Portable Container. A container used for liquid oxygen not exceeding 1.5 L (0.396 gal) specifically designed for use as a medical device as defined by 21 USC Chapter 9, the United States Food, Drug and Cosmetic Act, that is intended for portable therapeutic use and to be filled from its companion base unit, which is a liquid oxygen base reservoir container. (MED)

3.3.30 Critical Branch. A system of feeders and branch circuits supplying power for task illumination, fixed equipment, select receptacles, and select power circuits serving areas and functions related to patient care that are automatically connected to alternate power sources by one or more transfer switches during interruption of the normal power source. (ELS)

3.3.31 Critical Equipment. That equipment essential to the safety of the occupants of the facility. (HYP)

N 3.3.32 Cryogenic Fluid Central Supply System. An assembly of equipment for supplying compressed gas, including, but not limited to, a stationary tank(s) that is permanently installed through anchoring to a foundation, pressure regulators, pressure relief devices, vaporizers, manifolds, and interconnecting piping that is designed to be filled at the health care facility with a cryogenic fluid and that terminates at the source valve.

N 3.3.32.1 Bulk Cryogenic Fluid Central Supply System. A cryogenic fluid central supply system with a storage capacity of more than 566 m³ [20,000 ft³ (scf)].

N 3.3.32.2 Bulk Nitrous Oxide Central Supply System. A central supply system with a storage capacity of more than 1452 kg

(3200 lb) [i.e., approximately 793 m³ (28,000 ft³) at normal temperature and pressure] of nitrous oxide (PIP).

- N 3.3.32.3 Micro-Bulk Cryogenic Fluid Central Supply System.** A cryogenic fluid central supply system with a storage capacity of less than or equal to 566 m³ [20,000 ft³ (scf)].

3.3.33 Cylinder. A supply tank containing high-pressure gases or gas mixtures at pressures that can be in excess of 13.8 kPa gauge (2000 psi gauge). (MED)

3.3.34 Decompression Sickness. A syndrome due to evolved gas in the tissues resulting from a reduction in ambient pressure. (HYP)

3.3.35* Defend in Place. The operational response to an emergency in a building, in which the initial action does not involve evacuation of the building occupants. (FUN)

3.3.36 Demand Check. A paired set of fittings that permit gas flow when correctly mated but interrupt flow when separated. (PIP)

- N 3.3.37 Dental Air.** Compressed gas to drive dental devices, supplied by compressed air systems, pressurized cylinders of air, nitrogen, or CO₂.

- N 3.3.38 Dental Office.** A building or part thereof in which the following occur: (1) examinations and minor treatments/procedures performed under the continuous supervision of a dental professional; (2) use of limited to minimal sedation and treatment or procedures that do not render the patient incapable of self-preservation under emergency conditions; and (3) no overnight stays for patients or 24-hour operations.

- N 3.3.39 Dental Vacuum/Scavenging.** A system used in dentistry for oral evacuation and nitrous oxide/oxygen scavenging.

3.3.40 Detonation. An exothermic reaction wherein the reaction propagates through the unreacted material at a rate exceeding the velocity of sound, hence the explosive noise. (MED)

3.3.41* Direct Electrical Pathway to the Heart. An externalized conductive pathway, insulated except at its ends, one end of which is in direct contact with heart muscle while the other is outside the body and is accessible for inadvertent or intentional contact with grounded objects or energized, ground-referenced sources. (MED)

3.3.42* Disaster. Within the context of this code, any unusual occurrence or unforeseen situation that seriously overtaxes or threatens to seriously overtax the routine capabilities of a health care facility. (HES)

3.3.43 D.I.S.S. Connector. A system of noninterchangeable medical gas and vacuum connectors complying with CGA V-5, *Diameter-Index Safety System (Noninterchangeable Low Pressure Connections for Medical Gas Applications)*. (PIP)

3.3.44* Double-Insulated Appliances. Appliances where the primary means of protection against electrical shock is not grounding. The primary means is by the use of combinations of insulation and separation spacings in accordance with an approved standard. (MED)

3.3.45 Electrical Life Support Equipment. Electrically powered equipment whose continuous operation is necessary to maintain a patient's life. (ELS)

3.3.46 Electrode. An electrically conductive connection to a patient. (MED)

3.3.47 Emergency Management. The act of developing procedures and plans to create effective preparedness, mitigation, response, and recovery during a disaster affecting a health care facility. (HES)

3.3.48 Emergency Oxygen Supply Connection (EOSC). An assembly of equipment that permits a gas supplier to make a temporary connection to supply oxygen to a building that has had its normal source of oxygen interrupted. (PIP)

3.3.49 Equipment Branch. A system of feeders and branch circuits arranged for delayed, automatic, or manual connection to the alternate power source and that serves primarily 3-phase power equipment. (ELS)

3.3.50 Equipment Grounding Bus. A grounding terminal bus in the feeder circuit of the branch circuit distribution panel that serves a particular area. (MED)

3.3.51* Essential Electrical System. A system comprised of alternate sources of power and all connected distribution systems and ancillary equipment, designed to ensure continuity of electrical power to designated areas and functions of a health care facility during disruption of normal power sources, and also to minimize disruption within the internal wiring system. (ELS)

3.3.52 Evacuation — Waste Gas. See 3.3.181, Waste Anesthetic Gas Disposal.

3.3.53 Exposed Conductive Surfaces. Those surfaces that are capable of carrying electric current and that are unprotected, uninsulated, unenclosed, or unguarded, permitting personal contact. (ELS)

3.3.54* Facility Fire Plan. A plan developed by the health care facility to describe the actions to be taken during a fire emergency.

3.3.55 Fault Current. A current in an accidental connection between an energized and a grounded or other conductive element resulting from a failure of insulation, spacing, or containment of conductors. (ELS)

3.3.56 Feeder. All circuit conductors between the service equipment, the source of a separately derived system, or other power supply source and the final branch-circuit overcurrent device. (ELS)

3.3.57* Flammable. A combustible that is capable of easily being ignited and rapidly consumed by fire.

3.3.58 Flammable Gas. Any substance that exists in the gaseous state at normal atmospheric temperature and pressure and is capable of being ignited and burned when mixed with proper proportion of air, oxygen, or other oxidizers. (HYP)

3.3.59 Flammable Liquid. A liquid that has a closed-cup flash point that is below 37.8°C (100°F) and a maximum vapor pressure of 2068 mmHg (40 psi absolute) at 37.8°C (100°F).

3.3.60* Flash Point. The minimum temperature at which a liquid or a solid emits vapor sufficient to form an ignitable mixture with air near the surface of the liquid or the solid. (FUN)

3.3.61 Flow-Control Valve. A valve, usually a needle valve, that precisely controls flow of gas. (MED)

3.3.62* Flowmeter. A device for measuring volumetric flow rates of gases and liquids. (MED)

3.3.63* Frequency. The number of oscillations, per unit time, of a particular current or voltage waveform. The unit of frequency is the hertz. (MED)

3.3.64* Fume Hood. An enclosure designed to draw air inward by means of mechanical ventilation.

3.3.65 Gas-Powered System. A Level 3 gas distribution system comprised of component parts including but not limited to cylinders, manifolds, air compressor, motor, receivers, controls, filters, dryers, valves, and piping that delivers compressed air or nitrogen at pressures less than 1100 kPa (less than 160 psi) gauge to power devices (e.g., hand pieces, syringes, cleaning devices) as a power source. (PIP)

3.3.66* General Anesthesia and Levels of Sedation/Analgesia.

3.3.66.1 General Anesthesia. A drug-induced loss of consciousness during which patients are not arousable, even by painful stimulation. The ability to independently maintain ventilatory function is often impaired. Patients often require assistance in maintaining a patent airway, and positive pressure ventilation may be required because of depressed spontaneous ventilation or drug-induced depression of neuromuscular function. Cardiovascular function may be impaired. (MED)

3.3.66.2 Deep Sedation/Analgesia. A drug-induced depression of consciousness during which patients cannot be easily aroused but respond purposefully following repeated or painful stimulation. The ability to independently maintain ventilatory function may be impaired. Patients may require assistance in maintaining a patent airway, and spontaneous ventilation may be inadequate. Cardiovascular function is usually maintained. (MED)

3.3.66.3 Moderate Sedation/Analgesia (Conscious Sedation). A drug-induced depression of consciousness during which patients respond purposefully to verbal commands, either alone or accompanied by light tactile stimulation. No interventions are required to maintain a patent airway, and spontaneous ventilation is adequate. Cardiovascular function is usually maintained. (MED)

3.3.66.4 Minimal Sedation (Anxiolysis). A drug-induced state during which patients respond normally to verbal commands. Although cognitive function and coordination may be impaired, ventilatory and cardiovascular functions are unaffected. (MED)

3.3.67* Ground-Fault Circuit Interrupter (GFCI). A device intended for the protection of personnel that functions to de-energize a circuit or portion thereof within an established period of time when a current to ground exceeds the values established for a Class A device. [70, 2017] (ELS)

3.3.68 Grounding. See 3.3.69, Grounding System.

3.3.69* Grounding System. A system of conductors that provides a low-impedance return path for leakage and fault currents. (ELS)

3.3.70 Hazard Current. For a given set of connections in an isolated power system, the total current that would flow through a low impedance if it were connected between either isolated conductor and ground. (ELS)

3.3.70.1 Fault Hazard Current. The hazard current of a given isolated power system with all devices connected except the line isolation monitor. (ELS)

3.3.70.2 Monitor Hazard Current. The hazard current of the line isolation monitor alone. (ELS)

3.3.70.3 Total Hazard Current. The hazard current of a given isolated system with all devices, including the line isolation monitor, connected. (ELS)

3.3.71* Health Care Facilities. Buildings, portions of buildings, or mobile enclosures in which human medical, dental, psychiatric, nursing, obstetrical, or surgical care is provided. (FUN)

3.3.72* Health Care Facility's Governing Body. The person or persons who have the overall legal responsibility for the operation of a health care facility. (FUN)

3.3.73 Home Care. Medical services (equipment) provided in residential occupancies. (FUN)

3.3.74 Hospital. A building or portion thereof used on a 24-hour basis for the medical, psychiatric, obstetrical, or surgical care of four or more inpatients. [101, 2018] (FUN)

3.3.75 Humidifier. A device used for adding water vapor to inspired gas. (MED)

3.3.76 Hyperbaric Facility. Building, structure, or space used to house hyperbaric chambers and auxiliary service equipment for medical applications and procedures at pressures above normal atmospheric pressure. (HYP)

N 3.3.77* Hyperbaric Operations. Procedures conducted on the patient receiving hyperbaric treatment.

3.3.78 Hyperbaric Stand-Alone Oxygen System. The oxygen system is entirely separate from the hospital's Category 1 Oxygen System or is a freestanding hyperbaric facility. (HYP)

3.3.79 Hypobaric Facility. Building, structure, or space used to house hypobaric chambers and auxiliary service equipment for medical applications and procedures at pressures below atmospheric pressure. (HYP)

3.3.80 Hypoxia. A state of inadequate oxygenation of the blood and tissue sufficient to cause impairment of function. [99B, 2018] (HYP)

3.3.81 Immediate Restoration of Service. Automatic restoration of operation with an interruption of not more than 10 seconds. (ELS)

3.3.82* Impedance. Impedance is the ratio of the voltage drop across a circuit element to the current flowing through the same circuit element. The unit of impedance is the ohm. (MED)

3.3.83 Incident Command System (ICS). The combination of facilities, equipment, personnel, procedures, and communications operating within a common organizational structure that has responsibility for the management of assigned resources to effectively accomplish stated objectives pertaining to an incident or training exercise. [1670, 2014] (HES)

3.3.84* Instrument Air. A medical support gas that falls under the general requirements for medical gases. Medical air and instrument air are distinct systems for mutually exclusive applications. (PIP)

3.3.85 Intermittent Positive-Pressure Breathing (IPPB). Ventilation of the lungs by application of intermittent positive pressure to the airway. (MED)

3.3.86* Intrinsically Safe. As applied to equipment and wiring, equipment and wiring that are incapable of releasing sufficient electrical energy under normal or abnormal conditions to cause ignition of a specific hazardous atmospheric mixture. (HYP)

3.3.87 Invasive Procedure. Any procedure that penetrates the protective surfaces of a patient's body (i.e., skin, mucous membrane, cornea) and that is performed with an aseptic field (procedural site). [Not included in this category are placement of peripheral intravenous needles or catheters used to administer fluids and/or medications, gastrointestinal endoscopies (i.e., sigmoidoscopies), insertion of urethral catheters, and other similar procedures.] (ELS)

3.3.88 Isolated Patient Lead. A patient lead whose impedance to ground or to a power line is sufficiently high that connecting the lead to ground, or to either conductor of the power line, results in current flow below a hazardous limit in the lead. (MED)

3.3.89* Isolated Power System. A system comprising an isolation transformer or its equivalent, a line isolation monitor, and its ungrounded circuit conductors. (ELS)

3.3.90 Isolation Transformer. A transformer of the multiple-winding type, with the primary and secondary windings physically separated, that inductively couples its ungrounded secondary winding to the grounded feeder system that energizes its primary winding. (ELS)

3.3.91* Laboratory. A building, space, room, or group of rooms intended to serve activities involving procedures for investigation, diagnosis, or treatment in which flammable, combustible, or oxidizing materials are to be used.

3.3.92 Leak Detectant. For purposes of this standard, a reagent, a solution, or an electronic or mechanical device suitable for the detection or visualization of escaping gas. (PIP)

3.3.93 Life Safety Branch. A system of feeders and branch circuits supplying power for lighting, receptacles, and equipment essential for life safety that is automatically connected to alternate power sources by one or more transfer switches during interruption of the normal power source. (ELS)

3.3.94* Limited-Combustible (Material). See 4.4.2.

3.3.95 Line Isolation Monitor. A test instrument designed to continually check the balanced and unbalanced impedance from each line of an isolated circuit to ground and equipped with a built-in test circuit to exercise the alarm without adding to the leakage current hazard. (ELS)

3.3.96* Liquid. Any material that (1) has a fluidity greater than that of 300 penetration asphalt when tested in accordance with ASTM D5, *Standard Test Method for Penetration of Bituminous Materials*, or (2) is a viscous substance for which a specific melting point cannot be determined but that is determined to be a liquid in accordance with ASTM D4359, *Standard Test for Determining Whether a Material is a Liquid or a Solid*. [30, 2018] (LAB)

3.3.97* Local Signal. A visible indication of the operating status of equipment. (PIP)

3.3.98 mA. Milliampere.

3.3.99 Manifold. A device for connecting the outlets of one or more gas cylinders to the central piping system for that specific gas. (PIP)

3.3.100* Manufactured Assembly. A factory-assembled product designed for aesthetics or convenience that contains medical gas or vacuum outlets, piping, or other devices related to medical gases. (PIP)

3.3.101 Mask. A device that fits over the mouth and nose (oronasal) or nose (nasal) used to administer gases to a patient. (MED)

3.3.102* Medical Air. For purposes of this code, medical air is air supplied from cylinders, bulk containers, or medical air compressors or reconstituted from oxygen USP and oil-free, dry nitrogen NF. (PIP)

3.3.102.1 Proportioning System for Medical Air USP. A central supply that produces medical air (USP) reconstituted from oxygen USP and nitrogen NF by means of a mixer or blender. (PIP)

3.3.103 Medical Air Compressor. A compressor that is designed to exclude oil from the air stream and compression chamber and that does not under normal operating conditions or any single fault add any toxic or flammable contaminants to the compressed air. (PIP)

3.3.104 Medical Gas. A patient medical gas or medical support gas. (See also 3.3.142, *Patient Medical Gas* and 3.3.107, *Medical Support Gas*.) (PIP)

3.3.105 Medical Gas System. An assembly of equipment and piping for the distribution of nonflammable medical gases such as oxygen, nitrous oxide, compressed air, carbon dioxide, and helium. (PIP)

Δ 3.3.106* Medical Office. A building or part thereof in which the following occur: (1) examinations and minor treatments/procedures performed under the continuous supervision of a medical professional; (2) the use of limited to minimal sedation and treatment or procedures that do not render the patient incapable of self-preservation under emergency conditions; and (3) no overnight stays for patients or 24-hour operations. (FUN)

3.3.107 Medical Support Gas. Nitrogen or instrument air used for any medical support purpose (e.g., to remove excess moisture from instruments before further processing, or to operate medical-surgical tools, air-driven booms, pendants, or similar applications) and, if appropriate to the procedures, used in laboratories and are not respired as part of any treatment. Medical support gas falls under the general requirements for medical gases. (PIP)

3.3.108 Medical-Surgical Vacuum. A method used to provide a source of drainage, aspiration, and suction in order to remove body fluids from patients. (PIP)

3.3.109 Medical-Surgical Vacuum System. An assembly of central vacuum-producing equipment and a network of piping for patient suction in medical, medical-surgical, and waste anesthetic gas disposal (WAGD) applications. (PIP)

3.3.110 Multiple Treatment Facility. A diagnostic or treatment complex under a single management comprising a number of single treatment facilities, which can be accessed one from the

other without exiting the facility (i.e., does not involve widely separated locations or separate distinct practices). (FUN)

3.3.111 mV. Millivolt.

3.3.112 Nasal Cannula. Device consisting of two short tubes to be inserted into the nostrils to administer oxygen or other therapeutic gases. (MED)

3.3.113 Nebulizer. A device used for producing an aerosol of water and/or medication within inspired gas supply. (MED)

3.3.114 Negative Pressure. Pressure less than atmospheric. (MED)

3.3.115 Nitrogen. An element that, at atmospheric temperatures and pressures, exists as a clear, colorless, and tasteless gas; it comprises approximately four-fifths of the earth's atmosphere. (MED)

3.3.115.1 Nitrogen NF. Nitrogen complying as a minimum with nitrogen NF. (PIP)

3.3.116 Nitrogen Narcosis. A condition resembling alcoholic inebriation, which results from breathing nitrogen in the air under significant pressure. (HYP)

3.3.117 Nitrous Oxide. An inorganic compound, one of the oxides of nitrogen. It exists as a gas at atmospheric pressure and temperature, possesses a sweetish smell, and is used for inducing anesthesia when inhaled. The oxygen in the compound will be released under conditions of combustion, creating an oxygen-enriched atmosphere. (MED)

3.3.118 Noncombustible (Material). See 4.4.1.

3.3.119 Nonflammable. Not readily capable of burning with a flame and not liable to ignite and burn when exposed to flame.

3.3.120 Nonflammable Anesthetic Agent. Refers to those inhalation agents that, because of their vapor pressure at 37°C (98.6°F) and at atmospheric pressure, cannot attain flammable concentrations when mixed with air, oxygen, or mixtures of oxygen and nitrous oxide. (MED)

3.3.121* Nonflammable Medical Gas System. See 3.3.105, Medical Gas System, and Chapter 5.

3.3.122 Nonmedical Compressed Air. Air that is used for purposes other than patient care or medical devices that provide direct patient care. (MEC)

3.3.123 Nursing Home. A building or portion of a building used on a 24-hour basis for the housing and nursing care of four or more persons who, because of mental or physical incapacity, might be unable to provide for their own needs and safety without the assistance of another person. [101, 2018] (FUN)

N 3.3.124 Opportunity for Improvement. An identified gap or shortfall with the potential to raise something to a more desirable or outstanding quality or condition. (HES)

3.3.125* Oxidizing Gas. A gas that supports combustion. (HYP)

3.3.126* Oxygen. A chemical element that, at normal atmospheric temperatures and pressures, exists as a colorless, odorless, and tasteless gas and comprises about 21 percent by volume of the earth's atmosphere. (MED)

3.3.126.1 Gaseous Oxygen. A colorless, odorless, tasteless, and nontoxic gas, comprising about 21 percent of normal air by volume, that is about 10 percent heavier than air; also the physical state of the element at atmospheric temperature and pressure. (MED)

3.3.126.2* Liquid Oxygen. Exists at cryogenic temperature, approximately -184.4°C (-300°F) at atmospheric pressure. It retains all of the properties of gaseous oxygen, but, in addition, when allowed to warm to room temperature at atmospheric pressure, it will evaporate and expand to fill a volume 860 times its liquid volume. (MED)

N 3.3.127 Oxygen Concentrator Unit. An engineered assembly of components that operate to raise the concentration of oxygen, providing oxygen as a drug product.

3.3.128* Oxygen Delivery Equipment. Any device used to transport and deliver an oxygen-enriched atmosphere to a patient. (MED)

3.3.129 Oxygen-Enriched Atmosphere (OEA). For the purposes of this code, an atmosphere in which the concentration of oxygen exceeds 23.5 percent by volume. (HYP)

3.3.130* Oxygen Hood. A device encapsulating a patient's head and used for a purpose similar to that of a mask. (See also 3.3.101, Mask.) (HYP)

N 3.3.131 Oxygen 93 USP. Oxygen complying with Oxygen 93 USP Monograph.

3.3.132* Oxygen Toxicity (Hyperbaric). Physical impairment resulting from breathing gaseous mixtures containing oxygen-enriched atmospheres at elevated partial pressures for extended periods of time. (HYP)

3.3.133 Oxygen USP. Oxygen complying with oxygen USP monograph.

3.3.134 Patient Bed Location. The location of a patient sleeping bed, or the bed or procedure table of a Category 1 space. (ELS)

3.3.135 Patient-Care-Related Electrical Equipment. Electrical equipment appliance that is intended to be used for diagnostic, therapeutic, or monitoring purposes in a patient care vicinity. (MED)

3.3.136* Patient Care Space. Any space of a health care facility wherein patients are intended to be examined or treated. (FUN)

3.3.136.1* Category 1 Space. Space in which failure of equipment or a system is likely to cause major injury or death of patients, staff, or visitors. (FUN)

3.3.136.2* Category 2 Space. Space in which failure of equipment or a system is likely to cause minor injury to patients, staff, or visitors. (FUN)

3.3.136.3* Category 3 Space. Space in which the failure of equipment or a system is not likely to cause injury to patients, staff, or visitors but can cause discomfort. (FUN)

3.3.136.4* Category 4 Space. Space in which failure of equipment or a system is not likely to have a physical impact on patient care. (FUN)

N 3.3.137 Plume (Medical). The smoke by-product consisting of vapors, smoke, and particulate debris produced during the

thermal destruction of tissue by energy-based devices such as lasers, electrosurgical generators, and broadband light sources. (MEC)

N 3.3.138* Producer. The machine(s) or device(s) that generate the flow and suction required for vacuum, WAGD, and plume evacuation systems to operate.

3.3.139 Patient Care Vicinity. A space, within a location intended for the examination and treatment of patients, extending 1.8 m (6 ft) beyond the normal location of the bed, chair, table, treadmill, or other device that supports the patient during examination and treatment and extending vertically to 2.3 m (7 ft 6 in.) above the floor. (MED)

3.3.140 Patient Equipment Grounding Point. A jack or terminal that serves as the collection point for redundant grounding of electric appliances serving a patient care vicinity or for grounding other items in order to eliminate electromagnetic interference problems. (MED)

3.3.141* Patient Lead. Any deliberate electrical connection that can carry current between an appliance and a patient. (MED)

3.3.142 Patient Medical Gas. Piped gases such as oxygen, nitrous oxide, helium, carbon dioxide, and medical air that are used in the application of human respiration and the calibration of medical devices used for human respiration. (PIP)

3.3.143 Piped Distribution System. A pipeline network assembly of equipment that starts at and includes the source valve, warning systems (master, area, local alarms), bulk gas system signal actuating switch wiring, interconnecting piping, and all other components up to and including the station outlets/inlets. (PIP)

3.3.144 Piping. The tubing or conduit of the system. The three general classes of piping are main lines, risers, and branch (lateral) lines. (PIP)

3.3.144.1 Branch (Lateral) Lines. Those sections or portions of the piping system that serve a room or group of rooms on the same story of the facility. (PIP)

3.3.144.2 Main Lines. The piping that connects the source (pumps, receivers, etc.) to the risers or branches, or both. (PIP)

3.3.144.3 Risers. The vertical pipes connecting the system main line(s) with the branch lines on the various levels of the facility. (PIP)

3.3.145 Plug (Attachment Plug, Cap). A device that, by insertion in a receptacle, establishes connection between the conductors of the attached flexible cord and the conductors connected permanently to the receptacle. (MED)

3.3.146 Pressure.

3.3.146.1 Absolute Pressure. The total pressure in a system with reference to zero pressure. (HYP)

3.3.146.2 Ambient Pressure. Refers to total pressure of the environment referenced. (HYP)

3.3.146.3 Gauge Pressure. Refers to total pressure above (or below) atmospheric. (HYP)

3.3.146.4 High Pressure. A pressure exceeding 1.38 kPa (200 psi) gauge (215 psia). (MED)

3.3.146.5 Operating Pressure. The pressure that a particular piping system is set to operate at. (PIP)

3.3.146.6* Partial Pressure. The pressure, in absolute units, exerted by a particular gas in a gas mixture. (HYP)

3.3.146.7 Positive Pressure. Pressure greater than ambient atmospheric. (MED)

3.3.146.8 Working Pressure (Rated). The maximum rated operating pressure for a pipe, tube, or vessel based on its material, its allowable stress in tension, its outside diameter and wall thickness, the operating temperature, the joining method, and industry safety factors. (PIP)

3.3.147* Pressure-Reducing Regulator. A device that automatically reduces gas under high pressure to a usable lower working pressure. (MED)

3.3.148 Procedure Room. Where the proceduralist is using instrumentation that requires constant observation and control. (MED)

3.3.149 psia. Pounds per square inch absolute, a unit of pressure measurement with zero pressure as the base or reference pressure. (HYP)

3.3.150* psig. Pounds per square inch gauge, a unit of pressure measurement with atmospheric pressure as the base or reference pressure. (HYP)

3.3.151 Qualified Person. A person who, by possession of a recognized degree, certificate, professional standing, or skill, and who, by knowledge, training, and experience, has demonstrated the ability to perform the work. (HYP)

3.3.152 Reactance. The component of impedance contributed by inductance or capacitance. The unit of reactance is the ohm. (MED)

3.3.153 Receptacle. A receptacle is a contact device installed at the outlet for the connection of an attachment plug. A single receptacle is a single contact device with no other contact device on the same yoke. A multiple receptacle is two or more contact devices on the same yoke. [70, 2017] (ELS)

3.3.154 Reference Grounding Point. The ground bus of the panelboard or isolated power system panel supplying the patient care room. (MED)

N 3.3.155 Relocatable Power Tap (RPT). Two or more power receptacles supplied by a flexible cord. (See 10.2.3.6.) (MED)

3.3.156* Remote. A Level 3 source of supply that is accessed by exiting the single or multiple treatment facility. (PIP)

3.3.157 Reserve Supply. Where existing, that portion of the supply equipment that automatically supplies the system in the event of failure of the operating supply. The reserve supply only functions in an emergency and not as a normal operating procedure. (PIP)

3.3.158 Risk Categories.

3.3.158.1 Category 1. Activities, systems, or equipment whose failure is likely to cause major injury or death to patients, staff, or visitors.

3.3.158.2 Category 2. Activities, systems, or equipment whose failure is likely to cause minor injury to patients, staff, or visitors.

3.3.158.3 Category 3. Activities, systems, or equipment whose failure is not likely to cause injury to patients, staff, or visitors but can cause discomfort.

3.3.158.4 Category 4. Activities, systems, or equipment whose failure would have no impact on patient care.

3.3.159 Scavenging. Evacuation of exhaled mixtures of oxygen and nitrous oxide. (PIP)

3.3.160 Selected Receptacles. A minimal number of receptacles selected by the health care facility's governing body as necessary to provide essential patient care and facility services during loss of normal power. (ELS)

3.3.161 Self-Extinguishing. A characteristic of a material such that, once the source of ignition is removed, the flame is quickly extinguished without the fuel or oxidizer being exhausted. (HYP)

3.3.162 Semipermanent Connection. A noninterchangeable connection, usually a D.I.S.S. connector, which is the termination of the pipeline and that is intended to be detached only for service. It is not the point at which the user makes connections or disconnections. (PIP)

3.3.163 Service Inlet. The pneumatic terminus of a Level 3 piped vacuum system. (PIP)

3.3.164 Service Outlet. The pneumatic terminus of a piped gas system for other than critical, continuous duty, nonflammable medical life support-type gases such as oxygen, nitrous oxide, or medical air. (PIP)

3.3.165* Single Treatment Facility. A diagnostic or treatment complex under a single management comprising a number of use points, but confined to a single contiguous group of use points (i.e., does not involve widely separated locations or separate distinct practices). (PIP)

3.3.166* Site of Intentional Expulsion. All points within 0.3 m (1 ft) of a point at which an oxygen-enriched atmosphere is intentionally vented to the atmosphere. (MED)

3.3.167 Space. A portion of the health care facility designated by the health care facility's governing body that serves a specific purpose.

3.3.168 Standard Cubic Feet per Minute (SCFM). Volumetric flow rate of gas in units of standard cubic feet per minute. (PIP)

3.3.169 Station Inlet. An inlet point in a piped medical/surgical vacuum distribution system at which the user makes connections and disconnections. (PIP)

3.3.170 Station Outlet. An outlet point in a piped medical gas distribution system at which the user makes connections and disconnections. (PIP)

3.3.171 Supply Source. Those portions of the central supply system that act as a self-contained supply.

3.3.171.1 Operating Supply. The portion of the central supply system that is supplying the piping system at the time of observation. (PIP)

3.3.171.2 Primary Supply. The portion of the central supply system that is the default supply for the piping system. (PIP)

3.3.171.3 Reserve Supply. Where provided, the portion of the central supply system that will supply the piping system when the primary and secondary supplies are exhausted or are not operative. (PIP)

3.3.171.4 Secondary Supply. Where provided, the portion of the central supply system that will supply the piping system when the primary supply is exhausted or is not operative. (PIP)

3.3.172* Surface-Mounted Medical Gas Rail Systems. A surface-mounted gas delivery system intended to provide ready access for two or more gases through a common delivery system to provide multiple gas station outlet locations within a single patient room or Category 1 Space. (PIP)

3.3.173 Task Illumination. Provisions for the minimum lighting required to carry out necessary tasks in the areas described in Chapter 6, including safe access to supplies and equipment and access to exits. (ELS)

3.3.174 Terminal. The end of a flexible hose or tubing used in a manufactured assembly where the user is intended to make connection and disconnection. (PIP)

3.3.175 Touch Current. Leakage current flowing from the enclosure or from parts thereof, excluding patient connections, accessible to any operator or patient in normal use, through an external path other than the protective grounding (earth) conductor to earth or to another part of the enclosure. (MED)

3.3.176 Transfilling. The process of transferring a medical gas in gaseous or liquid state from one container or cylinder to another container or cylinder. (MED)

3.3.177 Tube.

3.3.177.1* Endotracheal Tube. A tube for insertion through the mouth or nose into the upper portion of the trachea (windpipe). (MED)

3.3.178 Use Point. A location with any number of station outlets and inlets arranged for access by a practitioner during treatment of a patient. (PIP)

3.3.179 Vaporizer. A heat exchange unit designed to convert cryogenic liquid into the gaseous state. (PIP)

3.3.180 Ventilation. The mechanical or natural movement of air. (MEC)

3.3.181 Waste Anesthetic Gas Disposal (WAGD). The process of capturing and carrying away gases vented from the patient breathing circuit during the normal operation of gas anesthesia or analgesia equipment. (PIP)

3.3.182 Waste Water.

3.3.182.1 Black Waste Water. Grossly contaminated and contain pathogenic, toxigenic, or other harmful agents.

3.3.182.2 Clear Waste Water. Originates from a sanitary water source and does not pose substantial risk from dermal, ingestion, or inhalation exposure.

3.3.182.3 Gray Waste Water. Contains significant contamination and has the potential to cause discomfort or sickness if contacted or consumed by humans. Can contain potentially unsafe levels of microorganisms or nutrients for microorganisms, as well as other organic or inorganic matter (chemical or biological).

3.3.183* Wet Procedure Locations. The area in a patient care space where a procedure is performed that is normally subject to wet conditions while patients are present, including standing fluids on the floor or drenching of the work area, either of which condition is intimate to the patient or staff. (FUN)

Δ 3.4 BICSI Definitions. These terms are defined in *The BICSI Information Transport Systems (ITS) Dictionary*.

3.4.1 Telecommunications Entrance Facility (EF). An entrance to a building for both public and private network service cables that includes the building entrance point and the entrance room or space at the point of demarcation between campus or utility service and building interior distribution of communications systems. (ELS)

3.4.2 Telecommunications Equipment Room (TER). An environmentally controlled centralized space for telecommunications equipment, typically including main or intermediate cross-connect equipment and cabling. (ELS)

3.4.3 Telecommunications Room (TR). An enclosed architectural space for housing telecommunications equipment, cable terminations, and cross-connect cabling, serving a floor or an area of a floor. (ELS)

Chapter 4 Fundamentals

4.1* Risk Categories. Activities, systems, or equipment shall be designed to meet Category 1 through Category 4 requirements, as detailed in this code.

4.1.1* Category 1. Activities, systems, or equipment whose failure is likely to cause major injury or death of patients, staff, or visitors shall be designed to meet Category 1 requirements, as detailed in this code.

4.1.2* Category 2. Activities, systems, or equipment whose failure is likely to cause minor injury of patients, staff, or visitors shall be designed to meet Category 2 requirements, as detailed in this code.

4.1.3 Category 3. Activities, systems, or equipment whose failure is not likely to cause injury to patients, staff, or visitors, but can cause discomfort, shall be designed to meet Category 3 requirements, as detailed in this code.

4.1.4 Category 4. Activities, systems, or equipment whose failure would have no impact on patient care shall be designed to meet Category 4 requirements, as detailed in this code.

4.2* Risk Assessment.

N 4.2.1 The health care facility's governing body shall establish the processes and operations that are planned for the health care facility.

N 4.2.1.1 The governing body shall conduct risk assessments and shall determine risk categories based on the character of the processes and operations conducted in the health care facility.

4.2.2* Risk categories shall be classified by the health care facility's governing body by following and documenting a defined risk assessment procedure.

N 4.2.2.1 Where required by the authority having jurisdiction, the risk assessment shall be provided to the authority having jurisdiction for review based on the character of the processes and operations conducted in the health care facility.

4.2.3 A documented risk assessment shall not be required where Category 1 is selected.

4.3 Application. The Category definitions in Chapter 4 shall apply to Chapters 5 through 11, 14, and 15, except as modified in those chapters.

4.4 Materials.

4.4.1* Noncombustible Material.

4.4.1.1 A material that complies with any of the following shall be considered a noncombustible material:

- (1) A material that, in the form in which it is used and under the conditions anticipated, will not ignite, burn, support combustion, or release flammable vapors when subjected to fire or heat
- (2) A material that is reported as passing ASTM E136, *Standard Test Method for Behavior of Materials in a Vertical Tube Furnace at 750 Degrees C*
- (3) A material that is reported as complying with the pass/fail criteria of ASTM E136 when tested in accordance with the test method and procedure in ASTM E2652, *Standard Test Method for Behavior of Materials in a Tube Furnace with a Cone-shaped Airflow Stabilizer, at 750 Degrees C*

4.4.1.2 Where the term *limited-combustible* is used in this code, it shall also include the term *noncombustible*. [101:4.6.13]

Δ 4.4.2* Limited-Combustible Material. A material shall be considered a limited-combustible material where one of the following is met:

- (1) The conditions of 4.4.2.1 and 4.4.2.2, and the conditions of either 4.4.2.3 or 4.4.2.4, shall be met.
- (2) The conditions of 4.4.2.6 shall be met.

4.4.2.1 The material shall not comply with the requirements for noncombustible material in accordance with 4.4.1.

Δ 4.4.2.2 The material, in the form in which it is used, shall exhibit a potential heat value not exceeding 3500 Btu/lb (8141 kJ/kg) where tested in accordance with NFPA 259.

4.4.2.3 The material shall have the structural base of a noncombustible material with a surfacing not exceeding a thickness of 1/8 in. (3.2 mm) where the surfacing exhibits a flame spread index not greater than 50 when tested in accordance with ASTM E84, *Standard Test Method for Surface Burning Characteristics of Building Materials*, or ANSI/UL 723, *Standard for Test for Surface Burning Characteristics of Building Materials*.

4.4.2.4 The material shall be composed of materials that, in the form and thickness used, exhibit neither a flame spread index greater than 25 nor evidence of continued progressive combustion when tested in accordance with ASTM E84, *Standard Test Method for Surface Burning Characteristics of Building Materials*, or ANSI/UL 723, *Standard for Test for Surface Burning Characteristics of Building Materials*, and shall be of such composition that all surfaces that would be exposed by cutting through the material on any plane would exhibit neither a flame spread

index greater than 25 nor exhibit evidence of continued progressive combustion when tested in accordance with ASTM E84 or ANSI/UL 723.

N 4.4.2.5 Materials shall be considered limited-combustible materials where tested in accordance with ASTM E2965, *Standard Test Method for Determination of Low Levels of Heat Release Rate for Materials and Products Using an Oxygen Consumption Calorimeter*, at an incident heat flux of 75 kW/m² for a 20-minute exposure and both of the following conditions are met:

- (1) The peak heat release rate shall not exceed 150 kW/m² for longer than 10 seconds.
- (2) The total heat released shall not exceed 8 MJ/m².

4.4.2.6 Where the term *limited-combustible* is used in this Code, it shall also include the term *noncombustible*. [101:4.6.14]

Chapter 5 Gas and Vacuum Systems

5.1 Category 1 Piped Gas and Vacuum Systems.

5.1.1* Applicability.

5.1.1.1 These requirements shall apply to health care facilities that require Category 1 systems as referenced in Chapter 4.

5.1.1.2 Category 1 piped gas or piped vacuum system requirements shall be applied where any of the following criteria is met:

- (1) General anesthesia or deep sedation is performed as defined in 3.3.66.1 and 3.3.66.2.
- (2) The loss of the piped gas or piped vacuum systems is likely to cause major injury or death of patients, staff, or visitors.
- (3) The facility piped gas or piped vacuum systems are intended for Category 1 patient care space per 3.3.136.1.

5.1.1.3* Where the terms *medical gas* or *medical support gas* occur, the provisions shall apply to all piped systems for oxygen, nitrous oxide, medical air, carbon dioxide, helium, nitrogen, instrument air, and mixtures thereof. Wherever the name of a specific gas service occurs, the provision shall apply only to that gas.

5.1.1.4 An existing system that is not in strict compliance with the provisions of this code shall be permitted to be continued in use as long as the authority having jurisdiction has determined that such use does not constitute a distinct hazard to life.

5.1.1.5 The following sections of this chapter shall apply to the operation, management, and maintenance of Category 1 medical gas and vacuum systems in both new and existing facilities:

- (1) 5.1.2
- (2) 5.1.3.1
- (3) 5.1.3.2
- (4) 5.1.3.3.4
- (5) 5.1.3.6.2
- (6) 5.1.3.6.3.10(A) (2)
- (7) 5.1.3.7.6(A) (2)
- (8) 5.1.3.8.4.3(A) (2)
- (9) 5.1.14

5.1.2 Nature of Hazards of Gas and Vacuum Systems. Potential fire and explosion hazards associated with positive pressure

gas central piping systems and medical-surgical vacuum systems shall be considered in the design, installation, testing, operation, and maintenance of these systems.

5.1.3* Category 1 Sources.

5.1.3.1 Central Supply System Identification and Labeling.

5.1.3.1.1* Cylinders, containers, and tanks shall be designed, fabricated, tested, and marked (stamped) in accordance with regulations of DOT, Transport Canada (TC) *Transportation of Dangerous Goods Regulations*, or the ASME *Boiler and Pressure Vessel Code*, "Rules for the Construction of Unfired Pressure Vessels," Section VIII. [55:7.1.5.1]

5.1.3.1.2* Cylinder contents shall be identified by attached labels or stencils naming the contents in accordance with the mandatory requirements of CGA C-7, *Guide to Classification and Labeling of Compressed Gases*.

5.1.3.1.3 Liquid containers shall have additional product identification visible from all directions with a minimum of 51 mm (2 in.) high letters such as a 360-degree wraparound tape for medical liquid containers.

Δ 5.1.3.1.4 Cryogenic liquid containers shall be provided with gas-specific outlet connections in accordance with the mandatory requirements of CGA V-5, *Diameter-Index Safety System (Noninterchangeable Low Pressure Connections for Medical Gas Applications)*, or CGA V-1, *Standard for Compressed Gas Cylinder Valve Outlet and Inlet Connections*.

5.1.3.1.5 Cylinder and cryogenic liquid container outlet connections shall be affixed in such a manner as to be integral to the valve(s), unremovable with ordinary tools, or so designed as to render the attachment point unusable when removed.

5.1.3.1.6 The contents of cylinders and cryogenic liquid containers shall be verified prior to use.

5.1.3.1.7 Labels shall not be defaced, altered, or removed, and connecting fittings shall not be modified.

5.1.3.1.8 Locations containing positive pressure gases other than oxygen and medical air shall have their door(s) labeled as follows:

**Positive Pressure Gases
NO Smoking or Open Flame
Room May Have Insufficient Oxygen
Open Door and Allow Room to Ventilate Before Entering**

5.1.3.1.9 Locations containing central supply systems or cylinders containing only oxygen or medical air shall have their door(s) labeled as follows:

**Medical Gases
NO Smoking or Open Flame**

5.1.3.2 Central Supply System Operations.

5.1.3.2.1 The use of adapters or conversion fittings to adapt one gas-specific fitting to another shall be prohibited.

5.1.3.2.2 Cylinders and containers shall be handled in strict accordance with 11.6.2.

5.1.3.2.3 Only gas cylinders, reusable shipping containers, and their accessories shall be permitted to be stored in rooms containing central supply systems or gas cylinders.

5.1.3.2.4 No flammable materials, cylinders containing flammable gases, or containers containing flammable liquids shall be stored in rooms with gas cylinders.

5.1.3.2.5 If cylinders are wrapped when received, the wrappers shall be removed prior to storage.

5.1.3.2.6 Cylinders without correct markings or whose markings and gas-specific fittings do not match shall not be used.

5.1.3.2.7 Cryogenic liquid storage units intended to supply gas to the facility shall not be used to transfill other liquid storage vessels.

5.1.3.2.8 Care shall be exercised when handling cylinders that have been exposed to freezing temperatures or containers that contain cryogenic liquids to prevent injury to the skin.

5.1.3.2.9 Cylinders containing compressed gases and containers for volatile liquids shall be kept away from radiators, steam piping, and like sources of heat.

5.1.3.2.10 When cylinder valve protection caps are supplied, they shall be secured tightly in place unless the cylinder is connected for use.

5.1.3.2.11 Containers shall not be stored in a tightly closed space.

5.1.3.2.12 Cylinders in use and in storage shall be prevented from reaching temperatures in excess of 52°C (125°F).

5.1.3.2.13 Central supply systems for nitrous oxide and carbon dioxide using cylinders or portable containers shall be prevented from reaching temperatures lower than the recommendations of the central supply system's manufacturer, but shall never be lower than -7°C (20°F) or greater than 52°C (125°F).

5.1.3.3* Central Supply System Locations.

5.1.3.3.1 General. Central supply systems shall be located to meet the criteria in 5.1.3.3.1 through 5.1.3.3.1.10.

5.1.3.3.1.1 Any of the following central supply systems shall be permitted to be located together in the same outdoor enclosure:

- (1) Manifolds for gas cylinders (*see 5.1.3.5.12*)
- (2) Manifolds for cryogenic liquid containers (*see 5.1.3.5.13*)
- (3) Bulk cryogenic liquid systems (*see 5.1.3.5.14*)
- (4)* Individual components on the oxygen side of concentrator sources (*see 5.1.3.9*)

5.1.3.3.1.2 Any of the following systems shall be permitted to be located together in the same indoor enclosure:

- (1) Manifolds for gas cylinders (*see 5.1.3.5.12*)
- (2) Manifolds for cryogenic liquid containers (*see 5.1.3.5.13*)
- (3) In-building emergency reserves (*see 5.1.3.5.16*)
- (4) Instrument air standby headers (*see 5.1.13.3.4.6*)
- (5)* Individual components on the oxygen side of concentrator sources (*see 5.1.3.9*)

5.1.3.3.1.3 Any of the following central supply systems shall be permitted to be located together in the same room:

- (1) Medical air central supply compressor supply sources (*see 5.1.3.6.3*)
- (2) Medical-surgical vacuum central supply sources (*see 5.1.3.7*)
- (3) Waste anesthetic gas disposal (WAGD) central supply sources (*see 5.1.3.8*)

- (4) Instrument air compressor central supply sources (*see 5.1.13.3.4*)

- (5) Any other compressor, vacuum pump, or electrically powered machinery

- (6)* Compressors, dryers, and air receivers used to supply oxygen concentrators (*see 5.1.3.9*)

- (7) Concentrator units with air and oxygen sides in an integral unit (*see 5.1.3.9*)

5.1.3.3.1.4 Any central supply system listed under 5.1.3.3.1.3 shall not be located in the same room with any central supply system listed under 5.1.3.3.1.1 or 5.1.3.3.1.2, except instrument air reserve headers complying with 5.1.3.2.12 and 5.1.13.3.4.6 shall be permitted to be in the same room as an instrument air compressor.

5.1.3.3.1.5 Indoor locations for oxygen, nitrous oxide, and mixtures of these gases shall not communicate with the following:

- (1) Areas involved in critical patient care
- (2) Anesthetizing locations where moderate sedation, deep sedation, or general anesthesia is administered
- (3) Locations storing flammables
- (4) Rooms containing open electrical contacts or transformers
- (5) Storage tanks for flammable or combustible liquids
- (6) Engines
- (7) Kitchens
- (8) Areas with open flames

Δ **5.1.3.3.1.6** Cryogenic fluid central supply systems for oxygen shall comply with NFPA 55.

5.1.3.3.1.7 Bulk nitrous oxide central supply systems shall comply with the mandatory requirements of CGA G-8.1, *Standard for Nitrous Oxide Systems at Customer Sites*.

5.1.3.3.1.8 Central supply systems for carbon dioxide using permanently installed containers with product capacities greater than 454 kg (1000 lb) shall comply with the mandatory requirements of CGA G-6.1, *Standard for Insulated Carbon Dioxide Systems at Consumer Sites*.

5.1.3.3.1.9 Central supply systems for carbon dioxide using permanently installed containers with product capacities of 454 kg (1000 lb) or less shall comply with the mandatory requirements of CGA G-6.5, *Standard for Small, Stationary, Insulated Carbon Dioxide Supply Systems*.

Δ **5.1.3.3.1.10*** Cryogenic fluid central supply systems for inert gases shall comply with the mandatory requirements of CGA P-18, *Standard for Bulk Inert Gas Systems at Consumer Sites*.

Δ **5.1.3.3.2* Design and Construction.** Locations for central supply systems and the storage of positive-pressure gases shall meet the following requirements:

- (1) They shall be constructed with access to move cylinders, equipment, and so forth, in and out of the location on hand trucks complying with 11.4.3.1.1.
- (2) They shall be provided with lockable doors or gates or otherwise able to be secured.
- (3) If outdoors, they shall be provided with an enclosure (e.g., wall or fencing) constructed of noncombustible materials.
- (4) If outdoors and greater than 18.6 m² (200 ft²), they shall be provided with a minimum of two entry/exits.

- (5) If outdoors, bulk cryogenic liquid systems shall be provided with a minimum of two entry/exits.
- (6) If indoors, they shall have interior finishes of noncombustible or limited-combustible materials.
- (7)* If indoors, the room shall be separated from the rest of the building by walls and floors having a 1-hour fire resistance rating with doors and other opening protectives having a ¾-hour fire protection rating.
- (8)* They shall comply with *NFPA 70* for ordinary locations.
- (9)* Fuel-fired equipment shall not be located in the room.
- (10) If heat is required the maximum allowable temperature of the in-room heating element shall be 130°C (266°F).
- (11) They shall be provided with racks, chains, or other fastenings to secure all cylinders from falling, whether connected, unconnected, full, or empty.
- (12)* They shall be supplied with electrical power compliant with the requirements for essential electrical systems as described in Chapter 6.
- (13) They shall have racks, shelves, and supports, where provided, constructed of noncombustible materials or limited-combustible materials.
- (14) They shall protect electrical devices from physical damage.
- (15)* They shall allow access by delivery vehicles and management of cylinders.
- (16) They shall be designed to meet the operational requirements of 5.1.3.2 with regard to room temperature.

5.1.3.3.3 Ventilation.

5.1.3.3.3.1 Ventilation for Indoor Locations. Central supply system locations, medical gas storage rooms, and transfilling room ventilation shall comply with 9.3.6.

5.1.3.3.3.2 Venting of Relief Valves. Indoor supply systems shall have all relief valves vented per 5.1.3.5.6.1(4) through 5.1.3.5.6.1(9).

Δ 5.1.3.3.3.3 Ventilation for Motor-Driven Equipment. The following source locations shall be ventilated to prevent accumulation of heat:

- (1) Medical air central supply systems sources (see 5.1.3.6)
- (2) Medical-surgical vacuum central supply systems sources (see 5.1.3.7)
- (3) Waste anesthetic gas disposal (WAGD) central supply systems sources (see 5.1.3.8.1)
- (4) Instrument air central supply systems sources (see 5.1.13.3.4)

5.1.3.3.3.4 Ventilation for Outdoor Locations.

- (1) Outdoor locations surrounded by impermeable walls, except fire barrier walls, shall have protected ventilation openings located at the base of each wall to allow free circulation of air within the enclosure.
- (2) Walls that are shared with other enclosures or with buildings shall be permitted to not have openings.
- (3) The fire barrier wall shall not have openings or penetrations, except conduit or piping shall be permitted, provided that the penetration is protected with a firestop system in accordance with the building code.

5.1.3.3.4 Storage.

5.1.3.3.4.1 Full or empty medical gas cylinders, when not connected, shall be stored in locations complying with 5.1.3.3.2 through 5.1.3.3.3 and shall be permitted to be in the same rooms or enclosures as their respective central supply systems.

Approved existing installations shall be permitted to be continued in service.

5.1.3.3.4.2 Cylinders, whether full or empty, shall not be stored in enclosures containing motor-driven machinery, with the exception of cylinders intended for instrument air reserve headers complying with 5.1.13.3.4.6, which shall be permitted to be placed in the same location containing an instrument air compressor when it is the only motor-driven machinery located within the room. Only cylinders intended for instrument air reserve headers complying with 5.1.13.3.4.6 shall be permitted to be stored in enclosures containing instrument air compressors.

Δ 5.1.3.4 Control Equipment. For control equipment, as specified in 5.1.3.5.5, 5.1.3.5.6, and 5.1.3.5.8, that is physically remote from the supply system, the control equipment shall be installed within a secure enclosure to prevent unauthorized access in accordance with 5.1.3.3.2(2).

5.1.3.4.1 The enclosure shall provide enough space to perform maintenance and repair.

5.1.3.4.2 The location of the enclosure for control equipment other than for medical air shall not communicate with combustible or flammable materials.

5.1.3.5* Central Supply Systems. Central supply systems shall be permitted to consist of the following:

- (1) Cylinder manifolds for gas cylinders per 5.1.3.5.12
- (2) Manifolds for cryogenic liquid containers per 5.1.3.5.13
- (3) Cryogenic fluid central supply systems per 5.1.3.5.14
- (4) Medical air compressor systems per 5.1.3.6
- (5) Medical-surgical vacuum producers per 5.1.3.7
- (6) WAGD producers per 5.1.3.8
- (7) Instrument air compressor systems per 5.1.13.3.4
- (8) Proportioning systems for medical air USP per 5.1.3.6.3.14

5.1.3.5.1 General. Central supply systems shall be obtained from a supplier or manufacturer familiar with their proper construction and use and installed in accordance with the manufacturer's instructions.

Δ 5.1.3.5.2 Permitted Locations for Medical Gases. Central supply systems for oxygen, medical air, nitrous oxide, carbon dioxide, and all other patient medical gases shall be piped only to medical gas outlets complying with 5.1.5, into areas where the gases will be used under the direction of licensed medical professionals for purposes congruent with the following:

- (1) Direct respiration by patients
- (2) Clinical application of the gas to a patient, such as the use of an insufflator to inject carbon dioxide into patient body cavities during laparoscopic surgery and carbon dioxide used to purge heart-lung machine blood flow ways
- (3) Medical device applications directly related to respiration
- (4) Power for medical devices used directly on patients
- (5) Calibration of medical devices intended for (1) through (4)
- (6) Simulation centers for the education, training, and assessment of health care professionals

5.1.3.5.3 Support Gases. Central supply systems for support gases shall not be piped to, or used for, any purpose except medical support application.

5.1.3.5.4* Materials. Materials used in central supply systems shall meet the following requirements:

- (1) In those portions of systems intended to handle oxygen at gauge pressures greater than 2413 kPa (350 psi), interconnecting hose shall contain no polymeric materials.
- (2) In those portions of systems intended to handle oxygen or nitrous oxide material, construction shall be compatible with oxygen under the temperatures and pressures to which the components can be exposed in the containment and use of oxygen, nitrous oxide, mixtures of these gases, or mixtures containing more than 23.5 percent oxygen.
- (3) If potentially exposed to cryogenic temperatures, materials shall be designed for low temperature service.
- (4) If intended for outdoor installation, materials shall be installed per the manufacturer's requirements.

5.1.3.5.5 Controls for Line Pressure.

5.1.3.5.5.1* All positive-pressure supply systems shall be provided with means to control the final line pressure at the source with all the following characteristics:

- (1) Able to maintain stable pressures within the limits of Table 5.1.11
- (2) Each control mechanism able to flow 100 percent of the peak calculated demand.
- (3) Redundant, such that each component of the control mechanism can be isolated for service or replacement while maintaining normal operation.
- (4) Protected against overpressure (*see 5.1.3.5.6*).
- (5) Be constructed of materials deemed suitable by the manufacturer.

5.1.3.5.5.2 The line pressure regulators required under 5.1.3.5.5.1, where used for bulk cryogenic liquid systems, shall be of a balanced design.

5.1.3.5.6 Relief Valves.

5.1.3.5.6.1 All pressure relief valves shall meet the following requirements:

- (1) They shall be of brass, bronze, or stainless steel construction.
- (2) They shall be designed for the specific gas service.
- (3) They shall have a relief pressure setting not higher than the maximum allowable working pressure (MAWP) of the component with the lowest working pressure rating in the portion of the system being protected.
- (4) They shall be vented to the outside of the building, except that relief valves for compressed air systems having less than 84,950 L (3000 ft³) at STP shall be permitted to be diffused locally by means that will not restrict the flow.
- (5) They shall have a vent discharge line that is not smaller than the size of the relief valve outlet.
- (6) Where two or more relief valves discharge into a common vent line, its internal cross-sectional area shall be not less than the aggregate cross-sectional area of all relief valve vent discharge lines served.
- (7) They shall not discharge into locations creating potential hazards.
- (8) They shall have the discharge terminal turned down and screened to prevent the entry of rain, snow, or vermin.
- (9) They shall be designed in accordance with ASME B31.3, *Pressure Process Piping*.

5.1.3.5.6.2 When vented to outdoors, materials and construction for relief valve discharge lines shall be the same as required for positive pressure gas distribution. (*See 5.1.10.1.*)

5.1.3.5.6.3 Central supply systems for positive pressure gases shall include one or more relief valves, all meeting the following requirements:

- (1) They shall be located between each final line regulator and the source valve.
- (2) They shall have a relief setting that is 50 percent above the normal system operating pressure, as indicated in Table 5.1.11.

5.1.3.5.6.4 When vented outside, relief valve vent lines shall be labeled in accordance with 5.1.11.1 in any manner that will distinguish them from the medical gas pipeline.

5.1.3.5.7 Auxiliary Source Connection. All cryogenic fluid central supply systems shall be provided with an auxiliary source connection point of the same size as the main line, which shall be located immediately on the patient side of the source valve.

5.1.3.5.7.1 The connection shall consist of a tee, a valve, and a removable plug or cap.

5.1.3.5.7.2 The auxiliary source connection valve shall be normally closed and secured.

Δ 5.1.3.5.8 Multiple Pressures. Where a single central supply system supplies separate piped distribution networks operating at different pressures, each piped distribution network shall comply with the following:

- (1) Medical air compressor systems: 5.1.3.5.5 (pressure regulators) and 5.1.9.2.4(7) (master alarm)
- (2) All central supply systems: 5.1.3.5.5 (pressure regulators), 5.1.3.5.6 (relief valves), 5.1.4.2 (source valve), and 5.1.9.2.4(7) (master alarm)

5.1.3.5.9 Local Signals.

5.1.3.5.9.1 The following central supply systems shall have local signals located at the source equipment:

- (1) Manifolds for gas cylinders without reserve supply (*see 5.1.3.5.12*)
- (2) Manifolds for gas cylinders with reserve supply
- (3) Manifolds for cryogenic liquid containers (*see 5.1.3.5.13*)
- (4) Bulk cryogenic liquid systems (*see 5.1.3.5.14*)
- (5) In-building emergency reserves (*see 5.1.3.5.16*)
- (6) Instrument air headers (*see 5.1.13.3.4.6*)

5.1.3.5.9.2 The local signals shall meet the following requirements:

- (1) Provision of visual indication only
- (2) Labeling for the service and condition being monitored
- (3) If intended for outdoor installation, be installed per manufacturer's requirements

Δ 5.1.3.5.10* Headers. In central supply systems using cylinders containing either gas or liquid, each header shall include the following:

- (1)* Cylinder connections in the number required for the header's application

- (2) Cylinder lead for each cylinder constructed of materials complying with 5.1.3.5.4 and provided with end fittings permanently attached to the cylinder lead complying with the mandatory requirements of CGA V-1, *Standard for Compressed Gas Cylinder Valve Outlet and Inlet Connections* (ANSI B57.1)
- (3) Filter of a material complying with 5.1.3.5.4 to prevent the intrusion of debris into the manifold controls
- (4) Header shutoff valve downstream of the nearest cylinder connection, but upstream of the point at which the header connects to the central supply system
- (5) Pressure indicator indicating the pressure of header contents
- (6) Check valve to prevent backflow into the header and to allow service to the header
- (7) If intended for gas cylinder service, a check valve at each connection for the cylinder lead in 5.1.3.5.10(2) to prevent loss of gas in the event of damage to the cylinder lead or operation of an individual cylinder relief valve
- (8) If intended for gas cylinder service, a pressure regulator to reduce the cylinder pressure to an intermediate pressure to allow the proper operation of the primary and secondary headers
- (9) If intended for service with cryogenic liquid containers, a pressure relief valve
- (10) Vent valves, if fitted on a header, vented outside of the building per 5.1.3.5.6.1(5) through 5.1.3.5.6.1(9) and 5.1.3.5.6.2

N 5.1.3.5.11* Oxygen Concentrator Supply Units.

N 5.1.3.5.11.1 Oxygen concentrator supply units for use with medical gas pipelines shall produce oxygen meeting the requirements of Oxygen 93 USP or Oxygen USP.

N 5.1.3.5.11.2 Output shall have less than or equal to 1 mg/m³ (1.685 × 10⁻⁶ lb/yd³) of permanent particulates sized 1 micron or larger at normal atmospheric pressure.

N 5.1.3.5.11.3 Materials of construction on the air side of the oxygen concentrator unit shall be suitable for the service as determined by the manufacturer.

N 5.1.3.5.11.4 Materials of construction on the oxygen side of the oxygen concentrator unit shall comply with 5.1.3.5.4

N 5.1.3.5.11.5 The components that make up the oxygen concentrator unit shall be as follows:

- (1) The manufacturer of the concentrator unit shall be permitted to use such components and arrangement of such components as needed to produce oxygen complying with 5.1.3.5.11.1 in the quantity as required by the facility, except where otherwise specifically defined in this code.
- (2) Air receivers and oxygen accumulators, where used, shall comply with Section VIII, "Unfired Pressure Vessels," of the ASME *Boiler and Pressure Vessels Code* and be provided with overpressure relief valves.

N 5.1.3.5.11.6 The supply air to the concentrators shall be of a quality to ensure the oxygen concentrator unit can produce oxygen complying with 5.1.3.5.11.1 and shall not be subject to normally anticipated contamination (e.g., vehicle or other exhausts, gas leakage, discharge from vents, flooding, and so forth).

N 5.1.3.5.11.7 The oxygen concentrator supply unit and any associated electrical equipment shall be provided, a minimum, with the following electrical components:

- (1) Either a disconnect switch for each major electrical component or a single disconnect that deactivates all electrical components in the concentrator unit.
- (2) Motor starting devices with overload protection for any component with an electrical motor over 2 hp.

N 5.1.3.5.11.8 A vent valve shall be provided as follows:

- (1) Located on the source side of the concentrator outlet isolation valve to permit the operation of the oxygen concentrator unit for validation, calibration, and testing while the unit is isolated from the pipeline system
- (2) Sized to allow for at least 25 percent of the oxygen concentrator unit flow
- (3) Vented to a location compliant with 5.1.3.3.3.2

N 5.1.3.5.11.9 A DN8 (NPS ¼) valved sample port shall be provided near the oxygen concentration monitor sensor connection for sampling of the gas from the oxygen concentrator unit.

N 5.1.3.5.11.10 At least one 0.1 micron filter suitable for oxygen service shall be provided at the outlet of the oxygen concentrator supply unit.

N 5.1.3.5.11.11 A check valve shall be provided at the outlet of the oxygen concentrator supply unit to prevent backflow into the oxygen concentrator supply unit and to allow service to the unit.

N 5.1.3.5.11.12 An outlet valve shall be provided to isolate all components of the oxygen concentrator from the pipeline with the following characteristics:

- (1) The valve shall have both manual and automatic actuation with visual indication of open or closed.
- (2) The valve shall close automatically whenever the oxygen concentrator unit is not producing oxygen of a concentration equal to that in 5.1.3.5.11.1.
- (3) Continuing operation of the oxygen concentrator supply unit through the vent mode shall be permitted with the isolating valve closed.
- (4) The isolating valve, when automatically closed due to low concentration, shall require manual reset to ensure the oxygen concentrator supply unit is examined prior to return to service.
- (5) Closing the isolating valve, whether automatically or manually, shall activate an alarm signal at the master alarms (see 5.1.9.2) indicating that the oxygen concentrator supply unit is disconnected.

N 5.1.3.5.11.13 The oxygen concentrator supply unit shall be provided with an oxygen concentration monitor with the following characteristics:

- (1) The monitor shall be capable of monitoring 99 percent oxygen concentration with 1 percent accuracy.
- (2) The monitor shall continuously display the oxygen concentration and shall activate local alarm and master alarms per 5.1.3.9.4 when a concentration lower than 91 percent is observed.
- (3) The monitor shall continuously display the oxygen concentration.
- (4) It shall be permitted to insert the monitor into the pipeline without a demand check.

5.1.3.5.12* Manifolds for Gas Cylinders.

5.1.3.5.12.1 The manifolds in this category shall be located in accordance with 5.1.3.3.1 and shall meet the following:

- (1) If located outdoors, they shall be installed in an enclosure used only for this purpose and sited to comply with minimum distance requirements in Table 5.1.3.5.13.1.
- (2) If located indoors, they shall be installed within a room used only for enclosure of such manifolds.

5.1.3.5.12.2 The manifold locations for this category shall be constructed in accordance with 5.1.3.3.2.

5.1.3.5.12.3 The manifolds in this category shall have their primary and secondary headers located in the same enclosure.

5.1.3.5.12.4 The manifolds in this category shall consist of the following:

- (1) Two equal headers in accordance with 5.1.3.5.10, each with a sufficient number of gas cylinder connections for one average day's supply, but not fewer than two connections, and with the headers connected to the final line pressure regulator assembly in such a manner that either header can supply the system
- (2) Vent valves, if fitted on a header, vented outside of the building per 5.1.3.5.6.1(5) through 5.1.3.5.6.1(9) and 5.1.3.5.6.2
- (3) Intermediate relief valve(s), piped to the outside in accordance with 5.1.3.5.6.1(5) through 5.1.3.5.6.1(9), that protects the piping between the header pressure regulator and the line pressure regulator assembly, and protects the line pressure regulators from overpressure in the event of a header regulator failure

5.1.3.5.12.5 The manifolds in this category shall include an automatic means of alternating the two headers to accomplish the following in normal operation:

- (1) One header is the primary and the other is the secondary, with either being capable of either role.
- (2) When the primary header is supplying the system, the secondary header is prevented from supplying the system.
- (3) When the primary header is depleted, the secondary header automatically begins to supply the system.

5.1.3.5.12.6 The manifolds in this category shall have a local signal that visibly indicates the operating status of the equipment and shall activate an indicator at all master alarm panels when or at a predetermined set point before the secondary header begins to supply the system, indicating changeover has occurred or is about to occur.

5.1.3.5.12.7 If manifolds are located out of doors, they shall be installed per the manufacturer's requirements.

5.1.3.5.13* Manifolds for Cryogenic Liquid Containers.

5.1.3.5.13.1 Manifolds for cryogenic liquid containers shall be located in accordance with 5.1.3.3.1 and shall meet the following:

- (1) If located outdoors, they shall be installed in an enclosure used only for the enclosure of such containers and sited to comply with minimum distance requirements in Table 5.1.3.5.13.1.
- (2) If located indoors, they shall be installed within a room used only for the enclosure of such containers.

N Table 5.1.3.5.13.1 Minimum Separation Distance Between Portable Cryogenic Containers and Exposures

Exposure	Minimum Distance	
	ft	m
(1) Building exits	10	3.1
(2) Wall openings	1	0.3
(3) Air intakes	10	3.1
(4) Property lines	5	1.5
(5) Room or area exits	3	0.9
(6) Combustible materials, (e.g., paper, leaves, weeds, dry grass, debris)	15	4.5
(7) Incompatible hazardous materials	20	6.1

[55:Table 8.7.3]

5.1.3.5.13.2 The manifolds in this category shall have their primary and secondary headers located in the same enclosure.

5.1.3.5.13.3 The reserve header shall be permitted to be located in the same enclosure as the primary and secondary headers or in another enclosure compliant with 5.1.3.5.13.1.

5.1.3.5.13.4 The manifolds in this category shall consist of the following:

- (1) Two equal headers per 5.1.3.5.10, each having sufficient internal or external vaporization capacity to meet the required peak flow rate and each having sufficient number of liquid container connections for one average day's supply, and with the headers connected to the final line pressure regulator assembly in such a manner that either header can supply the system
- (2) Reserve header per 5.1.3.5.10 having sufficient number of gas cylinder connections for one average day's supply, but not fewer than three connections, and connected downstream of the primary/secondary headers and upstream of the final line pressure regulators
- (3) Pressure relief installed downstream of the connection of the reserve header and upstream of the final line pressure regulating assembly and set at 50 percent above the nominal inlet pressure

5.1.3.5.13.5 The manifolds in this category shall include an automatic means of controlling the three headers to accomplish the following during normal operation:

- (1) If provided with two liquid container headers, one cryogenic liquid header shall be the primary and the other shall be the secondary, with either being capable of either role.
- (2) If provided with one liquid container header and one gas cylinder header (a hybrid arrangement), the liquid container header is the primary and the gas cylinder header is the secondary.
- (3) When the primary header is supplying the system, the secondary header is prevented from supplying the system.
- (4) When the primary header is depleted, the secondary header automatically begins to supply the system.

5.1.3.5.13.6 The manifolds in this category shall be equipped with a means to conserve the gas produced by evaporation of the cryogenic liquid in the secondary header (when so provided). This mechanism shall discharge the conserved gas into the system upstream of the final line regulator assembly.

5.1.3.5.13.7 The manifolds in this category shall include a manual or automatic means to place either header into the role of primary header and the other into the role of secondary header, except where a liquid/gas hybrid manifold is employed.

5.1.3.5.13.8 The manifolds in this category shall include a means to automatically activate the reserve header if for any reason the primary and secondary headers cannot supply the system.

Δ 5.1.3.5.13.9 The manifolds in this category shall have a local signal that visibly indicates the operating status of the equipment and activates an indicator at all master alarms under the following conditions:

- (1) When or at a predetermined set point before the secondary header begins to supply the system, indicating changeover
- (2) Where a hybrid arrangement is employed, when or at a predetermined set point before the secondary (cylinder) header contents fall to one average day's supply, indicating secondary low
- (3) When or at a predetermined set point before the reserve header begins to supply the system, indicating reserve is in use
- (4) When or at a predetermined set point before the reserve header contents fall to one average day's supply, indicating reserve low

• **5.1.3.5.14* Cryogenic Fluid Central Supply Systems.**

Δ 5.1.3.5.14.1 Cryogenic fluid central supply systems shall be in accordance with NFPA 55.

Δ 5.1.3.5.14.2 Bulk cryogenic liquid systems shall have the following protections:

- (1) Be installed in accordance with NFPA 55
- (2) Be installed in accordance with the mandatory requirements in CGA M-1, *Standard for Medical Gas Supply Systems at Health Care Facilities*
- (3) Have a minimum work space clearance of 3 ft (1 m) around the storage container, vaporizer(s), and the cabinet opening or front side of the pressure regulating manifold for system maintenance and operation.

5.1.3.5.14.3 Cryogenic fluid central supply sources shall include automatic means to provide the following functions:

- (1) When the main supply is supplying the system, the reserve supply shall be prevented from supplying the system until the main supply is reduced to a level at or below the reserve activation pressure.
- (2) When the main supply cannot supply the system, the reserve supply shall automatically begin to supply the system.
- (3) Where there is more than one main supply vessel, the system shall operate as described in 5.1.3.5.13 for primary, secondary, and reserve operation.
- (4) Where there are two or more cryogenic vessels, they shall be permitted to alternate (e.g., on a timed basis) in the roles of primary, secondary, and reserve, provided that an

operating cascade (primary-secondary-reserve) as required in 5.1.3.5.13.5 is maintained at all times.

- (5) Where a cryogenic vessel is used as the reserve, the reserve vessel shall include a means to conserve the gas produced by evaporation of the cryogenic liquid in the reserve vessel and to discharge the gas into the line upstream of the final line regulator assembly as required by 5.1.3.5.13.6.

Δ 5.1.3.5.14.4* The cryogenic fluid central supply shall have a local signal that visibly indicates the operating status of the equipment and an indicator at all master alarms under the following conditions:

- (1) When or at a predetermined set point before the main supply reaches one average day's supply, indicating low contents
- (2) When or at a predetermined set point before the reserve supply begins to supply the system, indicating reserve is in use
- (3) When or at a predetermined set point before the reserve supply contents fall to one average day's supply, indicating reserve low
- (4) If the reserve is a cryogenic vessel, when or at a predetermined set point before the reserve internal pressure falls too low for the reserve to operate properly, indicating reserve failure
- (5) Where there is more than one main supply vessel, when or at a predetermined set point before the secondary vessel begins to supply the system, indicating changeover

5.1.3.5.15* Emergency Oxygen Supply Connection (EOSC). Emergency oxygen supply connections (EOSCs) shall be installed to allow connection of a temporary auxiliary source of supply for emergency or maintenance situations where either of the following conditions exist:

- (1) The bulk cryogenic liquid central supply system or micro-bulk cryogenic liquid system is outside of and remote from the building that the oxygen supply serves, and there is no connected in-building oxygen reserve sufficient for one average day's supply. (See 5.1.3.5.16 for requirements for such reserves.)
- (2) Multiple freestanding buildings are served from a single oxygen source such that damage to the interconnecting oxygen line could result in one or more buildings losing oxygen supply, in which case each building is required to be provided with a separate emergency connection.

5.1.3.5.15.1 EOSCs shall be located as follows:

- (1) Located on the exterior of the building being served in a location accessible by emergency supply vehicles at all times in all weather conditions
- (2) Connected to the main supply line immediately downstream of the main shutoff valve

5.1.3.5.15.2 EOSCs shall consist of the following:

- (1) Physical protection to prevent unauthorized tampering
- (2) Female DN (NPS) inlet for connection of the emergency oxygen source that is sized for 100 percent of the system demand at the emergency source gas pressure
- (3) Manual shutoff valve to isolate the EOSC when not in use
- (4) Two check valves, one downstream of the EOSC and one downstream of the main line shutoff valve, with both upstream from the tee connection for the two pipelines

- (5) Relief valve sized to protect the downstream piping system and related equipment from exposure to pressures in excess of 50 percent higher than normal line pressure
- (6) Any valves necessary to allow connection of an emergency supply of oxygen and isolation of the piping to the normal source of supply
- (7) Minimum of 1 m (3 ft) of clearance around the EOSC for connection of temporary auxiliary source

5.1.3.5.16 In-Building Emergency Reserves (IBERs).

5.1.3.5.16.1 IBERs shall not be used as substitutes for the bulk gas reserve system that is required in 5.1.3.5.14.3.

5.1.3.5.16.2 When an IBER is provided inside the building as a substitute for the EOSC or for other purposes, it shall be located in accordance with 5.1.3.3 as follows:

- (1) In a room or enclosure constructed per 5.1.3.3.2
- (2) In a room or enclosure ventilated per 5.1.3.3.3

5.1.3.5.16.3 IBERs shall consist of either of the following:

- (1) Gas cylinder header per 5.1.3.5.10 with sufficient cylinder connections to provide for at least one average day's supply with the appropriate number of connections being determined after consideration of the delivery schedule, the proximity of the facility to alternate supplies, and the facility's emergency plan
- (2) Manifold for gas cylinders complying with 5.1.3.5.12

5.1.3.5.16.4 IBERs shall include a check valve in the main line placed on the distribution system side of the ordinary source's main line valve to prevent flow of gas from the emergency reserve to the ordinary source.

5.1.3.5.16.5 IBERs shall have a local signal that visibly indicates the operating status of the equipment and an alarm at all master alarms when or just before the reserve begins to serve the system.

5.1.3.6* Category 1 Medical Air Central Supply Systems.

5.1.3.6.1* Quality of Medical Air. Medical air shall be required to have the following characteristics:

- (1) It shall be supplied from cylinders, bulk containers, or medical air compressor sources, or it shall be reconstituted from oxygen USP and oil-free, dry nitrogen NF.
- (2) It shall meet the requirements of medical air USP.
- (3) It shall have no detectable liquid hydrocarbons.
- (4) It shall have less than 25 ppm gaseous hydrocarbons.
- (5) It shall have equal to or less than 1 mg/m³ (6.85×10^{-7} lb/yd³) of permanent particulates sized 1 micron or larger in the air at normal atmospheric pressure.

5.1.3.6.2* Uses of Medical Air. Medical air sources shall be connected to the medical air distribution system only and shall be used only for air in the application of human respiration and calibration of medical devices for respiratory application.

5.1.3.6.3* Medical Air Compressor Supply Sources.

5.1.3.6.3.1 Location. Medical air compressor systems shall be located per 5.1.3.3 as follows:

- (1) Indoors in a dedicated mechanical equipment area, adequately ventilated and with any required utilities (e.g., electricity, drains, lighting)
- (2) In a room ventilated per 5.1.3.3.3.3

- (3) For air-cooled equipment, in a room designed to maintain the ambient temperature range as recommended by the manufacturer

Δ 5.1.3.6.3.2 Required Components. Medical air compressor systems shall consist of the following:

- (1) Components complying with 5.1.3.6.3.4 through 5.1.3.6.3.8, arranged per 5.1.3.6.3.9
- (2) Automatic means to prevent backflow from all on-cycle compressors through all off-cycle compressors
- (3) Manual shutoff valve to isolate each compressor from the centrally piped system and from other compressors for maintenance or repair without loss of pressure in the system
- (4) Intake filter-muffler(s) of the dry type
- (5) Pressure relief valve(s) set at 50 percent above line pressure
- (6) Piping and components between the compressor and the source shutoff valve that do not contribute to contaminant levels
- (7) Except as defined in 5.1.3.6.3.2(1) through (6), materials and devices used between the medical air intake and the medical air source valve that are of any design or construction appropriate for the service as determined by the manufacturer

5.1.3.6.3.3 Air Drying Equipment. Medical air compressor systems shall preclude the condensation of water vapor in the piping distribution system by air drying equipment.

5.1.3.6.3.4 Compressors for Medical Air.

(A)* Compressors for medical air shall be designed to prevent the introduction of contaminants or liquid into the pipeline by any of the following methods:

- (1) Elimination of oil anywhere in the compressor (e.g., liquid ring and permanently sealed bearing compressors)
- (2) Reciprocating compressors provided with a separation of the oil-containing section from the compression chamber by at least two seals creating an area open to atmosphere that allows the following:
 - (a) Direct and unobstructed visual inspection of the interconnecting shaft through vent and inspection openings no smaller than 1.5 shaft diameters in size
 - (b) Confirmation by the facility operators of proper seal operation by direct visual inspection through the above-shaft opening, without disassembly of the compressor (e.g., extended head compressors with an atmospheric vent between the compression chamber and the crankcase)
- (3) Rotating element compressors provided with a compression chamber free of oil that provide the following:
 - (a) Separation of each oil-containing section from the compression chamber by at least one seal having atmospheric vents on each side with the vent closest to the oil-containing section supplied with a gravity drain to atmosphere
 - (b) Unobstructed visualization of the atmospheric vent(s), closest to each oil-containing section, that is accessible for inspection without disassembling the compressor
 - (c) Entry of the rotating shaft into each compression chamber at a point that is above atmospheric pressure

- (d) Confirmation by the facility operators of proper seal operation by direct visual inspection of the atmospheric vents

(B) For liquid ring compressors, service water and seal water shall be treated to control waterborne pathogens and chlorine from hyperchlorination from entering the medical air.

(C) Liquid ring compressors shall comply with the following:

- (1) Service water and seal water of a quality recommended by the compressor manufacturer shall be used.
- (2) Reserve medical air standby headers or a backup compressor shall be installed.
- (3) When installed, the header shall comply with 5.1.3.5.10.
- (4) When installed, the number of attached cylinders shall be sufficient for 1 hour normal operation.

(D) Compressors shall be constructed of materials deemed suitable by the manufacturer.

(E) Antivibration mountings shall be installed for compressors as required by equipment dynamics or location and in accordance with the **manufacturer's** recommendations.

(F) Flexible connectors shall connect the air compressors with their intake and outlet piping.

5.1.3.6.3.5 Aftercoolers.

(A) Aftercoolers, where required, shall be provided with individual condensate traps.

(B) The receiver shall not be used as an aftercooler or aftercooler trap.

(C) Aftercoolers shall be constructed of materials deemed suitable by the manufacturer.

(D) Antivibration mountings shall be installed for aftercoolers as required by equipment dynamics or location and in accordance with the **manufacturer's** recommendations.

5.1.3.6.3.6 Medical Air Receivers. Receivers for medical air shall meet the following requirements:

- (1) They shall be made of corrosion-resistant materials or otherwise be made corrosion resistant.
- (2) They shall comply with Section VIII, "Unfired Pressure Vessels," of the ASME *Boiler and Pressure Vessel Code*.
- (3) They shall be equipped with a pressure relief valve, automatic drain, manual drain, sight glass, and pressure indicator.
- (4) They shall be of a capacity sufficient to prevent the compressors from short-cycling.

5.1.3.6.3.7 Medical Air Dryers. Medical air dryers, where required, shall meet the following requirements:

- (1) Be designed to provide air at a maximum dew point that is below the frost point [0°C (32°F)] at 345 kPa (50 psi to 55 psi) at any level of demand
- (2) Be sized for 100 percent of the system peak calculated demand at design conditions
- (3) Be constructed of materials deemed suitable by the manufacturer
- (4) Be provided with antivibration mountings installed as required by equipment dynamics or location and in accordance with the **manufacturer's** recommendations

5.1.3.6.3.8 Medical Air Filters. Medical air filters shall meet the following requirements:

- (1) Be appropriate for the intake air conditions
- (2) Be located upstream (source side) of the final line regulators
- (3) Be sized for 100 percent of the system peak calculated demand at design conditions and be rated for a minimum of 98 percent efficiency at 1 micron or greater
- (4) Be equipped with a continuous visual indicator showing the status of the filter element life
- (5) Be constructed of materials deemed suitable by the manufacturer

5.1.3.6.3.9 Piping Arrangement and Redundancies.

(A) Component arrangement shall be as follows:

- (1) Components shall be arranged to allow service and a continuous supply of medical air in the event of a single fault failure.
- (2) Component arrangement shall be permitted to vary as required by the technology(ies) employed, provided that an equal level of operating redundancy and medical air quality is maintained.

(B) Medical air compressors shall be sufficient to serve the peak calculated demand with the largest single compressor out of service. In no case shall there be fewer than two compressors.

(C) When aftercoolers are provided, they shall be arranged to meet either one of the following:

- (1) Arranged as a duplex or multiplex set, sized to serve the peak calculated demand with the largest single aftercooler out of service, and provided with valves adequate, to isolate any single aftercooler from the system without shutting down supply of medical air
- (2) Arranged one per compressor, sized to handle the output of that compressor, and valved as appropriate to allow repair or replacement with that compressor out of service but without shutting down supply of medical air

(D)* A medical air receiver(s) shall be provided with proper valves to allow the flow of compressed air to enter and exit out of separate receiver ports during normal operation and allow the receiver to be bypassed during service without shutting down the supply of medical air.

(E) Dryers, filters, and regulators shall be at least duplexed, with each component sized to serve the peak calculated demand with the largest of each component out of service.

(F)* Dryers, filters, and regulators shall be provided with manual valves upstream and manual valves or check valves downstream to allow service to the components without shutting down the system in either one of the following ways:

- (1) They shall be installed for each component, upstream and downstream of each component, allowing each to be individually isolated.
- (2) They shall be installed upstream (source side) and downstream of components in series so as to create redundant parallel branches of components.

(G) A three-way valve (three-port), indexed to flow, full port shall be permitted to be used to isolate one branch or component for the purposes of 5.1.3.6.3.9(C), 5.1.3.6.3.9(D), 5.1.3.6.3.9(E), and 5.1.3.6.3.9(F).

(H) Under normal operation, only one aftercooler shall be open to airflow with the other aftercooler valved off.

(I) Under normal operation, only one dryer-filter(s)-regulator sequence shall be open to airflow with the other sequence valved off.

Δ (J) If the relief valve required in 5.1.3.6.3.2(5) and 5.1.3.6.3.6(3) can be isolated from the system by the valve arrangement used to comply with 5.1.3.6.3.9(F), then a redundant relief valve(s) shall be installed in the parallel sequence.

(K) A DN8 (NPS ¼) valved sample port shall be provided downstream of the final line pressure regulators, dew point monitor, and carbon monoxide monitor and upstream of the source shutoff valve to allow for sampling of the medical air.

(L) Medical air source systems shall be provided with a source valve per 5.1.4.2.

(M) Where medical air piping systems at different operating pressures are required, the piping shall separate after the filters but shall be provided with separate line regulators, dew point monitors, relief valves, and source shutoff valves.

5.1.3.6.3.10* Electrical Power and Control.

Δ (A) Medical air source systems shall be controlled to ensure continuous supply of medical air at pressures consistent with Table 5.1.11 under all conditions of system use as follows:

- (1) Automatic activation of compressor(s) as necessary to supply the demand.
- (2) Managing the operation to equalize wear on all compressors. Where this equalization is achieved manually, the facility staff shall arrange a schedule for manual alternation.

(B) Controls shall provide the following functions:

- (1) Where medical air source systems having two or more compressors employ any electrical circuit device that upon failure could prevent supply of medical air, the controls shall be provided with an automatically activated alternative method for ensuring supply (e.g., redundant component(s), an alternate electrical supply path, or other equivalent method).
- (2) Control circuits shall be arranged in such a manner that isolation of one compressor or component from the system (e.g., for maintenance or repair) does not interrupt the operation of other compressor(s) or component(s).
- (3) Automatic restart function shall be included, such that the supply of medical air will resume normally after power interruption without manual intervention.

(C) Each compressor motor shall be provided with electrical components including, but not limited to, the following:

- (1) Dedicated disconnect switch installed in the electrical circuit ahead of each motor starter
- (2) Motor starting device
- (3) Overload protection

(D) Medical air compressor system controls shall be provided with electrical systems including, at a minimum:

- (1) Built-in disconnect means shall be included to allow appropriate operation of multiple compressor systems and protect service personnel from exposure to live voltages.

(2) Control circuits shall be arranged so that failure of any component of the control circuit, or shutdown of one compressor (e.g., for service), does not interrupt automatic operation of the standby compressor.

(3) An automatic restart function shall be included, such that the compressor(s) will restart after power interruption without manual intervention.

(4) Where components are common to more than one control circuit (e.g., autodrains) the common device shall be provided with electrical protection to prevent loss of the control circuit(s) in the event of short circuit in the device.

Δ (E) Electrical installation and wiring shall conform to the requirements of *NFPA 70*.

■ (F) Emergency electrical service for the compressors shall conform to the requirements of the essential electrical system as described in Chapter 6.

5.1.3.6.3.11 Compressor Intake.

(A) The medical air compressors shall draw their air from a source of clean air.

(B) The medical air intake shall be located a minimum of 7.6 m (25 ft) from ventilating system exhausts, fuel storage vents, combustion vents, plumbing vents, vacuum and WAGD discharges, or areas that can collect vehicular exhausts or other noxious fumes.

(C) The medical air intake shall be located a minimum of 6 m (20 ft) above ground level.

(D) The medical air intake shall be located a minimum of 3.0 m (10 ft) from any door, window, or other opening in the building.

(E) If an air source equal to or better than outside air (e.g., air already filtered for use in operating room ventilating systems) is available, it shall be permitted to be used for the medical air compressors with the following provisions:

- (1) This alternate source of supply air shall be available on a continuous 24-hour-per-day, 7-day-per-week basis.
- (2) Ventilating systems having fans with motors or drive belts located in the airstream shall not be used as a source of medical air intake.

(F) Compressor intake piping shall be permitted to be made of materials and use a joining technique as permitted under 5.1.10.2 and 5.1.10.3.

(G) Air intakes for separate compressors shall be permitted to be joined together to one common intake where the following conditions are met:

- (1) The common intake is sized to minimize back pressure in accordance with the manufacturer's recommendations.
- (2) Each compressor can be isolated by manual or check valve, blind flange, or tube cap to prevent open inlet piping when the compressor(s) is removed for service from the consequent backflow of room air into the other compressor(s).

(H) The end of the intake shall be turned down and screened or otherwise be protected against the entry of vermin, debris, or precipitation by screening fabricated or composed of a noncorroding material.

5.1.3.6.3.12 Operating Alarms and Local Signals. Medical air systems shall be monitored for conditions that can affect air quality during use or in the event of failure, based on the type of compressor(s) used in the system.

(A) A local alarm complying with 5.1.9.5 shall be provided for the medical air compressor source.

Δ (B) Where liquid ring air compressors, compressors having water-cooled heads, or water-cooled aftercoolers are used, air receivers shall be equipped with a high water level sensor that shuts down the compressor system and activates a local alarm indicator. [See 5.1.9.5.4(8).]

Δ (C) Where liquid ring compressors are used, each compressor shall have a liquid level sensor in each air–water separator that, when the liquid level is above the design level, shuts down its compressor and activates a local alarm indicator. [See 5.1.9.5.4(9).]

Δ (D) Where nonliquid ring compressors compliant with 5.1.3.6.3.4(A)(1) are used, the air temperature at the immediate outlet of each compressor cylinder shall be monitored by a high-temperature sensor that shuts down that compressor and activates a local alarm indicator [see 5.1.9.5.4(10)]. The temperature setting shall be as recommended by the compressor manufacturer.

(E) Where compressors compliant with 5.1.3.6.3.4(A)(2) and 5.1.3.6.3.4(A)(3) are used, the following requirements shall apply:

- (1) The air temperature at the immediate outlet of each compressor chamber shall be monitored by a high-temperature sensor that shuts down that compressor and activates a local alarm indicator (see 5.1.9.5.4), the temperature setting shall be as recommended by the compressor manufacturer.
- (2) Coalescing filters with element change indicator shall be provided.
- (3) Charcoal absorber shall be provided.
- (4) Gaseous hydrocarbons shall be monitored on a quarterly basis.

(F) When the capacity of the medical air system not in use is less than the equivalent capacity of one compressor, a local alarm shall activate [see 5.1.9.5.4(1)]. This signal shall require manual reset.

Δ **5.1.3.6.3.13 Medical Air Quality Monitoring.** Medical air quality shall be monitored downstream of the medical air regulators and upstream of the piping system as follows:

- (1) Dew point shall be monitored and shall activate a local alarm and all master alarms when the dew point at system delivery pressure exceeds +2°C (+35°F).
- (2) Carbon monoxide shall be monitored and shall activate a local alarm when the CO level exceeds 10 ppm. [See 5.1.9.5.4(2).]
- (3) Dew point and carbon monoxide monitors shall activate their individual monitor's signal at the alarm panels where their signals are required when their power is lost.

5.1.3.6.3.14 Category 1 Medical Air Proportioning Supply Sources.

Δ (A) General.

- (1) Medical air reconstituted from oxygen USP and nitrogen NF, produced using proportioning system(s), shall be required to meet the following:
 - (a) The quality of medical air shall be in accordance with 5.1.3.6.1.
 - (b) The system shall be capable of supplying this quality of medical air, per 5.1.3.6.1, over the entire range of flow.
 - (c) The system shall produce medical air with an oxygen content of 19.5 percent to 23.5 percent.
 - (d) The medical air shall be cleared for marketing by the FDA or approved by the FDA.
- (2) The medical air proportioning system shall operate automatically.
- (3) The mixture shall be analyzed continuously, and a recording capability shall be provided (e.g., via data port).
- (4) The analyzing system specified in 5.1.3.6.3.14(A)(3) shall be a dedicated and an independent analyzer used to control the medical air proportioning system.
- (5) If the mixture goes out of specification, an alarm shall be activated automatically, the primary medical air proportioning system shall be disconnected, and the reserve supply shall be activated.
- (6) The system shall be arranged such that manual intervention is necessary to correct the composition of the mixture before reconnecting the medical air proportioning system to the health care facility pipeline system.
- (7) If dedicated sources of oxygen USP and nitrogen NF supply the medical air proportioning system, reserve sources for the oxygen and nitrogen shall not be required.
- (8) If dedicated sources of oxygen USP and nitrogen NF supply the medical air proportioning system, they shall not be used as the reserves for oxygen and nitrogen systems supplying the pipelines of the health care facility.
- (9)* If the sources of oxygen USP and nitrogen NF that supply the medical air proportioning system are the same sources that supply the health care facility, engineering controls shall be provided to prevent cross contamination of oxygen and nitrogen supply lines, as provided in 5.1.3.5.8.
- (10) A risk analysis and approval from the authority having jurisdiction shall be required.

(B) **Location.** The medical air proportioning system shall be located per 5.1.3.3 as follows:

- (1) The medical air proportioning system's supply of oxygen USP and nitrogen NF shall be located per 5.1.3.3 and NFPA 55, as applicable.
- (2) The mixing device and controls, analyzers, and receivers shall be located indoors within a room or area per 5.1.3.3.1.
- (3) The indoor location shall include atmospheric monitoring for oxygen concentration.
- (4) The indoor location shall be constructed with all required utilities (e.g., electricity, drains, lighting) per NFPA 5000.

- (5) The indoor location shall be ventilated and heated per Chapter 9 and the manufacturer's recommendations.

(C) Required Components. The medical air proportioning system shall consist of the following:

- (1) Supply of oxygen USP and supply of nitrogen NF as follows:
 - (a) The supply lines shall be filtered to remove particulate entering the proportioning system.
 - (b) The minimum safe supply gas temperature and recommended local signal shall be specified by the medical air proportioning system manufacturer.
- (2) Mixing device with analyzers and engineering controls per manufacturer's recommendations to include, as a minimum, the following:
 - (a) At least two oxygen analyzers capable of independently monitoring oxygen concentration
 - (b) Mechanism where each analyzer based upon nonconforming oxygen concentration is capable, directly or via other medical air proportioning system controls, of automatically shutting off the supply from the medical air proportioning system to the medical air piped distribution system and activating the reserve supply
 - (c) Mechanism where each analyzer, based upon nonconforming oxygen concentration, is capable, directly or via other proportioning system controls, of automatically shutting off the supply of oxygen and nitrogen to the proportioning system and activating the reserve supply
 - (d) Provision for manual resetting of the proportioning system after detection of nonconforming oxygen concentration and subsequent shutdown once conforming oxygen concentration is established, in order to re-establish flow to the medical air piping system
 - (e) Means of verifying the performance of the analyzers by reference to an air standard, with known traceable oxygen content
- (3) Minimum of one recorder for recording the medical air proportioning system performance and air quality for a period of not less than 24 hours
- (4) Continuous analysis of the mixture and a recording capability provided (e.g., via a data port)
- (5) Mechanism for isolating the primary medical air proportioning system from the reserve supply and the medical air piping distribution system by employing sequential valves for redundancy
- (6) Capability of the reserve supply to automatically activate if the primary supply is isolated
- (7) Reserve supply of medical air USP sized, at minimum, for one average day's supply and consisting of one of the following:
 - (a) Additional medical air proportioning unit with a dedicated supply of oxygen USP and nitrogen NF
 - (b) Medical air compressor system per 5.1.3.6.3, with the exception of the allowance of a simplex medical air compressor system
 - (c) Medical air cylinder manifold per 5.1.3.5.12
- (8) Receiver fitted with a pressure relief valve and pressure gauge as follows:
 - (a) The receiver shall be constructed of corrosion-resistant materials.

- (b) The receiver, relief valves, and pressure gauges shall comply with ASME *Boiler and Pressure Vessel Code* and manufacturer's recommendations.

- (9)* Warning systems per 5.1.9, including a local signal and master alarm that indicates nonconforming oxygen concentration per manufacturer's recommendations
- (10) Final line pressure regulators complying with 5.1.3.5.5
- (11) Pressure relief complying with 5.1.3.5.6
- (12) Local signals complying with 5.1.3.5.9.2

5.1.3.7* Medical-Surgical Vacuum Central Supply Systems.

5.1.3.7.1 Medical-Surgical Vacuum Central Sources. Medical-surgical vacuum central supply systems shall be located per 5.1.3.3 as follows:

- (1) Indoors in a dedicated mechanical equipment area, adequately ventilated and with any required utilities
- (2) In a room ventilated per 5.1.3.3.3
- (3) For air-cooled equipment, in a room designed to maintain the ambient temperature range as recommended by the equipment manufacturer

5.1.3.7.1.1 Medical-surgical vacuum central supply systems shall consist of the following:

- (1) Two or more vacuum pumps sufficient to serve the peak calculated demand with the largest single vacuum pump out of service
- (2) Automatic means to prevent backflow from any on-cycle vacuum pumps through any off-cycle vacuum pumps
- (3) Shutoff valve or other isolation means to isolate each vacuum pump from the centrally piped system and other vacuum pumps for maintenance or repair without loss of vacuum in the system
- (4) Vacuum receiver
- (5) Piping between the vacuum pump(s), discharge(s), receiver(s), and vacuum source shutoff valve in accordance with 5.1.10.2, except brass, galvanized, or black steel pipe, which is permitted to be used as recommended by the manufacturer
- (6) Except as defined in 5.1.3.7.1.1(1) through 5.1.3.7.1.1(5), materials and devices used between the medical vacuum exhaust and the medical vacuum source that are permitted to be of any design or construction appropriate for the service as determined by the manufacturer
- (7) Vacuum filtration per 5.1.3.7.4

5.1.3.7.2 Vacuum Pumps.

5.1.3.7.2.1 Vacuum pumps shall be constructed of materials deemed suitable by the manufacturer.

5.1.3.7.2.2 Antivibration mountings shall be installed for vacuum pumps as required by equipment dynamics or location and in accordance with the manufacturer's recommendations.

5.1.3.7.2.3 Flexible connectors shall connect the vacuum pumps with their intake and outlet piping.

5.1.3.7.2.4 For liquid ring vacuum pumps, seal water shall be of a quality recommended by the vacuum pump manufacturer.

5.1.3.7.3 Vacuum Receivers. Receivers for vacuum shall meet the following requirements:

- (1) They shall be made of materials deemed suitable by the manufacturer.

- (2) They shall comply with Section VIII, "Unfired Pressure Vessels," of the ASME *Boiler and Pressure Vessel Code*.
- (3) They shall be capable of withstanding a gauge pressure of 415 kPa (60 psi) and 760 mm (30 in.) gauge HgV.
- (4) They shall be equipped with a manual drain.
- (5) They shall be of a capacity based on the technology of the pumps.

N 5.1.3.7.4 Vacuum Filtration. Central supply systems for vacuum shall be provided with inlet filtration with the following characteristics:

- (1) Filtration shall be at least duplex to allow one filter to be exchanged without impairing vacuum system
- (2) Filtration shall be located on the patient side of the vacuum producer.
- (3) Filters shall be efficient to 0.03 μ and 99.97 percent HEPA or better, per DOE-STD-3020.
- (4) Filtration shall be sized for 100 percent of the peak calculated demand while one filter or filter bundle is isolated.
- (5) It shall be permitted to group multiple filters into bundles to achieve the required capacities.
- (6) The system shall be provided with isolation valves on the source side of each filter or filter bundle and isolation valves on the patient side of each filter or filter bundle, permitting the filters to be isolated without shutting off flow to the central supply system.
- (7) A means shall be available to allow the user to observe any accumulations of liquids.
- (8) A vacuum relief petcock shall be provided to allow vacuum to be relieved in the filter canister during filter replacement.
- (9) Filter elements and canisters shall be permitted to be constructed of materials as deemed suitable by the manufacturer.
- (10) In normal operation, one filter or filter bundle shall be isolated from the system to be available for service should a blockage in the operating filter occur or rotation of the filters be desired after filter element exchange.

5.1.3.7.5 Piping Arrangement and Redundancies.

5.1.3.7.5.1 Piping arrangement shall be as follows:

- (1) Piping shall be arranged to allow service and a continuous supply of medical-surgical vacuum in the event of a single fault failure.
- (2) Piping arrangement shall be permitted to vary based on the technology(ies) employed, provided that an equal level of operating redundancy is maintained.
- (3) Where only one set of vacuum pumps is available for a combined medical-surgical vacuum system and an analysis, a research, or a teaching laboratory vacuum system, such laboratories shall be connected separately from the medical-surgical system directly to the receiver tank through its own isolation valve and fluid trap located at the receiver, and between the isolation valve and fluid trap, a scrubber shall be permitted to be installed.

5.1.3.7.5.2 The medical-surgical vacuum receiver(s) shall be serviceable without shutting down the medical-surgical vacuum system by any method to ensure continuation of service to the facility's medical-surgical pipeline distribution system.

5.1.3.7.5.3 Medical-surgical vacuum **central supply** systems shall be provided with a source shutoff valve per 5.1.4.2.

5.1.3.7.6 Electrical Power and Control.

N (A) Medical vacuum source systems shall be controlled to ensure continuous supply of suction at pressures consistent with Table 5.1.11 under all conditions of system use as follows:

- (1) Automatic activation of pump(s) as necessary to supply the demand.
- (2) Managing the operation to equalize wear on all pumps. Where this equalization is achieved manually, the facility staff shall arrange a schedule for manual alternation.

N (B) Controls shall provide the following functions:

- (1) Where medical vacuum source systems having two or more pumps employ any electrical circuit device that upon failure could prevent supply of medical vacuum, the controls shall be provided with an automatically activated alternative method for ensuring supply (e.g., redundant component(s), an alternate electrical supply path, or other equivalent method).
- (2) Control circuits shall be arranged in such a manner that isolation of one pump or component from the system (e.g. for maintenance or repair) does not interrupt the operation of other pump(s) or component(s).
- (3) An automatic restart function shall be included, such that the supply of medical vacuum will resume normally after power interruption without manual intervention.

N (C) Each pump motor shall be provided with electrical components including, but not limited to:

- (1) Dedicated disconnect switch installed in the electrical circuit ahead of each motor starter
- (2) Motor starting device
- (3) Overload protection

N (D) Vacuum source system controls shall be provided with electrical systems including, at a minimum:

- (1) Control circuits shall be arranged so that failure of any component of the control circuit, or shutdown of one pump (e.g., for service), does not interrupt automatic operation of the standby pump.
- (2) Controls shall be provided with built-in disconnect means to allow appropriate operation of multiple pump systems and protect service personnel from exposure to live voltages.
- (3) Where components are common to more than one control circuit, the common device shall be provided with electrical protection to prevent loss of the control circuits(s) in the event of short circuit in the device.
- (4) An automatic restart function shall be included, such that the pump(s) will restart after power interruption without manual intervention.

N (E) Electrical installation and wiring shall conform to the requirements of *NFPA 70*.

N (F) Emergency electrical service for the pumps shall conform to the requirements of the essential electrical system as described in Chapter 6.

• 5.1.3.7.7 Medical-Surgical Vacuum Exhaust.

5.1.3.7.7.1 The medical-surgical vacuum pumps shall exhaust in a manner and location that minimizes the hazards of noise and contamination to the facility and its environment.

5.1.3.7.7.2 The exhaust shall be located as follows:

- (1) Outdoors
- (2) At least 7.5 m (25 ft) from any door, window, air intake, or other openings in buildings or places of public assembly
- (3) At a level different from air intakes
- (4) Where prevailing winds, adjacent buildings, topography, or other influences will not divert the exhaust into occupied areas or prevent dispersion of the exhaust

5.1.3.7.7.3 The end of the exhaust shall be turned down and screened or otherwise be protected against the entry of vermin, debris, or precipitation by screening fabricated or composed of a noncorroding material.

5.1.3.7.7.4 The exhaust shall be free of dips and loops that might trap condensate or oil or provided with a drip leg and valved drain at the bottom of the low point.

5.1.3.7.7.5 Vacuum exhausts from multiple pumps shall be permitted to be joined together to one common exhaust where the following conditions are met:

- (1) The common exhaust is sized to minimize back pressure in accordance with the pump **manufacturer's** recommendations.
- (2) Each pump can be isolated by manual or check valve, blind flange, or tube cap to prevent open exhaust piping when the pump(s) is removed for service from consequent flow of exhaust air into the room.

5.1.3.7.7.6 Vacuum exhaust piping shall be permitted to be made of materials and use a joining technique as permitted under 5.1.10.2 and 5.1.10.3.

5.1.3.7.8 Operating Alarms. When the capacity of the medical vacuum supply system not in use is less than the equivalent capacity of one pump, a local alarm shall activate [see 5.1.9.5.4(4)]. This signal shall **require manual** reset.

5.1.3.8* Waste Anesthetic Gas Disposal (WAGD) Central Supply Systems.

5.1.3.8.1* Supply Sources. WAGD supply sources shall be chosen in consultation with the medical staff having knowledge of the requirements to determine the type of system, number and placement of terminals, and other required safety and operating devices.

5.1.3.8.1.1 WAGD shall be permitted to be produced through the medical-surgical vacuum source, by a dedicated producer, or by venturi.

5.1.3.8.1.2 If WAGD is produced by the medical-surgical vacuum source, the following shall apply:

- (1) The medical-surgical vacuum source shall comply with 5.1.3.7.
- (2) The total concentration of oxidizers (oxygen and nitrous oxide) shall be maintained below 23.6 percent, or the vacuum pump shall comply with 5.1.3.8.2.1.
- (3) The medical-surgical vacuum source shall be sized to accommodate the additional volume.

5.1.3.8.1.3 If WAGD is produced by a dedicated WAGD producer with a total power equal to or greater than 1 horsepower in total (both producers), the following shall apply:

- (1) The WAGD source shall be located in accordance with 5.1.3.3.

- (2) The WAGD source shall be located indoors in a dedicated mechanical equipment area with any required utilities.
- (3) The WAGD source shall be ventilated per 5.1.3.3.3.3.
- (4) For air-cooled equipment, the WAGD source shall be located to maintain the ambient temperature range as recommended by the manufacturer.
- (5) The WAGD producers shall comply with 5.1.3.8.2.

5.1.3.8.1.4 If WAGD is produced by a dedicated WAGD producer with a total power less than 1 horsepower in total (both producers), the following shall apply:

- (1) The WAGD source shall be permitted to be located near the inlet(s) served.
- (2) For air-cooled equipment, the WAGD source shall be located to maintain the ambient temperature range as recommended by the manufacturer.

5.1.3.8.1.5 For liquid ring pumps in WAGD service, seal water shall be of a quality as recommended by the pump manufacturer.

5.1.3.8.1.6 The WAGD source shall consist of the following:

- (1) Two or more WAGD producers sufficient to serve the peak calculated demand with the largest single WAGD producer out of service
- (2) Automatic means to prevent backflow from any on-cycle WAGD producers through any off-cycle WAGD producers
- (3) Shutoff valve to isolate each WAGD producer from the centrally piped system and other WAGD producers for maintenance or repair without loss of WAGD in the system
- (4) Piping between the WAGD producers and the source shutoff valve compliant with 5.1.10.2, as recommended by the manufacturer
- (5) Antivibration mountings installed for WAGD producers as required by equipment dynamics or location and in accordance with the **manufacturer's** recommendations
- (6) Flexible connectors interconnecting the producers with their intake and outlet piping as required by equipment dynamics or location and in accordance with the WAGD producer **manufacturer's** recommendations

5.1.3.8.1.7 If WAGD is produced by a venturi, the following shall apply:

- (1) The venturi shall not be user-adjustable (i.e., require the use of special tools).
- (2) The venturi shall be driven using water, inert gas, instrument air, or other dedicated air source.
- (3) Medical air shall not be used to power the venturi.

5.1.3.8.2 WAGD Producers.

5.1.3.8.2.1 Vacuum pumps dedicated for WAGD service shall be as follows:

- (1) Compliant with 5.1.3.7.2
- (2) Designed of materials and using lubricants and sealants that are inert in the presence of oxygen, nitrous oxide, and halogenated anesthetics

5.1.3.8.2.2 Vacuum producers (e.g., fans or blowers) designed for operation at vacuums below 130 mm (5 in.) HgV shall be as follows:

- (1) Permitted to be made of any materials determined by the manufacturer as suitable for the service

- (2) Provided with antivibration mountings as required by equipment dynamics or location and in accordance with the manufacturer's recommendation
- (3) Connected with their intake and outlet piping through flexible connections
- (4) Used only for WAGD service and not employed for other services
- (5) Interconnected via piping, ductwork, and so forth, made of materials determined by the manufacturer as suitable to the service

5.1.3.8.3 WAGD Alarms.

5.1.3.8.3.1 When the WAGD system is served by a central source(s), a local alarm complying with 5.1.9.5 shall be provided for the WAGD source.

5.1.3.8.3.2 Where WAGD source systems have two or more producers, and the capacity of the WAGD system not in use is less than the equivalent capacity of one producer, a local alarm shall activate [see 5.1.9.5.4(5)]. This signal shall require manual reset.

5.1.3.8.4 Electrical Power and Control.

5.1.3.8.4.1 Additional producers shall automatically activate when the producer(s) in operation is incapable of maintaining the required vacuum.

5.1.3.8.4.2 Automatic or manual alternation of producers shall allow division of operating time. If automatic alternation of producers is not provided, the facility staff shall arrange a schedule for manual alternation.

5.1.3.8.4.3

N (A) WAGD source systems shall be controlled to ensure continuous flow under all conditions of system use as follows:

- (1) Automatic activation of producer(s) as necessary to supply the demand.
- (2) Managing the operation to equalize wear on all producers. Where this equalization is achieved manually, the facility staff shall arrange a schedule for manual alternation.

N (B) Controls shall provide the following functions:

- (1) Where WAGD source systems having two or more producers employ any electrical circuit device which upon failure could stop the WAGD, the controls shall be provided with a automatically activated alternative method for ensuring supply (i.e., redundant component(s), an alternate electrical supply path or other equivalent method).
- (2) Control circuits shall be arranged in such a manner that isolation of one producer or component from the system (e.g., for maintenance or repair) does not interrupt the operation of other pump(s) or component(s).
- (3) An automatic restart function shall be included, such that the supply of WAGD will resume normally after power interruption without manual intervention.

N (C) Each producer motor shall be provided with electrical components including, but not limited to, the following:

- (1) Dedicated disconnect switch installed in the electrical circuit ahead of each motor starter
- (2) Motor starting device
- (3) Overload protection

N (D) WAGD source system controls shall be provided with electrical systems including at least:

- (1) Control circuits shall be arranged so that failure of any component of the control circuit, or shutdown of one producer (e.g. for service) does not interrupt automatic operation of the standby producer.
- (2) Controls shall be provided with built in disconnect means to allow appropriate operation of multiple producer systems and protect service personnel from exposure to live voltages.
- (3) Where components are common to more than one control circuit, the common device shall be provided with electrical protection to prevent loss of the control circuits(s) in the event of short circuit in the device.
- (4) An automatic restart function shall be included, such that the pump(s) will restart after power interruption without manual intervention.

Δ 5.1.3.8.4.4 Electrical installation and wiring shall conform to the requirements of *NFPA 70*.

5.1.3.8.4.5 Emergency electrical service for the producers shall conform to the requirements of the essential electrical system as described in Chapter 6.

5.1.3.8.5 WAGD Exhaust. The WAGD pumps shall exhaust in compliance with 5.1.3.7.7.

N 5.1.3.9* Oxygen Central Supply Systems Using Concentrator(s). Any oxygen central supply system that includes one or more oxygen concentrator supply system(s) shall comply with 5.1.3.9.1 through 5.1.3.9.4.

N 5.1.3.9.1 Location. Oxygen central supply systems using concentrator(s) shall be located per 5.1.3.3 and as follows:

- (1) Indoors in a dedicated mechanical equipment area, ventilated, and with any required utilities (e.g., electricity, drains, lighting).
- (2)* In a room ventilated per 5.1.3.3.3.3.
- (3) For air cooled equipment, in a room designed to maintain the ambient temperature range as recommended by the manufacturer.
- (4) Rooms containing oxygen central supply systems using concentrators(s) that do not have the concentrator purge gas vented to the outside shall be equipped with oxygen depletion monitors with alarm indicators at the entrance(s) that will indicate ambient oxygen levels in the room below 19.5 percent.
- (5)* Individual elements of the oxygen central supply system using concentrator(s) shall be permitted to be located in separate rooms or enclosures as necessary to meet 5.1.3.9.1(1) through 5.1.3.9.1(4).

N 5.1.3.9.2 Arrangement and Redundancies. Oxygen central supply systems using concentrator(s) shall be permitted to consist of two or three supply sources, as follows:

- (1) If two supply sources are provided, one shall be an oxygen concentrator supply unit and the second shall be a cylinder header complying with 5.1.3.5.10 with sufficient cylinder connections for one average day's supply. Containers shall not be used as a supply source.
- (2) If three supply sources are provided, each shall be capable of independently supplying the full system demand in the event of the unavailability of one or both of the other sources. The three sources shall be permitted to be either of the following:

- (a) An oxygen concentrator supply system complying with 5.1.3.5.11.
 - (b) A cylinder header complying with 5.1.3.5.10 with sufficient cylinder connections for one average day's supply. Containers shall not be used as a supply source.
 - (3) Use of oxygen concentrator supply systems as all three sources shall only be permitted after a documented risk analysis by the governing authority of the health care facility indicating understanding of the inherent risks and defining how those risks shall be mitigated.
 - (4) An isolation valve and automatic check valve shall be provided to isolate each of the three sources from the others and from the pipeline. The valves in 5.1.3.5.10(4), 5.1.3.5.10(6), 5.1.3.5.11.11, and 5.1.3.5.11.12 shall be permitted to be used for this purpose.
 - (5) Each of the three supply sources shall be provided with a pressure relief valve complying with 5.1.3.5.6 on the source side of its respective isolating valve.
 - (6) The three supply sources shall join to the pipeline systems through control arrangements with at least the following characteristics:
 - (a) Able to maintain stable pressures within the limits of Table 5.1.11
 - (b) Able to flow 100 percent of the peak calculated demand
 - (c) Redundant, such that each component of the control mechanism can be isolated for service or replacement while maintaining normal operation
 - (d) The cascade of sources described in 5.1.3.9.3
 - (e) Protected against overpressure (*see* 5.1.3.5.6)
 - (7) A pressure relief valve shall be provided in the common line between the sources and the line pressure controls.
 - (8) A source valve as required in 5.1.4.2 shall be provided on the patient side of the line pressure controls.
 - (9) A gauge and switch or sensor shall be located between the three sources and the line pressure controls to monitor the pressure feeding the line pressure controls.
 - (10) An oxygen concentration monitor, sampling the gas on the patient side of the line pressure controls and on the source side of the source valve, shall be provided with the following characteristics:
 - (a) The monitor shall be capable of monitoring 99 percent oxygen concentration with ± 1.0 percent accuracy.
 - (b) The monitor shall be attached to the pipeline through a demand check complying with 5.1.8.2.3.
 - (c) The monitor shall continuously display the oxygen concentration and shall activate local alarm and master alarms when an oxygen concentration lower than 91 percent is observed.
 - (11) A DN8 (NPS $\frac{1}{4}$) valved sample port shall be provided on the patient side of the line pressure controls and source side of the source valve for sampling the oxygen.
 - (12) An auxiliary source connection shall be provided complying with 5.1.3.5.7.
 - (13) Electrical installation and wiring shall conform to the requirements of *NFPA 70*.
 - (14) Emergency electrical service for all components of the oxygen supply system shall conform to the requirements of the essential electrical system as described in Chapter 6.
- 5.1.3.9.3 Operating Controls.** Oxygen central supply systems using concentrator(s) shall include means to provide the following functions:
- (1) Selection of an appropriate primary supply source. When the primary supply source is in operation and oxygen quality is suitable, the secondary and reserve supply sources shall be prevented from supplying the system.
 - (2) Automatic activation of the secondary supply source shall be available if the primary supply source is not able to maintain pressure or concentration of oxygen.
 - (3) Automatic activation of the reserve supply source shall be available if the primary and secondary supply source are not able to maintain supply pressure or concentration of oxygen.
 - (4) Where two or more concentrator supply sources are included in the system, the oxygen concentrator supply sources shall be permitted to rotate as the primary supply source.
 - (5) Automatic operation such that the supply of gas will continue through interruption of the main electrical source.
 - (6) Oxygen concentrator supply source(s) in the system shall be capable of automatically returning to normal operation following a power interruption. If required by the technology, it shall be permitted to isolate the concentrator supply source(s) using the automatic valve(s) to restore normal oxygen concentration prior to reconnecting the oxygen concentrator supply source to the system by opening the automatic valve. The valve can be actuated automatically for this purpose as an exception to 5.1.3.5.11.12(4).
- 5.1.3.9.4 Operating Alarms and Local Signals.**
- 5.1.3.9.4.1** For each oxygen concentrator supply source in the system, the supply source's concentration monitor (*see* 5.1.3.5.11.13) shall be able to perform the following:
- (1) Indicate low oxygen concentration when a concentration lower than 91 percent is observed.
 - (2) Activate a local alarm (*see* 5.1.9.5).
 - (3) Activate an alarm signal at the master alarm (*see* 5.1.9.2) indicating that the oxygen concentration from that supply source is low.
 - (4) Activate the automatic isolating valve for that oxygen concentrator supply source (*see* 5.1.3.5.11.12) to prevent supply from that oxygen concentrator supply source.
 - (5) Close the automatic isolating valve for that oxygen concentrator supply source (*see* 5.1.3.5.11.12), which activates an alarm signal at the master alarm (*see* 5.1.9.2) indicating that the oxygen concentrator supply source is disconnected.
- 5.1.3.9.4.2** For the entire oxygen central supply system, the system concentration monitor [*see* 5.1.3.9.2(10)] shall be able to perform the following:
- (1) Indicate low oxygen concentration when a concentration lower than 91 percent is observed
 - (2) Activate a local alarm (*see* 5.1.9.5)
 - (3) Activate an alarm signal at the master alarm (*see* 5.1.9.2) indicating the oxygen concentration is low
- 5.1.3.9.4.3** For each header source (*see* 5.1.3.5.10) in the supply system, local signals and alarms shall be provided as follows:
- (1) A pressure gauge for delivery pressure

- (2) A means to activate an alarm signal at the master alarm (see 5.1.9.2) indicating the oxygen cylinders are in use
- (3) A means to activate an alarm signal at the master alarm (see 5.1.9.2) indicating the content of the oxygen cylinder header is reduced below one average day's supply

N 5.1.3.9.4.4 The oxygen central supply systems using concentrator(s) shall be provided with operating alarms as follows:

- (1) *Change of Source.* An operating alarm shall be provided as follows:
 - (a) If the supply source in use fails to supply the system and is changed in accordance with 5.1.3.9.3(2) or 5.1.3.9.3(3), a local alarm and a signal at the master alarm shall be activated, indicating an oxygen supply change has occurred.
 - (b) The signal in 5.1.3.9.4.4(1)(a) shall not be activated if the system has rotated sources in accordance with 5.1.3.9.3(6).
- (2) *Internal Pressure Low.* A local alarm and a signal at the master alarm shall be activated when or just before the pressure falls below the pressure required to drive the calculated required flow rate through the line pressure controls indicating the oxygen supply internal pressure is low [see 5.1.3.9.2(9) for sensor location].

5.1.4* Valves.

5.1.4.1 General.

5.1.4.1.1 Gas and Vacuum Shutoff Valves. Shutoff valves shall be provided to isolate sections or portions of the piped distribution system for maintenance, repair, or planned future expansion need and to facilitate periodic testing.

5.1.4.1.2 Security. All valves, except valves in zone valve box assemblies, shall be secured by any of the following means:

- (1) Located in secured areas
- (2) Locked or latched in their operating position
- (3) Located above ceilings, but remaining accessible and not obstructed

5.1.4.1.3 Labeling. All valves shall be labeled as to gas supplied and the area(s) controlled, in accordance with 5.1.11.2.

5.1.4.1.4 Accessibility.

(A) Zone valves shall be installed in valve boxes with removable covers large enough to allow manual operation of valves.

(B) Zone valves for use in certain areas, such as psychiatric or pediatric areas, shall be permitted to be secured with the approval of the authority having jurisdiction to prevent inappropriate access.

5.1.4.1.5 Flammable Gases. Valves for nonflammable medical gases shall not be installed with valves for flammable gases in the same zone valve box assembly with flammable gases.

5.1.4.1.6 Valve Types. New or replacement valves shall be permitted to be of any type as long as they meet the following conditions:

- (1) They have a minimum Cv factor in accordance with either Table 5.1.4.1.6(a) or Table 5.1.4.1.6(b).
- (2) They use a quarter turn to off.
- (3) They are constructed of materials suitable for the service.

- (4) They are provided with copper tube extensions by the manufacturer for brazing or with corrugated medical tubing (CMT) fittings.
- (5) They indicate to the operator if the valve is open or closed.
- (6) They permit in-line serviceability.
- (7) They are cleaned for oxygen service by the manufacturer if used for any positive-pressure service.

5.1.4.2 Source Valve.

5.1.4.2.1 A shutoff valve shall be placed at the immediate connection of each central supply system to the piped distribution system to allow the entire central supply system, including all accessory devices (e.g., air dryers, final line regulators), to be isolated from the facility.

5.1.4.2.2 The source valve shall be located in the immediate vicinity of the central supply system.

5.1.4.3* Main Line Valve.

5.1.4.3.1 A shutoff valve shall be provided in the main supply line inside of the buildings being served, except where one or more of the following conditions exist:

- (1) The source and source valve are located inside the building served.
- (2) The source system is physically mounted to the wall of the building served, and the pipeline enters the building in the immediate vicinity of the source valve.

5.1.4.3.2 The main line valve shall be located on the facility side of the source valve and outside of the source room, the enclosure, or where the main line first enters the building.

N Table 5.1.4.1.6(a) Positive Pressure Gases

Valve Size (in.)	Minimum Cv (full open)
½	17
¾	31
1	60
1¼	110
1½	169
2	357
2½	390
3	912
4	1837

N Table 5.1.4.1.6(b) Vacuum and WAGD

Valve Size (in.)	Minimum Cv (full open)
¾	31
1	60
1¼	110
1½	169
2	357
2½	196
3	302
4	600
5	1022
6	1579
8	3136

5.1.4.4 Riser Valve. Each riser supplied from the main line shall be provided with a shutoff valve in the riser adjacent to the main line.

5.1.4.5 Service Valves.

5.1.4.5.1 Service valves shall be installed to allow servicing or modification of lateral branch piping from a main or riser without shutting down the entire main, riser, or facility.

5.1.4.5.2 Only one service valve shall be required for each branch off of a riser, regardless of how many zone valve boxes are installed on that lateral.

5.1.4.5.3 Service valves shall be placed in the branch piping prior to any zone valve box assembly on that branch.

5.1.4.6 Zone Valves.

5.1.4.6.1 All station outlets/inlets shall be supplied through a zone valve, which shall be placed as follows:

- (1) It is installed so that a wall intervenes between the valve and the outlets/inlets that it controls.
- (2)* It is readily operable from a standing position.
- (3) It is installed where it is visible and accessible at all times.
- (4) It is not installed where it can be hidden from plain view, such as behind normally open or normally closed doors.
- (5) It is not installed in a room with the station outlets/inlets that it controls.
- (6) It is not installed in rooms, areas, or closets that can be closed or locked.

5.1.4.6.2 A zone valve in each medical gas or vacuum line shall be provided for each Category 1 space and anesthetizing location for moderate sedation, deep sedation, or general anesthesia specific for the occupancy. These zone valves shall be located as follows:

- (1) They are installed immediately outside the area controlled.
- (2) They are readily accessible in an emergency.

5.1.4.6.3 Piping on the patient side of zone valves shall be arranged to provide the following:

- (1) Shutting off the supply of medical gas or vacuum to one zone will not affect the supply of medical gas or vacuum to another zone or the rest of the system.
- (2) Service will only be to outlets/inlets located on that same story.
- (3) All gas delivery columns, hose reels, ceiling tracks, control panels, pendants, booms, or other special installations are located on the patient side of the zone valve.

5.1.4.6.4 A pressure/vacuum indicator shall be provided on the station outlet/inlet side of each zone valve.

5.1.4.7 In-Line Shutoff Valves. Optional in-line valves shall be permitted to be installed to isolate or shut off piping for servicing of individual rooms or areas.

5.1.4.8 Valves for Future Connections.

5.1.4.8.1 Future connection valves shall be labeled as to gas content.

5.1.4.8.2 Downstream piping shall be closed with a brazed cap with tubing allowance for cutting and rebrazing.

5.1.4.9 In-Line Check Valves. New or replacement check valves shall be as follows:

- (1) They shall be of brass or bronze construction.
- (2) They shall have brazed extensions.
- (3) They shall have in-line serviceability.
- (4) They shall not have threaded connections.
- (5) They shall have threaded purge points of 1/8 in. NPT.

5.1.5* Station Outlets/Inlets.

5.1.5.1 Each station outlet/inlet for medical gases or vacuums shall be gas-specific, whether the outlet/inlet is threaded or is a noninterchangeable quick coupler.

5.1.5.2 Each station outlet shall consist of a primary and a secondary valve (or assembly).

5.1.5.3 Each station inlet shall consist of a primary valve (or assembly) and shall be permitted to include a secondary valve (or assembly).

5.1.5.4 The secondary valve (or assembly) shall close automatically to stop the flow of gas (or vacuum, if provided) when the primary valve (or assembly) is removed.

5.1.5.5 Each outlet/inlet shall be legibly identified in accordance with 5.1.11.3.

5.1.5.6 Threaded outlets/inlets shall be noninterchangeable connections complying with the mandatory requirements of CGA V-5, *Diameter-Index Safety System (Noninterchangeable Low Pressure Connections for Medical Gas Applications)*.

5.1.5.7 Each station outlet/inlet, including those mounted in columns, hose reels, ceiling tracks, or other special installations, shall be designed so that parts or components that are required to be gas-specific for compliance with 5.1.5.1 and 5.1.5.9 cannot be interchanged between the station outlet/inlet for different gases.

5.1.5.8 The use of common parts in outlets/inlets, such as springs, O-rings, fasteners, seals, and shutoff poppets, shall be permitted.

5.1.5.9 Components of a vacuum station inlet necessary for the maintenance of vacuum specificity shall be legibly marked to identify them as components or parts of a vacuum or suction system.

5.1.5.10 Components of inlets not specific to a vacuum shall not be required to be marked.

5.1.5.11 Factory-installed copper inlet tubes on station outlets extending no further than 205 mm (8 in.) from the body of the terminal shall be not less than DN8 (NPS 1/4) (3/8 in. O.D.) size, with 8 mm (0.3 in.) minimum inside diameter.

5.1.5.12 Factory-installed copper outlet tubes on station inlets extending no further than 205 mm (8 in.) from the body of the terminal shall be not less than DN10 (NPS 3/8) (1/2 in. O.D.) size, with 10 mm (0.4 in.) minimum inside diameter.

5.1.5.13 Station outlets/inlets shall be permitted to be recessed or otherwise protected from damage.

5.1.5.14 When multiple wall outlets/inlets are installed, they shall be spaced to allow the simultaneous use of adjacent outlets/inlets with any of the various types of therapy equipment.

Δ 5.1.5.15 Station outlets in systems having nonstandard operating pressures shall meet the following additional requirements:

- (1) They shall be gas-specific.
- (2) They shall be pressure-specific where a single gas is piped at more than one operating pressure [e.g., a station outlet for oxygen at 550 kPa (80 psi) shall not accept an adapter for oxygen at 345 kPa (50 psi)].
- (3) If operated at a pressure in excess of 550 kPa (80 psi), they shall be either D.I.S.S. connectors or comply with 5.1.5.15(4).
- (4) If operated at a gauge pressure between 1380 kPa and 2070 kPa (200 psi and 300 psi), the station outlet shall be designed so as to prevent the removal of the adapter until the pressure has been relieved to prevent the adapter injuring the user or others when removed from the outlet.

5.1.5.16 WAGD networks shall provide a WAGD inlet in all locations where nitrous oxide or halogenated anesthetic gas is intended to be administered.

5.1.5.16.1 Station inlets for WAGD service shall have the following additional characteristics:

- (1) They shall not be interchangeable with any other systems, including medical-surgical vacuum.
- (2) Components necessary for the maintenance of WAGD specificity shall be legibly marked to identify them as components of a WAGD inlet.
- (3) They shall be of a type appropriate for the flow and vacuum level required by the facility's gas anesthetic machines.
- (4) They shall be located to avoid physical damage to the inlet.

N 5.1.5.17 Where installed in a down-facing position, such as in a ceiling or ceiling column, station outlets/inlets shall be D.I.S.S. connectors.

5.1.6* Manufactured Assemblies.

5.1.6.1 Manufactured assemblies shall be pretested by the manufacturer prior to arrival at the installation site in accordance with the following:

- (1) Initial blowdown test per 5.1.12.2.2
- (2) Initial pressure test per 5.1.12.2.3
- (3) Piping purge test per 5.1.12.2.5
- (4) Standing pressure test per 5.1.12.2.6 or 5.1.12.2.7, except as permitted under 5.1.6.2
- (5) Operational pressure test per 5.1.12.4.10, except that the test gas is permitted to be in accordance with the manufacturer's process requirements

5.1.6.2 The leakage from a completed manufactured assembly shall not exceed 0.5 percent of the starting pressure when tested at 20 percent above operating pressure for pressure pipelines and 635 mm (25 in.) HgV for vacuum and WAGD systems [e.g., 2 kPa (0.3 psi) starting at 415 kPa (60 psig), 0.3 mm (0.125 in.) HgV starting at 635 mm (25 in.) HgV].

5.1.6.3 The manufacturer of the assembly shall provide documentation certifying the performance and successful completion of the tests required in 5.1.6.1.

5.1.6.4 Manufactured assemblies employing flexible hose shall use hose and flexible connectors with a minimum burst gauge pressure of 6895 kPa (1000 psi).

N 5.1.6.5 The manufacturer of the assembly shall provide documentation certifying that the flexible hose assembly has a minimum burst gauge pressure of 6895 kPa (1000 psi).

Δ 5.1.6.6 Components of manufactured assemblies shall have a flame spread index of not greater than 200 when tested in accordance with ASTM E84, *Standard Test Method for Surface Burning Characteristics of Building Materials*, or ANSI/UL 723, *Standard for Test for Surface Burning Characteristics of Building Materials*, or shall comply with the requirements for heat release in accordance with NFPA 286 as described in Section 10.2 of NFPA 101.

5.1.6.7 Manufactured assemblies employing flexible hose or tubing shall be attached to the pipelines using station outlets/inlets.

5.1.6.8 Manufactured assemblies employing hose or flexible connectors, where the station outlet/inlet attached to the piping is not fully and immediately accessible (i.e., cannot be manipulated without the removal of panels, doors, and so forth), shall have station outlets/inlets with the following additional characteristics:

- (1) They shall be gas-specific connections with positive locking mechanisms that ensure the connector is firmly seated and cannot detach without intentional actuation of the release (e.g., D.I.S.S. connectors).
- (2) In pressure gases, they shall be permitted to omit the secondary valve (or assembly) required in 5.1.5.2.
- (3) In vacuum and WAGD, they shall be permitted to omit both primary and secondary valves (or assemblies) for minimum restriction to flow.
- (4) They shall be provided with a second terminal at which the user connects and disconnects that complies with 5.1.5.

N 5.1.6.9 Hose or flexible connectors employed in manufactured assemblies shall be labeled by stenciling or adhesive markers that identify the patient medical gas, the support gas, or the vacuum system and include the following:

- (1) Name of the gas or vacuum system or the chemical symbol per Table 5.1.11
- (2) Gas or vacuum system color code per Table 5.1.11
- (3) Where positive-pressure piping systems operate at pressures other than the standard gauge pressure in Table 5.1.11, the operating pressure in addition to the name of the gas
- (4) Date of installation

5.1.6.10 Station outlets/inlets installed in manufactured assemblies connected to the pipeline by brazing shall comply with 5.1.5.

5.1.6.11 The installation of manufactured assemblies shall be tested in accordance with 5.1.12.

5.1.7* Surface-Mounted Medical Gas Rails (MGR).

5.1.7.1 Medical gas rail (MGR) assemblies shall be permitted to be installed where multiple uses of medical gases and vacuum at a single patient location are required or anticipated.

5.1.7.2 MGR assemblies shall be entirely visible in the room, not passing into or through walls, partitions, and so forth.

5.1.7.3 MGR assemblies shall be made of materials with a melting point of at least 538°C (1000°F).

5.1.7.4 MGR assemblies shall be cleaned per 5.1.10.1.1.

5.1.7.5 Station outlets or inlets shall not be placed on the ends of MGR assemblies.

5.1.7.6 Openings for station outlets/inlets in the MGR shall be gas-specific.

5.1.7.7 Openings in the MGR not occupied by station outlets/inlets (e.g., for future use) shall be capped or plugged so that a special tool is required for removal (i.e., cannot be removed by a wrench, pliers, a screwdriver, or other common tool).

5.1.7.8 MGR assemblies shall connect to the pipeline through fittings that are brazed to the pipeline.

5.1.7.9* Where the pipeline and the MGR assembly are of dissimilar metals, the connections shall be plated or otherwise protected from interaction between the metals.

5.1.7.10 The installation of the MGR shall be tested in accordance with 5.1.12.

5.1.8 Pressure and Vacuum Indicators.

5.1.8.1 General.

5.1.8.1.1 Pressure indicators and manometers for medical gas piping systems shall be cleaned for oxygen service.

5.1.8.1.2 Gauges shall comply with ANSI/ASME B40.100, *Pressure Gauges and Gauge Attachments*.

5.1.8.1.3* The scale range of positive pressure analog indicators shall be such that the normal operating pressure is within the middle third of the total range [e.g., an indicator of 0 to 2070 kPa (0 to 300 psi) would have a lower third of 0 to 690 kPa (0 to 100 psig), a middle third of 690 kPa to 1380 kPa (100 psig to 200 psig), and a top third of 1380 kPa to 2070 kPa (200 psig to 300 psig)].

5.1.8.1.4 The accuracy of digital indicators shall be ± 5 percent of the operating pressure at which they are used.

5.1.8.1.5 The scale range of vacuum indicators shall be 0 to 760 mm (0 to 30 in.) gauge HgV. Indicators with a normal range display shall indicate normal only above 300 mm (12 in.) gauge HgV.

5.1.8.1.6 Indicators adjacent to master alarm actuators and area alarms shall be labeled to identify the name of, or chemical symbol for, the particular piping system that they monitor.

5.1.8.2 Locations.

5.1.8.2.1 Pressure/vacuum indicators shall be readable from a standing position.

5.1.8.2.2 Pressure/vacuum indicators shall be provided at the following locations, as a minimum:

- (1) Adjacent to the alarm-initiating device for source main line pressure and vacuum alarms in the master alarm system
- (2) At or in area alarm panels to indicate the pressure/vacuum at the alarm-activating device for each system that is monitored by the panel
- (3) On the station outlet/inlet side of zone valves

5.1.8.2.3 All pressure-sensing devices and main line pressure gauges downstream of the source valves shall be provided with

a gas-specific demand check fitting to facilitate service testing or replacement.

5.1.8.2.3.1 Gas-specific demand check fittings shall not be required on zone valve pressure indicators.

5.1.8.2.4 Demand check fittings shall be provided for all monitors.

5.1.9* Category 1 Warning Systems.

Δ 5.1.9.1 General. All master, area, and local alarm systems used for medical gas and vacuum systems shall include the following:

- (1) Separate visual indicators for each condition monitored, except as permitted in 5.1.9.5.2 for local alarms that are displayed on master alarm panels
- (2) Visual indicators that remain in alarm until the situation that has caused the alarm is resolved
- (3) Cancelable audible indication of each alarm condition that produces a sound with a minimum level of 80 dBA at 0.92 m (3 ft)
- (4) Means to indicate a lamp or LED failure and audible failure
- (5) Visual and audible indication that the communication with an alarm-initiating device is disconnected
- (6) Labeling of each indicator, indicating the condition monitored
- (7) Labeling of each alarm panel for its area of surveillance
- (8) Reinitiation of the audible signal if another alarm condition occurs while the audible alarm is silenced
- (9) Power for master, area alarms, sensors, and switches from the life safety branch of the essential electrical system as described in Chapter 6
- (10) Power for local alarms, dew point sensors, and carbon monoxide sensors permitted to be from the same essential electrical branch as is used to power the air compressor system
- (11) Where used for communications, wiring from switches or sensors that is supervised or protected as required by 517.30(C)(3) of *NFPA 70* for life safety and critical branches circuits in which protection is any of the following types:
 - (a) Conduit
 - (b) Free air
 - (c) Wire
 - (d) Cable tray
 - (e) Raceways
- (12) Communication devices that do not use electrical wiring for signal transmission will be supervised such that failure of communication shall initiate an alarm.
- (13) Assurance by the responsible authority of the facility that the labeling of alarms, where room numbers or designations are used, is accurate and up-to-date
- (14) Provisions for automatic restart after a power loss of 10 seconds (e.g., during generator start-up) without giving false signals or requiring manual reset
- (15) Alarm switches/sensors installed so as to be removable

5.1.9.2* Master Alarms. A master alarm system shall be provided to monitor the operation and condition of the source of supply, the reserve source (if any), and the pressure in the main lines of each medical gas and vacuum piping system.

5.1.9.2.1 The master alarm system shall consist of two or more alarm panels located in at least two separate locations, as follows:

- (1) One master alarm panel shall be located in the office or work space of the on-site individual responsible for the maintenance of the medical gas and vacuum piping systems.
- (2) In order to ensure continuous surveillance of the medical gas and vacuum systems while the facility is in operation, the second master alarm panel shall be located in an area of continuous observation (e.g., the telephone switchboard, security office, or other continuously staffed location).

5.1.9.2.2 A centralized computer system shall be permitted to be substituted for one of the master alarms required in 5.1.9.2.1 if the computer system complies with 5.1.9.3.

5.1.9.2.3 The master alarm panels required in 5.1.9.2.1 shall communicate directly to the alarm-initiating devices that they monitor.

5.1.9.2.3.1 If communication is achieved by wires, the following shall apply:

(A) Each of the two mandatory alarms shall be wired independently to the initiating device(s) for each signal.

(B) The wiring between each mandatory alarm(s) and the initiating device(s) shall not utilize common conductors that, if interrupted, would disable more than one signal.

(C) Each set of wires (in whatever number as required by the alarm) shall run to the initiating device(s) without interruption other than in-line splices necessary to complete the necessary length of wire.

(D) Where initiating devices are remote from the building and the wiring is to run underground in compliance with *NFPA 70*, the following exceptions shall be permitted to be used:

- (1) Wiring from the initiating device and through the underground section shall be permitted to be run to a junction box located where the wiring first enters the building.
- (2) A single set of wires complying with 5.1.9.2.3.1(B) and 5.1.9.2.3.1(C) for each signal shall be permitted to connect the initiating device and the junction box.
- (3) Between the junction box and the two mandatory alarm panels, wiring shall comply with 5.1.9.2.3.1(A) through 5.1.9.2.3.1(C), 5.1.9.2.3.4, and 5.1.9.2.3.5 in all respects.

5.1.9.2.3.2 If communication is achieved by means other than wires, the following shall apply:

(A) Each of the mandatory alarms shall communicate independently to the initiating device(s) for each signal.

(B) The means of communication between each mandatory alarm(s) and the initiating device(s) shall not utilize a common communication device that, if interrupted, would disable more than one signal.

5.1.9.2.3.3 A single initiating device shall be permitted to actuate multiple master alarms.

5.1.9.2.3.4 The mandatory master alarm panels shall not be arranged such that failure of either panel would disable any signal on the other panel.

5.1.9.2.3.5 Where a relay is required to ensure correct operation of an initiating device, the control power for the relay shall not be such that disabling any master alarm panel would disable the relay.

5.1.9.2.3.6 Master alarm signals shall not be relayed from one master alarm panel to another.

5.1.9.2.3.7 Where multi-pole alarm relays are used to isolate the alarm-initiating signals to master alarm panels, the control power source for the relays shall be independent of any of the master alarm panels.

5.1.9.2.3.8 Multiple master alarms shall be permitted to monitor a single initiating device.

Δ 5.1.9.2.4 Master alarm panels for medical gas and vacuum systems shall each include the following signals:

- (1) Alarm indication when, or just before, changeover occurs in a medical gas system that is supplied by a manifold or other alternating-type bulk system that has as a part of its normal operation a changeover from one portion of the operating supply to another
- (2) Alarm indication for a bulk cryogenic liquid system when the main supply reaches one average day's supply, indicating low contents
- (3) Alarm indication when, or just before, the changeover to the reserve supply occurs in a medical gas system that consists of one or more units that continuously supply the piping system while another unit remains as the reserve supply and operates only in the case of an emergency
- (4) Alarm indication for cylinder reserve pressure low when the content of a cylinder reserve header is reduced below one average day's supply
- (5) For bulk cryogenic liquid systems, an alarm when or at a predetermined set point before the reserve supply contents fall to one average day's supply, indicating reserve low
- (6) Where a cryogenic liquid storage unit is used as a reserve for a bulk supply system, an alarm indication when the gas pressure available in the reserve unit is below that required for the medical gas system to function
- (7) Alarm indication when the pressure in the main line of each separate medical gas system increases 20 percent or decreases 20 percent from the normal operating pressure
- (8) Alarm indication when the medical-surgical vacuum pressure in the main line of each vacuum system drops to or below 300 mm (12 in.) gauge HgV
- (9) Alarm indication(s) from the local alarm panel(s) as described in 5.1.9.5.2 to indicate when one or more of the conditions being monitored at a site is in alarm
- (10) Medical air dew point high alarm from each compressor site to indicate when the line pressure dew point is greater than +2°C (+35°F)
- (11) WAGD low alarm when the WAGD vacuum level or flow is below effective operating limits
- (12) An instrument air dew point high alarm from each compressor site to indicate when the line pressure dew point is greater than -30°C (-22°F)
- (13) Alarm indication if the primary or reserve production stops on a proportioning system

(14) When oxygen is supplied from an oxygen central supply system using concentrators (*see* 5.1.3.9), the following signals shall be provided:

- (a) For each concentrator unit used in the oxygen central supply system, an alarm indication that oxygen concentration from that oxygen concentrator unit is below 91 percent
- (b) For each oxygen concentrator unit used in the oxygen central supply system, an alarm indication that the isolating valve for that oxygen concentrator unit is closed and the unit is isolated
- (c) For each cylinder header used as a source, an alarm indication that the header is in use
- (d) For each cylinder header used as a source, an alarm indication that the cylinder contents are below one average day's supply
- (e) If the source in use changes because of a failure to appropriately supply the system, an alarm indication indicating an unexpected oxygen supply change has occurred
- (f) An alarm indication that the pressure in the common line on the source side of the line pressure controls is low
- (g) An alarm indication that the oxygen concentration from the supply system is below 91 percent

▲ 5.1.9.2.5 The alarm indications required in 5.1.9.2.4(7) and 5.1.9.2.4(8) shall originate from sensors installed in the main lines immediately downstream (on the patient or use side) of the source valves. Where it is necessary to install a main line valve in addition to a source valve (*see* 5.1.4.3), the sensors shall be located downstream (on the patient or use side) of the main valve.

5.1.9.3 Master Alarms by Computer Systems. Computer systems used as substitute master alarms as required by 5.1.9.2.1(2) shall have the mechanical and electrical characteristics described in 5.1.9.3.1 and the programming characteristics described in 5.1.9.3.2.

▲ 5.1.9.3.1 Computer systems used to substitute for alarms shall have the following mechanical and electrical characteristics:

- (1) The computer system shall be in continuous uninterrupted operation and provided with power supplies as needed to ensure such reliability.
- (2) The computer system shall be continuously attended by responsible individuals or shall provide remote signaling of responsible parties (e.g., through pagers, telephone autodialers, or other such means).
- (3) Where computer systems rely on signal interface devices (e.g., electronic interfaces, other alarm panels, 4 mA to 20 mA cards), such interfaces shall be supervised such that failure of the device(s) shall initiate an alarm(s).
- (4) If the computer system does not power the signaling switches/sensors from the same power supply required in 5.1.9.3.1(1), the power supply for the signaling switches/sensors shall be powered from the life safety branch of the essential electrical system as described in Chapter 6.
- (5) Computer systems shall be permitted to communicate directly to the sensors/switches in 5.1.9.2.3 in the same manner as an alarm panel if operation of another alarm panel(s) is not impaired.
- (6) Communication from the computer system to the signaling switches or sensors shall be supervised such that failure of communication shall initiate an alarm.

- (7) Computer systems shall be provided with an audio alert per 5.1.9.1(3), except the audio alert shall be permitted to be only as loud as needed to alert the system operator.
- (8) The facility shall ensure compliance with 5.1.9.1(13).

▲ 5.1.9.3.2 The operating program for computer systems used to substitute for alarms shall include the following:

- (1) The medical gas alarm shall be allocated the priority of a life safety signal.
- (2) A medical gas alarm signal shall interrupt any other activity of a lesser priority to run the alarm algorithm(s).
- (3) The alarm algorithm shall include activation of an audible alert, activation of any remote signaling protocol, and display of the specific condition in alarm.
- (4) The alarm algorithm shall provide for compliance with 5.1.9.1(1) through 5.1.9.1(5), and 5.1.9.1(8).

5.1.9.4* Area Alarms. Area alarm panels shall be provided to monitor all medical gas, medical-surgical vacuum, and piped WAGD systems supplying the following:

- (1) Anesthetizing locations where moderate sedation, deep sedation, or general anesthesia is administered
- (2)* **Category 1 space**

5.1.9.4.1* Area alarms shall be located at a nurse's station or other similar location that will provide for surveillance.

5.1.9.4.2 Area alarm panels for medical gas systems shall indicate if the pressure in the lines in the area being monitored increases or decreases by 20 percent from the normal line pressure.

5.1.9.4.3 Area alarm panels for medical-surgical vacuum systems shall indicate if the vacuum in the area drops to or below 300 mm (12 in.) gauge HgV.

5.1.9.4.4 Alarm sensors for area alarms shall be located as follows:

- (1)* **Category 1 spaces** shall have the alarm sensors installed on the patient or use side of each individual zone valve box assemblies.
- (2)* Anesthetizing locations where moderate sedation, deep sedation, or general anesthesia is administered shall have the sensors installed either on the source side of any of the individual room zone valve box assemblies or on the patient or use side of each of the individual zone valve box assemblies.

■ **5.1.9.4.5** One area alarm panel shall be acceptable to monitor multiple rooms located within an immediate vicinity meeting the requirements of 5.1.9.4.4(2).

5.1.9.4.6 Area alarm panels for medical gas systems shall provide visual and audible indication in the event a mismatch occurs between the transducer(s) and its associated circuit board(s).

5.1.9.5* Local Alarms. Local alarms shall be installed to monitor the function of the air compressor system(s), medical-surgical vacuum pump system(s), WAGD systems, instrument air systems, and proportioning systems.

5.1.9.5.1 The signals referenced in 5.1.9.5.4 shall be permitted to be located as follows:

- (1) On or in the control panel(s) for the **central supply system or supply source** being monitored

- (2) Within a monitoring device (e.g., dew point monitor or carbon monoxide monitor)
- (3) On a separate alarm panel(s)

5.1.9.5.2 The master alarm shall include at least one signal from the source equipment to indicate a problem with the source equipment at this location. This master alarm signal shall activate when any of the required local alarm signals for this source equipment activates.

5.1.9.5.3 If there is more than one central supply system, for a specific gas or vacuum pipeline or more than one central supply system and pipeline for the same gas in the building, then it shall be necessary for each location to have separate local alarms per 5.1.9.5.4 and signals at the master panels per 5.1.9.2.4.

5.1.9.5.4 The following functions shall be monitored at each local alarm site:

- (1) Low medical air reserve capacity, to indicate when the medical air source is operating under a demand that could not be managed if one compressor ceased to operate
- (2) High carbon monoxide level, to indicate when the carbon monoxide level in the medical air system is 10 ppm or higher
- (3) Medical air dew point high, to indicate when the line pressure dew point is greater than +2°C (+35°F)
- (4) Low medical vacuum reserve capacity, to indicate when the medical vacuum source is operating under a demand that could not be managed if one pump ceased to operate
- (5) Low WAGD reserve capacity, to indicate when the WAGD source is operating under a demand that could not be managed if one producer ceased to operate
- (6) Instrument air dew point high, to indicate when the line pressure dew point is greater than -30°C (-22°F)
- (7) Low instrument air reserve capacity, if instrument air is provided by a source with more than one compressor, to indicate when the instrument air source is operating under a demand that could not be managed if one compressor ceased to operate
- (8) For compressor systems using liquid ring compressors or compressors with water-cooled components, high water in the receiver tank, to indicate when the water level in the receiver tank has reached a level determined to be detrimental to the operation of the system
- (9) For compressor systems using liquid ring compressors, high water in the separator
- (10) For compressor systems using other than liquid ring compressors, high discharge air temperature
- (11) Proportioning systems high/low indicator when the oxygen concentration is outside the 19.5 percent to 23.5 percent oxygen range
- (12) Proportion systems reserve system in operation
- (13) When oxygen is supplied from an oxygen central supply system using concentrators (*see 5.1.3.9*), the following signals shall be provided at the system's local alarm site(s):
 - (a) For each cylinder header used as a source, an alarm indication that the header is in use
 - (b) For each cylinder header used as a source, an alarm indication that the cylinder contents are below one average day's supply

- (c) If the source in use changes because of a failure to appropriately supply the system, an alarm indication indicating an unexpected oxygen supply change has occurred
- (d) An alarm indication that the pressure in the common line on the source side of the line pressure controls is low
- (e) An alarm indication that the oxygen concentration from the supply system is below 91 percent

5.1.10 Category 1 Distribution.

5.1.10.1 Piping Materials for Field-Installed Positive Pressure Medical Gas Systems.

5.1.10.1.1 Tubes, valves, fittings, station outlets, and other piping components in medical gas systems shall have been cleaned for oxygen service by the manufacturer prior to installation in accordance with the mandatory requirements of CGA G-4.1, *Cleaning Equipment for Oxygen Service*, except that fittings shall be permitted to be cleaned by a supplier or agency other than the manufacturer.

5.1.10.1.2 Each length of tube shall be delivered plugged or capped by the manufacturer and kept sealed until prepared for installation.

5.1.10.1.3 Fittings, valves, and other components shall be delivered sealed and labeled and kept sealed until prepared for installation.

5.1.10.1.4* Tubes shall be one of the following:

- (1) Hard-drawn seamless copper in accordance with ASTM B819, *Standard Specification for Seamless Copper Tube for Medical Gas Systems*, medical gas tube, Type L, except Type K shall be used where operating pressures are above a gauge pressure of 1275 kPa (185 psi) and the pipe sizes are larger than DN80 [NPS 3 (3 1/8 in. O.D.)].
- (2)* Listed corrugated medical tubing (CMT) fabricated from copper alloy No. 51000 strip, meeting ASTM B103/B103M, *Standard Specification for Phosphor Bronze Plate, Sheet, Strip, and Rolled Bar*, with a design margin of 3.5, externally coated with a nonmetallic sheath marked with the manufacturer's marking. The listing shall include testing to demonstrate that CMT systems can be consistently gas-purged with results equivalent to comparable medical gas copper tubing.

N 5.1.10.1.5 CMT shall have a flame spread index of 25 or less and a smoke developed index of 50 or less as determined by ASTM E84, *Standard Test Method for Surface Burning Characteristics of Building Materials*.

N 5.1.10.1.6 CMT shall be identified by the manufacturer as suitable for oxygen service at a minimum of every 0.92 m (3 ft).

5.1.10.1.7 ASTM B819, *Standard Specification for Seamless Copper Tube for Medical Gas Systems*, medical gas tube shall be identified by the manufacturer's markings "OXY," "MED," "OXY/MED," "OXY/ACR," or "ACR/MED" in blue (Type L) or green (Type K).

5.1.10.1.8 The installer shall furnish documentation certifying that all installed piping materials comply with the requirements of 5.1.10.1.1.

5.1.10.2 Piping Materials for Field-Installed Medical–Surgical Vacuum and WAGD Systems.

5.1.10.2.1 Tubes for Vacuum. Piping for vacuum systems shall be constructed of any of the following:

- (1) Hard-drawn seamless copper tube in accordance with the following:
 - (a) ASTM B88, *Standard Specification for Seamless Copper Water Tube*, copper tube (Type K, Type L, or Type M)
 - (b) ASTM B280, *Standard Specification for Seamless Copper Tubing for Air Conditioning and Refrigeration Field Service*, copper ACR tube
 - (c) ASTM B819, *Standard Specification for Seamless Copper Tube for Medical Gas Systems*, copper medical gas tubing (Type K or Type L)
- (2) Stainless steel tube in accordance with the following:
 - (a) ASTM A269/A269M, TP304L or 316L, *Standard Specification for Seamless and Welded Austenitic Stainless Steel Tubing for General Service*
 - (b) ASTM A312/A312M, TP304L or 316L, *Standard Specification for Seamless, Welded, and Heavily Cold Worked Austenitic Stainless Steel Pipes*
 - (c) A312 TP 304L/316L, Sch. 5S pipe, and A403 WP304L/316L, Sch. 5S fittings
- (3) CMT meeting the requirements of 5.1.10.1.4(2)

5.1.10.2.2 Vacuum Tube Marking Where Required.

5.1.10.2.2.1 If copper or CMT vacuum tubing is installed along with any medical gas tubing, the vacuum tubing shall, prior to installation, be prominently labeled or otherwise identified to preclude using materials or installation procedures in the medical gas system that are not suitable for oxygen service.

Δ 5.1.10.2.2.2 If medical gas tube in accordance with ASTM B819, *Standard Specification for Seamless Copper Tube for Medical Gas Systems*, is used for vacuum piping, such special marking shall not be required.

5.1.10.2.3 WAGD System Piping. WAGD systems shall be piped as follows:

- (1) Using materials compliant with 5.1.10.2.1 or 5.1.10.2.2
- (2) In systems operated under 130 mm (5 in.) HgV maximum vacuum only, using any noncorroding tube or duct-work

5.1.10.2.3.1 If joined to the vacuum piping, WAGD system piping shall be connected at a minimum distance of 1.5 m (5 ft) from any vacuum inlet.

5.1.10.3 Joints.

5.1.10.3.1* Positive pressure patient gas systems, medical support gas systems, vacuum systems, and WAGD systems constructed of hard-drawn seamless copper or stainless steel tubing shall have all turns, offsets, and other changes in direction made using fittings or techniques appropriate to any of the following acceptable joining methods:

- (1) Brazing, as described in 5.1.10.4
- (2) Welding, as described in 5.1.10.5
- (3) Memory metal fittings, as described in 5.1.10.6
- (4) Axially swaged, elastic preload fittings, as described in 5.1.10.7
- (5) Threaded, as described in 5.1.10.8

N 5.1.10.3.2 Positive pressure patient gas systems, medical support gas systems, vacuum systems, and WAGD systems constructed of CMT shall have turns, offsets, and other changes in direction made by bending the tubing up to the minimum bend radius or by fittings in accordance with 5.1.10.3.1.

5.1.10.3.3 Vacuum systems and WAGD systems fabricated from copper tubing shall be permitted to have branch connections made using mechanically formed, drilled, and extruded tee-branch connections that are formed in accordance with the tool manufacturer's instructions. Such branch connections shall be joined by brazing, as described in 5.1.10.4.

N 5.1.10.3.4 Branch connections made using mechanically formed, drilled, and extruded tee-branch connections shall be prohibited in CMT systems.

5.1.10.3.5 WAGD systems designed for operation below 130 mm (5 in.) HgV shall be permitted to be joined using any method that will result in a leak-free network when tested per 5.1.12.4.2.

5.1.10.4 Brazed Joints.

5.1.10.4.1 General Requirements.

5.1.10.4.1.1 Fittings shall be wrought copper capillary fittings complying with ASME B16.22, *Wrought Copper and Copper Alloy Solder-Joint Pressure Fittings*, or brazed fittings complying with ANSI/ASME B16.50, *Wrought Copper and Copper Alloy Braze-Joint Pressure Fittings*.

5.1.10.4.1.2 Cast copper alloy fittings shall not be permitted.

5.1.10.4.1.3 Brazed joints shall be made using a brazing alloy that exhibits a melting temperature in excess of 538°C (1000°F) to retain the integrity of the piping system in the event of fire exposure.

5.1.10.4.1.4 Brazed tube joints shall be the socket type.

5.1.10.4.1.5 Filler metals shall bond with and be metallurgically compatible with the base metals being joined.

5.1.10.4.1.6 Filler metals shall comply with ANSI/AWS A5.8 M/A.5.8, *Specification for Filler Metals for Brazing and Braze Welding*.

5.1.10.4.1.7 Copper-to-copper joints shall be brazed using a copper–phosphorus or copper–phosphorus–silver brazing filler metal (BCuP series) without flux.

5.1.10.4.1.8 Brazing performed between bulk cryogenic liquid vessels and their vaporizers (i.e., subject to cryogenic exposure) shall be permitted to be brazed using BAg brazing alloy with flux by a brazer qualified to the mandatory requirements of CGA M-1, *Standard for Medical Gas Supply Systems at Health Care Facilities*.

5.1.10.4.1.9 Joints to be brazed in place shall be accessible for necessary preparation, assembly, heating, filler application, cooling, cleaning, and inspection.

5.1.10.4.1.10 Braze joints shall be continuously purged with nitrogen NF.

5.1.10.4.2 Cutting Tube Ends.

5.1.10.4.2.1 Tube ends shall be cut square using a sharp tubing cutter to avoid deforming the tube.

5.1.10.4.2.2 The cutting wheels on tubing cutters shall be free from grease, oil, or other lubricant not suitable for oxygen service.

5.1.10.4.2.3 The cut ends of the tube shall be permitted to be rolled smooth or deburred with a sharp, clean deburring tool, taking care to prevent chips from entering the tube.

5.1.10.4.3 Cleaning Joints for Brazing.

5.1.10.4.3.1 The interior surfaces of tubes, fittings, and other components that are cleaned for oxygen service shall be stored and handled to avoid contamination prior to assembly and brazing.

5.1.10.4.3.2 The exterior surfaces of tube ends shall be cleaned prior to brazing to remove any surface oxides.

5.1.10.4.3.3 When cleaning the exterior surfaces of tube ends, no matter shall be allowed to enter the tube.

5.1.10.4.3.4 If the interior surfaces of fitting sockets become contaminated prior to brazing, they shall be recleaned for oxygen in accordance with 5.1.10.4.3.10 and be cleaned for brazing with a clean, oil-free, stainless steel or brass wire brush.

5.1.10.4.3.5 Clean, nonshedding, abrasive pads shall be used to clean the exterior surfaces of the tube ends.

5.1.10.4.3.6 The use of steel wool or sand cloth shall be prohibited.

5.1.10.4.3.7 The cleaning process shall not result in grooving of the surfaces to be joined.

5.1.10.4.3.8 After being abraded, the surfaces shall be wiped using a clean, lint-free white cloth.

5.1.10.4.3.9 Tubes, fittings, valves, and other components shall be visually examined internally before being joined to verify that they have not become contaminated for oxygen service and that they are free of obstructions or debris.

5.1.10.4.3.10 The interior surfaces of tube ends, fittings, and other components that were cleaned for oxygen service by the manufacturer, but that became contaminated prior to being installed, shall be permitted to be recleaned on-site by the installer by thoroughly scrubbing the interior surfaces with a clean, hot water-alkaline solution, such as sodium carbonate or trisodium phosphate, using a solution of 450 g (1 lb) of sodium carbonate or trisodium phosphate to 11 L (3 gal) of potable water, and thoroughly rinsing them with clean, hot, potable water.

5.1.10.4.3.11 Other aqueous cleaning solutions shall be permitted to be used for on-site recleaning permitted in 5.1.10.4.3.10, provided that they are as recommended in the mandatory requirements of CGA G-4.1, *Cleaning Equipment for Oxygen Service*, and are listed in CGA O2-DIR, *Directory of Cleaning Agents for Oxygen Service*.

5.1.10.4.3.12 Material that has become contaminated internally and is not clean for oxygen service shall not be installed.

5.1.10.4.3.13 Joints shall be brazed within 8 hours after the surfaces are cleaned for brazing.

5.1.10.4.4 Brazing Dissimilar Metals.

5.1.10.4.4.1 Flux shall only be used when brazing dissimilar metals, such as copper and bronze or brass, using a silver (BAg series) brazing filler metal.

5.1.10.4.4.2 Surfaces shall be cleaned for brazing in accordance with 5.1.10.4.3.

5.1.10.4.4.3 Flux shall be applied sparingly to minimize contamination of the inside of the tube with flux.

5.1.10.4.4.4 The flux shall be applied and worked over the cleaned surfaces to be brazed using a stiff bristle brush to ensure complete coverage and wetting of the surfaces with flux.

5.1.10.4.4.5 Where possible, short sections of copper tube shall be brazed onto the noncopper component, and the interior of the subassembly shall be cleaned of flux prior to installation in the piping system.

5.1.10.4.4.6 On joints DN20 (NPS ¾) (⅞ in. O.D.) size and smaller, flux-coated brazing rods shall be permitted to be used in lieu of applying flux to the surfaces being joined.

5.1.10.4.5* Nitrogen Purge.

5.1.10.4.5.1 When brazing, joints shall be continuously purged with oil-free, dry nitrogen NF to prevent the formation of copper oxide on the inside surfaces of the joint.

5.1.10.4.5.2 The source of the purge gas shall be monitored, and the installer shall be audibly alerted when the source content is low.

5.1.10.4.5.3 The purge gas flow rate shall be controlled by the use of a pressure regulator and flowmeter, or combination thereof.

5.1.10.4.5.4 Pressure regulators alone shall not be used to control purge gas flow rates.

5.1.10.4.5.5 In order to ensure that all ambient air has been removed from the pipeline prior to brazing, an oxygen analyzer shall be used to verify the effectiveness of the purge. The oxygen analyzer shall read below 1 percent oxygen concentration before brazing begins.

5.1.10.4.5.6 During and after installation, openings in the piping system shall be kept sealed to maintain a nitrogen atmosphere within the piping to prevent debris or other contaminants from entering the system.

5.1.10.4.5.7 While a joint is being brazed, a discharge opening shall be provided on the opposite side of the joint from where the purge gas is being introduced.

5.1.10.4.5.8 The flow of purge gas shall be maintained until the joint is cool to the touch.

5.1.10.4.5.9 After the joint has cooled, the purge discharge opening shall be sealed to prevent contamination of the inside of the tube and maintain the nitrogen atmosphere within the piping system.

5.1.10.4.5.10 The final brazed connection of new piping to an existing pipeline containing the system gas shall be permitted to be made without the use of a nitrogen purge.

5.1.10.4.5.11 After a final brazed connection in a positive pressure medical gas pipeline is made without a nitrogen purge, an outlet in the immediate downstream zone of the affected

portion(s) of both the new and existing piping shall be tested in accordance with the final tie-in test in 5.1.12.4.9.

5.1.10.4.5.12* When using the autogenous orbital welding process, joints shall be continuously purged inside and outside with inert gas(es) in accordance with the qualified welding procedure.

5.1.10.4.6 Assembling and Heating Brazed Joints.

5.1.10.4.6.1 Tube ends shall be inserted into the socket, either fully or to a mechanically limited depth that is not less than the minimum cup depth (overlap) specified by ANSI/ASME B16.50, *Wrought Copper and Copper Alloy Braze-Joint Pressure Fittings*.

5.1.10.4.6.2 Where flux is permitted, the joint shall be heated slowly until the flux has liquefied.

5.1.10.4.6.3 After flux is liquefied, or where flux is not permitted to be used, the joint shall be heated quickly to the brazing temperature, taking care not to overheat the joint.

5.1.10.4.6.4 Techniques for heating the joint, applying the brazing filler metal, and making horizontal, vertical, and large-diameter joints shall be as stated in sections on applying heat and brazing and horizontal and vertical joints in Chapter VII, "Brazed Joints," in the CDA *Copper Tube Handbook*.

5.1.10.4.7 Inspection of Brazed Joints.

5.1.10.4.7.1 After brazing, the outside of all joints shall be cleaned by washing with water and a wire brush to remove any residue and allow clear visual inspection of the joint.

5.1.10.4.7.2 Where flux has been used, the wash water shall be hot.

5.1.10.4.7.3 Each brazed joint shall be visually inspected after cleaning the outside surfaces.

5.1.10.4.7.4 Joints exhibiting the following conditions shall not be permitted:

- (1) Flux or flux residue (when flux or flux-coated BAg series rods are used with dissimilar metals)
- (2) Base metal melting or erosion
- (3) Unmelted filler metal
- (4) Failure of the filler metal to be clearly visible all the way around the joint at the interface between the socket and the tube
- (5) Cracks in the tube or component
- (6) Cracks in the braze filler metal
- (7) Failure of the joint to hold the test pressure under the installer-performed initial pressure test (see 5.1.12.2.3) and standing pressure test (see 5.1.12.2.6 or 5.1.12.2.7)

5.1.10.4.7.5 Brazed joints that are identified as defective under the conditions of 5.1.10.4.7.4(2) or 5.1.10.4.7.4(5) shall be replaced.

▲ **5.1.10.4.7.6** Brazed joints that are identified as defective under the conditions of 5.1.10.4.7.4(1), 5.1.10.4.7.4(3), 5.1.10.4.7.4(4), 5.1.10.4.7.4(6), or 5.1.10.4.7.4(7) shall be permitted to be repaired, except that no joint shall be reheated more than once before being replaced.

5.1.10.5 Welded Joints.

5.1.10.5.1 Gas Tungsten Arc Welding (GTAW) for Copper and Stainless Tube.

5.1.10.5.1.1 Welded joints for medical gas and medical-surgical vacuum systems shall be permitted to be made using a gas tungsten arc welding (GTAW) autogenous orbital procedure.

5.1.10.5.1.2 The GTAW autogenous orbital procedure and the welder qualification procedure shall be qualified in accordance with Section IX, "Welding and Brazing Qualifications," of the ASME *Boiler and Pressure Vessel Code*.

5.1.10.5.1.3 Welder qualification procedures shall include a bend test and a tensile test in accordance with Section IX, "Welding and Brazing Qualifications," of the ASME *Boiler and Pressure Vessel Code* on each tube size diameter.

5.1.10.5.1.4 Each welder shall qualify to a welding procedure specification (WPS) for each tube diameter.

5.1.10.5.1.5* GTAW autogenous orbital welded joints shall be purged during welding with a commercially available mixture of 75 percent helium (± 5 percent) and 25 percent argon (± 5 percent).

5.1.10.5.1.6 The shield gas shall be as required in 5.1.10.5.1.5.

5.1.10.5.1.7 Test coupons shall be welded and inspected, as a minimum, at start of work and every 4 hours thereafter, or when the machine is idle for more than 30 minutes, and at the end of the work period.

5.1.10.5.1.8 Test coupons shall be inspected on the I.D. and O.D. by a qualified quality control inspector.

5.1.10.5.1.9 Test coupons shall also be welded at change of operator, weld head, welding power supply, or gas source.

5.1.10.5.1.10 All production welds shall be visually inspected on the O.D. by the operator, and any obvious weld failures shall be cut out and re-welded.

5.1.10.5.2 Welding for Stainless Tube.

5.1.10.5.2.1 Stainless tube shall be welded using metal inert gas (MIG) welding, tungsten inert gas (TIG) welding, or other welding techniques suited to joining stainless tube.

5.1.10.5.2.2 Welders shall be qualified to Section IX, "Welding and Brazing Qualifications," of the ASME *Boiler and Pressure Vessel Code*.

5.1.10.6 Memory Metal Fittings.

5.1.10.6.1 Memory metal fittings having a temperature rating not less than 538°C (1000°F) and a pressure rating not less than 2070 kPa (300 psi) shall be permitted to be used to join copper or stainless steel tube.

5.1.10.6.2 Memory metal fittings shall be installed by qualified technicians in accordance with the manufacturer's instructions.

5.1.10.7 Axially Swaged Fittings.

5.1.10.7.1 Axially swaged, elastic strain preload fittings providing metal-to-metal seals, having a temperature rating not less than 538°C (1000°F) and a pressure rating not less than 2070 kPa (300 psi), and that, when complete, are permanent and nonseparable shall be permitted to be used to join copper or stainless steel tube.

5.1.10.7.2 Axially swaged, elastic strain preload fittings shall be installed by qualified technicians in accordance with the **manufacturer's** instructions.

5.1.10.8 Threaded Fittings. Threaded fittings shall meet the following criteria:

- (1) They shall be limited to connections for pressure and vacuum indicators, alarm devices, gas-specific demand check fittings, and source equipment on the source side of the source valve.
- (2) They shall be tapered pipe threads complying with ASME B1.20.1, *Pipe Threads, General Purpose, Inch*.
- (3)* They shall be made up with polytetrafluoroethylene (PTFE) tape or other thread sealant recommended for oxygen service, with sealant applied to the male threads only and care taken to ensure sealant does not enter the pipe.

5.1.10.9 Special Fittings.

5.1.10.9.1 Listed or approved metallic gas tube fittings that, when made up, provide a permanent joint having the mechanical, thermal, and sealing integrity of a brazed joint shall be permitted to be used.

5.1.10.9.2 Dielectric Fittings. Dielectric fittings that comply with the following shall be permitted only where required by the manufacturer of special medical equipment to electrically isolate the equipment from the system distribution piping:

- (1) They shall be of brass or copper construction with an appropriate dielectric.
- (2) They shall be permitted to be a union.
- (3) They shall be clean for oxygen where used for medical gases and medical support gases.

5.1.10.10 Prohibited Joints. The following joints shall be prohibited throughout medical gas and vacuum distribution pipeline systems:

- (1) Flared and compression-type connections, including connections to station outlets and inlets, alarm devices, and other components
- (2) Other straight-threaded connections, including unions
- (3) Pipe-crimping tools used to permanently stop the flow of medical gas and vacuum piping
- (4) Removable and nonremovable push-fit fittings that employ a quick assembly push fit connector

5.1.10.11 Installation of Piping and Equipment.

5.1.10.11.1 Pipe Sizing.

5.1.10.11.1.1 Piping systems shall be designed and sized to deliver the required flow rates at the utilization pressures.

5.1.10.11.1.2 Mains and branches in medical gas piping systems shall be not less than DN15 (NPS ½) (⅝ in. O.D.) size.

5.1.10.11.1.3 Mains and branches in medical–surgical vacuum systems shall be not less than DN20 (NPS ¾) (⅞ in. O.D.) size.

5.1.10.11.1.4 Drops to individual station outlets and inlets shall be not less than DN15 (NPS ½) (⅝ in. O.D.) size.

5.1.10.11.1.5 Runouts to alarm panels and connecting tubing for gauges and alarm devices shall be permitted to be DN8 (NPS ¼) (⅜ in. O.D.) size.

5.1.10.11.2 Protection of Piping. Piping shall be protected against freezing, corrosion, and physical damage.

5.1.10.11.2.1 Piping exposed in corridors and other areas where subject to physical damage from the movement of carts, stretchers, portable equipment, or vehicles shall be protected.

5.1.10.11.2.2 Piping underground within buildings or embedded in concrete floors or walls shall be installed in a continuous conduit.

5.1.10.11.3 Location of Piping.

5.1.10.11.3.1 Piping risers shall be permitted to be installed in pipe shafts if protected from physical damage, effects of excessive heat, corrosion, or contact with oil.

Δ 5.1.10.11.3.2 Piping shall not be installed in kitchens, **stairwells**, elevator shafts, elevator machine rooms, areas with open flames, electrical service equipment over 600 volts, and areas prohibited under *NFPA 70* except for the following locations:

- (1) Room locations for medical air compressor supply systems and medical–surgical vacuum pump supply systems
- (2) Room locations for secondary distribution circuit panels and breakers having a maximum voltage rating of 600 volts

5.1.10.11.3.3 Medical gas piping shall be permitted to be installed in the same service trench or tunnel with fuel gas lines, fuel oil lines, electrical lines, steam lines, and similar utilities, provided that the space is ventilated (naturally or mechanically) and the ambient temperature around the medical gas piping is limited to 54°C (130°F) maximum.

5.1.10.11.3.4 Medical gas piping shall not be located where subject to contact with oil, including a possible flooding area in the case of a major oil leak.

5.1.10.11.4 Pipe Support.

5.1.10.11.4.1 Piping shall be supported from the building structure.

5.1.10.11.4.2 Hangers and supports shall comply with and be installed in accordance with MSS SP-58, *Pipe Hangers and Supports — Materials, Design, Manufacture, Selection, Application, and Installation*.

5.1.10.11.4.3 Supports for copper tube shall be sized for copper tube.

Δ 5.1.10.11.4.4* Supports for CMT shall be in accordance with the CMT manufacturer's installation instructions.

5.1.10.11.4.5 In potentially damp locations, copper tube hangers or supports that are in contact with the tube shall be plastic-coated or otherwise be electrically insulated from the tube by a material that will not absorb moisture.

5.1.10.11.4.6 Maximum support spacing shall be in accordance with Table 5.1.10.11.4.6.

5.1.10.11.4.7 Where required, medical gas and vacuum piping shall be seismically restrained against earthquakes in accordance with the applicable building code.

5.1.10.11.5 Underground Piping Outside of Buildings.

5.1.10.11.5.1 Buried piping outside of buildings shall be installed below the local level of frost penetration.

Table 5.1.10.11.4.6 Maximum Pipe Support Spacing

Pipe Size	Hanger Spacing	
	mm	ft
DN8 (NPS ¼) (⅜ in. O.D.)	1520	5
DN10 (NPS ⅜) (½ in. O.D.)	1830	6
DN15 (NPS ½) (⅝ in. O.D.)	1830	6
DN20 (NPS ¾) (⅞ in. O.D.)	2130	7
DN25 (NPS 1) (1⅛ in. O.D.)	2440	8
DN32 (NPS 1¼) (1⅜ in. O.D.)	2740	9
DN40 (NPS 1½) (1⅝ in. O.D.)	3050	10
and larger		
Vertical risers, all sizes, every floor, but not to exceed	4570	15

5.1.10.11.5.2 The installation procedure for underground piping shall protect the piping from physical damage while being backfilled.

5.1.10.11.5.3 If underground piping is protected by a conduit, cover, or other enclosure, the following requirements shall be met:

- (1) Access shall be provided at the joints for visual inspection and leak testing.
- (2) The conduit, cover, or enclosure shall be self-draining and not retain groundwater in prolonged contact with the pipe.

5.1.10.11.5.4 Buried piping that will be subject to surface loads shall be buried at a depth that will protect the piping or its enclosure from excessive stresses.

5.1.10.11.5.5 The minimum backfilled cover above the top of the pipe or its enclosure for buried piping outside of buildings shall be 900 mm (36 in.), except that the minimum cover shall be permitted to be reduced to 450 mm (18 in.) where there is no potential for damage from surface loads or surface conditions.

5.1.10.11.5.6 Trenches shall be excavated so that the pipe or its enclosure has firm, substantially continuous bearing on the bottom of the trench.

5.1.10.11.5.7 Backfill shall be clean, free from material that can damage the pipe, and compacted.

5.1.10.11.5.8 A continuous tape or marker placed immediately above the pipe or its enclosure shall clearly identify the pipeline by specific name.

5.1.10.11.5.9 A continuous warning means shall also be provided above the pipeline at approximately one-half the depth of burial.

5.1.10.11.5.10 Where underground piping is installed through a wall sleeve, the outdoor end of the sleeve shall be sealed to prevent the entrance of groundwater into the building.

5.1.10.11.6 Hose and Flexible Connectors.

5.1.10.11.6.1 Hose and flexible connectors, both metallic and nonmetallic, shall be no longer than necessary and shall not penetrate or be concealed in walls, floors, ceilings, or partitions.

5.1.10.11.6.2 Flexible connectors, metallic or nonmetallic, shall have a minimum burst pressure, with a gauge pressure of 6895 kPa (1000 psi).

5.1.10.11.6.3 Metallic flexible joints shall be permitted in the pipeline where required for expansion joints, seismic protection, thermal expansion, or vibration control and shall be as follows:

- (1) For all wetted surfaces, made of bronze, copper, or stainless steel
- (2) Cleaned at the factory for oxygen service and received on the job site with certification of cleanliness
- (3) Suitable for service at 2070 kPa (300 psig) or above and able to withstand temperatures of 538°C (1000°F)
- (4) Provided with brazing extensions to allow brazing into the pipeline per 5.1.10.4
- (5) Supported with pipe hangers and supports as required for their additional weight

5.1.10.11.6.4 Metallic flexible joints in accordance with 5.1.10.11.6.3 shall be permitted to be concealed in walls, ceilings, or partitions.

5.1.10.11.7 Prohibited System Interconnections.

5.1.10.11.7.1 Two or more medical gas or vacuum piping systems shall not be interconnected for installation, testing, or any other reason, except as permitted by 5.1.10.11.7.2.

5.1.10.11.7.2 Medical gas and vacuum systems with the same contents shall be permitted to be interconnected with an in-line valve installed between the systems.

5.1.10.11.7.3 Leak testing shall be accomplished by separately charging and testing each individual piping system.

5.1.10.11.8 Manufacturer's Instructions.

5.1.10.11.8.1 The installation of individual components shall be made in accordance with the instructions of the manufacturer.

5.1.10.11.8.2 Manufacturer's instructions shall include directions and information deemed by the manufacturer to be adequate for attaining proper operation, testing, and maintenance of the medical gas and vacuum systems.

5.1.10.11.8.3 Copies of the manufacturer's instructions shall be left with the system owner.

5.1.10.11.9 Changes in System Use.

5.1.10.11.9.1 Where a positive pressure medical gas piping distribution system originally used or constructed for use at one pressure and for one gas is converted for operation at another pressure or for another gas, all provisions of 5.1.10 shall apply as if the system were new.

5.1.10.11.9.2 A vacuum system shall not be permitted to be converted for use as a gas system.

5.1.10.11.10 Qualification of Installers.

5.1.10.11.10.1 The installation of medical gas and vacuum systems shall be made by qualified, competent technicians who are experienced in performing such installations, including all personnel who actually install the piping system.

5.1.10.11.10.2 Installers of medical gas and vacuum piped distribution systems, all appurtenant piping supporting pump and compressor source systems, and appurtenant piping

supporting source gas manifold systems not including permanently installed bulk source systems, shall be certified in accordance with ASSE 6010, *Professional Qualification Standard for Medical Gas Systems Installers*.

N 5.1.10.11.10.3 CMT systems shall be installed by ASSE 6010-qualified installers using the CMT manufacturer's instructions.

5.1.10.11.10.4 Installers of medical gas and vacuum systems shall not use their certification to oversee installation by noncertified personnel.

5.1.10.11.10.5 Brazing shall be performed by individuals who are qualified in accordance with the provisions of 5.1.10.11.11.

5.1.10.11.10.6 Prior to any installation work, the installer of medical gas and vacuum piping shall provide and maintain documentation on the job site for the qualification of brazing procedures and individual brazers that is required under 5.1.10.11.11.

5.1.10.11.10.7 Health care organization personnel shall be permitted to install piping systems if all of the requirements of 5.1.10.11.10 are met during the installation.

5.1.10.11.11 Qualification of Brazing Procedures and Brazing.

5.1.10.11.11.1 Brazing procedures and brazer performance for the installation of medical gas and vacuum piping shall be qualified in accordance with either Section IX, "Welding and Brazing Qualifications," of the ASME *Boiler and Pressure Vessel Code*, or AWS B2.2/B2.2M, *Standard for Brazing Procedure and Performance Qualification*, both as modified by 5.1.10.11.11.2 through 5.1.10.11.11.5.

5.1.10.11.11.2 Brazers shall be qualified by visual examination of the test coupon followed by sectioning.

5.1.10.11.11.3 The brazing procedure specification shall address cleaning, joint clearance, overlap, internal purge gas, purge gas flow rate, and filler metal.

5.1.10.11.11.4 The brazing procedure qualification record and the record of brazer performance qualification shall document filler metal used, base metals, cleaning, joint clearance, overlap, internal purge gas and flow rate during brazing of coupon, and absence of internal oxidation in the completed coupon.

5.1.10.11.11.5 Brazing procedures qualified by a technically competent group or agency shall be permitted under the following conditions:

- (1) The brazing procedure specification and the procedure qualification records meet the requirements of this code.
- (2) The employer obtains a copy of both the brazing procedure specification and the supporting qualification records from the group or agency and signs and dates these records, thereby accepting responsibility for the qualifications that were performed by the group or agency.
- (3) The employer qualifies at least one brazer following each brazing procedure specification used.

5.1.10.11.11.6 An employer shall be permitted to accept brazer qualification records of a previous employer under the following conditions:

- (1) The brazer has been qualified following the same or an equivalent procedure that the new employer uses.

- (2) The new employer obtains a copy of the record of brazer performance qualification tests from the previous employer and signs and dates these records, thereby accepting responsibility for the qualifications performed by the previous employer.

5.1.10.11.11.7 Performance qualifications of brazers shall remain in effect indefinitely, unless the brazer does not braze with the qualified procedure for a period exceeding 6 months or there is a specific reason to question the ability of the brazer.

5.1.10.11.12 Breaching or Penetrating Medical Gas Piping.

5.1.10.11.12.1 Positive pressure patient medical gas piping and medical support gas piping shall not be breached or penetrated by any means or process that will result in residual copper particles or other debris remaining in the piping or affect the oxygen-clean interior of the piping.

5.1.10.11.12.2 The breaching or penetrating process shall ensure that any debris created by the process remains contained within the work area.

5.1.11* Labeling, Identification, and Operating Pressure. Color and pressure requirements shall be in accordance with Table 5.1.11.

5.1.11.1 Pipe Labeling.

5.1.11.1.1 Piping shall be labeled by stenciling or adhesive markers that identify the patient medical gas, the support gas, or the vacuum system and include the following:

- (1) Name of the gas or vacuum system or the chemical symbol per Table 5.1.11
- (2) Gas or vacuum system color code per Table 5.1.11
- (3) Where positive pressure gas piping systems operate at pressures other than the standard gauge pressure in Table 5.1.11, the operating pressure in addition to the name of the gas

5.1.11.1.2 Pipe labels shall be located as follows:

- (1) At intervals of not more than 6.1 m (20 ft)
- (2) At least once in or above every room
- (3) On both sides of walls or partitions penetrated by the piping
- (4) At least once in every story height traversed by risers

5.1.11.1.3 Medical gas piping shall not be painted.

5.1.11.2 Shutoff Valves.

5.1.11.2.1 Shutoff valves shall be identified with the following:

- (1) Name or chemical symbol for the specific medical gas or vacuum system
- (2) Room or areas served
- (3) Caution to not close or open the valve except in emergency

5.1.11.2.2 Where positive pressure gas piping systems operate at pressures other than the standard gauge pressure of 345 kPa to 380 kPa (50 psi to 55 psi) or a gauge pressure of 1100 kPa to 1275 kPa (160 psi to 185 psi) for nitrogen or instrument air, the valve identification shall also include the nonstandard operating pressure.

Table 5.1.11 Standard Designation Colors and Operating Pressures for Gas and Vacuum Systems

Gas Service	Abbreviated Name	Colors (Background/ Text)	Standard Gauge Pressure	
			kPa	psi
Medical air	Med air	Yellow/black	345–380	50–55
Carbon dioxide	CO ₂	Gray/black or gray/white	345–380	50–55
Helium	He	Brown/white	345–380	50–55
Nitrogen	N ₂	Black/white	1100–1275	160–185
Nitrous oxide	N ₂ O	Blue/white	345–380	50–55
Oxygen	O ₂	Green/white or white/green	345–380	50–55
Oxygen/carbon dioxide mixtures	O ₂ /CO ₂ <i>n</i> % (<i>n</i> = % of CO ₂)	Green/white	345–380	50–55
Medical–surgical vacuum	Med vac	White/black	380 mm to 760 mm (15 in. to 30 in.) HgV	
Waste anesthetic gas disposal	WAGD	Violet/white	Varies with system type	
Other mixtures	Gas A%/Gas B%	Colors as above Major gas for background/minor gas for text	None	
Nonmedical air (Category 3 gas-powered device)		Yellow and white diagonal stripe/black	None	
Nonmedical and Category 3 vacuum		White and black diagonal stripe/black boxed	None	
Laboratory air		Yellow and white checkerboard/black	None	
Laboratory vacuum		White and black checkerboard/black boxed	None	
Instrument air		Red/white	1100–1275	160–185

5.1.11.2.3 Source valves shall be labeled in substance as follows:

**SOURCE VALVE
FOR THE (SOURCE NAME).**

5.1.11.2.4 Main line valves shall be labeled in substance as follows:

**MAIN LINE VALVE FOR THE (GAS/VACUUM NAME)
SERVING (NAME OF THE BUILDING).**

5.1.11.2.5 The riser valve(s) shall be labeled in substance as follows:

**RISER FOR THE (GAS/VACUUM NAME) SERVING
(NAME OF THE AREA/BUILDING SERVED BY THE
PARTICULAR RISER).**

5.1.11.2.6 The service valve(s) shall be labeled in substance as follows:

**SERVICE VALVE FOR THE (GAS/VACUUM NAME)
SERVING (NAME OF THE AREA/BUILDING
SERVED BY THE PARTICULAR VALVE).**

5.1.11.2.7* Zone valve box assemblies shall be labeled with the rooms, areas, or spaces that they control as follows:

**ZONE VALVES FOR THE (GAS/VACUUM NAME)
SERVING (NAME OF ROOMS OR SPACES SERVED
BY THE PARTICULAR VALVE)**

Labeling shall either be visible from outside the zone valve box assembly through the cover or be replicated on the outside, but not affixed to the removable cover.

5.1.11.3 Station Outlets and Inlets.

5.1.11.3.1 Station outlets and inlets shall be identified as to the name or chemical symbol for the specific medical gas or vacuum provided.

5.1.11.3.1.1 In sleep labs, where the outlet is downstream of a flow control device, the station outlet identification shall include a warning not to use the outlet for ventilating patients.

5.1.11.3.2 Where medical gas systems operate at pressures other than the standard gauge pressure of 345 kPa to 380 kPa (50 psi to 55 psi) or a gauge pressure of 1100 kPa to 1275 kPa (160 psi to 185 psi) for nitrogen, the station outlet identification shall include the nonstandard operating pressure in addition to the name of the gas.

5.1.11.4 Alarm Panels.

5.1.11.4.1 Labeling of alarm panels for each indicator shall indicate the condition monitored and its area of surveillance.

5.1.11.4.2* Area alarm panels shall be identified with the following:

- (1) Name or chemical symbol of the specific medical gas or vacuum system being monitored
- (2) Area(s) monitored by the alarm panel

N 5.1.11.5 Source Equipment. Source equipment shall be labeled or tagged to identify the patient medical gas, the support gas, or the vacuum system and include the following information:

- (1) Name of the gas or vacuum system
- (2) Gas or vacuum system color code
- (3) Rooms, areas, or buildings served
- (4) Emergency contact information for the department or individual responsible for maintaining the equipment

5.1.12* Performance Criteria and Testing — Category 1 (Gases, Medical–Surgical Vacuum, and WAGD).**5.1.12.1 General.**

5.1.12.1.1 Inspection and testing shall be performed on all new piped **medical gas and vacuum systems**, additions, renovations, temporary installations, or repaired systems to ensure, by a documented **process and procedure**, that all applicable provisions of this document have been adhered to and system integrity has been achieved or maintained.

5.1.12.1.2 Inspection and testing shall include all components of the system, or portions thereof, including, but not limited to, gas bulk source(s); manifolds; compressed air source systems (e.g., compressors, dryers, filters, regulators); source alarms and monitoring safeguards; master alarms; pipelines; isolation valves; area alarms; zone valves; and station inlets (vacuum) and outlets (pressure gases).

5.1.12.1.3 All systems that are breached and components that are subject to additions, renovations, or replacement (e.g., new gas sources: bulk, manifolds, compressors, dryers, alarms) shall be inspected and tested.

5.1.12.1.4 Systems shall be deemed breached at the point of pipeline intrusion by physical separation or by system component removal, replacement, or addition.

5.1.12.1.5 Breached portions of the systems subject to inspection and testing shall be confined to only the specific altered zone and components in the immediate zone or area that is located upstream for vacuum systems and downstream for pressure gases at the point or area of intrusion.

5.1.12.1.6 The inspection and testing reports shall be submitted directly to the party that contracted for the testing, who shall submit the report through channels to the responsible facility authority and any others that are required.

5.1.12.1.7 Reports shall contain detailed listings of all findings and results.

5.1.12.1.8 The responsible facility authority shall review these inspection and testing records prior to the use of all systems to ensure that all findings and results of the inspection and testing have been successfully completed.

5.1.12.1.9 All documentation pertaining to inspections and testing shall be maintained on-site within the facility.

5.1.12.1.10 Before piping systems are initially put into use, the facility authority shall be responsible for ascertaining that the gas/vacuum delivered at the outlet/inlet is that shown on the outlet/inlet label and that the proper connecting fittings are installed for the specific gas/vacuum service.

5.1.12.1.11 Acceptance of the **verifier's final** report shall be permitted to satisfy the requirements in 5.1.12.1.10.

5.1.12.1.12 The removal of components within a source system for repair and reinstallation, or the replacement of components like for like, shall be treated as new work for the purposes of testing whenever such work involves cutting or brazing new piping, or both.

5.1.12.1.12.1 Where no piping is changed, functional testing shall be performed as follows:

- (1) To verify the function of the replaced device
- (2) To ensure no other equipment in the system has been adversely impacted

5.1.12.1.12.2 Where no piping is changed, in addition to tests of general function required by 5.1.12.1.12.1, testing shall be performed as follows:

- (1) Pressure gas sources shall be tested for compliance with 5.1.12.4.14.2 as applicable to the equipment type.
- (2) Medical air and instrument air sources shall be tested to 5.1.12.4.14.3.
- (3) Vacuum and WAGD systems shall be tested to 5.1.12.4.14.6.
- (4) Alarm systems shall be tested to 5.1.12.4.5.2 and 5.1.12.4.5.3.
- (5) All affected components shall be tested as appropriate to that specific component (e.g., a replaced dew point monitor would be tested to 5.1.3.6.3.13).

5.1.12.1.13 The rated accuracy of pressure and vacuum indicators used for testing shall be 1 percent (full scale) or better.

5.1.12.2 Installer-Performed Tests.**5.1.12.2.1 General.**

5.1.12.2.1.1 The tests required by 5.1.12.2 shall be performed and documented by the installer prior to the tests listed in 5.1.12.4.

5.1.12.2.1.2 The test gas shall be oil-free, dry nitrogen NF.

5.1.12.2.1.3 Where manufactured assemblies are to be installed, the tests required by 5.1.12.2 shall be performed as follows:

- (1) After completion of the distribution piping, but before the standing pressure test
- (2) Prior to installation of manufactured assemblies supplied through flexible hose or flexible tubing
- (3) At all station outlets/inlets on installed manufactured assemblies supplied through copper tubing

5.1.12.2.2 Initial Piping Blowdown. Piping in medical gas and vacuum distribution systems shall be blown clear by means of oil-free, dry nitrogen NF after installation of the distribution piping but before installation of station outlet/inlet rough-in assemblies and other system components (e.g., pressure/vacuum alarm devices, pressure/vacuum indicators, pressure relief valves, manifolds, source equipment).

5.1.12.2.3 Initial Pressure Test.

5.1.12.2.3.1 Each section of the piping in medical gas and vacuum systems shall be pressure tested.

5.1.12.2.3.2 Initial pressure tests shall be conducted as follows:

- (1) After blowdown of the distribution piping
- (2) After installation of station outlet/inlet rough-in assemblies
- (3) Prior to the installation of components of the distribution piping system that would be damaged by the test pressure (e.g., pressure/vacuum alarm devices, pressure/vacuum indicators, line pressure relief valves)

5.1.12.2.3.3 The source shutoff valve shall remain closed during the tests specified in 5.1.12.2.3.

5.1.12.2.3.4 The test pressure for pressure gases and vacuum systems shall be 1.5 times the system operating pressure but not less than a gauge pressure of 1035 kPa (150 psi).

5.1.12.2.3.5* The test pressure shall be maintained until each joint has been examined for leakage by means of a leak detectant that is safe for use with oxygen and does not contain ammonia.

5.1.12.2.3.6 Leaks, if any, shall be located, repaired (if permitted), replaced (if required), and retested.

5.1.12.2.4 Initial Cross-Connection Test. It shall be determined that no cross-connections exist between the various medical gas and vacuum piping systems.

5.1.12.2.4.1 All piping systems shall be reduced to atmospheric pressure.

5.1.12.2.4.2 Sources of test gas shall be disconnected from all piping systems, except for the one system being tested.

5.1.12.2.4.3 The system under test shall be charged with oil-free, dry nitrogen NF to a gauge pressure of 345 kPa (50 psi).

5.1.12.2.4.4 After the installation of the individual faceplates with appropriate adapters matching outlet/inlet labels, each individual outlet/inlet in each installed medical gas and vacuum piping system shall be checked to determine that the test gas is being dispensed only from the piping system being tested.

5.1.12.2.4.5 The cross-connection test referenced in 5.1.12.2.4 shall be repeated for each installed medical gas and vacuum piping system.

5.1.12.2.4.6 The proper labeling and identification of system outlets/inlets shall be confirmed during these tests.

5.1.12.2.5 Initial Piping Purge Test. The outlets in each medical gas piping system shall be purged to remove any particulate matter from the distribution piping.

5.1.12.2.5.1 Using appropriate adapters, each outlet shall be purged with an intermittent high-volume flow of test gas until the purge produces no discoloration in a clean white cloth.

5.1.12.2.5.2 The purging required in 5.1.12.2.5.1 shall be started at the closest outlet/inlet to the zone valve and continue to the furthest outlet/inlet within the zone.

5.1.12.2.6 Standing Pressure Test for Positive Pressure Medical Gas Piping. After successful completion of the initial pres-

sure tests under 5.1.12.2.3, medical gas distribution piping shall be subject to a standing pressure test.

5.1.12.2.6.1 Tests shall be conducted after the final installation of station outlet valve bodies, faceplates, and other distribution system components (e.g., pressure alarm devices, pressure indicators, line pressure relief valves, manufactured assemblies, hose).

5.1.12.2.6.2 The source valve shall be closed during this test.

5.1.12.2.6.3 The piping systems shall be subjected to a 24-hour standing pressure test using oil-free, dry nitrogen NF.

5.1.12.2.6.4 Test pressures shall be 20 percent above the normal system operating line pressure.

5.1.12.2.6.5* The leakage over the 24-hour test shall not exceed 0.5 percent of the starting pressure [e.g., 2 kPa (0.3 psi) starting at 415 kPa (60 psig), 0.3 mm (0.125 in.) HgV starting at 635 mm (25 in.) HgV] except that attributed to specific changes in ambient temperature.

5.1.12.2.6.6 Leaks, if any, shall be located, repaired (if permitted) or replaced (if required), and retested.

5.1.12.2.6.7 The 24-hour standing pressure test of the positive pressure system shall be witnessed by an ASSE 6020 inspector, an ASSE 6030 verifier, or the authority having jurisdiction or its designee. A form indicating that this test has been performed and witnessed shall be provided to the verifier at the start of the tests required in 5.1.12.4.

5.1.12.2.7 Standing Vacuum Test for Vacuum Piping. After successful completion of the initial pressure tests under 5.1.12.2.3, vacuum distribution piping shall be subjected to a standing vacuum test.

5.1.12.2.7.1 Tests shall be conducted after installation of all components of the vacuum system.

5.1.12.2.7.2 The piping systems shall be subjected to a 24-hour standing vacuum test.

5.1.12.2.7.3 Test pressure shall be between 300 mm (12 in.) HgV and full vacuum.

5.1.12.2.7.4 During the test, the source of test vacuum shall be disconnected from the piping system.

5.1.12.2.7.5* At the conclusion of the test, there shall be no change in the vacuum other than that attributed to changes of ambient temperature.

5.1.12.2.7.6 The 24-hour standing pressure test of the vacuum system shall be witnessed by the authority having jurisdiction or its designee. A form indicating that this test has been performed and witnessed shall be provided to the verifier at the start of the tests required in 5.1.12.4.

5.1.12.2.7.7 Leaks, if any, shall be located, repaired (if permitted) or replaced (if required), and retested.

N 5.1.12.3 System Inspection.

N 5.1.12.3.1 General.

N 5.1.12.3.1.1 System inspections shall be performed prior to concealing piping distribution systems in walls, ceilings, chases, trenches, underground, or otherwise hidden from view.

N 5.1.12.3.1.2 The test gas shall be nitrogen NF.

N 5.1.12.3.1.3 Inspections shall be conducted by a party technically competent and experienced in the field of medical gas and vacuum pipeline inspections and testing and meeting the requirements of ASSE 6020, *Professional Qualifications Standard for Medical Gas Systems Inspectors*, or ASSE 6030, *Professional Qualifications Standard for Medical Gas Systems Verifiers*.

N 5.1.12.3.1.4 Inspections shall be performed by a party other than the installing contractor.

N 5.1.12.3.1.5 Where systems have not been installed by in-house personnel, inspections shall be permitted by personnel of the organization who meet the requirements of 5.1.12.3.1.3.

N 5.1.12.3.2 Inspections.

N 5.1.12.3.2.1 The initial pressure tests performed by the installing contractor shall be witnessed by an ASSE 6020 inspector, an ASSE 6030 verifier, or the authority having jurisdiction or its designee. A form indicating that this test has been performed and witnessed shall be provided to the verifier at the start of the tests required in 5.1.12.4.

N 5.1.12.3.2.2 The presence and correctness of labeling and valve tagging required by this code for all concealed components and piping distribution systems shall be inspected.

5.1.12.4 System Verification.

5.1.12.4.1 General.

5.1.12.4.1.1 Verification tests shall be performed only after all tests required in 5.1.12.2, Installer Performed Tests, have been completed.

5.1.12.4.1.2 The test gas shall be oil-free, dry nitrogen NF or the system gas where permitted.

5.1.12.4.1.3 Testing shall be conducted by a party technically competent and experienced in the field of medical gas and vacuum pipeline testing and meeting the requirements of ASSE 6030, *Professional Qualifications Standard for Medical Gas Systems Verifiers*, except as required by 5.1.12.4.1.4.

N 5.1.12.4.1.4 Testing of the cryogenic fluid central supply system shall be conducted by a party technically competent and experienced in the field of cryogenic fluid systems and meeting the requirements of ASSE 6035, *Professional Qualifications Standard for Bulk Medical Gas Systems Verifiers*, in accordance with the mandatory requirements in CGA M-1, *Standard for Medical Gas Supply Systems at Health Care Facilities*.

5.1.12.4.1.5 Testing shall be performed by a party other than the installing contractor.

5.1.12.4.1.6 When systems have not been installed by in-house personnel, testing shall be permitted by personnel of that organization who meet the requirements of 5.1.12.4.1.3.

5.1.12.4.1.7 All tests required under 5.1.12.4 shall be performed after installation of any manufactured assemblies supplied through tubing or flexible hose.

5.1.12.4.1.8 Where there are multiple possible connection points for terminals, each possible position shall be tested independently.

5.1.12.4.1.9 The gas of system designation shall be permitted to be used for all tests, regardless of the size of the system, which include the following:

(1) Standing pressure (*see 5.1.12.4.2*)

- (2) Cross-connection (*see 5.1.12.4.3*)
- (3) Alarms (*see 5.1.12.4.5*)
- (4) Piping purge (*see 5.1.12.4.6*)
- (5) Piping particulates (*see 5.1.12.4.7*)

5.1.12.4.2* Standing Pressure Test. Piping systems shall be subjected to a 10-minute standing pressure test at operating line pressure using the following procedure:

- (1) After the system is filled with nitrogen or source gas, the source valve and all zone valves shall be closed.
- (2) The piping system shall show no decrease in pressure after 10 minutes.
- (3) Any leaks found shall be located, repaired, and retested per 5.1.12.2.6.

5.1.12.4.3 Cross-Connection Test. After the closing of walls and completion of the requirements of 5.1.12.2, it shall be determined that no cross-connection of piping systems exists by either of the methods detailed in 5.1.12.4.3.1 or 5.1.12.4.3.2.

5.1.12.4.3.1 Individual Pressurization Method.

(A) All medical gas and vacuum piping systems shall be reduced to atmospheric pressure.

(B) All sources of test gas from all of the medical gas and vacuum systems, with the exception of the one system to be checked, shall be disconnected.

(C) The system being checked shall be pressurized to a gauge pressure of 345 kPa (50 psi).

(D) With adapters matching outlet labels, each individual station outlet/inlet of all medical gas and vacuum systems installed shall be checked to determine that test gas is being dispensed only from the outlets/inlets of the piping system being tested.

(E) The source of test gas shall be disconnected, and the system tested reduced to atmospheric pressure.

(F) Proceed to test each additional piping system until all medical gas and vacuum piping systems are free of cross-connections.

5.1.12.4.3.2 Pressure Differential Method.

(A) The pressure in all medical gas systems shall be reduced to atmospheric.

(B) The test gas pressure in all medical gas piping systems shall be increased to the values indicated in Table 5.1.12.4.3.2(B), simultaneously maintaining these nominal pressures throughout the test.

(C) Systems with nonstandard operating pressures shall be tested at a gauge pressure of at least 70 kPa (10 psi) higher or lower than any other system being tested.

(D) Any vacuum systems shall be in operation so that these vacuum systems are tested at the same time the medical gas systems are tested.

(E) Following the adjustment of pressures in accordance with 5.1.12.4.3.2(B) and 5.1.12.4.3.2(C), each station outlet for each medical gas system shall be tested using the gas-specific connection for each system with test gauge attached to verify that the correct test pressure/vacuum is present at each outlet/inlet of each system as listed in Table 5.1.12.4.3.2(B).

Table 5.1.12.4.3.2(B) Alternate Test Pressures

Medical Gas	Pressure (Gauge)
Gas mixtures	140 kPa (20 psi)
Nitrogen/instrument air	210 kPa (30 psi)
Nitrous oxide	275 kPa (40 psi)
Oxygen	345 kPa (50 psi)
Medical air	415 kPa (60 psi)
Systems at nonstandard pressures	70 kPa (10 psi) greater or less than any other system
Vacuum	HgV vacuum
WAGD	510 mm (20 in.) HgV
	380 mm (15 in.) HgV (if so designed)

(F) Each test gauge used in performing this test shall be calibrated with the pressure indicator used for the line pressure regulator used to provide the source pressure.

(G) Each station outlet shall be identified by label (and color marking, if used), and the pressure indicated on the test gauge shall be that listed in Table 5.1.12.4.3.2(B) for the system being tested.

5.1.12.4.4 Valve Test. Valves installed in each medical gas and vacuum piping system shall be tested to verify proper operation and rooms or areas of control.

5.1.12.4.4.1 Records shall be made listing the rooms or areas controlled by each valve for each gas.

5.1.12.4.4.2 The information shall be utilized to assist and verify the proper labeling of the valves.

5.1.12.4.5 Alarm Test.

5.1.12.4.5.1 General.

(A) All warning systems for each medical gas and vacuum system(s) shall be tested to ensure that all components function properly prior to placing the system in service.

(B) Permanent records of these tests shall be maintained.

(C) Warning systems that are part of an addition to an existing piping system shall be tested prior to the connection of the new piping to the existing system.

(D) Tests of warning systems for new installations (initial tests) shall be performed after the cross-connection testing (*see 5.1.12.4.3*), but before purging the piping (*see 5.1.12.4.6*) and performing the remaining verification tests. (*See 5.1.12.4.7 through 5.1.12.4.14.*)

(E) Initial tests of warning systems that can be included in an addition or extension to an existing piping system shall be completed before connection of the addition to the existing system.

(F) Test gases for the initial tests shall be oil-free, dry nitrogen NF, the gas of system designation, or operating vacuum.

(G) Where computer systems are used as substitutes for a required alarm panel as permitted under 5.1.9.2.2, the computer system shall be included in the alarm tests as modified in 5.1.9.3.

5.1.12.4.5.2 Master Alarms.

(A) The master alarm system tests shall be performed for each of the medical gas and vacuum piping systems.

(B) Permanent records of these tests shall be maintained with those required under 5.1.12.1.7.

(C) The audible and noncancelable visual signals of 5.1.9.1 shall indicate if the pressure in the main line increases or decreases 20 percent from the normal operating pressure.

(D) The operation of all master alarm signals referenced in 5.1.9.2.4 shall be verified.

5.1.12.4.5.3 Area Alarms. The warning signals for all medical gas piping systems shall be tested to verify an alarm condition if the pressure in the piping system increases or decreases 20 percent from the normal operating pressure for positive pressure gases, or when the vacuum system(s) drops below a gauge pressure of 300 mm (12 in.) HgV.

5.1.12.4.6 Piping Purge Test. In order to remove any traces of particulate matter deposited in the pipelines as a result of construction, a heavy, intermittent purging of the pipeline shall be done.

5.1.12.4.6.1 The appropriate adapter shall be obtained from the facility or manufacturer, and high purge rates of at least 225 NL/min (8 SCFM) shall be put on each outlet.

5.1.12.4.6.2 After the purge is started, it shall be rapidly interrupted several times until the purge produces no discoloration in a white cloth loosely held over the adapter during the purge.

5.1.12.4.6.3 In order to avoid possible damage to the outlet and its components, this test shall not be conducted using any implement other than the proper adapter.

5.1.12.4.6.4* No pronounced or objectionable odor shall be discernible from any positive pressure outlet.

5.1.12.4.7 Piping Particulate Test. For each positive pressure gas system, the cleanliness of the piping system shall be verified.

5.1.12.4.7.1 A minimum of 1000 L (35 ft³) of gas shall be filtered through a clean, white 0.45 micron filter at a minimum flow rate of 100 NL/min (3.5 SCFM).

5.1.12.4.7.2 Twenty-five percent of the zones shall be tested at the outlet most remote from the source.

5.1.12.4.7.3 The filter shall accrue no more than 0.001 g (1 mg) of matter from any outlet tested.

5.1.12.4.7.4 If any outlet fails this test, the most remote outlet in every zone shall be tested.

5.1.12.4.7.5 The test shall be performed with the use of oil-free, dry nitrogen NF.

5.1.12.4.8* Verifier Piping Purity Test. For each medical gas system, the purity of the piping system shall be verified in accordance with 5.1.12.4.8.

5.1.12.4.8.1 These tests shall be performed with oil-free, dry nitrogen NF or the system gas.

5.1.12.4.8.2 The outlet most remote from the source shall be tested for total nonmethane hydrocarbons and halogenated hydrocarbons and compared to the source gas.

5.1.12.4.8.3 If the system gas is used as the source gas, it shall be tested at the source equipment.

5.1.12.4.8.4 The difference between the two tests shall in no case exceed 5 ppm of total non-methane hydrocarbons.

5.1.12.4.8.5 The difference between the two tests shall in no case exceed 5 ppm halogenated hydrocarbons.

5.1.12.4.8.6 The moisture concentration of the outlet test shall not exceed 500 ppm or an equivalent pressure dew point of -12°C (10°F) at a gauge pressure of 345 kPa (50 psi).

5.1.12.4.9 Final Tie-In Test.

5.1.12.4.9.1 Prior to the connection of any work or any extension or addition to an existing piping system, the tests in 5.1.12.4.1 through 5.1.12.4.8 shall be successfully performed on the new work.

5.1.12.4.9.2 Each joint in the final connection between the new work and the existing system shall be leak-tested with the gas of system designation at the normal operating pressure by means of a leak detectant that is safe for use with oxygen and does not contain ammonia.

5.1.12.4.9.3 Vacuum joints shall be tested using an ultrasonic leak detector or other means that will allow detection of leaks in an active vacuum system.

5.1.12.4.9.4 For pressure gases, immediately after the final brazed connection is made and leak-tested, an outlet in the new piping and an outlet in the existing piping that are immediately downstream from the point or area of intrusion shall be purged in accordance with the applicable requirements of 5.1.12.4.6.

5.1.12.4.9.5 Before the new work is used for patient care, positive pressure gases shall be tested for operational pressure and gas concentration in accordance with 5.1.12.4.10 and 5.1.12.4.11.

5.1.12.4.9.6 Permanent records of these tests shall be maintained in accordance with 5.1.14.5.

5.1.12.4.10 Operational Flow Pressure Drop Test. Operational flow pressure drop tests shall be performed at each station outlet/inlet or terminal where the user makes connections and disconnections.

5.1.12.4.10.1 Tests shall be performed with the gas of system designation or the operating vacuum.

5.1.12.4.10.2 All gas outlets with a gauge pressure of 345 kPa (50 psi), including, but not limited to, oxygen, nitrous oxide, medical air, and carbon dioxide, shall deliver 100 SLP (3.5 SCFM) with a pressure drop of not more than 35 kPa (5 psi) and static pressure of 345 kPa to 380 kPa (50 psi to 55 psi).

5.1.12.4.10.3 Support gas outlets shall deliver 140 SLP (5.0 SCFM) with a pressure drop of not more than 35 kPa (5 psi) gauge and static pressure of 1100 kPa to 1275 kPa (160 psi to 185 psi) gauge.

5.1.12.4.10.4 Medical-surgical vacuum inlets shall draw 85 Nl/min (3 SCFM) without reducing the vacuum pressure below 300 mm (12 in.) gauge HgV at any adjacent station inlet.

5.1.12.4.10.5 Oxygen and medical air outlets serving Category 1 space shall allow a transient flow rate of 170 SLP (6 SCFM) for 3 seconds.

5.1.12.4.10.6* Where outlets are being fed with non-standard line pressure, volume, or gas content, for clinical reasons, they shall be labeled in accordance with 5.1.11.

5.1.12.4.11 Medical Gas Concentration Test. After purging each system with the gas of system designation, the following shall be performed:

- (1) Each pressure gas source and outlet shall be analyzed for concentration of gas, by volume.
- (2) Analysis shall be conducted with instruments designed to measure the specific gas dispensed.
- (3)* Allowable concentrations shall be as indicated in Table 5.1.12.4.11.

5.1.12.4.12 Medical Air Purity Test for Compressor Sources.

5.1.12.4.12.1 The medical air source shall be analyzed for concentration of contaminants by volume prior to the source valve being opened.

5.1.12.4.12.2 A sample(s) shall be taken for the air system test at the system sample port.

5.1.12.4.12.3 The test results shall not exceed the parameters in Table 5.1.12.4.12.3.

5.1.12.4.13 Labeling. The presence and correctness of labeling required by this code for all components (e.g., station outlets/inlets, shutoff valves, and alarm panels) shall be verified.

5.1.12.4.14 Source Equipment Verification.

5.1.12.4.14.1 General. Source equipment verification shall be performed following the installation of the interconnecting pipelines, accessories, and source equipment.

Table 5.1.12.4.11 Gas Concentrations

Medical Gas	Concentration
Oxygen USP	≥99% oxygen
Oxygen 93 USP	≥90% oxygen ≤96%
Nitrous oxide USP	≥99% nitrous oxide
Nitrogen NF	≤1% oxygen or ≥99% nitrogen
Medical air USP	19.5%–23.5% oxygen
Other gases	Named gases by ±1%, or per specification

Table 5.1.12.4.12.3 Contaminant Parameters for Medical Air

Parameter	Limit Value
Pressure dew point	2°C (35°F)
Carbon monoxide	10 ppm
Carbon dioxide	500 ppm
Gaseous hydrocarbons	25 ppm (as methane)
Halogenated hydrocarbons	2 ppm

5.1.12.4.14.2 Gas Supply Sources.

(A) The system apparatus shall be tested for proper function, including the changeover from primary to secondary supply (with its changeover signal) and the operation of the reserve (with its reserve-in-use signal), before the system is put into service.

(B) If the system has an actuating switch and signal to monitor the contents of the reserve, its function shall be tested before the system is put into service.

(C) If the system has an actuating switch and signal to monitor the pressure of the reserve unit, its function shall be tested before the system is put into service.

(D) Testing of the bulk supply signal and the master signal panel installations shall be arranged with the owner or the organization responsible for the operation and maintenance of the supply system for the testing of the bulk supply signals to ensure proper identification and activation of the master signal panels so that the facility can monitor the status of that supply system.

(E) The tests required in 5.1.12.4.14.2(D) shall also be conducted when the storage units are changed or replaced.

5.1.12.4.14.3 Medical Air Compressor Systems.

(A) Tests of the medical air compressor system shall include the purity test for air quality, and the test of the alarm sensors after calibration and setup per the manufacturer's instructions, as well as reserve capacity controls.

(B) Tests shall be conducted at the sample port of the medical air system.

(C) The operation of the system control sensors, such as dew point, air temperature, and all other air quality monitoring sensors and controls, shall be checked for proper operation and function before the system is put into service.

(D) The quality of medical air as delivered by the compressor air supply shall be verified after installation of new components prior to use by patients.

(E) The air quality tests in 5.1.12.4.14.3(D) shall be conducted after the medical air source system has been operating normally but with the source valve closed under a simulated load for an elapsed time of at least 12 hours.

(F) The aggregate run time on the compressors shall not be used to determine the elapsed time.

(G) Loading shall be simulated by continuously venting air at approximately 25 percent of the rated system capacity.

(H) A demand of approximately 25 percent of the rated compressor capacity shall be created to cause the compressors to cycle on and off continuously and the dryers to operate for the 12-hour period.

N 5.1.12.4.14.4 Oxygen Central Supply System Using Concentrators. The oxygen central supply system using concentrators shall be tested according to the following:

- (1) The oxygen central supply system shall be tested for purity of the oxygen.
- (2) Tests of the alarms after calibration and setup per the manufacturer's instructions shall be conducted as well as tests of the operational controls.

- (3) Each concentrator supply system shall be operated with the supply system's isolating valve closed and the unit venting at a flow of 25 percent or more of nameplate capacity for an elapsed time of at least 12 hours prior to the tests in 5.1.12.4.14.4(4).
- (4) The oxygen quality from each concentrator supply system shall be validated as follows:
 - (a) The operation of all control sensors/switches and the oxygen monitor shall be checked for proper operation and function.
 - (b) The quality of the oxygen shall be confirmed to meet the USP monograph appropriate for the technology in use.
 - (c) The accuracy of the oxygen monitor shall be validated against oxygen of known concentration, and the monitor calibrated in accordance with the manufacturer's specifications.
- (5) The central supply system shall be tested for correct operation of the cascade (i.e., primary — secondary — reserve). It shall be permitted to test source rotation for systems so constructed.
- (6) The operation of all alarms [see 5.1.9.2.4(14) and 5.1.9.5.4(13)] shall be tested.
- (7) The accuracy of the central system oxygen monitor shall be calibrated in accordance with the manufacturer's specifications.
- (8) Tests in 5.1.12.4.14.4(3) to 5.1.12.4.14.4(5) shall be performed when any concentrator supply system has been opened to atmosphere (e.g., during service or replacement).

5.1.12.4.14.5 Proportioning Systems for Medical Air USP.

(A) The system apparatus shall be tested for proper function, including the changeover from primary to secondary (if applicable) and operation of the reserve, before the system is put into service.

(B) Tests shall include the purity of the air quality and test of the alarm sensors after calibration and setup per the manufacturer's instructions.

(C) Tests shall be conducted at the sample port of the proportioning system.

(D) The operation of the control sensors and all quality monitoring sensors and controls shall be checked for proper operation and function before the system is put into service.

5.1.12.4.14.6 Medical-Surgical Vacuum Systems. The proper functioning of the medical-surgical vacuum source system(s) shall be tested before it is put into service.

5.1.13 Category 1 Support Gases.

5.1.13.1* Applicability.

5.1.13.1.1 Support gases are any gases that are used primarily for powering equipment used in patient care procedures (typical support gases are nitrogen and instrument air). Support gas applications require delivery at pressures, cleanliness, or purities specific to their intended function(s) (e.g., to operate medical-surgical tools). Support gases shall be permitted to be piped into areas intended for any medical support purpose and, if appropriate to the procedures, to be piped into laboratories.

Δ 5.1.13.1.2 Support gas sources shall be permitted to be used for many general utility uses (e.g., to remove excess moisture from instruments before further processing, or to operate gas-driven booms, boom brakes, pendants, or similar applications). *(See Chapter 8 for general utility systems requirements.)*

5.1.13.1.3 Support gas systems shall not convey oxidizing gases other than air or gases intended for patient or staff respiration.

5.1.13.2 Nature of Hazards. Design, installation, and operation of support gas systems shall consider all hazards involved with any pressurized gas except those associated with oxidizing gases and hazards associated with the elevated pressures typical of these systems.

5.1.13.3 Sources.

5.1.13.3.1 Sources for support gases delivered from cylinders shall comply with 5.1.3.3 through 5.1.3.5.10.

5.1.13.3.2 Sources for support gases delivered from containers shall comply with 5.1.3.3 through 5.1.3.5.12 except 5.1.3.5.10.

5.1.13.3.3 Sources for support gases delivered from bulk sources shall comply with 5.1.3.3 through 5.1.3.5.12 except 5.1.3.5.10.

5.1.13.3.4* Instrument Air Supply Systems.

5.1.13.3.4.1 Quality of Instrument Air. The quality of instrument air shall be as follows:

- (1) Compliant with ANSI/ISA S-7.0.01, *Quality Standard for Instrument Air*
- (2) Filtered to 0.01 micron
- (3) Free of liquids (e.g., water, hydrocarbons, solvents)
- (4) Free of hydrocarbon vapors
- (5) Dry to a dew point of -40°C (-40°F)

5.1.13.3.4.2 Instrument air supply systems shall be located per 5.1.3.3 as follows:

- (1) Indoors, in a dedicated mechanical equipment area that is adequately ventilated and with any required utilities
- (2) In a room ventilated per 5.1.3.3.3
- (3) For air-cooled equipment, in a room designed to maintain the ambient temperature range as recommended by the equipment manufacturer

5.1.13.3.4.3 Instrument air sources shall provide air with the following characteristics:

- (1) A gauge pressure adequate for the intended line pressure and pressure controls *(see Table 5.1.11)*
- (2) The quality of instrument air, as described in 5.1.13.3.4.1

5.1.13.3.4.4 Instrument air sources shall be of either of the following formats:

- (1) At least two compressors
- (2) One compressor and a standby header complying with 5.1.3.5.10

• 5.1.13.3.4.5 Instrument air compressors shall be permitted to be of any type capable of the output pressure needed for the intended line pressure *see Table 5.1.11*, and of providing air meeting the definition of instrument air in 5.1.13.3.4.1.

Δ 5.1.13.3.4.6 Instrument Air Standby Headers. Where instrument air systems are provided with a standby header, the header shall meet the following requirements:

- (1) It shall comply with 5.1.3.5.10, except that the number of attached cylinders shall be sufficient for 1 hour of normal operation.
- (2) It shall use connectors as for medical air in the mandatory requirements of CGA V-1, *Standard for Compressed Gas Cylinder Valve Outlet and Inlet Connections* (ANSI B57.1).
- (3) It shall enter the system upstream of the final line filters.
- (4) It shall automatically serve the system in the event of a failure of the compressor.

5.1.13.3.4.7* Intake Air. Intake air for instrument air compressors shall be permitted to be drawn from outside, from ducted air, or from the equipment location.

5.1.13.3.4.8 Instrument Air Filters. Instrument air sources shall be provided with filtration sized for 100 percent of the system peak calculated demand at design conditions and with the following elements and characteristics:

- (1) Activated carbon filters located upstream (source side) of the final line filters
- (2) Line filters located upstream (source side) of the final line regulators and downstream of the carbon filters rated for a minimum of 98 percent efficiency at 0.01 micron
- (3) Equipped with a continuous visual indicator showing the status of the line filter element life
- (4) Constructed of materials deemed suitable by the manufacturer
- (5) Filters combining the functions in (1) to (4) in a single unit shall be permitted to be used

5.1.13.3.4.9 Instrument Air Accessories. Accessories used for instrument air sources shall comply with the following subparagraphs:

- (1) For aftercoolers, 5.1.3.6.3.5
- (2) For air receivers, 5.1.3.6.3.6
- (3) For air dryers, 5.1.3.6.3.7 [except 5.1.3.6.3.7(1)]
- (4) For required components, 5.1.3.6.3.2

5.1.13.3.4.10 Instrument Air Piping Arrangement and Redundancies. Instrument air sources shall comply with 5.1.3.6.3.9, except for the following:

- (1) Systems employing a standby header shall be permitted to have simplex aftercoolers and dryers.
- (2) Systems employing a standby header shall not require a three-valve receiver bypass.
- (3) Standby headers, where provided, shall be isolated from the compressor by a check valve to prevent backflow through the compressor.

5.1.13.3.4.11 Instrument Air Monitoring and Alarms.

(A) Instrument air sources shall include the following alarms:

- (1) Local alarm that activates when or just before the backup compressor (if provided) activates, indicating that the lag compressor is in operation and must be manually reset
- (2) Local alarm and alarms at all master alarm panels that activate when the dew point at system pressure exceeds -30°C (-22°F), indicating a high dew point

(B) For sources with standby headers, the following additional conditions shall activate a local alarm at the compressor site, a local signal at the header location, and alarms at all master alarm panels:

- (1) Alarm that activates when or just before the reserve begins to supply the system, indicating reserve in use

- (2) Alarm that activates when or just before the reserve falls below **one** average hour's supply, indicating reserve is low

5.1.13.3.4.12 Electrical Power and Control.

N (A) Instrument air source systems with compressors shall be controlled to ensure continuous supply of air at pressures consistent with Table 5.1.11 under all conditions of system use as follows:

- (1) Automatic activation of compressor(s) as necessary to supply the demand.
- (2) If provided with more than one compressor, managing the operation to equalize wear on all compressors. Where this equalization is achieved manually, the facility staff shall arrange a schedule for manual alternation.

N (B) Controls shall provide the following functions:

- (1) Where instrument air source systems having two or more compressors employ any electrical circuit device that upon failure could prevent supply of air, the controls shall be provided with an automatically activated alternative method for ensuring supply (e.g., redundant component(s), an alternate electrical supply path, or other equivalent method).
- (2) Control circuits shall be arranged in such a manner that isolation of one compressor or component from the system (e.g., for maintenance or repair) does not interrupt the operation of other compressor(s) or component(s).
- (3) An automatic restart function shall be included, such that the supply of air will resume normally after power interruption without manual intervention.

N (C) Each compressor motor shall be provided with electrical components including, but not limited to, the following:

- (1) Dedicated disconnect switch installed in the electrical circuit ahead of each motor starter
- (2) Motor starting device
- (3) Overload protection

N (D) Instrument air compressor system controls shall be provided with electrical systems including at a minimum:

- (1) Built-in disconnect means to allow appropriate operation of multiple compressor systems and protect service personnel from exposure to live voltages
- (2) Control circuits shall be arranged so that failure of any component of the control circuit, or shutdown of one compressor (e.g., for service), does not interrupt automatic operation of the standby compressor
- (3) An automatic restart function such that the compressor(s) will restart after power interruption without manual intervention
- (4) Where components are common to more than one control circuit (e.g., autodrain), the common device shall be provided with electrical protection to prevent loss of the control circuit(s) in the event of short circuit in the device

N (E) Electrical installation and wiring shall conform to the requirements of *NFPA 70*.

N (F) Emergency electrical service for the compressors shall conform to the requirements of the essential electrical system, as described in Chapter 6.

5.1.13.4 Valves. Requirements for support gas valves shall be in accordance with 5.1.4.1.1 through 5.1.4.8.

5.1.13.5 Outlets. Requirements for support gas outlets shall be in accordance with 5.1.5.1, 5.1.5.2, 5.1.5.4 through 5.1.5.8, 5.1.5.11, and 5.1.5.13 through 5.1.5.15.

5.1.13.6 Manufactured Assemblies. Requirements for support gases in manufactured assemblies shall be in accordance with 5.1.6.1 through 5.1.6.11.

5.1.13.7 Pressure Indicators. Requirements for support gas pressure indicators shall be in accordance with 5.1.8.1.1 through 5.1.8.1.4, 5.1.8.1.6, and 5.1.8.2.

N 5.1.13.8 Line Pressure Control. Instrument air systems shall be provided with means to control line pressure at the source with at least the following characteristics:

- (1) Able to maintain stable pressures within the limits of Table 5.1.11
- (2) Able to flow 100 percent of the peak calculated demand
- (3) Redundant, such that each component of the control mechanism can be isolated for service or replacement while maintaining normal operation
- (4) Protected against overpressure (*see 5.1.3.5.6*)
- (5) Be constructed of materials deemed suitable for the service by the manufacturer

5.1.13.9 Warning Systems.

5.1.13.9.1 General requirements for support gas warning systems shall be in accordance with 5.1.9.1.

5.1.13.9.2 Master alarm requirements for support gas shall be in accordance with 5.1.9.2.

5.1.13.9.3 Area alarm requirements for support gas shall be in accordance with 5.1.9.4.

5.1.13.9.4 Local alarm requirements for support gas shall be in accordance with 5.1.9.5.

5.1.13.10 Distribution. Requirements for support gas piping distribution shall be in accordance with 5.1.10.1, 5.1.10.3, 5.1.10.4, 5.1.10.4.1 through 5.1.10.4.6, 5.1.10.9, 5.1.10.9(1), 5.1.10.9(2), 5.1.10.9(3), and 5.1.10.11.

5.1.13.11 Labeling and Identification. Requirements for support gas labeling shall be in accordance with 5.1.11.1 through 5.1.11.4.

5.1.13.12 Performance Testing. Requirements for support gas performance testing shall be in accordance with 5.1.12, with the following exceptions:

- (1) The piping purity test (*see 5.1.12.4.8*) shall be permitted to be omitted.
- (2) The medical gas concentration test (*see 5.1.12.4.11*) shall be permitted to be omitted.

5.1.14* Category 1 Operation and Management.

5.1.14.1 Special Precautions — Patient Gas, Vacuum, WAGD, and Medical Support Gas Systems.

5.1.14.1.1* Piping systems shall not be used for the distribution of flammable anesthetic gases.

5.1.14.1.2 Piping systems shall not be used as a grounding electrode.

5.1.14.1.3* Liquid or debris shall not be introduced into the medical–surgical vacuum or WAGD systems for disposal.

5.1.14.1.4* The medical–surgical vacuum and WAGD systems shall not be used for nonmedical applications (e.g., vacuum steam condensate return).

5.1.14.2 Maintenance of Medical Gas, Vacuum, WAGD, and Medical Support Gas Systems.

5.1.14.2.1* General. Health care facilities with installed medical gas, vacuum, WAGD, or medical support gas systems, or combinations thereof, shall develop and document periodic maintenance programs for these systems and their subcomponents as appropriate to the equipment installed.

5.1.14.2.2 Maintenance Programs.

5.1.14.2.2.1 Inventories. Inventories of medical gas, vacuum, WAGD, and medical support gas systems shall include at least all source subsystems, control valves, alarms, manufactured assemblies containing patient gases, and outlets.

5.1.14.2.2.2* Inspection Schedules. Scheduled inspections for equipment and procedures shall be established through the risk assessment of the facility and developed with consideration of the original equipment manufacturer recommendations and other recommendations as required by the authority having jurisdiction.

5.1.14.2.2.3 Inspection Procedures. The facility shall be permitted to use any inspection procedure(s) or testing methods established through its own risk assessment.

5.1.14.2.2.4 Maintenance Schedules. Scheduled maintenance for equipment and procedures shall be established through the risk assessment of the facility and developed with consideration of the original equipment manufacturer recommendations and other recommendations as required by the authority having jurisdiction.

5.1.14.2.2.5 Qualifications.

(A) Persons maintaining these systems shall be qualified to perform these operations.

(B) Appropriate qualification shall be demonstrated by any of the following:

- (1) A documented training program acceptable to the health care facility by which such persons are employed or contracted to work with specific equipment as installed in that facility
- (2) Credentialing to the requirements of ASSE 6040, *Professional Qualification Standard for Medical Gas Maintenance Personnel*, and technically competent on the specific equipment as installed in that facility.
- (3) Credentialing to the requirements of ASSE 6030, *Professional Qualification Standard for Medical Gas Systems Verifiers*, and technically competent on the specific equipment as installed in that facility.

5.1.14.2.3* Inspection and Testing Operations.

5.1.14.2.3.1 Manufactured Assemblies Employing Flexible Connection(s) Between the User Terminal and the Piping System.

(A) Nonstationary booms and articulating assemblies, other than head walls utilizing flexible connectors, shall be tested for

leaks, per manufacturer's recommendations, every 18 months or at a duration as determined by a risk assessment.

(B) The system pressure to nonstationary booms and articulating arms shall be maintained at operating pressure until each joint has been examined for leakage by effective means of leak detection that is safe for use with oxygen.

(C) Safe working condition of the flexible assemblies shall be confirmed.

(D) D.I.S.S. connectors internal to the boom and assemblies shall be checked for leakage.

(E) Leaks, if any, shall be repaired (if permitted), or the components replaced (if required), and the equipment retested prior to placing the equipment back into service.

(F) Additional testing of nonstationary booms or articulating arms shall be performed at intervals defined by documented performance data.

5.1.14.3 Medical Gas and Vacuum Systems Information and Warning Signs.

5.1.14.3.1 The gas content of medical gas and vacuum piping systems shall be labeled in accordance with 5.1.11.1.

5.1.14.3.2 Labels for shutoff valves shall be in accordance with 5.1.11.2 and updated when modifications are made changing the areas served.

5.1.14.3.3 Station inlets and outlets shall be identified in accordance with 5.1.11.3.

5.1.14.3.4 Alarm panel labeling shall be in accordance with 5.1.11.4 and updated when modifications are made changing the areas served.

N 5.1.14.4 Source equipment labeling shall be in accordance with 5.1.11.5.

5.1.14.5 Medical Gas and Vacuum Systems Maintenance and Record Keeping.

5.1.14.5.1 Permanent records of all tests required by 5.1.12.4.1 through 5.1.12.4.14 shall be maintained in the organization's files.

5.1.14.5.2 The supplier of the bulk cryogenic liquid system shall, upon request, provide documentation of vaporizer(s) sizing criteria to the facility.

5.1.14.5.3 An annual review of bulk system capacity shall be conducted to ensure the source system has sufficient capacity.

5.1.14.5.4 Central supply systems for nonflammable medical gases shall conform to the following:

- (1) They shall be inspected annually.
- (2) They shall be maintained by a qualified representative of the equipment owner.
- (3) A record of the annual inspection shall be available for review by the authority having jurisdiction.

5.1.14.5.5 A periodic testing procedure for nonflammable medical gas and vacuum and related alarm systems shall be implemented.

5.1.14.5.6 Whenever modifications are made that breach the pipeline, any necessary installer and verification test specified in 5.1.12 shall be conducted on the downstream portions of the medical gas piping system.

5.1.14.5.7 Procedures, as specified, shall be established for the following:

- (1) Maintenance program for the medical air compressor supply system in accordance with the manufacturer's recommendations
- (2) Facility testing and calibration procedure that ensures carbon monoxide monitors are calibrated at least annually or more often if recommended by the manufacturer
- (3) Maintenance program for both the medical-surgical vacuum piping system and the secondary equipment attached to medical-surgical vacuum station inlets to ensure the continued good performance of the entire medical-surgical vacuum system
- (4) Maintenance program for the WAGD system to ensure performance
- (5) Facility testing and calibration procedure that ensures that oxygen concentration monitors are calibrated at least every three months, or more often if recommended by the manufacturer
- (6) Where oxygen sources include concentrator units, maintenance programs for the oxygen concentrator units and all essential subcomponents

5.1.14.5.8 Audible and visual alarm indicators shall meet the following requirements:

- (1) They shall be periodically tested to determine that they are functioning properly.
- (2) Records of the test shall be maintained until the next test is performed.

5.1.14.5.9 Medical-surgical vacuum station inlet terminal performance, as required in 5.1.12.4.10.4, shall be tested as follows:

- (1) On a regular preventive maintenance schedule as determined by the facility maintenance staff
- (2) Based on flow of free air (NI/min or SCFM) into a station inlet while simultaneously checking the vacuum level

5.1.14.5.10 Where oxygen central supply systems using concentrators are used and one or more of the three sources is a cylinder header, the facility shall establish procedures to ensure the facility is always provided with one average day's supply of oxygen meeting the supply system product purity specification in reserve, as follows:

- (1) The facility shall establish a minimum cylinder pressure that will permit one average day's supply. That value will be included as part of the standard operating procedure for the oxygen supply system.
- (2) The cylinders shall be inspected daily and any loss of pressure noted.
- (3) When the cylinders are found to have lost pressure due to use or leakage and thus are below the pre-established pressure, the cylinders shall be exchanged.

5.2 Category 2 Piped Gas and Vacuum Systems.

5.2.1* Applicability.

5.2.1.1 These requirements shall apply to health care facilities that qualify for Category 2 systems as referenced in Chapter 4.

5.2.1.2 Category 2 piped gas or piped vacuum system requirements shall be permitted when all of the following criteria are met:

- (1) Only moderate sedation; minimal sedation, as defined in 3.3.66.3 and 3.3.66.4; or no sedation is performed. Deep sedation and general anesthesia shall not be permitted.
- (2) The loss of the piped gas or piped vacuum systems is likely to cause minor injury to patients, staff, or visitors.
- (3) The facility piped gas or piped vacuum systems are intended for Category 2 patient care space per 3.3.136.2.

5.2.1.3 The following subsections of this chapter shall apply to the operation, management, and maintenance of Category 2 medical gas and vacuum systems in both new and existing health care facilities:

- (1) 5.1.3.6.2
- (2) 5.1.3.8.4.2
- (3) 5.1.10.11.7.1
- (4) 5.2.3.1
- (5) 5.2.3.2
- (6) 5.2.3.3
- (7) 5.2.3.5(2)
- (8) 5.2.3.7(2)
- (9) 5.2.3.8(2)
- (10) 5.2.13
- (11) 5.2.14

5.2.2 Nature of Hazards of Gas and Vacuum Systems. The requirement of 5.1.2 shall apply to the nature of hazards of gas and vacuum systems.

5.2.3 Category 2 Sources.

5.2.3.1 Central Supply System Identification and Labeling. Category 2 systems shall comply with 5.1.3.1.

5.2.3.2 Central Supply Operations. Category 2 systems shall comply with 5.1.3.2.

5.2.3.3 Central Supply System Locations. Category 2 systems shall comply with 5.1.3.3.

5.2.3.4 Central Supply Systems. Category 2 systems shall comply with 5.1.3.5.

5.2.3.5 Category 2 Medical Air Supply Systems. Category 2 systems shall comply with 5.1.3.6, except as follows:

- (1) Medical air compressors, dryers, aftercoolers, filters, and regulators shall be permitted to be simplex.
- (2) The facility staff shall develop their emergency plan to deal with the loss of medical air.

5.2.3.6 Oxygen supply systems using concentrators shall be permitted to consist of two sources, one of which shall be a cylinder header with sufficient cylinder connections for one average day's supply.

5.2.3.7 Category 2 Medical-Surgical Vacuum. Category 2 systems shall comply with 5.1.3.7, except as follows:

- (1) Medical-surgical vacuum systems shall be permitted to be simplex.
- (2) The facility staff shall develop their emergency plan to deal with the loss of medical-surgical vacuum.

5.2.3.8 Category 2 WAGD. Category 2 systems shall comply with 5.1.3.8, except as follows:

- (1) Medical WAGD pumps shall be permitted to be simplex.
- (2) The facility staff shall develop their emergency plan to deal with the loss of WAGD.

5.2.3.9 Instrument Air Supply Systems. Category 2 systems shall comply with 5.1.13.3.4.

5.2.4 Valves. Category 2 systems shall comply with 5.1.4.

5.2.5 Station Outlets and Inlets. Category 2 systems shall comply with 5.1.5.

5.2.6 Manufactured Assemblies. Category 2 systems shall comply with 5.1.6.

5.2.7 Surface-Mounted Medical Gas Rails. Category 2 systems shall comply with 5.1.7.

5.2.8 Pressure and Vacuum Indicators. Category 2 systems shall comply with 5.1.8.

5.2.9 Warning Systems (Category 2). Warning systems associated with Category 2 systems shall provide the master, area, and local alarm functions of a Category 1 system as required in 5.1.9, except as follows:

- (1) Warning systems shall be permitted to be a single alarm panel.
- (2) The alarm panel shall be located in an area of continuous surveillance while the facility is in operation.
- (3) Pressure and vacuum switches/sensors shall be mounted at the source equipment with a pressure indicator at the master alarm panel.

5.2.10 Category 2 Distribution. Level 2 systems shall comply with 5.1.10.

5.2.11 Labeling and Identification. Category 2 systems shall comply with 5.1.11.

5.2.12 Performance Criteria and Testing — Category 2 (Gas, Medical–Surgical Vacuum, and WAGD). Category 2 systems shall comply with 5.1.12.

5.2.13 Category 2 Support Gases. Category 2 systems shall comply with 5.1.13.

5.2.14* Category 2 Operation and Management. Category 2 systems shall comply with 5.1.14.

• **5.3 Category 3 Piped Gas and Vacuum Systems.**

5.3.1 Applicability.

5.3.1.1 These requirements shall apply to health care facilities that require Category 3 systems as referenced in Chapter 4.

5.3.1.2 Category 3 piped gas and vacuum systems shall be permitted when all of the following criteria are met:

- (1) Only moderate sedation; minimal sedation, as defined in 3.3.66.3 and 3.3.66.4; or no sedation is performed. Deep sedation and general anesthesia are not performed.
- (2) The loss of the piped gas and vacuum systems is not likely to cause injury to patients, staff, or visitors but can cause discomfort.
- (3) The facility piped gas and vacuum systems are intended for Category 3 or Category 4 patient care rooms per 3.3.136.3 and 3.3.136.4.

5.3.1.3 The following sections of this chapter shall apply to the operation, management, and maintenance of the medical gas and vacuum systems in both new and existing health care facilities:

- (1) 5.1.3.6.2
- (2) 5.1.3.8.4.2
- (3) 5.1.10.11.7.1
- (4) 5.3.3.1
- (5) 5.3.3.2
- (6) 5.3.3.3
- (7) 5.3.3.5(2)
- (8) 5.3.3.7(2)
- (9) 5.3.3.8(2)
- (10) 5.3.14

5.3.2 Nature of Hazards of Gas and Vacuum Systems. The requirement of 5.1.2 shall apply to the nature of hazards of gas and vacuum systems.

5.3.3 Category 3 Sources.

5.3.3.1 Central Supply System Identification and Labeling. Category 3 systems shall comply with 5.1.3.1.

5.3.3.2 Central Supply Operations. Category 3 systems shall comply with 5.1.3.2.

5.3.3.3 Central Supply System Locations. Category 3 systems shall comply with 5.1.3.3.

5.3.3.4 Central Supply Systems. Category 3 systems shall comply with 5.1.3.5.

5.3.3.5 Medical Air Supply Systems. Category 3 systems shall comply with 5.1.3.6, except as follows:

- (1) Medical air compressors, dryers, aftercoolers, filters, and regulators shall be permitted to be simplex.
- (2) The facility staff shall develop their emergency plan to deal with the loss of medical air.

5.3.3.6 Oxygen Central Supply Systems Using Concentrators. Category 3 oxygen supply systems using concentrators shall be permitted to consist of two sources, one of which shall be a cylinder header with sufficient cylinder connections for one average day's supply.

5.3.3.7 Medical–Surgical Vacuum. Category 3 systems shall comply with 5.1.3.7, except as follows:

- (1) Medical–surgical vacuum systems shall be permitted to be simplex.
- (2) The facility staff shall develop their emergency plan to deal with the loss of medical–surgical vacuum.

5.3.3.8 WAGD. Category 3 systems shall comply with 5.1.3.8, except as follows:

- (1) Medical WAGD pumps shall be permitted to be simplex.
- (2) The facility staff shall develop their emergency plan to deal with the loss of WAGD.

5.3.3.9 Instrument Air Supply Systems. Category 3 systems shall comply with 5.1.13.3.4.

5.3.4 Valves. Category 3 systems shall comply with 5.1.4.

5.3.5 Station Outlets and Inlets. Category 3 systems shall comply with 5.1.5.

5.3.6 Manufactured Assemblies. Category 3 systems shall comply with 5.1.6.

N 5.3.7 Surface-Mounted Medical Gas Rails. Category 3 systems shall comply with 5.1.7.

N 5.3.8 Pressure and Vacuum Indicators. Category 3 systems shall comply with 5.1.8.

N 5.3.9 Warning Systems. Warning systems associated with Category 3 systems shall provide the master, area, and local alarm functions of a Category 1 system as required in 5.1.9, except as follows:

- (1) Warning systems shall be permitted to be a single alarm panel.
- (2) The alarm panel shall be located in an area of continuous surveillance while the facility is in operation.
- (3) Pressure and vacuum switches/sensors shall be mounted at the source equipment with a pressure indicator at the master alarm panel.

N 5.3.10 Distribution. Category 3 systems shall comply with 5.1.10.

N 5.3.11 Labeling and Identification. Category 3 systems shall comply with 5.1.11.

N 5.3.12 Performance Criteria and Testing — Gas, Medical-Surgical Vacuum, and WAGD. Category 3 systems shall comply with 5.1.12.

N 5.3.13 Support Gases. Category 3 systems shall comply with 5.1.13.

N 5.3.14 Operation and Management. Category 3 systems shall comply with 5.1.14.

Chapter 6 Electrical Systems

Δ 6.1* Applicability.

Δ 6.1.1 Electrical Installation. Installation shall be in accordance with *NFPA 70*.

Δ 6.1.2 This chapter shall apply to new health care facilities as specified in Section 1.3.

Δ 6.1.3 The following paragraphs shall apply to new and existing health care facilities:

- (1) 6.3.2.2.1
- (2) 6.3.2.3.6(B)(2) and 6.3.2.3.6(B)(3)
- (3) 6.3.2.3.8
- (4) 6.3.2.6.5
- (5) 6.3.2.8.5
- (6) 6.3.3.2.5 through 6.3.3.2.7
- (7) 6.3.3.3.3 and 6.3.3.3.4
- (8) 6.3.4
- (9) 6.7.1.2.15.9
- (10) 6.7.2.3.5(B)
- (11) 6.7.2.3.6
- (12) 6.7.4

Δ 6.1.4 Paragraph 6.3.2.5.1.3 shall apply only to existing facilities.

Δ 6.2 Nature of Hazards.

Δ 6.2.1* Fire and Explosions.

Δ 6.2.2 Shock. (Reserved)

Δ 6.2.3 Thermal. (Reserved)

Δ 6.2.4* Location of Essential Electrical System Components.

Δ 6.2.4.1 Essential electrical system components shall be located to minimize interruptions caused by natural forces common to the area (e.g., storms, floods, earthquakes, or hazards created by adjoining structures or activities).

Δ 6.2.4.2 Installations of electrical services shall be located to reduce possible interruption of normal electrical services resulting from similar causes as well as possible disruption of normal electrical service due to internal wiring and equipment failures.

Δ 6.2.4.3 Feeders shall be located to provide physical separation of the feeders of the alternate source and from the feeders of the normal electrical source to prevent possible simultaneous interruption.

Δ 6.3 General.

Δ 6.3.1 Sources. Each health care appliance requiring electrical line power for operation shall be supported by power sources that provide power adequate for each service.

Δ 6.3.1.1 Power/Utility Company. (Reserved)

Δ 6.3.1.2 On-Site Generator Set. (Reserved)

Δ 6.3.2 Distribution.

Δ 6.3.2.1* Distribution system arrangements shall be designed to minimize interruptions to the electrical systems due to internal failures by the use of adequately rated equipment.

Δ 6.3.2.2 Receptacles.

Δ 6.3.2.2.1* Types of Receptacles.

Δ (A) Each receptacle shall provide at least one separate, grounding terminal capable of maintaining low-contact resistance with its mating plug, despite severe electrical and mechanical use of the receptacle. The grounding terminal of each receptacle shall be connected to the reference grounding point by means of an insulated copper equipment grounding conductor.

Δ (B) Special receptacles, such as the following, shall be permitted:

- (1) Four-pole units providing an extra pole for redundant grounding or ground continuity monitoring
- (2) Locking-type receptacles

Δ (C) All non-locking-type, 125-volt, 15- or 20-ampere single, duplex, or quadruplex type receptacles, or any combination thereof, located in operating rooms and at patient bed locations in Category 1 spaces shall be listed and identified as hospital grade.

Δ (D) Receptacles that are located within patient rooms, bathrooms, playrooms, and activity rooms of pediatric units or spaces with similar risk as determined by the health care facility's governing body by conducting a risk assessment, other than infant nurseries, shall be listed and identified as "tamper resistant" or shall employ a listed tamper-resistant cover.

- Δ 6.3.2.2.2 Minimum Number of Receptacles.** The number of receptacles shall be determined by the intended use of the spaces in accordance with 6.3.2.2.2(A) through 6.3.2.2.2(E).
- Δ (A) Receptacles Serving Patient Bed Locations in Category 2 Spaces.** Each patient bed location shall be provided with a minimum of eight non-locking-type, 125-volt, 15- or 20-ampere receptacles. They shall be permitted to be of the single, duplex, or quadruplex type, or any combination of the three. Other receptacles (e.g., portable X-ray receptacles) serving special-purpose, cord-and-plug-connected equipment shall be permitted to be of the locking or non-locking-type.
- Δ (B) Receptacles Serving Patient Bed Locations in Category 1 Spaces Other than Operating Rooms.** Each patient bed location shall be provided with a minimum of 14 non-locking-type, 125-volt, 15- or 20-ampere receptacles. They shall be permitted to be of the single, duplex, or quadruplex type, or any combination of the three. Other receptacles (e.g., portable X-ray receptacles) serving special-purpose, cord-and-plug-connected equipment shall be permitted to be of the locking or non-locking-type.
- Δ (C) Receptacles in Operating Rooms.** Each operating rooms shall be provided with a minimum of 36 125-volt, 15- or 20-ampere receptacles, at least 12 of which shall be connected to either the normal branch circuit or a critical branch circuit supplied by a different transfer switch other than the receptacles at the same location. They shall be permitted to be of the single, duplex, or quadruplex type, or any combination of the three. Other receptacles (e.g., portable X-ray receptacles) serving special-purpose, cord-and-plug-connected equipment shall be permitted to be of the locking or non-locking-type.
- Δ (D) Receptacles in Bathrooms or Toilet Rooms.** Receptacles shall not be required in bathrooms or toilet rooms.
- Δ (E) Receptacles for Special Rooms.** Receptacles shall not be required in rooms where medical requirements mandate otherwise (e.g., certain psychiatric, pediatric, or hydrotherapy rooms).
- Δ 6.3.2.2.3 Polarity of Receptacles.** Each receptacle shall be wired in accordance with *NFPA 70* to ensure correct polarity.
- Δ 6.3.2.2.4 Other Services Receptacles.** Receptacles provided for other services having different voltages, frequencies, or types on the same premises shall be of such design that attachment plugs and caps used in such receptacles cannot be connected to circuits of a different voltage, frequency, or type, but shall be interchangeable within each classification and rating required for two-wire, 125-V, single-phase ac service.
- Δ 6.3.2.2.5* Use of Isolated Ground Receptacles.**
- Δ (A)** An isolated ground receptacle, if used, shall not defeat the purposes of the safety features of the grounding systems detailed in 6.3.2.8.4.
- Δ (B)** An isolated ground receptacle shall not be installed within a patient care vicinity.
- Δ (C)** Isolated grounding receptacles installed in branch circuits for patient care spaces shall be connected to an insulated equipment grounding conductor in accordance with 250.146(D) of *NFPA 70* in addition to the two equipment grounding conductor paths required in 6.3.2.5.1.4.
- Δ (D)** The equipment grounding conductor installed for isolated grounding receptacles in patient care areas shall be clearly identified using green insulation with one or more yellow stripes along its entire length.
- Δ 6.3.2.2.6 Special-Purpose Outlets.** Branch circuits serving only special-purpose outlets or receptacles (e.g., portable X-ray receptacles) shall not be required to conform to the requirements of 6.4.3.
- Δ 6.3.2.2.7* Clinical Laboratories.** Outlets with two to four receptacles, or an equivalent multioutlet assembly, shall be installed every 0.5 m to 1.0 m (1.6 ft to 3.3 ft) in instrument usage areas, and either installation shall be at least 80 mm (3.15 in.) above the countertop.
- Δ 6.3.2.3 Wet Procedure Locations.**
- Δ 6.3.2.3.1*** Wet procedure locations shall be provided with special protection against electric shock.
- Δ 6.3.2.3.2** This special protection shall be provided as follows:
- (1) Power distribution system that inherently limits the possible ground-fault current due to a first fault to a low value, without interrupting the power supply
 - (2) Power distribution system in which the power supply is interrupted if the ground-fault current does, in fact, exceed the trip value of a Class A GFCI
- Δ 6.3.2.3.3** Patient beds, toilets, bidets, and wash basins shall not be required to be considered wet procedure locations.
- Δ 6.3.2.3.4*** Operating rooms shall be considered to be a wet procedure location, unless a risk assessment conducted by the health care governing body determines otherwise.
- Δ 6.3.2.3.5** If the risk assessment conducted by the health care facility's governing body, as defined in Chapter 3, determines that the operating room is not a wet procedure location, then the special protection of 6.3.2.3 shall not be required.
- Δ 6.3.2.3.6** In existing construction, the requirements of 6.3.2.3.1 shall not be required when a written inspection procedure, acceptable to the authority having jurisdiction, is performed by a designated individual at the hospital to indicate that equipment grounding conductors for 120-V, single-phase, 15-A and 20-A receptacles; equipment connected by cord and plug; and fixed electrical equipment are installed and maintained in accordance with *NFPA 70*, the applicable performance requirements of this chapter, and Chapter 10 of this code.
- Δ (A)** The procedure shall include electrical continuity tests of all required equipment, grounding conductors, and their connections.
- Δ (B)** Fixed receptacles, equipment connected by cord and plug, and fixed electrical equipment shall be tested as follows:
- (1) When first installed
 - (2) Where there is evidence of damage
 - (3) After any repairs
- Δ 6.3.2.3.7** The use of an isolated power system (IPS) shall be permitted as a protective means capable of limiting ground-fault current without power interruption. When installed, such a power system shall conform to the requirements of 6.3.2.9.

- ▲ **6.3.2.3.8*** Operating rooms defined as wet procedure locations shall be protected by either isolated power or ground-fault circuit interrupters.
- ▲ **6.3.2.3.9** Where GFCI protection is used in an operating room, one of the following shall apply:
- (1) Each receptacle shall be an individual GFCI device.
 - (2) Each receptacle shall be individually protected by a single GFCI device.
- ▲ **6.3.2.4* Circuits.**
- ▲ **6.3.2.4.1** Normal branch circuits serving a patient bed location shall be fed from not more than one normal branch-circuit distribution panel.
- ▲ **6.3.2.4.2** Branch circuits serving a patient bed location shall be permitted to be fed from more than one critical branch-circuit distribution panel.
- ▲ **6.3.2.4.3** Only authorized personnel shall have access to over-current protective devices serving Category 1 and Category 2 spaces.
- ▲ **6.3.2.4.4** Overcurrent protective devices serving Category 1 and Category 2 spaces shall not be permitted to be located in public access spaces.
- ▲ **6.3.2.4.5** Where used in locations such as in Category 1 spaces, isolated power panels shall be permitted in those locations.
- ▲ **6.3.2.4.6** Low-voltage wiring shall comply with either of the following:
- (1) Fixed systems of 30 V (dc or ac rms) or less shall be permitted to be ungrounded, provided that the insulation between each ungrounded conductor and the primary circuit, which is supplied from a conventionally grounded distribution system, is the same protection as required for the primary voltage.
 - (2) A grounded low-voltage system shall be permitted, provided that load currents are not carried in the grounding conductors.
- ▲ **6.3.2.5 Grounding.**
- ▲ **6.3.2.5.1** Grounding requirements shall comply with the requirements in 6.3.2.5.1.1 through 6.3.2.5.1.5.
- ▲ **6.3.2.5.1.1 Grounding Circuitry Integrity.** Grounding circuits and conductors in patient care spaces shall be installed in such a way that the continuity of other parts of those circuits cannot be interrupted nor the resistance raised above an acceptable level by the installation, removal, and replacement of any installed equipment, including power receptacles.
- ▲ **6.3.2.5.1.2 Reliability of Grounding.** The equipment grounding conductors shall conform to *NFPA 70*. Branch circuits serving electrical equipment within the patient care vicinity shall be provided with effective ground-fault current paths dual-fed by a wiring method that qualifies as an equipment grounding conductor and by an insulated copper equipment grounding conductor.
- ▲ **6.3.2.5.1.3 Separate Grounding Conductor.** When existing construction does not have a separate grounding conductor, the continued use of the system shall be permitted, provided that it meets the performance requirements in 6.3.3.1.
- ▲ **6.3.2.5.1.4 Grounding of Receptacles and Fixed Electrical Equipment in Patient Care Spaces.**
- ▲ **(A) Wiring Methods.** All branch circuits serving patient care spaces shall be provided with an effective ground-fault current path by installation in a metal raceway system, or a cable having a metallic armor or sheath assembly. The metal raceway system, or metallic cable armor, or sheath assembly shall itself qualify as an equipment grounding conductor.
- ▲ **(B) Insulated Equipment Grounding Conductors and Insulated Equipment Bonding Jumpers.** The following shall be directly connected to an insulated copper equipment grounding conductor that is clearly identified along its entire length by green insulation, with no yellow stripes, and installed with the branch circuit conductors in the wiring methods as provided in 6.3.2.5.1.4(A):
- (1) The grounding terminals of all receptacles other than isolated ground receptacles.
 - (2) Where receptacles are mounted in metal receptacle outlet boxes, metal device boxes, or metal enclosures, the performance of the connection between the receptacle grounding terminal and the metal box or enclosure shall be equivalent to the performance provided by copper wire sized in accordance with 250.146 and Table 250.122 of *NFPA 70*, but no smaller than 12 AWG.
 - (3) All non-current-carrying conductive surfaces of fixed electrical equipment likely to become energized and subject to personal contact, operating at over 100 volts.
 - (4) Metal faceplates, which shall be connected to the equipment grounding conductor by means of a metal mounting screw(s) securing the faceplate to a grounded outlet box or grounded wiring device.
 - (5) Luminaires more than 2.3 m (7½ ft) above the floor and switches located outside of the patient care vicinity, which shall be permitted to be connected to an equipment grounding return path complying with 6.3.2.5.1.4(A) and 6.3.2.5.1.4(B).
- ▲ **6.3.2.5.1.5* Grounding Interconnects.** In patient care spaces supplied by the normal distribution system and any branch of the essential electrical system, the grounding system of the normal distribution system and that of the essential electrical system shall be interconnected.
- ▲ **6.3.2.5.2 Patient Equipment Grounding Point.** A patient equipment grounding point comprising one or more grounding terminals or jacks shall be permitted in an accessible location in the patient care vicinity.
- ▲ **6.3.2.5.3* Special Grounding in Patient Care Rooms.** In addition to the grounding required to meet the performance requirements of 6.3.3.1, additional grounding shall be permitted where special circumstances so dictate.
- ▲ **6.3.2.6 Battery-Powered Lighting Units.**
- ▲ **6.3.2.6.1** One or more battery-powered lighting units shall be provided within locations where deep sedation and general anesthesia is administered.
- ▲ **6.3.2.6.2** The lighting level of each unit shall be sufficient to terminate procedures intended to be performed within the operating room.
- ▲ **6.3.2.6.3** The sensor for units shall be wired to the unswitched portion of branch circuit(s) serving general lighting within the room.

▲ **6.3.2.6.4** Units shall be capable of providing lighting for 1½ hours.

▲ **6.3.2.6.5** Units shall be tested monthly for 30 seconds, and annually for 30 minutes.

▲ **6.3.2.7 Other Non-Patient Care Areas. (Reserved)**

▲ **6.3.2.8 Ground Fault Protection.**

▲ **6.3.2.8.1 Applicability.** The requirements of 6.3.2.8.2 shall apply to health care facilities housing Category 1 spaces or utilizing life-support equipment and buildings that provide essential utilities or services for the operation of Category 1 spaces or electrical life-support equipment.

▲ **6.3.2.8.2** Where ground-fault protection is provided for operation of the service or feeder disconnecting means, an additional step of ground-fault protection shall be provided in the next level of feeder downstream toward the load.

▲ **6.3.2.8.3** Ground-fault protection for operation of the service and feeder disconnecting means shall be fully selective such that the downstream device and not the upstream device shall open for downstream ground faults.

▲ **6.3.2.8.4* Equipment Protection.** The main and downstream ground-fault protective devices (where required) shall be coordinated as required in 6.3.2.8.

▲ **6.3.2.8.5 Personnel Protection.** If used, ground-fault circuit interrupters (GFCIs) shall be listed.

▲ **6.3.2.9* Isolated Power Systems.**

▲ **6.3.2.9.1 Isolation Transformer.** An isolated power system shall not be required to be installed in any patient care space, except as specified in 6.3.2.3.

▲ **6.3.2.9.1.1** The isolation transformer shall be listed and approved for the purpose.

▲ **6.3.2.9.1.2** The primary winding shall be connected to a power source so that it is not energized with more than 600 V (nominal).

▲ **(A)** If present, the neutral of the primary winding shall be grounded in an approved manner.

▲ **(B)** If an electrostatic shield is present, it shall be connected to the reference grounding point.

▲ **6.3.2.9.1.3** Wiring of isolated power systems shall be in accordance with 517.160 of *NFPA 70*.

▲ **6.3.2.9.2 Impedance of Isolated Wiring.**

▲ **6.3.2.9.2.1*** The impedance (capacitive and resistive) to ground of either conductor of an isolated system shall exceed 200,000 ohms when installed. The installation at this point shall include receptacles but is not required to include lighting fixtures or components of fixtures. This value shall be determined by energizing the system and connecting a low-impedance ac milliammeter (0 to 1 mA scale) between the reference grounding point and either conductor in sequence. This test shall be permitted to be performed with the line isolation monitor (*see 6.3.2.9.3.1*) connected, provided that the connection between the line isolation monitor and the reference grounding point is open at the time of the test. After the test is made, the milliammeter shall be removed and the grounding connection of the line isolation monitor shall be

restored. When the installation is completed, including permanently connected fixtures, the reading of the meter on the line isolation monitor, which corresponds to the unloaded line condition, shall be made. This meter reading shall be recorded as a reference for subsequent line impedance evaluation. This test shall be conducted with no phase conductors grounded.

▲ **6.3.2.9.2.2** An approved capacitance suppressor shall be permitted to be used to improve the impedance of the permanently installed isolated system; however, the resistive impedance to ground of each isolated conductor of the system shall be at least 1 megohm prior to the connection of the suppression equipment. Capacitance suppressors shall be installed so as to prevent inadvertent disconnection during normal use.

▲ **6.3.2.9.3 Line Isolation Monitor.**

▲ **6.3.2.9.3.1*** In addition to the usual control and protective devices, each isolated power system shall be provided with an approved, continually operating line isolation monitor that indicates possible leakage or fault currents from either isolated conductor to ground.

▲ **6.3.2.9.3.2** The monitor shall be designed such that a green signal lamp, conspicuously visible in the area where the line isolation monitor is utilized, remains lighted when the system is adequately isolated from ground; and an adjacent red signal lamp and an audible warning signal (remote if desired) shall be energized when the total hazard current (consisting of possible resistive and capacitive leakage currents) from either isolated conductor to ground reaches a threshold value of 5.0 mA under normal line voltage conditions. The line isolation monitor shall not alarm for a fault hazard current of less than 3.7 mA.

▲ **6.3.2.9.3.3*** The line isolation monitor shall comply with either of the following:

- (1) It shall have sufficient internal impedance such that, when properly connected to the isolated system, the maximum internal current that will flow through the line isolation monitor, when any point of the isolated system is grounded, shall be 1 mA.
- (2) It shall be permitted to be of the low-impedance type such that the current through the line isolation monitor, when any point of the isolated system is grounded, will not exceed twice the alarm threshold value for a period not exceeding 5 milliseconds.

▲ **6.3.2.9.3.4*** An ammeter connected to indicate the total hazard current of the system (contribution of the fault hazard current plus monitor hazard current) shall be mounted in a plainly visible place on the line isolation monitor with the "alarm on" zone (total hazard current = 5.0 mA) at approximately the center of the scale. A line isolation monitor shall be located in the operating room.

▲ **6.3.2.9.3.5** Means shall be provided for shutting off the audible alarm while leaving the red warning lamp activated. When the fault is corrected and the green signal lamp is reactivated, the audible alarm-silencing circuit shall reset automatically, or an audible or distinctive visual signal shall indicate that the audible alarm is silenced.

▲ **6.3.2.9.3.6** A reliable test switch shall be mounted on the line isolation monitor to test its capability to operate (i.e., cause the alarms to operate and the meter to indicate in the "alarm on" zone). This switch shall transfer the grounding connection of

the line isolation monitor from the reference grounding point to a test impedance arrangement connected across the isolated line; the test impedance(s) shall be of the appropriate magnitude to produce a meter reading corresponding to the rated total hazard current at the nominal line voltage, or to a lesser alarm hazard current if the line isolation monitor is so rated. The operation of this switch shall break the grounding connection of the line isolation monitor to the reference grounding point before transferring this grounding connector to the test impedance(s), so that making this test will not add to the hazard of a system in actual use; nor will the test include the effect of the line-to-ground stray impedance of the system. The test switch shall be of a self-restoring type.

▲ **6.3.2.9.3.7** The line isolation monitor shall not generate energy of sufficient amplitude or frequency, as measured by a physiological monitor with a gain of at least 104 with a source impedance of 1000 ohms connected to the balanced differential input of the monitor, to create interference or artifact on human physiological signals. The output voltage from the amplifier shall not exceed 30 mV when the gain is 104. The impedance of 1000 ohms shall be connected to the ends of typical unshielded electrode leads that are a normal part of the cable assembly furnished with physiological monitors. A 60 Hz notch filter shall be used to reduce ambient interference, as is typical in physiological monitor design.

▲ **6.3.2.9.4 Identification of Conductors for Isolated (Ungrounded) Systems.** The isolated conductors shall be identified in accordance with 517.160(A)(5) of *NFPA 70*.

▲ **6.3.3 Performance Criteria and Testing.**

▲ **6.3.3.1 Grounding System in Patient Care Spaces.**

▲ **6.3.3.1.1* Grounding System Testing.** The effectiveness of the grounding system shall be determined by voltage measurements and impedance measurements.

▲ **6.3.3.1.1.1** For new construction, the effectiveness of the grounding system shall be evaluated before acceptance.

▲ **6.3.3.1.1.2** Small wall-mounted conductive surfaces not likely to become energized, such as surface-mounted towel and soap dispensers, mirrors, and so forth, shall not be required to be intentionally grounded or tested.

▲ **6.3.3.1.1.3** Large metal conductive surfaces not likely to become energized, such as windows, door frames, and drains, shall not be required to be intentionally grounded or periodically tested.

▲ **6.3.3.1.1.4*** Whenever the electrical system has been altered or replaced, that portion of the system shall be tested.

▲ **6.3.3.1.2 Reference Point.** The voltage and impedance measurements shall be taken with respect to a reference point, which shall be one of the following:

- (1) Reference grounding point (*see Chapter 3*)
- (2) Grounding point, in or near the room under test, that is electrically remote from receptacles (e.g., an all-metal cold-water pipe)
- (3) Grounding contact of a receptacle that is powered from a different branch circuit from the receptacle under test.

▲ **6.3.3.1.3* Voltage Measurements.**

▲ **6.3.3.1.3.1** The voltage measurements shall be made under no-fault conditions between a reference point and exposed

fixed electrical equipment with conductive surfaces in a patient care vicinity.

▲ **6.3.3.1.3.2** The voltage measurements shall be made with an accuracy of ± 5 percent.

▲ **6.3.3.1.3.3** Voltage measurements for faceplates of wiring devices shall not be required.

▲ **6.3.3.1.4* Impedance Measurements.** The impedance measurement shall be made with an accuracy of ± 5 percent.

▲ **6.3.3.1.4.1** For new construction, the impedance measurement shall be made between the reference point and the grounding contact of 10 percent of all receptacles within the patient care vicinity.

▲ **6.3.3.1.4.2** The impedance measurement shall be the ratio of voltage developed (either 60 Hz or dc) between the point under test and the reference point to the current applied between these two points.

▲ **6.3.3.1.5 Test Equipment.** Electrical safety test instruments shall be tested periodically, but not less than annually, for acceptable performance.

▲ **6.3.3.1.5.1** Voltage measurements specified in 6.3.3.1.3 shall be made with an instrument having an input resistance of 1000 ohms ± 10 percent at frequencies of 1000 Hz or less.

▲ **6.3.3.1.5.2** The voltage across the terminals (or between any terminal and ground) of resistance-measuring instruments used in occupied patient care rooms shall not exceed 500 mV rms or 1.4 dc or peak to peak.

▲ **6.3.3.1.6 Criteria for Acceptability for New Construction.**

▲ **6.3.3.1.6.1** The voltage limit shall be 20 mV.

▲ **6.3.3.1.6.2** The impedance limit shall be 0.2 ohm for systems containing isolated ground receptacles and 0.1 ohm for all others.

▲ **6.3.3.2 Receptacle Testing in Patient Care Spaces.**

▲ **6.3.3.2.1** The physical integrity of each receptacle shall be confirmed by visual inspection.

▲ **6.3.3.2.2** The continuity of the grounding circuit in each electrical receptacle shall be verified.

▲ **6.3.3.2.3** Correct polarity of the hot and neutral connections in each electrical receptacle shall be confirmed.

▲ **6.3.3.2.4** The retention force of the grounding blade of each electrical receptacle (except locking-type receptacles) shall be not less than 115 g (4 oz).

▲ **6.3.3.2.5** Where hospital-grade receptacles are required at patient bed locations and in locations where deep sedation or general anesthesia is administered, testing shall be performed after initial installation, replacement, or servicing of the device.

▲ **6.3.3.2.6** Additional testing of receptacles in patient care spaces shall be performed at intervals defined by documented performance data.

▲ **6.3.3.2.7** Receptacles not listed as hospital-grade, at patient bed locations and in locations where deep sedation or general anesthesia is administered, shall be tested at intervals not exceeding 12 months.

▲ 6.3.3.3 Isolated Power Systems.

▲ 6.3.3.3.1 **Patient Care Spaces.** If installed, the isolated power system shall be tested in accordance with 6.3.3.3.2.

▲ 6.3.3.3.2 **Line Isolation Monitor Tests.** The line isolation monitor (LIM) circuit shall be tested after installation, and prior to being placed in service, by successively grounding each line of the energized distribution system through a resistor whose value is $200 \times V$ (ohms), where V equals measured line voltage. The visual and audible alarms (*see* 6.3.2.9.3.2) shall be activated.

▲ 6.3.3.3.3 The LIM circuit shall be tested at intervals of not more than 1 month by actuating the LIM test switch (*see* 6.3.2.9.3.6). For a LIM circuit with automated self-test and self-calibration capabilities, this test shall be performed at intervals of not more than 12 months. Actuation of the test switch shall activate both visual and audible alarm indicators.

▲ 6.3.3.3.4 After any repair or renovation to an electrical distribution system, the LIM circuit shall be tested in accordance with 6.3.3.3.2.

▲ 6.3.3.4 **Ground-Fault Protection Testing.** When equipment ground-fault protection is first installed, each level shall be performance-tested to ensure compliance with 6.3.2.8.

▲ 6.3.4 Administration of Electrical System.

▲ 6.3.4.1 Record Keeping.

▲ 6.3.4.1.1* A record shall be maintained of the tests required by this chapter and associated repairs or modification.

▲ 6.3.4.1.2 At a minimum, the record shall contain the date, the rooms or areas tested, and an indication of which items have met, or have failed to meet, the performance requirements of this chapter.

▲ 6.3.4.1.3 **Isolated Power System (Where Installed).** A permanent record shall be kept of the results of each of the tests.

▲ 6.4 Category 1 Spaces.

▲ 6.4.1 Category 1 spaces shall be served by a Type 1 EES.

▲ 6.4.2 Category 1 spaces shall not be served by a Type 2 EES.

▲ 6.4.3 Category 1 spaces shall be served by circuits from a critical branch panel(s) served from a single automatic transfer switch and a minimum of one circuit served by the normal power distribution system or by a system originating from a second critical branch automatic transfer switch.

▲ 6.4.4 A Type I EES serving a Category 1 space shall be permitted to serve Category 2 spaces in the same facility.

▲ 6.5 Category 2 Spaces.

▲ 6.5.1 Category 2 spaces shall be served by a Type 1 or Type 2 EES.

▲ 6.5.2 Category 2 spaces served by a Type 1 or Type 2 EES shall be served by circuits from a branch panel(s) served from a single automatic transfer switch and a minimum of one circuit served by the normal power distribution system or by a system originating from a second automatic transfer switch.

▲ 6.6 Category 3 and 4 Spaces.

▲ 6.6.1 Category 3 or Category 4 spaces shall not be required to be served by an EES.

▲ 6.7* Essential Electrical Systems.

▲ 6.7.1 Sources.

▲ 6.7.1.1* **Design Considerations.** Dual sources of normal power shall not constitute an alternate source of power as described in this chapter.

▲ 6.7.1.2 On-Site Generator Set.

▲ 6.7.1.2.1 Current-sensing devices, phase and ground, shall be selected to minimize the extent of interruption to the electrical system due to abnormal current caused by overload or short circuits, or both.

▲ 6.7.1.2.2 Essential electrical systems shall have a minimum of the following two independent sources of power: a normal source generally supplying the entire electrical system and one or more alternate sources for use when the normal source is interrupted.

▲ 6.7.1.2.3 Where the normal source consists of generating units on the premises, the alternate source shall be either another generating set or an external utility service.

▲ 6.7.1.2.4 **General.** Generator sets installed as an alternate source of power for essential electrical systems shall be designed to meet the requirements of such service.

▲ 6.7.1.2.4.1 Type 1 and Type 2 essential electrical system power sources shall be classified as Type 10, Class X, Level 1 generator sets per NFPA 110.

▲ 6.7.1.2.5 Use for Essential Electrical System.

▲ 6.7.1.2.5.1 The generating equipment used shall be either reserved exclusively for such service or normally used for other purposes of peak demand control, internal voltage control, load relief for the external utility, or cogeneration. If normally used for such other purposes, two or more sets shall be installed, such that the maximum actual demand likely to be produced by the connected load of the life safety and critical branches, as well as medical air compressors, medical-surgical vacuum pumps, electrically operated fire pumps, jockey pumps, fuel pumps, and generator accessories, shall be met by a multiple generator system, with the largest generator set out of service (not available). The alternate source of emergency power for illumination and identification of means of egress shall be the essential electrical system. The alternate power source for fire protection signaling systems shall be the essential electrical system.

▲ 6.7.1.2.5.2 A single generator set that operates the essential electrical system shall be permitted to be part of the system supplying the other purposes as specified in 6.7.1.2.5.1, provided that any such use will not decrease the mean period between service overhauls to less than 3 years.

▲ 6.7.1.2.5.3* Optional loads shall be permitted to be served by the essential electrical system generating equipment. Optional loads shall be served by their own transfer means, such that these loads shall not be transferred onto the generating equipment if the transfer will overload the generating equipment and shall be shed upon a generating equipment overload. Use of the generating equipment to serve optional loads shall not constitute "other purposes" as described in 6.7.1.2.5.1 and, therefore, shall not require multiple generator sets.

▲ 6.7.1.2.5.4 Where optional loads include contiguous or same-site facilities not covered in this code, provisions shall be made

to meet the requirements of NFPA 101, Article 700 of NFPA 70, and other applicable NFPA requirements for emergency egress under load-shed conditions.

▲ 6.7.1.2.6 Work Space or Room.

▲ 6.7.1.2.6.1 The EPS shall be installed in a separate room for Level 1 installations. [110:7.2.1]

▲ (A) EPSS equipment shall be permitted to be installed in the EPS room. [110:7.2.1.2]

▲ (B) For indoor EPS installations, the EPS room shall be separated from the rest of the building by construction with a 2-hour fire resistance rating.

▲ (C) For outdoor EPS installations, the EPS shall be installed in a suitable enclosure located outside the building and capable of resisting the entrance of snow or rain at a maximum wind velocity required by local building codes. [110:7.2.2.1]

▲ (D) The rooms, enclosures, or separate buildings housing Level 1 or Level 2 EPSS equipment shall be designed and located to minimize damage from flooding, including that caused by the following:

- (1) Flooding resulting from fire fighting
- (2) Sewer water backup
- (3) Other disasters or occurrences

[110:7.2.4]

▲ 6.7.1.2.6.2 The EPS equipment shall be installed in a location that permits ready accessibility and a minimum of 0.9 m (36 in.) from the skid rails' outermost point in the direction of access for inspection, repair, maintenance, cleaning, or replacement. This requirement shall not apply to units in outdoor housings. [110:7.2.6]

▲ 6.7.1.2.7* **Capacity and Rating.** The generator set(s) shall have the capacity and rating to meet the maximum actual demand likely to be produced by the connected load of the essential electrical system(s).

▲ 6.7.1.2.8 **Load Pickup.** The energy converters shall have the required capacity and response to pick up and carry the load within the time specified in Table 4.1(b) of NFPA 110 after loss of primary power.

▲ 6.7.1.2.9 **Maintenance of Temperature.** The EPS shall be heated as necessary to maintain the water jacket and battery temperature determined by the EPS manufacturer for cold start and load acceptance for the type of EPSS. [110:5.3.1]

▲ 6.7.1.2.10* **Heating, Cooling, and Ventilating.** With the EPS running at rated load, ventilation airflow shall be provided to limit the maximum air temperature in the EPS room or the enclosure housing the unit to the maximum ambient air temperature required by the EPS manufacturer. [110:7.7.1]

▲ 6.7.1.2.10.1 Consideration shall be given to all the heat emitted to the EPS equipment room by the energy converter, uninsulated or insulated exhaust pipes, and other heat-producing equipment. [110:7.7.1.1]

▲ 6.7.1.2.10.2 Air shall be supplied to the EPS equipment for combustion. [110:7.7.2]

▲ (A) For EPS supplying Level 1 EPSS, ventilation air shall be supplied directly from a source outside the building by an exterior wall opening or from a source outside the building by a 2-hour fire-rated air transfer system. [110:7.7.2.1]

▲ (B) For EPS supplying Level 1 EPSS, discharge air shall be directed outside the building by an exterior wall opening or to an exterior opening by a 2-hour fire-rated air transfer system. [110:7.7.2.2]

▲ (C) Fire dampers, shutters, or other self-closing devices shall not be permitted in ventilation openings or ductwork for supply or return/discharge air to EPS equipment for Level 1 EPSS. [110:7.7.2.3]

▲ 6.7.1.2.10.3 Ventilation air supply shall be from outdoors or from a source outside of the building by an exterior wall opening or from a source outside the building by a 2-hour fire-rated air transfer system. [110:7.7.3]

▲ 6.7.1.2.10.4 Ventilation air shall be provided to supply and discharge cooling air for radiator cooling of the EPS when running at rated load. [110:7.7.4]

▲ (A) Ventilation air supply and discharge for radiator-cooled EPS shall have a maximum static restriction of 125 Pa (0.5 in. of water column) in the discharge duct at the radiator outlet. [110:7.7.4.1]

▲ (B) Radiator air discharge shall be ducted outdoors or to an exterior opening by a 2-hour rated air transfer system. [110:7.7.4.2]

▲ 6.7.1.2.10.5 Motor-operated dampers, when used, shall be spring operated to open and motor closed. Fire dampers, shutters, or other self-closing devices shall not be permitted in ventilation openings or ductwork for supply or return/discharge air to EPS equipment for Level 1 EPSS. [110:7.7.5]

▲ 6.7.1.2.10.6 The ambient air temperature in the EPS equipment room or outdoor housing containing Level 1 rotating equipment shall be not less than 4.5°C (40°F). [110:5.3.5]

▲ 6.7.1.2.10.7 Units housed outdoors shall be heated as specified in 5.3.5 [of NFPA 110]. [110:7.7.6]

▲ 6.7.1.2.10.8 Design of the heating, cooling, and ventilation system for the EPS equipment room shall include provision for factors including, but not limited to, the following:

- (1) Heat
- (2) Cold
- (3) Dust
- (4) Humidity
- (5) Snow and ice accumulations around housings
- (6) Louvers
- (7) Remote radiator fans
- (8) Prevailing winds blowing against radiator fan discharge air

[110:7.7.7]

▲ 6.7.1.2.11 **Cranking Batteries.** Internal combustion engine cranking batteries shall be in accordance with the battery requirements of NFPA 110.

▲ 6.7.1.2.12 **Compressed Air Starting Devices.** Other types of stored energy starting systems (except pyrotechnic) shall be permitted to be used where recommended by the manufacturer of the prime mover and subject to approval of the authority having jurisdiction, under the following conditions:

- (1) Where two complete periods of cranking cycles are completed without replacement of the stored energy

- (2) Where a means for automatic restoration from the emergency source of the stored energy is provided
- (3) Where the stored energy system has the cranking capacity specified in 5.6.4.2.1 of NFPA 110
- (4) Where the stored energy system has a “black start” capability in addition to normal discharge capability [110:5.6.4.1.2]

▲ **6.7.1.2.13 Fuel Supply.** The fuel supply for the generator set shall comply with Sections 5.5 and 7.9 of NFPA 110.

▲ **6.7.1.2.14 Requirements for Safety Devices.**

▲ **6.7.1.2.14.1 Internal Combustion Engines.** Internal combustion engines serving generator sets shall be equipped with the following:

- (1) Sensor device plus visual warning device to indicate a water-jacket temperature below that required in 6.7.1.2.9
- (2) Sensor devices plus visual pre-alarm warning device to indicate the following:
 - (a) High engine temperature (above manufacturer’s recommended safe operating temperature range)
 - (b) Low lubricating oil pressure (below manufacturer’s recommended safe operating range)
 - (c) Low water coolant level
- (3) Automatic engine shutdown device plus visual device to indicate that a shutdown took place due to the following:
 - (a) Overcrank (failed to start)
 - (b) Overspeed
 - (c) Low lubricating oil pressure
 - (d) Excessive engine temperature
- (4) Common audible alarm device to warn that one or more of the pre-alarm or alarm conditions exist

▲ **6.7.1.2.14.2** Safety indications and shutdowns shall be in accordance with Table 6.7.1.2.14.2.

▲ **6.7.1.2.15 Alarm Annunciator.** A remote annunciator that is storage battery powered shall be provided to operate outside of the generating room in a location readily observed by operating personnel at a regular work station (*see 700.12 of NFPA 70*). The annunciator shall be hard-wired to indicate alarm conditions of the emergency or auxiliary power source as follows:

▲ **6.7.1.2.15.1** Individual visual signals shall indicate the following:

- (1) When the emergency or auxiliary power source is operating to supply power to load
- (2) When the battery charger is malfunctioning

▲ **6.7.1.2.15.2** Individual visual signals plus a common audible signal to warn of an engine-generator alarm condition shall indicate the following:

- (1) Low lubricating oil pressure
- (2) Low water temperature (below that required in 6.7.1.2.9)
- (3) Excessive water temperature
- (4) Low fuel when the main fuel storage tank contains less than a 4-hour operating supply
- (5) Overcrank (failed to start)
- (6) Overspeed

▲ **6.7.1.2.15.3*** A remote, common audible alarm shall be provided as specified in 6.7.1.2.15.8. [110:5.6.6]

▲ **Table 6.7.1.2.14.2 Safety Indications and Shutdowns**

Indicator Function (at Battery Voltage)	Level 1		
	CV	S	RA
(a) Overcrank	X	X	X
(b) Low water temperature	X	—	X
(c) High engine temperature pre-alarm	X	—	X
(d) High engine temperature	X	X	X
(e) Low lube oil pressure pre-alarm	X	—	X
(f) Low lube oil pressure	X	X	X
(g) Overspeed	X	X	X
(h) Low fuel main tank	X	—	X
(i) Low coolant level	X	O	X
(j) EPS supplying load	X	—	—
(k) Control switch not in automatic position	X	—	X
(l) High battery voltage	X	—	—
(m) Low cranking voltage	X	—	X
(n) Low voltage in battery	X	—	—
(o) Battery charger ac failure	X	—	—
(p) Lamp test	X	—	—
(q) Contacts for local and remote common alarm	X	—	X
(r) Audible alarm-silencing switch	—	—	X
(s) Low starting air pressure	X	—	—
(t) Low starting hydraulic pressure	X	—	—
(u) Air shutdown damper when used	X	X	X
(v) Remote emergency stop	—	X	—

CV: Control panel-mounted visual. S: Shutdown of EPS indication. RA: Remote audible. X: Required. O: Optional.

Notes:

- (1) Item (p) shall be provided, but a separate remote audible signal shall not be required when the regular work site in 5.6.6 of NFPA 110 is staffed 24 hours a day.
- (2) Item (b) is not required for combustion turbines.
- (3) Item (r) or (s) is required only where used as a starting method.
- (4) Item (j): EPS ac ammeter shall be permitted for this function.
- (5) All required CV functions shall be visually annunciated by a remote, common visual indicator.
- (6) All required functions indicated in the RA column shall be annunciated by a remote, common audible alarm as required in 5.6.5.2(4) of NFPA 110.
- (7) Item (i) requires a low gas pressure alarm on gaseous systems.
- (8) Item (b) must be set at 11°C (20°F) below the regulated temperature determined by the EPS manufacturer, as required in 5.3.1 of NFPA 110.

▲ **6.7.1.2.15.4** For Level 1 EPS, at a minimum, local annunciation and facility remote annunciation, or local annunciation and network remote annunciation shall be provided.

▲ **6.7.1.2.15.5** For the purposes of defining the types of annunciation in 6.7.1.2.14.2, the following shall apply:

- (1) Local annunciation is located on the equipment itself or within the same equipment room.
- (2) Facility remote annunciation is located on site but not within the room where the equipment is located.
- (3) Network remote annunciation is located off site. [110:5.6.6.3]

▲ **6.7.1.2.15.6** An alarm-silencing means shall be provided, and the panel shall include repetitive alarm circuitry so that, after the audible alarm has been silenced, it reactivates after the fault condition has been cleared and has to be restored to its normal position to be silenced again. [110:5.6.6.4]

▲ **6.7.1.2.15.7** In lieu of the requirement of 5.6.6.4 of NFPA 110, a manual alarm-silencing means shall be permitted that silences the audible alarm after the occurrence of the alarm condition, provided such means do not inhibit any subsequent alarms from sounding the audible alarm again without further manual action. [110:5.6.6.5]

▲ **6.7.1.2.15.8** Individual alarm indication to annunciate any of the conditions listed in Table 6.7.1.2.14.2 shall have the following characteristics:

- (1) It shall be battery powered.
- (2) It shall be visually indicated.
- (3) It shall have additional contacts or circuits for a common audible alarm that signals locally and remotely when any of the itemized conditions occurs.
- (4) It shall have a lamp test switch(es) to test the operation of all alarm lamps.

▲ **6.7.1.2.15.9** A centralized computer system (e.g., building automation system) shall not be permitted to be substituted for the alarm annunciator in 6.7.1.2.15 but shall be permitted to be used to supplement the alarm annunciator.

▲ **6.7.1.3 Battery.** Battery systems shall meet all requirements of NFPA 111.

▲ **6.7.1.4 Fuel Cell Systems.** Fuel cell systems shall be permitted to serve as the alternate source for all or part of an essential electrical system, provided the conditions in 6.7.1.4.1 through 6.7.1.4.6 apply.

▲ **6.7.1.4.1** Installation shall comply with NFPA 853.

▲ **6.7.1.4.2** N+1 units shall be provided where N units have sufficient capacity to supply the demand load of the portion of the system served.

▲ **6.7.1.4.3*** Systems shall be able to assume loads within 10 seconds of loss of normal power source.

▲ **6.7.1.4.4** Systems shall have a continuing source of fuel supply, together with sufficient on-site fuel storage for the essential system type.

▲ **6.7.1.4.5** Where life safety and critical portions of the distribution system are present, a connection shall be provided for a portable diesel generator.

▲ **6.7.1.4.6** Systems shall be listed for emergency use.

▲ **6.7.2* Distribution.**

▲ **6.7.2.1 Design Considerations.**

▲ **6.7.2.1.1** Distribution system arrangements shall be designed to minimize interruptions to the electrical systems due to internal failures by the use of adequately rated equipment.

▲ **6.7.2.1.2** The following factors shall be considered in the design of the distribution system:

- (1) Abnormal voltages, such as single phasing of three-phase utilization equipment; switching or lightning surges, or both; voltage reductions; and so forth

- (2) Capability of achieving the fastest possible restoration of any given circuit(s) after clearing a fault
- (3) Effects of future changes, such as increased loading or supply capacity, or both
- (4) Stability and power capability of the prime mover during and after abnormal conditions
- (5)* Sequence reconnection of loads to avoid large current inrushes that trip overcurrent devices or overload the generator(s)
- (6) Bypass arrangements to allow testing and maintenance of system components that could not otherwise be maintained without disruption of important hospital functions
- (7) Effects of any harmonic currents on neutral conductors and equipment

▲ **6.7.2.2 General Requirements.**

▲ **6.7.2.2.1** Electrical characteristics of the transfer switches shall be suitable for the operation of all functions and equipment they are intended to supply.

▲ **6.7.2.2.2* Coordination.**

▲ **6.7.2.2.2.1** Overcurrent protective devices serving the essential electrical system shall be coordinated for the period of time that a fault's duration extends beyond 0.1 second.

▲ **6.7.2.2.2.2** Coordination shall not be required as follows:

- (1) Between transformer primary and secondary overcurrent protective devices, where only one overcurrent protective device or set of overcurrent protective devices exists on the transformer secondary
- (2) Between overcurrent protective devices of the same size (ampere rating) in series

▲ **6.7.2.2.3 Switch Rating.** The rating of the transfer switches shall be adequate for switching all classes of loads to be served and for withstanding the effects of available fault currents without contact welding.

▲ **6.7.2.2.4 Automatic Transfer Switch.** Transfer of all loads shall be accomplished using an automatic transfer switch(es). Each automatic transfer switch of 600 V or less shall be listed for the purpose and approved for emergency electrical service (*see NFPA 70, Section 700.3*) as a complete assembly.

▲ **6.7.2.2.5 Automatic Transfer Switch Features.**

▲ **6.7.2.2.5.1 Source Monitoring.**

▲ **(A)*** Undervoltage-sensing devices shall be provided to monitor all ungrounded lines of the primary source of power as follows:

- (1) When the voltage on any phase falls below the minimum operating voltage of any load to be served, the transfer switch shall automatically initiate engine start and the process of transfer to the emergency power supply (EPS).
- (2)* When the voltage on all phases of the primary source returns to within specified limits for a designated period of time, the process of transfer back to primary power shall be initiated.

[110:6.2.2.1]

▲ **(B)** Both voltage-sensing and frequency-sensing equipment shall be provided to monitor one ungrounded line of the EPS. [110:6.2.2.2]

- △ (C) Transfer to the EPS shall be inhibited until the voltage and frequency are within a specified range to handle loads to be served. [110:6.2.2.3]
- △ (D) Sensing equipment shall not be required in the transfer switch, provided it is included with the engine control panel. [110:6.2.2.3.1]
- △ (E) Frequency-sensing equipment shall not be required for monitoring the public utility source where used as an EPS, as permitted by 5.1.3 of NFPA 110. [110:6.2.2.3.2]
- △ 6.7.2.2.5.2 **Interlocking.** Mechanical interlocking or an approved alternate method shall prevent the inadvertent interconnection of the primary power supply and the EPS, or any two separate sources of power. [110:6.2.3]
- △ 6.7.2.2.5.3* **Manual Operation.** Instruction and equipment shall be provided for safe manual nonelectric transfer in the event the transfer switch malfunctions. [110:6.2.4]
- △ 6.7.2.2.5.4* **Time Delay on Starting of EPS.** A time-delay device shall be provided to delay starting of the EPS. The timer shall prevent nuisance starting of the EPS and possible subsequent load transfer in the event of harmless momentary power dips and interruptions of the primary source. [110:6.2.5]
- △ 6.7.2.2.5.5 **Time Delay at Engine Control Panel.** Time delays shall be permitted to be located at the engine control panel in lieu of in the transfer switches. [110:6.2.6]
- △ 6.7.2.2.5.6 **Time Delay on Transfer to EPS.** An adjustable time-delay device shall be provided to delay transfer and sequence load transfer to the EPS to avoid excessive voltage drop when the transfer switch is installed for Level 1 use. [110:6.2.7]
- △ (A) **Time Delay Commencement.** The time delay shall commence when proper EPS voltage and frequency are achieved. [110:6.2.7.1]
- △ (B) **Time Delay at Engine Control Panel.** Time delays shall be permitted to be located at the engine control panel in lieu of in the transfer switches. [110:6.2.7.2]
- △ 6.7.2.2.5.7* **Time Delay on Retransfer to Primary Source.** An adjustable time-delay device with automatic bypass shall be provided to delay retransfer from the EPS to the primary source of power, and allow the primary source to stabilize before retransfer of the load. [110:6.2.8]
- △ 6.7.2.2.5.8 **Time Delay Bypass If EPS Fails.** The time delay shall be automatically bypassed if the EPS fails. [110:6.2.9]
- △ (A) The transfer switch shall be permitted to be programmed for a manually initiated retransfer to the primary source to provide for a planned momentary interruption of the load. [110:6.2.9.1]
- △ (B) If used, the arrangement in 6.2.9.1 of NFPA 110 shall be provided with a bypass feature to allow automatic retransfer in the event that the EPS fails and the primary source is available.
- △ 6.7.2.2.5.9 **Time Delay on Engine Shutdown.** A minimum time delay of 5 minutes shall be provided for unloaded running of the EPS prior to shutdown to allow for engine cool-down. [110:6.2.10]
- △ (A) The minimum 5-minute delay shall not be required on small (15 kW or less) air-cooled prime movers. [110:6.2.10.1]
- △ (B) A time-delay device shall not be required, provided it is included with the engine control panel, or if a utility feeder is used as an EPS. [110:6.2.10.2]
- △ 6.7.2.2.5.10 **Test Switch.** A test means shall be provided on each automatic transfer switch (ATS) that simulates failure of the primary power source and then transfers the load to the EPS. [110:6.2.12]
- △ 6.7.2.2.5.11* **Indication of Transfer Switch Position.** Two pilot lights with identification nameplates or other approved position indicators shall be provided to indicate the transfer switch position. [110:6.2.13]
- △ 6.7.2.2.5.12 **Motor Load Transfer.** Provisions shall be included to reduce currents resulting from motor load transfer if such currents could damage EPSS equipment or cause nuisance tripping of EPSS overcurrent protective devices. [110:6.2.14]
- △ 6.7.2.2.5.13* **Isolation of Neutral Conductors.** Provisions shall be included for ensuring continuity, transfer, and isolation of the primary and the EPS neutral conductors wherever they are separately grounded to achieve ground-fault sensing. [110:6.2.15]
- △ 6.7.2.2.5.14 **Retransfer.** If the emergency power source fails during a test, provisions shall be made to immediately retransfer to the normal source.
- △ 6.7.2.2.5.15* **Nonautomatic Transfer Switch Features.** Switching devices shall be mechanically held and shall be operated by direct manual or electrical remote manual control. [110:6.2.16]
- △ (A) **Interlocking.** Reliable mechanical interlocking, or an approved alternate method, shall prevent the inadvertent interconnection of the primary power source and the EPS. [110:6.2.16.1]
- △ (B) **Indication of Switch Position.** Two pilot lights with identification nameplates, or other approved position indicators, shall be provided to indicate the switch position. [110:6.2.16.2]
- △ 6.7.2.2.6 **Nonautomatic Transfer Device Classification.** Nonautomatic transfer devices of 600 V or less shall be listed for the purpose and approved.
- △ 6.7.2.2.7 **Nonautomatic Transfer Device Features.**
- △ 6.7.2.2.7.1 **General.** Switching devices shall be mechanically held and shall be operated by direct manual or electrical remote manual control. [110:6.2.16]
- △ 6.7.2.2.7.2 **Interlocking.** Reliable mechanical interlocking, or an approved alternate method, shall prevent the inadvertent interconnection of the primary power source and the EPS. [110:6.2.16.1]
- △ 6.7.2.2.7.3 **Indication of Switch Position.** Two pilot lights with identification nameplates, or other approved position indicators, shall be provided to indicate the switch position. [110:6.2.16.2]
- △ 6.7.2.2.8 **Bypass and Isolating Transfer Switches.** Bypass-isolation switches shall be permitted for bypassing and isolating the transfer switch and installed in accordance with 6.4.2, 6.4.3, and 6.4.4 of NFPA 110. [110:6.4.1]
- △ 6.7.2.2.8.1 **Bypass-Isolation Switch Rating.** The bypass-isolation switch shall have a continuous current rating and a

current rating compatible with that of the associated transfer switch. [110:6.4.2]

▲ **6.7.2.2.8.2 Bypass-Isolation Switch Classification.** Each bypass-isolation switch shall be listed for emergency electrical service as a completely factory-assembled and factory-tested apparatus. [110:6.4.3]

▲ **6.7.2.2.8.3* Operation.** With the transfer switch isolated or disconnected, the bypass-isolation switch shall be designed so it can function as an independent nonautomatic transfer switch and allow the load to be connected to either power source. [110:6.4.4]

▲ **6.7.2.2.8.4 Reconnection of Transfer Switch.** Reconnection of the transfer switch shall be possible without a load interruption greater than the maximum time, in seconds, specified by the type of system. [110:6.4.5]

▲ **6.7.2.3* Branches.**

▲ **6.7.2.3.1** The division between the branches shall occur at transfer switches where more than one transfer switch is required.

▲ **6.7.2.3.2** Each branch shall be arranged for connection, within time limits specified in this chapter, to an alternate source of power following a loss of the normal source.

▲ **6.7.2.3.3** The number of transfer switches to be used shall be based upon reliability, design, and load considerations.

▲ **6.7.2.3.3.1** Each branch of the essential electrical system shall have one or more transfer switches.

▲ **6.7.2.3.3.2** One transfer switch shall be permitted to serve one or more branches in a facility with a continuous load on the switch of 150 kVA (120 kW) or less.

▲ **6.7.2.3.4 Feeders from Alternate Source.**

▲ **6.7.2.3.4.1** A single feeder supplied by a local or remote alternate source shall be permitted to supply the essential electrical system to the point at which the life safety, critical, and equipment branches are separated.

▲ **6.7.2.3.4.2** Installation of the transfer equipment shall be permitted at other than the location of the alternate source.

▲ **6.7.2.3.5 Receptacles.** The requirements for receptacles shall comply with 6.7.2.3.5(A) and 6.7.2.3.5(B).

▲ (A) Branch-circuit overcurrent devices shall be readily accessible to authorized personnel.

▲ (B)* The electrical receptacles or the cover plates for the electrical receptacles supplied from the life safety and critical branches shall have a distinctive color or marking so as to be readily identifiable.

▲ **6.7.2.3.6 Switches.** Switches of all types shall be permitted in the lighting circuits connected to the essential electrical system that do not serve as the illumination of egress as required by NFPA 101.

▲ **6.7.2.3.7** Secondary circuits of transformer-powered communication or signaling systems shall not be required to be enclosed in raceways unless otherwise specified by Chapters 7 or 8 of NFPA 70.

▲ **6.7.3 Performance Criteria and Testing.**

▲ **6.7.3.1 Transfer Switches.** All ac-powered support and accessory equipment necessary to the operation of the EPS shall be supplied from the load side of the automatic transfer switch(es), or the output terminals of the EPS, ahead of the main EPS overcurrent protection to ensure continuity of the EPSS operation and performance. [110:7.12.5]

▲ **6.7.3.2** The essential electrical system shall be served by the normal power source, except when the normal power source is interrupted or drops below a predetermined voltage level. Settings of the sensors shall be determined by careful study of the voltage requirements of the load.

▲ **6.7.3.3** Failure of the normal source shall automatically start the alternate source generator after a short delay, as described in 6.7.2.2.5.4. When the alternate power source has attained a voltage and frequency that satisfies minimum operating requirements of the essential electrical system, the load shall be connected automatically to the alternate power source.

▲ **6.7.3.4** Upon connection of the alternate power source, the loads comprising the life safety and critical branches shall be automatically re-energized. The load comprising the equipment system shall be connected either automatically after a time delay, as described in 6.7.2.2.5.6, or nonautomatically and in such a sequential manner as not to overload the generator.

▲ **6.7.3.5** When the normal power source is restored, and after a time delay, as described in 6.7.2.2.5.7, the automatic transfer switches shall disconnect the alternate source of power and connect the loads to the normal power source. The alternate power source generator set shall continue to run unloaded for a preset time delay, as described in 6.7.2.2.5.9.

▲ **6.7.3.6** If the emergency power source fails and the normal power source has been restored, retransfer to the normal source of power shall be immediate, bypassing the retransfer delay timer.

▲ **6.7.3.7** Nonautomatic transfer switching devices shall be restored to the normal power source as soon as possible after the return of the normal source or at the discretion of the operator.

▲ **6.7.4 Administration.**

▲ **6.7.4.1 Maintenance and Testing of Essential Electrical System.**

▲ **6.7.4.1.1 Maintenance and Testing of Alternate Power Source, Transfer Switches, and Associated Equipment.**

▲ **6.7.4.1.1.1 Maintenance of Alternate Power Source.** The generator set or other alternate power source and associated equipment, including all appurtenance parts, shall be so maintained as to be capable of supplying service within the shortest time practicable and within the 10-second interval specified in 6.7.1.2.8 and 6.7.5.3.1.

▲ **6.7.4.1.1.2** The 10-second criterion shall not apply during the monthly testing of an essential electrical system. If the 10-second criterion is not met during the monthly test, a process shall be provided to annually confirm the capability of the life safety and critical branches to comply with 6.7.5.3.1.

- ▲ **6.7.4.1.1.3** Maintenance shall be performed in accordance with Chapter 8 of NFPA 110.
- ▲ **6.7.4.1.1.4** Maintenance of the electrical equipment for the life safety branch, critical branch, and equipment branch shall be maintained in accordance with the manufacturer's instructions and preventative maintenance programs.
- ▲ **6.7.4.1.1.5 Inspection and Testing.** Criteria, conditions, and personnel requirements shall be in accordance with 6.7.4.1.1.5(A) through 6.7.4.1.1.5(C).
- ▲ **(A)* Test Criteria.** Generator sets shall be tested 12 times a year, with testing intervals of not less than 20 days nor more than 40 days. Generator sets serving essential electrical systems shall be tested in accordance with Chapter 8 of NFPA 110.
- ▲ **(B) Test Conditions.** The scheduled test under load conditions shall include a complete simulated cold start and appropriate automatic and manual transfer of all essential electrical system loads.
- ▲ **(C) Test Personnel.** The scheduled tests shall be conducted by qualified personnel to keep the machines ready to function and, in addition, serve to detect causes of malfunction and to train personnel in operating procedures.
- ▲ **6.7.4.1.2 Maintenance and Testing of Circuitry.**
- ▲ **6.7.4.1.2.1* Circuit Breakers.** Main and feeder circuit breakers shall be inspected annually and maintained in accordance with the manufacturer's instructions and industry standards. A program for periodically exercising the components shall be established according to the manufacturer's instructions.
- ▲ **6.7.4.1.2.2 Insulation Resistance.** The resistance readings of main feeder insulation shall be taken prior to acceptance and whenever damage is suspected.
- ▲ **6.7.4.1.2.3 Maintenance of Batteries.** Batteries for on-site generators shall be maintained in accordance with NFPA 110.
- ▲ **6.7.4.2 Record Keeping.** A written record of inspection, performance, exercising period, and repairs shall be regularly maintained and available for inspection by the authority having jurisdiction.
- ▲ **6.7.5* Type 1 Essential Electrical System Requirements.**
- ▲ **6.7.5.1 Branches.**
- ▲ **6.7.5.1.1** The essential electrical system shall be divided into the following three branches:
- (1) Life safety
 - (2) Critical
 - (3) Equipment
- ▲ **6.7.5.1.2 Life Safety Branch.**
- ▲ **6.7.5.1.2.1** For the purposes of this code, the provisions for emergency systems in Article 700 of *NFPA 70* shall be applied only to the life safety branch.
- ▲ **6.7.5.1.2.2** The following portions of Article 700 of *NFPA 70* shall be amended as follows:
- (1) 700.4 shall not apply.
 - (2) 700.10(D)(1) through (3) shall not apply.
 - (3) 700.17 Branch Circuits for Emergency Lighting. Branch circuits that supply emergency lighting shall be installed to provide service from a source complying with 700.12 when the normal supply for lighting is interrupted or where single circuits supply luminaires containing secondary batteries
 - (4) 700.32 shall not apply.
- ▲ **6.7.5.1.2.3** The life safety branch shall be limited to circuits essential to life safety.
- ▲ **6.7.5.1.2.4** The life safety branch shall supply power as follows:
- (1) Illumination of means of egress in accordance with NFPA 101
 - (2) Exit signs and exit directional signs in accordance with NFPA 101
 - (3)* Communications systems, where used for issuing instruction during emergency conditions
 - (4) Generator set location as follows:
 - (a) Task illumination
 - (b) Battery charger for emergency battery-powered lighting unit(s)
 - (c) Select receptacles at the generator set location and essential electrical system transfer switch locations
 - (5) Elevator cab lighting, control, communications, and signal systems
 - (6) Electrically powered doors used for building egress
 - (7) Fire alarms and auxiliary functions of fire alarm combination systems complying with NFPA 72
- ▲ **6.7.5.1.2.5** Alarm and alerting systems (other than fire alarm systems) shall be connected to the life safety branch or critical branch.
- ▲ **6.7.5.1.2.6** Loads dedicated to a specific generator, including the fuel transfer pump(s), ventilation fans, electrically operated louvers, controls, cooling system, and other generator accessories essential for generator operation, shall be connected to the life safety branch or the output terminals of the generator with overcurrent protective devices.
- ▲ **6.7.5.1.2.7** No functions other than those in 6.7.5.1.2.4, 6.7.5.1.2.5, and 6.7.5.1.2.6 shall be connected to the life safety branch, except as specifically permitted in 6.7.5.1.2.
- ▲ **6.7.5.1.3* Critical Branch.**
- ▲ **6.7.5.1.3.1** The critical branch shall be permitted to be subdivided into two or more branches.
- ▲ **6.7.5.1.3.2** The critical branch, or a dual-fed scheme including the critical branch shall supply power for task illumination, fixed equipment, select receptacles, and select power circuits serving the following spaces and functions related to patient care:
- (1) Category 1 spaces where deep sedation or general anesthesia is administered, task illumination, select receptacles, and fixed equipment
 - (2) Task illumination and select receptacles in the following:
 - (a) Patient care spaces, including infant nurseries, selected acute nursing areas, psychiatric bed areas (omit receptacles), and ward treatment rooms
 - (b) Medication preparation spaces
 - (c) Pharmacy dispensing spaces
 - (d) Nurses' stations — unless adequately lighted by corridor luminaires
 - (3) Additional specialized patient care task illumination and receptacles, where needed
 - (4) Nurse call systems

- (5) Blood, bone, and tissue banks
 - (6)* Telecommunications entrance facility, telecommunications equipment rooms, and telecommunication rooms and equipment in these rooms.
 - (7) Task illumination, select receptacles, and select power circuits for the following areas:
 - (a) Category 1 or 2 spaces with at least one duplex receptacle per patient bed location, and task illumination as required by the governing body of the health care facility
 - (b) Angiographic labs
 - (c) Cardiac catheterization labs
 - (d) Coronary care units
 - (e) Hemodialysis rooms or areas
 - (f) Emergency room treatment areas (select)
 - (g) Human physiology labs
 - (h) Intensive care units
 - (i) Postoperative recovery rooms (select)
 - (8) Clinical IT-network equipment
 - (9) Wireless phone and paging equipment for clinical staff communications
 - (10) Additional task illumination, receptacles, and select power circuits needed for effective facility operation, including single-phase fractional horsepower motors, which are permitted to be connected to the critical branch
- Δ 6.7.5.1.4 Equipment Branch.**
- Δ 6.7.5.1.4.1 General.** The equipment branch shall be connected to equipment described in 6.7.5.1.4.3 through 6.7.5.1.4.4.
- Δ 6.7.5.1.4.2 Connection to Alternate Power Source.**
- Δ (A)** The equipment branch shall be installed and connected to the alternate power source, such that equipment described in 6.7.5.1.4.3 is automatically restored to operation at appropriate time-lag intervals following the energizing of the life safety and critical branches.
- Δ (B)** The arrangement of the connection to the alternate power source shall also provide for the subsequent connection of equipment described in 6.7.5.1.4.4.
- Δ 6.7.5.1.4.3* Equipment for Delayed-Automatic Connection.**
- Δ (A)** The following equipment shall be permitted to be arranged for delayed-automatic connection to the alternate power source:
- (1) Central suction systems serving medical and surgical functions, including controls, with such suction systems permitted to be placed on the critical branch
 - (2) Sump pumps and other equipment required to operate for the safety of major apparatus, including associated control systems and alarms
 - (3) Compressed air systems serving medical and surgical functions, including controls, with such air systems permitted to be placed on the critical branch
 - (4) Smoke control and stair pressurization systems
 - (5) Kitchen hood supply or exhaust systems, or both, if required to operate during a fire in or under the hood
 - (6) Supply, return, and exhaust ventilating systems for the following:
 - (a) Airborne infectious/isolation rooms
 - (b) Protective environment rooms
 - (c) Exhaust fans for laboratory fume hoods
 - (d) Nuclear medicine areas where radioactive material is used
 - (e) Ethylene oxide evacuation
 - (f) Anesthetic evacuation
- Δ (B)** Where delayed-automatic connection is not appropriate, the ventilation systems specified in 6.7.5.1.4.3(A)(6) shall be permitted to be placed on the critical branch.
- Δ 6.7.5.1.4.4* Equipment for Delayed-Automatic or Manual Connection.** The following equipment shall be permitted to be arranged for either delayed-automatic or manual connection to the alternate power source (*also see A.6.7.5.1.4.3*):
- (1) Heating equipment used to provide heating for operating, delivery, labor, recovery, intensive care, coronary care, nurseries, infection/isolation rooms, emergency treatment spaces, and general patient rooms; and pressure maintenance (jockey or make-up) pump(s) for water-based fire protection systems
 - (2)* Heating of general patient rooms during disruption of the normal source shall not be required under any of the following conditions:
 - (a) Outside design temperature is lower than -6.7°C ($+20^{\circ}\text{F}$)
 - (b) Outside design temperature is lower than -6.7°C ($+20^{\circ}\text{F}$), where a selected room(s) is provided for the needs of all confined patients [then only such room(s) need be heated]
 - (3) Elevator(s) selected to provide service to patient, surgical, obstetrical, and ground floors during
 - (4) Supply, return, and exhaust ventilating systems for surgical and obstetrical delivery suites, intensive care, coronary care, nurseries, and emergency treatment spaces
 - (5) Hyperbaric facilities
 - (6) Hypobaric facilities
 - (7) Autoclaving equipment, which is permitted to be arranged for either automatic or manual connection to the alternate source
 - (8) Controls for equipment listed in 6.7.5.1.3
 - (9)* Other selected equipment
- Δ 6.7.5.1.5** Generator load-shed circuits designed for the purpose of load reduction or for load priority systems shall not shed life safety branch loads, critical branch loads serving Category 1 spaces, medical air compressors, medical-surgical vacuum pumps, fire pumps, the pressure maintenance (i.e., jockey) pump(s) for water-based fire protection systems, generator fuel pumps, or other generator accessories.
- Δ 6.7.5.2 Wiring Requirements.**
- Δ 6.7.5.2.1* Separation from Other Circuits.** The life safety branch and critical branch shall be kept independent of all other wiring and equipment.
- Δ 6.7.5.2.2 Mechanical Protection of the Life Safety and Critical Branches.** The wiring of the life safety and critical branches shall be mechanically protected by raceways, as defined in *NFPA 70*.
- Δ 6.7.5.2.3** Flexible power cords of appliances or other utilization equipment connected to the life safety and critical branches shall not be required to be enclosed in raceways.

△ 6.7.5.3 Performance Criteria and Testing (Type 1 EES).

△ 6.7.5.3.1 **Source.** The life safety and critical branches shall be installed and connected to the alternate power source specified in 6.7.1.2.2 and 6.7.1.2.3 so that all functions specified herein for the life safety and critical branches are automatically restored to operation within 10 seconds after interruption of the normal source.

△ 6.7.6* Type 2 Essential Electrical System Requirements.

△ 6.7.6.1 **Sources (Type 2 EES).** The requirements for sources for Type 2 essential electrical systems shall conform to those listed in 6.7.1.

△ 6.7.6.2 Distribution (Type 2 EES).

△ 6.7.6.2.1* Branches.

△ 6.7.6.2.1.1 The number of transfer switches to be used shall be based upon reliability, design, and load considerations.

△ 6.7.6.2.1.2 The essential electrical system shall be divided into the following two branches:

- (1) Life safety branch
- (2) Equipment branch

△ 6.7.6.2.1.3 Each branch of the essential electrical system shall have one or more transfer switches.

△ 6.7.6.2.1.4 One transfer switch shall be permitted to serve one or more branches in a facility with a continuous load on the switch of 150 kVA (120 kW) or less.

△ 6.7.6.2.1.5 Life Safety Branch.

△ (A) For the purposes of this code, Article 700 of *NFPA 70* shall only be applied to the life safety branch.

△ (B) The following portions of Article 700 of *NFPA 70* shall be amended as follows:

- (1) 700.4 shall not apply.
- (2) 700.10 (D)(1) through (3) shall not apply.
- (3) 700.17 Branch Circuits for Emergency Lighting. Branch circuits that supply emergency lighting shall be installed to provide service from a source complying with 700.12 when the normal supply for lighting is interrupted or where single circuits supply luminaires containing secondary batteries.
- (4) 700.32 shall not apply.

△ (C) The life safety branch shall supply power as follows:

- (1) Illumination of means of egress in accordance with *NFPA 101*
- (2) Exit signs and exit directional signs in accordance with *NFPA 101*
- (3) Alarm and alerting systems, including the following:
 - (a) Fire alarms
 - (b) Alarms required for systems used for the piping of nonflammable medical gases as specified in Chapter 5
- (4)* Communications systems, where used for issuing instructions during emergency conditions
- (5) Task illumination and select receptacles at the generator set location
- (6) Elevator cab lighting, control, communications, and signal systems

△ (D) No functions, other than those listed in 6.7.6.2.1.5(C)(1) through 6.7.6.2.1.5(C)(6), shall be connected to the life safety.

△ 6.7.6.2.1.6 Equipment Branch.

△ (A) The equipment branch shall be installed and connected to the alternate power source such that equipment listed in 6.7.6.2.1.6(C) is automatically restored to operation at appropriate time-lag intervals following the restoration of the life safety branch to operation.

△ (B) The equipment branch arrangement shall also provide for the additional connection of equipment listed in 6.7.6.2.1.6(D).

△ (C) **AC Equipment for Nondelayed-Automatic Connection.** Generator accessories including, but not limited to, the transfer fuel pump, electrically operated louvers, and other generator accessories essential for generator operation shall be arranged for automatic connection to the alternate power source.

△ (D) **Delayed-Automatic Connections to Equipment Branch.** The following equipment shall be permitted to be connected to the equipment branch and shall be arranged for delayed-automatic connection to the alternate power source:

- (1) Task illumination and select receptacles in the following:
 - (a) Patient care spaces
 - (b) Medication preparation spaces
 - (c) Pharmacy dispensing spaces
 - (d) Nurses' stations — unless adequately lighted by corridor luminaires
- (2) Supply, return, and exhaust ventilating systems for airborne infectious isolation rooms
- (3) Sump pumps and other equipment required to operate for the safety of major apparatus and associated control systems and alarms
- (4) Smoke control and stair pressurization systems
- (5) Kitchen hood supply or exhaust systems, or both, if required to operate during a fire in or under the hood
- (6) Nurse call systems
- (7) HVAC systems serving the EF, TER, and TR

△ (E)* **Delayed-Automatic or Manual Connections to Equipment Branch.** The equipment in 6.7.6.2.1.6(E)(1) and 6.7.6.2.1.6(E)(2) shall be permitted to be connected to the equipment branch and shall be arranged for either delayed-automatic or manual connection to the alternate power source:

- (1) Heating Equipment to Provide Heating for General Patient Rooms. Heating of general patient rooms during disruption of the normal source shall not be required under any of the following conditions:
 - (a)* The outside design temperature is higher than -6.7°C ($+20^{\circ}\text{F}$).
 - (b) The outside design temperature is lower than -6.7°C ($+20^{\circ}\text{F}$) and, where a selected room(s) is provided for the needs of all confined patients, then only such room(s) need be heated.
 - (c) The facility is served by a dual source of normal power. See A.6.7.1.1 for more information.
- (2)* Elevator Service. In instances where interruptions of power would result in elevators stopping between floors, throw-over facilities shall be provided to allow the temporary operation of any elevator for the release of passengers.

- (3) Optional Connections to the Equipment Branch. Additional illumination, receptacles, and equipment shall be permitted to be connected only to the equipment branch.
- (4) Multiple Systems. Where one switch serves multiple systems as permitted in 6.7.6.2, transfer for all loads shall be nondelayed automatic.

Δ 6.7.6.3 Wiring Requirements.

Δ 6.7.6.3.1* **Separation from Other Circuits.** The life safety and equipment branches shall be kept entirely independent of all other wiring and equipment.

Δ 6.7.6.3.2* **Receptacles.** The electrical receptacles or the cover plates for the electrical receptacles supplied from the life safety and equipment branches shall have a distinctive color or marking so as to be readily identifiable.

Δ 6.7.6.4 Performance Criteria and Testing (Type 2 EES).

Δ 6.7.6.4.1 **Source.** The life safety and equipment branches shall be installed and connected to the alternate source of power specified in 6.7.1.2.2 and 6.7.1.2.3 so that all functions specified herein for the life safety and equipment branches are automatically restored to operation within 10 seconds after interruption of the normal source.

Chapter 7 Information Technology and Communications Systems

7.1* **Applicability.** This chapter shall apply to new health care facilities as specified in Section 1.3.

7.2 **Reserved.**

7.3 Category 1 Systems.

7.3.1 Information Technology and Communications Systems Infrastructure.

7.3.1.1 Premises Distribution System (Fiber and Copper).

Δ 7.3.1.1.1 Cables and installation shall be in compliance with *NFPA 70* and *TIA/EIA 568-B*.

7.3.1.1.2 Distribution system cable labeling, record keeping, and alphanumeric schemes shall be in accordance with *TIA/EIA 606-B*.

7.3.1.2* Telecommunications Systems' Spaces and Pathways.

7.3.1.2.1 Entrance Facility (EF).

7.3.1.2.1.1 **General.** The EF location shall be permitted to be combined with the telecommunications equipment room (TER).

7.3.1.2.1.2 Not less than two physically separated service entrance pathways into this location shall be required.

7.3.1.2.1.3 **Remote Primary Data Center.** In a facility where the primary data center is located remotely, two EFs and redundant telecommunications service entrances shall be provided.

7.3.1.2.1.4 Location Requirements and Restrictions.

(A) The EF shall be permitted to be located with the TER.

(B) Where the EF is combined with the TER, the space and electrical power and cabling shall be added to the TER to

accommodate the telecommunications service provider's space and access requirements.

(C)* The EF shall be dedicated to low-voltage communication systems.

(D) Electrical equipment or fixtures (e.g., transformers, panelboards, conduit, wiring) that are not directly related to the support of the EF shall not be installed in or pass through the EF.

(E) Mechanical equipment and fixtures (e.g., water or drainage piping of any kind, ductwork, pneumatic tubing) that are not directly related to the support of the EF shall not be installed in, pass through, or enter the EF.

(F) The EF shall be located in an area not subject to flooding.

(G) The EF shall be as close as practicable to the building communications service entrance point.

7.3.1.2.1.5 Working Space. (Reserved)

7.3.1.2.1.6 **Security.** Only authorized personnel shall have access to EFs.

7.3.1.2.1.7 Power Requirements.

(A) Circuits serving the EF shall be dedicated to serving the EF.

(B) Circuits serving equipment in the EF shall be connected to the critical branch of the essential electrical system.

(C) A minimum of one duplex receptacle served from normal power shall be provided on one wall of the EF for service and maintenance.

7.3.1.2.1.8 Environmental Requirements.

(A) Temperature and humidity in the EF shall be controlled in accordance with the manufacturer's equipment requirements.

(B)* HVAC systems serving the EF shall be connected to the equipment branch of the essential electrical system.

(C)* A positive pressure differential with respect to surrounding areas shall be provided.

(D) Sprinklers shall be provided with wire cages or shall be recessed to prevent accidental operation.

7.3.1.2.1.9 Other Requirements. (Reserved)

7.3.1.2.2 **Telecommunications Equipment Room (TER).** Each facility shall have at least one TER space that meets the minimum requirements of this chapter.

7.3.1.2.2.1 General.

(A) The TER houses the main networking equipment and shall be permitted to also house application servers and data storage devices that serve the health care facility.

(B) Central equipment for other communications systems shall be permitted to be housed in the TER.

7.3.1.2.2.2* The EF shall be permitted to be combined with the TER space.

7.3.1.2.2.3 Reserved.**7.3.1.2.2.4 Location Requirements and Restrictions.**

(A) Electrical equipment or fixtures (e.g., transformers, panelboards, conduit, wiring) that are not directly related to the support of the TER shall not be installed in, pass through, or enter the TER.

(B) Any mechanical equipment or fixtures (e.g., water or drainage piping of any kind, ductwork, pneumatic tubing) not directly related to the support of the TER shall not be installed in, pass through, or enter the TER.

(C) The TER shall be located in a nonsterile area of the facility.

(D) In geographic areas prone to hurricanes or **tornadoes**, the TER shall be located away from exterior curtain walls to prevent wind and water damage.

(E) The TER shall be located or designed to avoid vibration from mechanical equipment or other sources.

▲ **7.3.1.2.2.5 Working Space.** Working space about communications cabinets, racks, or other equipment shall be in accordance with 110.26(A) of *NFPA 70*.

7.3.1.2.2.6 Security. Access to the TER shall be restricted and controlled.

7.3.1.2.2.7 Power Requirements.

(A) Circuits serving the TER and the equipment within the TER shall be dedicated to serving the TER.

(B) Circuits serving other communications equipment in the TER shall be connected to the essential electrical system.

(C) A minimum of one duplex outlet shall be provided on each wall and shall be connected to normal power for service and maintenance.

7.3.1.2.2.8 Environmental Requirements.

(A) Temperature and humidity in the TER shall be controlled in accordance with the manufacturer's equipment requirements.

(B) HVAC systems serving the TER shall be connected to the equipment branch of the essential electrical system.

(C) A positive pressure differential with respect to surrounding areas shall be provided.

7.3.1.2.2.9 Other Requirements. (Reserved)**7.3.1.2.3 Telecommunications Room (TR).**

7.3.1.2.3.1 General. A TR houses telecommunications equipment, cable terminations, and cross-connect cabling.

7.3.1.2.3.2 Sufficient TRs shall be provided so that any data or communications outlet in the building can be reached without exceeding 90 m (295 ft) maximum pathway distance from the termination point in the TR to the outlet.

7.3.1.2.3.3 Reserved.**7.3.1.2.3.4 Location Requirements and Restrictions.**

(A) Switchboards, panelboards, transformers, and similar electrical equipment that are not directly related to the support of the TR shall not be installed in the TR.

(B) Any mechanical equipment or fixtures (e.g., water or drainage piping of any kind, ductwork, pneumatic tubing) not directly related to the support of the TR shall not be installed in, pass through, or enter the TR.

(C) In geographic areas prone to hurricanes or **tornadoes**, TRs shall be located away from exterior curtain walls to prevent wind and water damage.

(D) A minimum of one TR shall be on each floor of the facility.

(E) A TR shall serve a maximum of 1858 m² (20,000 ft²) of usable space on a single floor.

▲ **7.3.1.2.3.5 Working Space.** Working space about communications cabinets, racks, or other equipment shall be in accordance with 110.26(A) of *NFPA 70*.

7.3.1.2.3.6 Security. Access to TRs shall be restricted and controlled.

7.3.1.2.3.7 Power Requirements.

(A) Circuits serving the TR and the equipment within the TR shall be dedicated to serving the TR.

(B) Circuits serving the TR shall be connected to the critical branch of the essential electrical system.

(C) A minimum of one duplex receptacle shall be provided in each TR and shall be connected to normal power for service and maintenance.

7.3.1.2.3.8 Environmental Requirements.

(A) Temperature and humidity in the TR shall be controlled in accordance with the manufacturer's equipment requirements.

(B) Sprinklers shall be provided with wire cages or shall be recessed to prevent accidental discharge.

7.3.1.2.3.9 Other Requirements. **Suspended** ceilings shall not be required in the EF, TER, and TR.

7.3.1.2.4 Cabling Pathways and Raceway Requirements.

7.3.1.2.4.1 Backbone Distribution. Redundant pathways shall be provided between the EF and TER.

7.3.1.2.4.2 Conduits shall be provided for cabling in inaccessible ceiling spaces.

7.3.1.2.5 Outside Plant (OSP) Infrastructure.

7.3.1.2.5.1 General. OSP infrastructure shall consist of the conduits, vaults, and other pathways and cabling used to connect buildings on a campus and to provide services from off-campus service providers.

7.3.1.2.5.2 Pathways.

(A) Dual telecommunications service entrance pathways shall be provided to the EF.

(B) Service entrance pathways shall be a minimum of 6.1 m (20 ft) apart.

(C) Underground conduits for technology systems shall be a minimum of 0.61 m (2 ft) from underground steam and water piping if crossing perpendicularly, and a minimum of 1.83 m (6 ft) if parallel.

(D) Underground conduits for technology systems shall be a minimum of 0.61 m (2 ft) below grade.

7.3.1.3 Antennas. (Reserved)

7.3.2 Voice, Data, Communications, and Cable Television Systems.

7.3.2.1 Voice/Telecommunications. (Reserved)

7.3.2.2 Local Area Networks (LANs). (Reserved)

7.3.2.3 Wireless Local Area Network (LAN) Systems and Public Wifi Hot Spots. (Reserved)

7.3.2.4 Wireless Voice Systems and In-Building Cellular Networks. (Reserved)

7.3.2.5 UHF, VHF, 800 MHz, and 900 MHz Radio Communication Systems. (Reserved)

7.3.2.6 Cable Television. (Reserved)

7.3.3 Other Communications Systems.

7.3.3.1 Nurse Call Systems.

7.3.3.1.1* General. The nurse call systems shall communicate patient and staff calls for assistance and information in health care facilities.

7.3.3.1.1.1 The nurse call systems shall be the audiovisual type or tone visual type and listed for the purpose.

7.3.3.1.1.2 The recognized standard for a listed nurse call system shall be ANSI/UL 1069, *Safety Standard for Hospital Signaling and Nurse Call Equipment*.

7.3.3.1.1.3* The nurse call system shall provide event notifications for one or more of the following: medical device alarms, staff emergency calls, code calls, and staff or patient requests for help or assistance.

7.3.3.1.1.4 Primary notification of nurse call events shall be provided by a listed nurse call system in accordance with 7.3.3.1.8.

7.3.3.1.1.5* Supplemental features shall be permitted to include call notification to alphanumeric pagers and other wireless devices carried by health care facility staff.

7.3.3.1.2 Patient Area Call Stations. The locations of call stations and calling devices shall be in accordance with the requirements set forth in the FGI Guidelines and as required by state and local codes.

7.3.3.1.2.1* Each patient bed location shall be provided with a call station.

7.3.3.1.2.2* A single call station that provides two-way voice communications shall not serve more than two adjacent beds with calling devices.

7.3.3.1.2.3* Call stations at patient bed locations shall be permitted to provide supplemental signaling of medical device alarms.

7.3.3.1.2.4 When provided, supplemental signaling of a medical device alarm shall be in accordance with 7.3.3.1.8.

7.3.3.1.2.5 Bath stations shall be provided at each inpatient toilet, bath, shower, or sitz bath and shall be accessible to a patient lying on the floor.

7.3.3.1.2.6 A pull cord shall be permitted to enable access by a patient lying on the floor.

7.3.3.1.3 Staff Emergency Call. The locations of staff emergency call stations shall be in accordance with the requirements set forth in the FGI Guidelines, and as required by state and local codes.

7.3.3.1.3.1* A staff emergency call shall be turned off only at the station, room, or space from where it originates.

7.3.3.1.4* Code Call. The nurse call system shall include provisions to summon assistance from medical emergency resuscitation teams, in locations set forth in the FGI Guidelines and as required by state and local codes.

7.3.3.1.4.1* A code call shall be turned off only at the station, room, or space from where it originates.

7.3.3.1.5 Call stations located in areas where patients are under constant visual surveillance, such as pre-op, recovery, and emergency units shall be permitted to be limited to the staff emergency call and the code call, and two-way communication with the patient bed location shall not be required.

7.3.3.1.6 Nurse call system provisions shall be provided for geriatric, Alzheimer's, and other dementia units where:

- (1) All call stations shall have tamper-resistant fasteners.
- (2) Provisions shall be made for the removal or covering of call buttons and outlets.
- (3) Call cords or pull strings in excess of 152 mm (6 in.) shall not be permitted.

7.3.3.1.7 Nurse call system provisions shall not be required in psychiatric units, except for psychiatric seclusion ante/exam rooms where staff emergency call stations shall be provided:

- (1) Call stations shall have tamper-resistant fasteners.
- (2) Provisions shall be made for the removal or covering of call buttons and outlets.
- (3) Call cords or pull strings shall not be permitted.
- (4) Control to limit unauthorized use shall be permitted.

7.3.3.1.8 Notification Signals. The nurse call system shall annunciate each call visibly and audibly to all areas to where calls need to be directed and as required by state and local codes.

7.3.3.1.8.1 Notification signals for a code call and staff emergency call shall be individually identifiable and distinct from all other nurse call signals.

7.3.3.1.8.2 Activation of a call station including patient station, bath station, staff emergency station, and code call station shall activate the following notification signals:

- (1) Visual signal in the corridor at the patient room door or care space
- (2) Visual signals at corridor intersections where individual patient room door or care space signals are not directly visible from the associated nursing station
- (3) Visible and audible signals at the nurse master station and associated duty stations
- (4) Visible signals at the calling station from which the call originates
- (5) A visual or aural signal indication at each audio calling station to indicate voice circuit operation

7.3.3.2 Patient Tracking. (Reserved)**7.3.3.3 Equipment and Asset Tracking. (Reserved)****7.3.3.4 Staff and Visitor Tracking. (Reserved)****7.3.3.5 Wireless Phone and Paging Integration.**

N **7.3.3.5.1** Wireless phone and paging systems that are used for enhanced clinical staff communications and that can be integrated with the nurse call system or with a shared interoperable clinical IT network shall provide listed electrical safety and FCC certifications that are appropriate for the intended use.

N **7.3.3.5.2*** Wireless phone and paging systems that are used for enhanced clinical staff communications and notification of nurse call events or interoperable clinical alarm events shall be managed and controlled as described in 7.3.3.7.1.

7.3.3.6 Patient and Equipment Monitoring Systems. (Reserved)**7.3.3.7 Clinical Information Systems.**

N **7.3.3.7.1*** The clinical IT network shall be managed and controlled in accordance with the following:

- (1) The overall responsibility for risk management of the clinical IT network shall be that of the responsible organization.
- (2) The responsible organization shall establish, maintain, and be accountable for the clinical IT network risk management file.
- (3) The health care facility's governing body shall be accountable for all policies, resources, and risk management processes.
- (4) The health care facility's governing body shall appoint a clinical IT network risk manager.
- (5) The clinical IT network risk manager shall be responsible for all duties.
- (6) Manufacturers for each device placed on the clinical IT network shall provide all required documentation.
- (7) The health care facility's governing body shall be accountable for document control and procedures.

N **7.3.3.7.2*** It shall be permitted for the nurse call system to utilize the interoperable clinical IT network provided that the nurse call system is listed to ANSI/UL 1069, *Safety Standard for Hospital Signaling and Nurse Call Equipment*, and identified for use in a shared network environment.

N **7.3.3.7.3*** The clinical IT network shall provide at least two independent pathways where the operational capability of each pathway to each device shall be verified through end-to-end communication.

N **7.3.3.7.3.1** Where one single addressable device is served (e.g., an end-point terminal device with a single connection to the clinical IT network, which is not part of the network infrastructure transporting clinical information between end points), only one pathway shall be required.

N **7.3.3.7.4*** The normal and redundant clinical IT network pathways shall not be permitted to share traffic over the same physical segment.

N **7.3.3.7.5** Conditions that affect the operation of the normal and redundant clinical IT network pathways shall be annunciated as a trouble signal when minimal operational requirements cannot be met.

N **7.3.3.7.6*** Requirements for utilizing the independent redundant network paths and monitoring the operational integrity of the clinical IT network shall be established in the clinical IT network risk management plan maintained by the health care facility's governing body.

N **7.3.3.7.7** An event management process for the clinical IT network shall be documented by the health care facility's governing body and include at least the following:

- (1) Switchover from one pathway to the other when deemed necessary
- (2) Record all negative events and remediation actions
- (3) Report of events, actions, and findings by the clinical IT network risk manager
- (4) Evaluate events, reassess risks, and propose appropriate changes through change-release management processes and, track all corrective and preventive actions

7.3.3.8 Pharmacy. (Reserved)**7.3.3.9 Material Management Information Systems. (Reserved)****7.3.3.10 Electronic Medical Records and Dictation Systems. (Reserved)****7.3.3.11 Medical Imaging Systems. (Reserved)****7.3.3.12 Archiving Systems. (Reserved)****7.3.4 Security Systems.****7.3.4.1 Internet Protocol (IP) Security Cameras Systems. (Reserved)****7.3.4.2 Digital Video Recording. (Reserved)****7.3.4.3 Intrusion Detection Systems. (Reserved)****7.3.4.4 Sitewide Monitoring. (Reserved)****7.3.4.5 Access Control Systems. (Reserved)****7.3.4.6 ID Badging Systems Integrated with Point of Sales Systems. (Reserved)****7.3.4.7 Threat Protection Systems. (Reserved)****7.3.4.8 Parking Access Systems. (Reserved)****7.4 Category 2 Systems.****7.4.1 Information Technology and Communications Systems Infrastructure.**

Δ **7.4.1.1** Requirements for information technology and communications systems infrastructure shall be in accordance with 7.3.1, except as specified in 7.4.1.1.1.

7.4.1.1.1 Redundant pathways and cabling for the backbone distribution system shall not be required.

• **7.4.2 Voice, Data, Communications, and Cable Television Systems.**

7.4.2.1 Voice/Telecommunications. (Reserved)**7.4.2.2 Local Area Networks (LANs). (Reserved)****7.4.2.3 Wireless Local Area Network (LAN) Systems and Public Wifi Hot Spots. (Reserved)**

7.4.2.4 Wireless Voice Systems and In-Building Cellular Networks. (Reserved)

7.4.2.5 Cable Television. (Reserved)

7.4.3 Other Communications Systems.

7.4.3.1 Nurse Call Systems.

7.4.3.1.1 General. The nurse call system shall be in accordance with the requirements in 7.3.3.1.

7.4.3.1.2 Provisions for medical device alarms and code calls shall not be required. (See 7.3.3.1.1.3.)

7.4.3.2 Patient Tracking. (Reserved)

7.4.3.3 Equipment and Asset Tracking. (Reserved)

7.4.3.4 Staff and Visitor Tracking. (Reserved)

7.4.3.5 Wireless Phone and Paging Integration. Wireless phone and paging integration systems shall be in accordance with 7.3.3.5.

7.4.3.6 Patient and Equipment Monitoring Systems. (Reserved)

7.4.3.7 Clinical Information Systems. Clinical information systems shall be in accordance with 7.3.3.7.

7.4.3.8 Electronic Medical Records and Dictation Systems. (Reserved)

7.4.3.9 Medical Imaging Systems. (Reserved)

7.4.3.10 Archiving Systems. (Reserved)

7.4.4 Security Systems.

7.4.4.1 Internet Protocol (IP) Security Cameras Systems. (Reserved)

7.4.4.2 Digital Video Recording. (Reserved)

7.4.4.3 Intrusion Detection Systems. (Reserved)

7.4.4.4 Sitewide Monitoring. (Reserved)

7.4.4.5 Access Control Systems. (Reserved)

7.4.4.6 ID Badging Systems Integrated with Point of Sales Systems. (Reserved)

7.4.4.7 Threat Protection Systems. (Reserved)

7.4.4.8 Parking Access Systems. (Reserved)

7.5 Category 3 Systems.

7.5.1 Information Technology and Communications Systems Infrastructure.

7.5.1.1 Requirements for information technology and communications systems infrastructure shall be in accordance with 7.3.1, with exceptions as noted in 7.5.1.1.1 through 7.5.1.1.4.

7.5.1.1.1 Dual service entrance pathways into the EF are not required.

7.5.1.1.2 Power circuits serving equipment in the EF, the TER, and TRs shall not be required to be connected to the essential electrical system.

7.5.1.1.3 HVAC systems serving the EF, the ER, and TRs shall not be required to be connected to the essential electrical system.

7.5.1.1.4 Redundant pathways and cabling for the backbone distribution system shall not be required.

7.5.2 Voice, Data, Communications, and Cable Television Systems.

7.5.2.1 Voice/Telecommunications. (Reserved)

7.5.2.2 Local Area Networks (LANs). (Reserved)

7.5.2.3 Cable Television. (Reserved)

7.5.3 Other Communications Systems.

7.5.3.1 Nurse Call Systems. (Reserved)

7.5.3.2 Electronic Medical Records and Dictation Systems. (Reserved)

7.5.3.3 Medical Imaging Systems. (Reserved)

7.5.3.4 Archiving Systems. (Reserved)

7.5.4 Security Systems.

7.5.4.1 Internet Protocol (IP) Security Cameras Systems. (Reserved)

7.5.4.2 Digital Video Recording. (Reserved)

7.5.4.3 Intrusion Detection Systems. (Reserved)

7.5.4.4 Access Control Systems. (Reserved)

Chapter 8 Plumbing

8.1 Applicability.

8.1.1 This chapter shall apply to construction of new health care facilities, except as noted in 8.1.2 and 8.1.3.

8.1.2 This chapter shall also apply to the altered, renovated, or modernized portions of existing systems or individual components.

8.1.3 Existing construction or equipment shall be permitted to be continued in use when such use does not constitute a distinct hazard to life.

8.2 System Category Criteria. The health care facility's governing body that has the responsibility for the building system components as identified in this chapter shall designate, in accordance with the function of each space, building system categories in accordance with Sections 4.1 and 4.2.

8.2.1* The category of risk applied to each plumbing system serving a space shall be independent of the category of risk applied to other systems serving that same space.

8.3 General Requirements.

8.3.1 Potable Water. Potable water systems shall comply with applicable plumbing codes and FGI Guidelines.

8.3.2 Nonpotable Water. Nonpotable water systems shall comply with applicable plumbing codes and FGI Guidelines.

8.3.3* Water Heating. Maximum hot water temperatures shall comply with applicable plumbing codes and FGI Guidelines.

8.3.4 Water Conditioning. Water shall be treated or heated to control pathogens in the water.

8.3.5 Nonmedical Compressed Air.

8.3.5.1 Nonmedical air compressors shall be listed or approved.

8.3.5.2 Nonmedical compressed air shall not be used for powering medical instruments or for human respiration.

8.3.5.3 Nonmedical compressed air shall meet the quality and pressure requirements of the equipment connected to the system.

8.3.6 Special Use Water Systems. When special use water systems are required, application of FGI Guidelines or the applicable ANSI-reviewed standard shall be followed.

8.3.7 Grease Interceptors.

8.3.7.1 Sizing for grease interceptors shall be permitted in accordance with local plumbing codes or an engineered calculation factoring meals served per day.

Δ 8.3.8 Fixtures. Plumbing fixtures shall be in accordance with FGI Guidelines.

8.3.9 Black Waste Water. Black waste water shall be discharged to a sanitary sewer or private on-site waste treatment system as permitted by applicable plumbing codes.

8.3.10 Gray Waste Water.

8.3.10.1 Gray waste water shall be permitted to be stored on-site and used for nonpotable water systems as permitted by applicable plumbing codes.

8.3.10.2 Gray waste water shall not be used for any system that aerosolizes the water in a breathing zone or has direct contact with humans.

8.3.10.3 Excess gray waste water shall be discharged to a sanitary sewer or private on-site waste treatment system as permitted by applicable plumbing codes.

8.3.11 Clear Waste Water.

8.3.11.1 Clear waste water shall be permitted to be stored on-site and used for nonpotable water systems as permitted by applicable plumbing codes.

8.3.11.2 Clear waste water that has been treated to potable water standards shall be permitted to be used as nonpotable water.

8.3.11.3 Clear waste water that has not been treated to potable water standards shall not be used for any system that aerosolizes the water in a breathing zone or has direct contact with humans.

8.3.11.4 Excess clear waste water shall be discharged to a storm sewer, held in detention ponds, or recharged into the water table as permitted by applicable plumbing codes.

8.3.12 Drainage Systems. Drainage systems shall comply with applicable plumbing codes and FGI Guidelines.

8.4 Category 1. (Reserved)

8.5 Category 2. (Reserved)

8.6 Category 3. (Reserved)

Chapter 9 Heating, Ventilation, and Air Conditioning (HVAC)

9.1 Applicability.

9.1.1 This chapter shall apply to construction of new health care facilities, except as noted in 9.1.2 and 9.1.3.

9.1.2 This chapter shall also apply to the altered, renovated, or modernized portions of existing systems or individual components.

9.1.3 Existing construction or equipment shall be permitted to be continued in use when such use does not constitute a distinct hazard to life.

9.2 System Category Criteria. The health care facility's governing body that has the responsibility for the building system components as identified in this chapter shall designate, in accordance with the function of each space, building system categories in accordance with Sections 4.1 and 4.2.

9.2.1* The category of risk applied to each HVAC system serving a space shall be independent of the category of risk applied to other systems serving that same space.

9.3 General.

9.3.1 Heating, Cooling, Ventilating, and Process Systems.

9.3.1.1 Heating, cooling, ventilating, and process systems serving spaces or providing health care functions covered by this code or listed within ASHRAE 170, *Ventilation of Health Care Facilities*, shall be provided in accordance with ASHRAE 170, and as amended by Sections 9.4 through 9.6.

Δ 9.3.1.2 Laboratories shall comply with NFPA 45.

9.3.1.3* Windowless Anesthetizing Locations. Anesthetizing locations shall not be required to have a smoke purge system.

9.3.2 Energy Conservation. Heating, cooling, and ventilating systems serving spaces or providing health care functions covered by this code shall comply with ASHRAE 90.1, *Energy Standard for Buildings Except Low-Rise Residential Buildings*, or another locally adopted energy code.

9.3.3 Commissioning.

9.3.3.1 Heating, cooling, ventilating, and process systems serving spaces or providing health care functions covered by this code shall be commissioned in accordance with ASHRAE 90.1, *Energy Standard for Buildings Except Low-Rise Residential Buildings*.

9.3.3.2* Commissioning shall follow any publically reviewed document acceptable to the authority having jurisdiction.

9.3.4 Piping. Heating, cooling, ventilating, and process systems serving spaces or providing health care functions covered by this code shall utilize piping systems complying with applicable mechanical codes.

Δ 9.3.5 Ductwork. Heating, cooling, ventilating, and process systems serving spaces or providing health care functions covered by this code shall utilize ductwork systems complying with NFPA 90A or applicable mechanical codes.

9.3.6 Medical Gas Storage or Transfilling.

▲ **9.3.6.1** All gases, other than medical gases, shall be provided with ventilation per NFPA 55.

▲ **9.3.6.2** Outdoor storage/installations for medical gases and cryogenic fluids shall be provided with ventilation per NFPA 55.

9.3.6.3* Medical gases and cryogenic fluids that are in use per Chapter 11 shall not require special ventilation.

▲ **9.3.6.4** Transfilling area shall be provided with ventilation in accordance with NFPA 55.

9.3.6.5 Indoor storage or manifold areas and storage or manifold buildings for medical gases and cryogenic fluids shall be provided with natural ventilation or mechanical exhaust ventilation in accordance with 9.3.6.5.1 through 9.3.6.8.

9.3.6.5.1* For the purposes of this section the volume of fluid (gas and liquid) to be used in determining the ventilation requirements shall be the volume of the stored fluid when expanded to standard temperature and pressure (STP) of either the largest single vessel in the enclosed space or of the entire volume of the connected vessels that are on a common manifold in the enclosed space, whichever is larger.

9.3.6.5.2 Natural Ventilation.

9.3.6.5.2.1 Natural ventilation shall consist of two nonclosable louvered openings, each having an aggregate free opening area of at least 155 cm²/35 L (24 in.²/1000 ft³) of the fluid designed to be stored in the space and in no case less than 465 cm² (72 in.²).

9.3.6.5.2.2 One opening shall be located within 30 cm (1 ft) of the floor, and one shall be located within 30 cm (1 ft) of the ceiling.

9.3.6.5.2.3 The openings shall be located to ensure cross ventilation.

9.3.6.5.2.4 Natural ventilation openings shall be directly to the outside atmosphere without ductwork.

9.3.6.5.2.5 Mechanical ventilation shall be provided if natural ventilation requirements cannot be met.

9.3.6.5.3 Mechanical Ventilation.

9.3.6.5.3.1 Mechanical exhaust to maintain a negative pressure in the space shall be provided continuously, unless an alternative design is approved by the authority having jurisdiction.

9.3.6.5.3.2 Mechanical exhaust shall be at a rate of 1 L/sec of airflow for each 300 L (1 cfm per 5 ft³ of fluid) designed to be stored in the space and not less than 24 L/sec (50 cfm) nor more than 235 L/sec (500 cfm).

9.3.6.5.3.3 Mechanical exhaust inlets shall be unobstructed and shall draw air from within 300 mm (1 ft) of the floor and adjacent to the cylinder or containers.

9.3.6.5.3.4 Mechanical exhaust air fans shall be supplied with electrical power from the essential electrical system. Where an essential electrical system is not provided, a risk assessment shall be conducted to determine if continuous ventilation shall be provided by alternate means.

9.3.6.5.3.5 Dedicated exhaust systems shall not be required, provided that the system does not connect to spaces that contain combustible or flammable materials.

9.3.6.5.3.6 The exhaust duct material shall be noncombustible.

▲ **9.3.6.5.3.7** A means of make-up air shall be provided according to one of the following:

- (1) Air shall be permitted via noncombustible ductwork to be transferred from adjacent spaces, from outside the building, or from spaces that do not contain combustible or flammable materials.
- (2) Air shall be permitted to be transferred from a corridor under the door up to the greater of 24 L/sec (50 cfm) or 15 percent of the room exhaust in accordance with NFPA 90A.
- (3) Supply air shall be permitted to be provided from any building ventilation system that does not contain flammable or combustible vapors.

▲ **9.3.6.6** Discharge from the natural and mechanical ventilation systems shall be sited by a minimum separation distance in accordance with NFPA 55.

9.3.6.7 A storage room shall maintain a temperature not greater than 52°C (125°F).

9.3.6.8 A transfer or manifold room shall maintain a temperature not greater than 52°C (125°F) and not less than -7°C (20°F).

9.3.7 Waste Gas.

9.3.7.1 Removal of excess anesthetic gases from the anesthesia circuit shall be accomplished by waste anesthetic gas disposal (WAGD), as described in Chapter 5, or by an active or passive scavenging ventilation system.

9.3.7.1.1 Active Systems. A dedicated exhaust system with an exhaust fan shall be provided to interconnect all of the anesthesia gas circuits to provide sufficient airflow and negative pressure in the gas disposal tubing so that cross contamination does not occur in the other circuits connected to the system.

9.3.7.1.2 Passive Systems.

9.3.7.1.2.1 A dedicated exhaust system with an exhaust fan shall be provided to exhaust snorkels at all of the anesthesia gas circuits to provide sufficient airflow to capture the gases, vapors, and particles expelled from the gas disposal tubing.

9.3.7.1.2.2 The snorkel shall include a minimum 25.4 mm (1 in.) diameter tubing connected to the exhaust system.

9.3.7.2 All the exhausted air shall be vented to the external atmosphere.

9.3.7.3 The excess anesthetic gases shall be deposited into the exhaust stream either at the exhaust grille or further downstream in the exhaust duct.

9.3.8 Medical Plume Evacuation.

■ **9.3.8.1*** Plumes from medical procedures, including the use of lasers, shall be captured by one of the following methods:

- (1)* Dedicated exhaust system that discharges in accordance with 9.3.8.2
- (2) Connection and return or exhaust duct after air cleaning through HEPA and gas phase filtration

- (3) Point of use smoke evacuator for air cleaning and return to the space

N 9.3.8.2 The exhaust shall be located as follows:

- (1) Outdoors
- (2) At least 7.5 m (25 ft) from any door, window, air intake, or other openings in buildings or places of public assembly
- (3) At an elevation different from air intakes
- (4) Where prevailing winds, adjacent buildings, topography, or other influences will not divert the exhaust into occupied areas or prevent dispersion of the exhaust

Δ 9.3.9 Emergency Power System Room. Heating, cooling, and ventilating of the emergency power system shall be in accordance with NFPA 110.

Δ 9.3.10 Ventilation During Construction. Ventilation during construction shall comply with FGI Guidelines.

9.4 Category 1. (Reserved)

9.5 Category 2. (Reserved)

9.6 Category 3. (Reserved)

Chapter 10 Electrical Equipment

10.1* Applicability.

Δ 10.1.1 This chapter shall apply to the performance, maintenance, and testing of electrical equipment in **new and existing** health care facilities.

10.1.2 Experimental or research apparatus built to order or under development shall be used under qualified supervision and shall have a degree of safety that is equivalent to that described herein or that has been deemed acceptable by the facility.

10.1.3* Reserved.

10.2 Performance Criteria and Testing for Patient Care-Related Electrical Appliances and Equipment.

10.2.1 Permanently Connected — Fixed Equipment. Patient-connected electric appliances shall be grounded to the equipment grounding bus in the distribution panel by an insulated grounding conductor run with the power conductors.

10.2.2 Cord- and Plug-Connected — Portable Equipment.

10.2.2.1 Grounding of Appliances.

10.2.2.1.1 All cord-connected electrically powered appliances that are not double insulated and are used in the patient care vicinity shall be provided with a three-wire power cord and a three-pin grounding-type plug.

10.2.2.1.2 Double-insulated appliances shall be permitted to have two conductor cords and shall be rated as Class II devices.

10.2.2.2 Attachment Plugs. Attachment plugs listed for the purpose shall be used on all cord-connected appliances.

10.2.2.3 Construction and Use. The attachment plug shall be a two-pole, three-wire grounding type.

10.2.2.3.1 Appliances supplied by other than 120-V single-phase systems shall use the grounding-type plug (cap) appropriate for the particular power system.

10.2.2.3.2 The grounding prong of the plug shall be the first to be connected to, and the last to be disconnected from, the receptacle.

10.2.2.3.3 If screw terminals are used, the stranded conductor shall be twisted to prevent stray strands, but the bundle shall not be tinned after twisting.

10.2.2.3.4 If the conductor is not twisted, it shall be attached by an approved terminal lug.

10.2.2.3.5 The power cord conductors shall be arranged so that the conductors are not under tension in the plug.

10.2.2.3.6 The grounding conductor shall be the last one to disconnect when a failure of the plug's strain relief allows the energized conductors to be disrupted.

10.2.2.3.7 Strain Relief. Strain relief shall be provided.

10.2.2.3.7.1 The strain relief shall not cause thinning of the conductor insulation.

10.2.2.3.7.2 The strain relief of replaceable plugs shall be capable of being disassembled.

10.2.2.3.7.3 Plugs shall be permitted to be integrally molded onto the cord jacket if the design is listed for the purpose.

10.2.2.3.8 Testing. The wiring of each cord assembly shall be tested for continuity and polarity at the time of manufacture, when assembled into an appliance, and when repaired.

10.2.3 Power Cords.

10.2.3.1 Material and Gauge.

Δ 10.2.3.1.1 The flexible cord, including the grounding conductor, shall be of a type suitable for the particular application; shall be listed for use at a voltage equal to or greater than the rated power line voltage of the appliance; and shall have an ampacity, as given in Table 400.5(A) of *NFPA 70* equal to or greater than the current rating of the device.

10.2.3.1.2 "Hard Service" (SO, ST, or STO), "Junior Hard Service" (SJO, SJT, or SJTO), or equivalent listed flexible cord shall be used, except where an appliance with a cord of another designation has been listed for the purpose.

10.2.3.2 Grounding Conductor.

10.2.3.2.1 Each electric appliance shall be provided with a grounding conductor in its power cord.

10.2.3.2.2 The grounding conductor shall be not smaller than 18 AWG.

10.2.3.2.3 The grounding conductor of cords longer than 4.6 m (15 ft) shall be not smaller than 16 AWG.

10.2.3.2.4* A grounding conductor in the power cord shall not be required for double-insulated appliances, but a functional ground conductor (functional earth conductor) shall be permitted.

10.2.3.3 Detachable Power Cords.

10.2.3.3.1 A detachable power cord shall be permitted if an accidental disconnection would not present an unacceptable hazard or if a mechanism that reliably prevents inadvertent disconnection is used.

10.2.3.3.2 Detachable power cords shall be designed so that the grounding conductor is the first to be connected and the last to be disconnected.

10.2.3.3.3 The cord set to the appliance shall be listed for the purpose.

10.2.3.4 Connection to Circuit and Color Codes.

10.2.3.4.1 Power cords, regardless of whether intended for use on grounded or isolated power systems, shall be connected in accordance with the conventions of a grounded system.

10.2.3.4.2 The circuit conductors in the cord shall be connected to the plug and the wiring in the appliance so that any of the following devices, when used in the primary circuit, are connected to the ungrounded conductor:

- (1) Center contact of an Edison base lampholder
- (2) Solitary fuseholder
- (3) Single-pole, overcurrent protective device
- (4) Any other single-pole, current-interrupting device

10.2.3.4.3 A second fuseholder or other overcurrent protective device provided in the appliance shall be permitted to be placed in the grounded side of the line.

10.2.3.5 Cord Strain Relief.

10.2.3.5.1 Cord strain relief shall be provided at the attachment of the power cord to the appliance so that mechanical stress, either pull, twist, or bend, is not transmitted to internal connections.

10.2.3.5.2 A strain relief molded onto the cord shall be bonded to the jacket and shall be of compatible material.

Δ 10.2.3.6* Relocatable Power Taps. Relocatable power taps shall be permitted to be used to supply power to plug-connected components of a movable equipment assembly that is pole-, rack-, table-, pedestal-, or cart-mounted, provided that all of the following conditions are met:

- (1)* The receptacles are securely attached to the equipment assembly.
- (2)* The sum of the ampacity of all appliances connected to the outlets does not exceed 75 percent of the ampacity of the flexible cord supplying the outlets.
- (3) The ampacity of the flexible cord is in accordance with *NFPA 70*.
- (4) The electrical and mechanical integrity of the assembly and its securement method are regularly verified and documented.

10.2.4 Adapters and Extension Cords.

10.2.4.1 Three-prong to two-prong adapters shall not be permitted.

10.2.4.2 Adapters and extension cords meeting the requirements of 10.2.4.2.1 through 10.2.4.2.3 shall be permitted.

10.2.4.2.1 All adapters shall be listed for the purpose.

10.2.4.2.2 Attachment plugs and fittings shall be listed for the purpose.

10.2.4.2.3 The cabling shall comply with 10.2.3.

10.2.5 Leakage Current — Fixed Equipment. The leakage current flowing through the ground conductor of the power supply connection to ground of permanently wired appliances

installed in Category 1 or Category 2 spaces shall not exceed 10.0 mA (ac or dc) with all grounds lifted.

10.2.6* Touch Current — Portable Equipment. The touch current for cord connected equipment shall not exceed 500 μ A with normal polarity and the ground wire disconnected (if a ground wire is provided).

10.3 Testing Requirements — Patient Care-Related Electrical Appliances and Equipment.

10.3.1* Physical Integrity. The physical integrity of the power cord assembly composed of the power cord, attachment plug, and cord-strain relief shall be confirmed by visual inspection.

10.3.2* Resistance.

10.3.2.1 For appliances that are used in the patient care vicinity, the resistance between the appliance chassis, or any exposed conductive surface of the appliance, and the ground pin of the attachment plug shall be less than 0.50 ohm under the following conditions:

- (1) The cord shall be flexed at its connection to the attachment plug or connector.
- (2) The cord shall be flexed at its connection to the strain relief on the chassis.

Δ 10.3.2.2 The requirement of 10.3.2.1 shall not apply to accessible metal parts that achieve separation from main parts by insulation or metallic screening or that are unlikely to become energized (e.g., escutcheons or nameplates, small screws).

10.3.3* Leakage Current Tests.

10.3.3.1 General.

10.3.3.1.1 The requirements in 10.3.3.2 through 10.3.3.4 shall apply to all tests.

10.3.3.1.2 Tests shall be performed with the power switch ON and OFF.

10.3.3.2 Resistance Test. The resistance tests of 10.3.2 shall be conducted before undertaking any leakage current measurements.

10.3.3.3* Techniques of Measurement. The test shall not be made on the load side of an isolated power system or separable isolation transformer.

10.3.3.4 Leakage and Touch Current Limits. The leakage and touch current limits in 10.2.5 and 10.2.6 shall be followed.

10.3.4 Leakage Current — Fixed Equipment.

10.3.4.1 Permanently wired appliances in the patient care vicinity shall be tested prior to installation while the equipment is temporarily insulated from ground.

10.3.5 Touch Current — Portable Equipment.

10.3.5.1 If multiple devices are connected together and one power cord supplies power, the touch current shall be measured as an assembly.

10.3.5.2 When multiple devices are connected together and more than one power cord supplies power, the devices shall be separated into groups according to their power supply cord, and the touch current shall be measured independently for each group as an assembly.

10.3.5.3 Touch Leakage Test Procedure. Measurements shall be made using the circuit, such as the one illustrated in Figure 10.3.5.3, with the appliance ground broken in two modes of appliance operation as follows:

- (1) Power plug connected normally with the appliance on
- (2) Power plug connected normally with the appliance off (if equipped with an on/off switch)

10.3.5.3.1 If the appliance has fixed redundant grounding (e.g., permanently fastened to the grounding system), the touch leakage current test shall be conducted with the redundant grounding intact.

10.3.6* Lead Leakage Current Tests and Limits — Portable Equipment.

10.3.6.1 The leakage current between all patient leads connected together and ground shall be tested with the power plug connected normally and the device powered on.

10.3.6.2 The leakage current between all patient leads connected together and ground shall be measured with the ground switch open and with the ground switch closed.

10.3.6.3 An acceptable test configuration shall be as illustrated in Figure 10.3.6.3.

10.3.6.4 The leakage current shall not exceed 100 μ A for ground wire closed and 500 μ A ac for ground wire open.

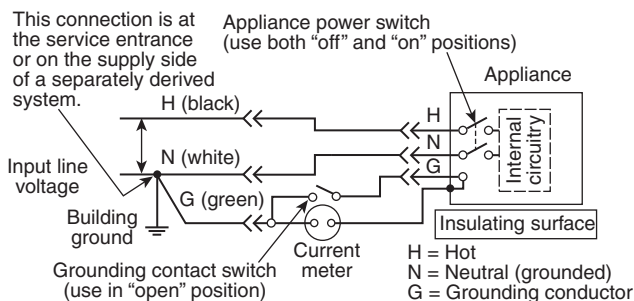


FIGURE 10.3.5.3 Example Test Circuit for Measuring Touch Leakage Current.

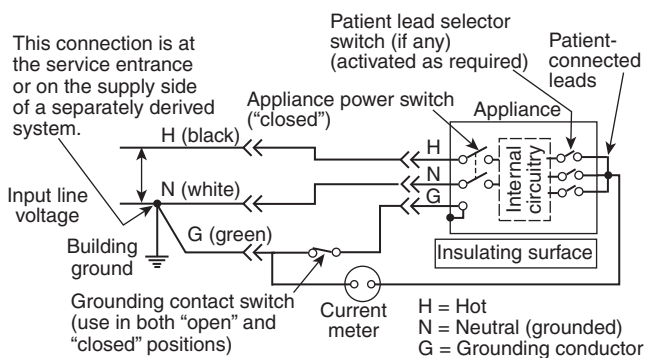


FIGURE 10.3.6.3 Test Circuit for Measuring Leakage Current Between Patient Leads and Ground — Nonisolated.

10.4 Nonpatient Electrical Appliances and Equipment.

10.4.1 Permanently Connected — Fixed. (Reserved)

10.4.2 Cord- and Plug-Connected — Portable Equipment in Patient Care Vicinity.

10.4.2.1 Nonpatient care-related electrical equipment, including facility- or patient-owned appliances that are used in the patient care vicinity and will, in normal use, contact patients, shall be visually inspected by the patient's care staff or other personnel.

10.4.2.2 Any equipment that appears not to be in proper working order or in a worn condition shall be removed from service or reported to the appropriate maintenance staff.

10.4.2.3 Household or office appliances not commonly equipped with grounding conductors in their power cords shall be permitted, provided that they are not located within the patient care vicinity. Double-insulated appliances shall be permitted in the patient care vicinity.

10.5 Administration.

10.5.1 Responsibilities of the Health Care Facility's Governing Body. (Reserved)

10.5.2 Policies.

10.5.2.1 Testing Intervals.

10.5.2.1.1 The facility shall establish policies and protocols to identify what patient care-related electrical equipment requires periodic inspection and, where applicable, the type of test and intervals of testing.

10.5.2.1.2 All patient care-related electrical equipment used in the patient care vicinity shall be tested in accordance with 10.3.5.3 or 10.3.6 before being put into service for the first time and after any repair or modification that might have compromised electrical safety.

10.5.2.2* Protection of Patients with Direct Electrical Pathways to the Heart. Only equipment that is specifically designed for the purpose [i.e., provided with suitable isolated patient leads or connections (cardiac floating, also known as CF, according to ANSI/AAMI ES60601-1, *Medical Electrical Equipment*)] shall be connected directly to electrically conductive pathways to a patient's heart.

10.5.2.3 Adapters and Extension Cords.

10.5.2.3.1 Adapters and extension cords meeting the requirements of 10.2.4 shall be permitted to be used.

10.5.2.3.2 Three- to two-prong adapters shall not be permitted.

10.5.2.3.3 The wiring shall be tested for all of the following:

- (1) Physical integrity
- (2) Polarity
- (3) Continuity of grounding at the time of assembly and periodically thereafter

10.5.2.4 Devices Likely to Be Used During Defibrillation. Devices that are critical to patient safety and that are likely to be attached to the patient when a defibrillator is used (such as ECG monitors) shall be marked as “defibrillation proof,” as defined in ANSI/AAMI ES60601-1, *Medical Electrical Equipment*.

10.5.2.5* System Demonstration. Any system consisting of several electric appliances shall be demonstrated to comply with this code as a complete system.

10.5.2.6 Appliances Not Provided by the Facility. Policies shall be established for the control of appliances not supplied by the facility.

10.5.3 Servicing and Maintenance of Equipment.

10.5.3.1 The manufacturer of the appliance shall furnish documents containing at least a technical description, instructions for use, and a means of contacting the manufacturer.

10.5.3.2 The documents specified in 10.5.3.1 shall include the following, where applicable:

- (1) Illustrations that show the location of controls
- (2) Explanation of the function of each control
- (3) Illustrations of proper connection to the patient or other equipment, or both
- (4) Step-by-step procedures for testing and proper use of the appliance
- (5) Safety considerations in use and servicing of the appliance
- (6) Precautions to be taken if the appliance is used on a patient simultaneously with other electric appliances
- (7) Schematics, wiring diagrams, mechanical layouts, parts lists, and other pertinent data for the appliance
- (8) Instructions for cleaning, disinfection, or sterilization
- (9) Utility supply requirements (electrical, gas, ventilation, heating, cooling, and so forth)
- (10) Explanation of figures, symbols, and abbreviations on the appliance
- (11) Technical performance specifications
- (12) Instructions for unpacking, inspection, installation, adjustment, and alignment
- (13) Preventive and corrective maintenance, inspection, and repair procedures

10.5.4 Administration of Oxygen Therapy.

10.5.4.1 Electrical Equipment in Oxygen-Enriched Atmospheres. Appliances, or a part(s) of an appliance or a system (e.g., pillow speaker, remote control, pulse oximeter probe), to be used in the site of intentional expulsion shall comply with one of the following:

- (1) They shall be listed for use in oxygen-enriched atmospheres.
- (2) They shall be sealed so as to prevent an oxygen-enriched atmosphere from reaching electrical components, with sealing material of the type that will still seal even after repeated exposure to water, oxygen, mechanical vibration, and heating from the external circuitry.
- (3) They shall be ventilated so as to limit the oxygen concentration surrounding electrical components to below 23.5 percent by volume.
- (4) They shall have both of the following characteristics:
 - (a) No hot surfaces over 300°C (573°F), except for small (less than 2 W) hermetically sealed heating elements, such as light bulbs

- (b) No exposed switching or sparking points of electrical energy that fall to the right of the curve for the appropriate type of circuit illustrated in Figure 10.5.4.1(a) through Figure 10.5.4.1(f), with the dc (or peak ac) open-circuit voltage and short-circuit current required to be used

10.5.4.2 When only the remote control or signal leads of a device are to be used in the site of intentional expulsion, only the control or signal leads shall be required to comply with 10.5.4.1.

10.5.4.3 Subparagraphs 10.5.4.1 and 10.5.4.2 shall not apply to small (less than 2 W), hermetically sealed heating elements such as light bulbs.

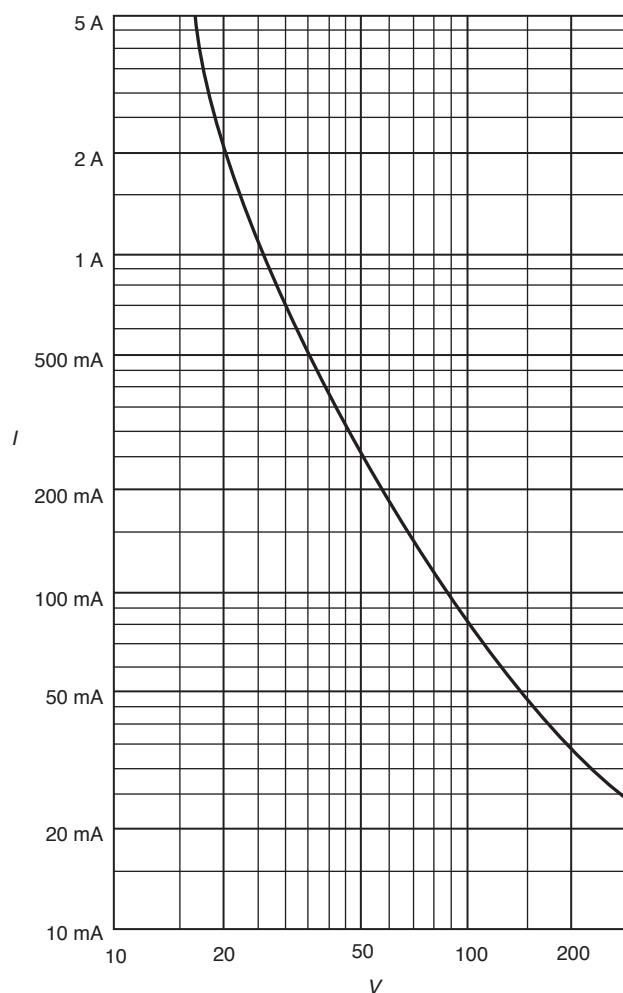


FIGURE 10.5.4.1(a) Resistance Circuits ($L < 1$ mH): Minimum Igniting Currents, Applicable to All Circuits Containing Cadmium, Zinc, or Magnesium.

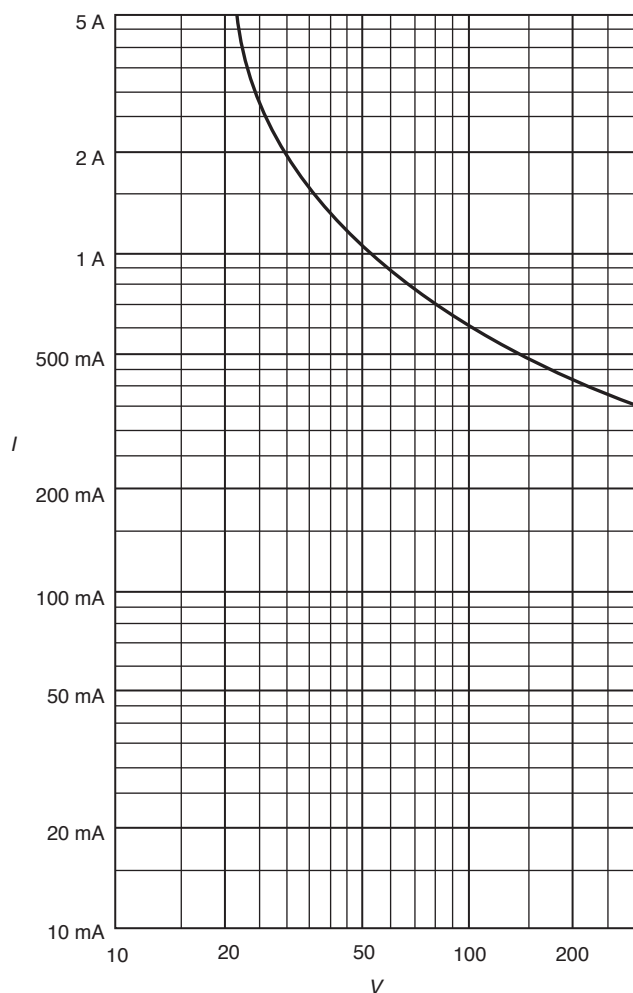


FIGURE 10.5.4.1(b) Resistance Circuits ($L < 1$ mH): Minimum Igniting Currents, Applicable to Circuits Where Cadmium, Zinc, or Magnesium Can Be Excluded.

10.5.4.4 Electrical equipment sold with the intent to be used in oxygen-enriched atmospheres shall be listed for use in oxygen-enriched atmospheres.

10.5.4.5* Electrical equipment used within oxygen delivery equipment shall be listed for use in oxygen-enriched atmospheres in accordance with ANSI/AAMI ES 60601-1, *Medical Electrical Equipment*.

10.5.4.6* High-energy-delivering probes (such as defibrillator paddles) or other electrical devices that do not comply with 10.5.4.1 and 10.5.4.2, that are deemed essential to the care of an individual patient, and that must be used within an administration site or within oxygen-delivery equipment shall be permitted.

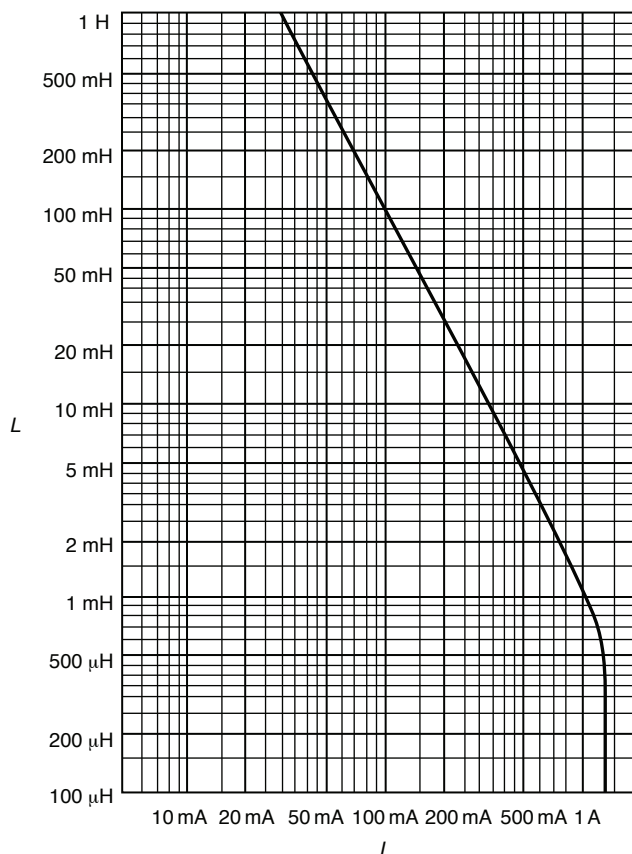


FIGURE 10.5.4.1(c) Inductance Circuits ($L > 1$ mH): Minimum Igniting Currents at 24 V, Applicable to All Circuits Containing Cadmium, Zinc, or Magnesium.

10.5.5 Laboratory.

10.5.5.1* The laboratory shall establish policies and protocols for the type of test and intervals of testing for appliances.

10.5.6 Record Keeping — Patient Care Appliances.

10.5.6.1 Instruction Manuals.

10.5.6.1.1 Instruction and maintenance manuals shall be accessible to the group responsible for the maintenance of the appliance.

10.5.6.1.2 Instruction and user maintenance manuals shall be accessible to the user.

10.5.6.1.3 Any safety labels and condensed operating instructions on an appliance shall be maintained in legible condition.

10.5.6.2* Documentation.

10.5.6.2.1 A record shall be maintained of the tests required by this chapter and associated repairs or modifications.

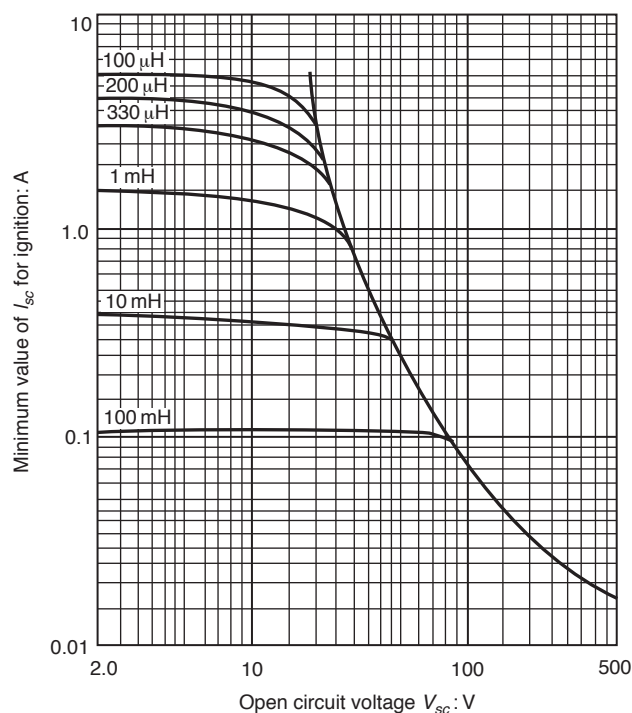


FIGURE 10.5.4.1(d) Inductance Circuits ($L > 1 \text{ mH}$): Minimum Igniting Currents for Various Voltages, Applicable to All Circuits Containing Cadmium, Zinc, or Magnesium.

10.5.6.2.2 At a minimum, the record shall contain all of the following:

- (1) Date
- (2) Unique identification of the equipment tested
- (3) Indication of which items have met or have failed to meet the performance requirements of **Section 10.2**

10.5.6.3 Records Retention. The records shall be maintained and kept for a period of time in accordance with a health care facility's record retention policy.

10.5.7 Use. (Reserved)

10.5.8 Qualification and Training of Personnel.

10.5.8.1* Personnel concerned for the application or maintenance of electric appliances shall be trained on the risks associated with their use.

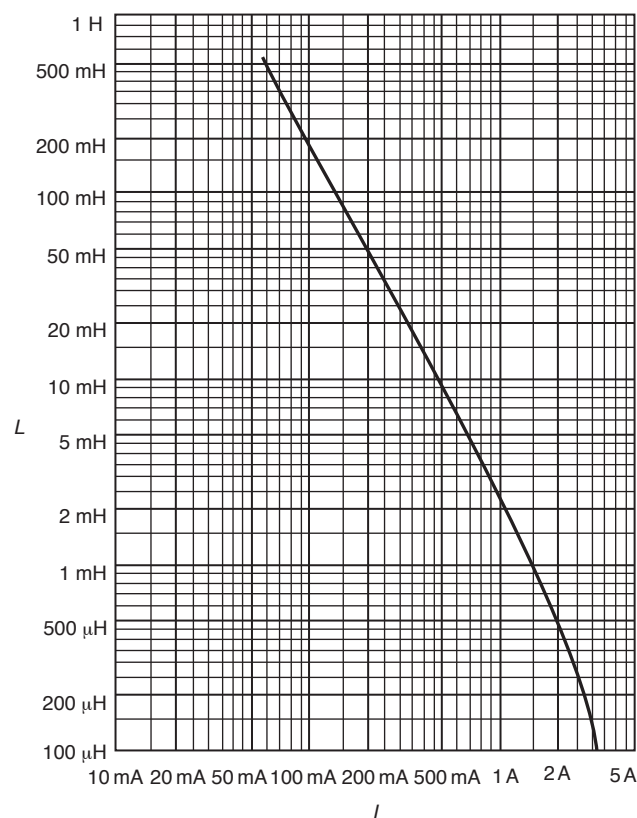


FIGURE 10.5.4.1(e) Inductance Circuits ($L > 1 \text{ mH}$): Minimum Igniting Currents at 24 V, Applicable Only to Circuits Where Cadmium, Zinc, or Magnesium Can Be Excluded.

10.5.8.1.1 The health care facilities shall provide programs of continuing education for its personnel.

10.5.8.1.2 Continuing education programs shall include periodic review of manufacturers' safety guidelines and usage requirements for electrosurgical units and similar appliances.

10.5.8.2 Personnel involved in the use of energy-delivering devices including, but not limited to, electrosurgical, surgical laser, and fiber-optic devices shall receive periodic training in fire prevention and suppression.

10.5.8.3* Equipment shall be serviced by qualified personnel only.

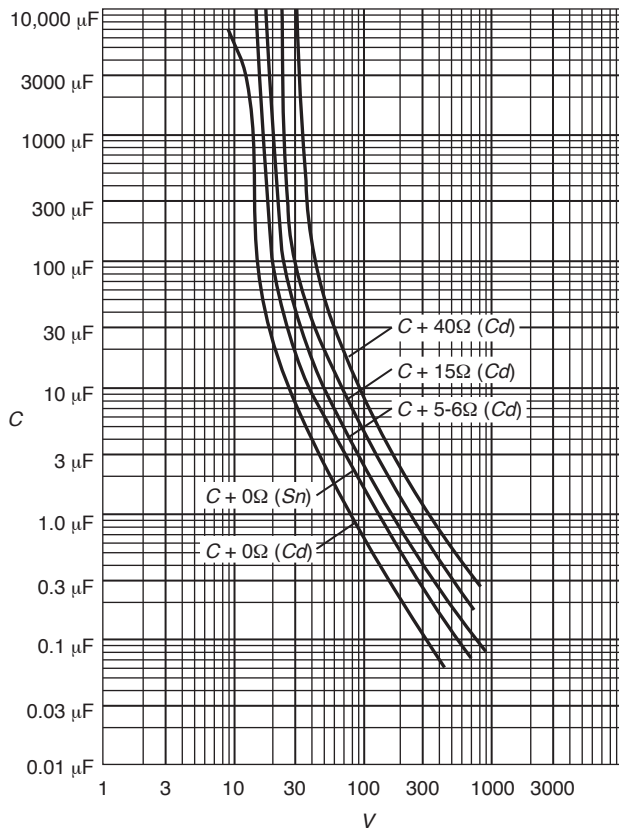


FIGURE 10.5.4.1(f) Capacitance Circuits Minimum Ignition Voltages. (The curves correspond to values of current-limiting resistance as indicated. The curve marked *Sn* is applicable only where cadmium, zinc, or magnesium can be excluded.)

Chapter 11 Gas Equipment

11.1 Applicability.

▲ 11.1.1 This chapter shall apply to the performance, maintenance, and testing of gas equipment in new and existing health care facilities.

11.1.2* This chapter shall apply to the use, at normal atmospheric pressure, of all of the following:

- (1) Nonflammable medical gases
- (2) Vapors and aerosols
- (3) Equipment required for the administration of 11.1.2(1) and 11.1.2(2)

11.1.3 When used in this chapter, the term *oxygen* shall be intended to mean oxygen USP as well as mixtures of oxygen and air.

11.1.4* This chapter shall not apply to special atmospheres, such as those encountered in hyperbaric chambers.

11.1.5* **Reserved.**

11.2 Cylinder and Container Source.

11.2.1 Cylinders and containers shall comply with 5.1.3.1.

11.2.2 Cylinder valve outlet connections shall conform to the mandatory requirements of CGA V-1, *Standard for Compressed*

Gas Cylinder Valve Outlet and Inlet Connections (ANSI B57.1) (includes Pin-Index Safety System for medical gases). (See 5.1.3.1.4.)

11.2.3 When low pressure threaded connections are employed, they shall be in accordance with the mandatory requirements of CGA V-5, *Diameter-Index Safety System (Noninterchangeable Low Pressure Connections for Medical Gas Applications)*, for noninterchangeable, low pressure connections for medical gases, air, and suction.

11.2.4 Low pressure quick coupler connections shall be noninterchangeable between gas services.

11.2.5 Pressure reducing regulators and gauges intended for use in high pressure service shall be listed for such service.

11.2.6 Pressure-reducing regulators shall be used on high-pressure cylinders to reduce the cylinder pressure to operating pressures.

11.2.7 Approved pressure reducing regulators or other gas-flow control devices shall be used to reduce the cylinder pressure of every cylinder used for medical purposes. All such devices shall have connections so designed that they attach only to cylinders of gas for which they are designated.

11.2.8* Equipment that could allow the intermixing of different gases, either through defects in the mechanism or through error in manipulation in any portion of the high pressure side of any system in which these gases might flow, shall not be used for joining cylinders containing compressed gases.

11.2.9 Cylinder valve outlet connections for oxygen shall be Connection No. 540 or Connection No. 870 as described in the mandatory requirements of CGA V-1, *Standard for Compressed Gas Cylinder Valve Outlet and Inlet Connections* (ANSI B57.1).

11.2.10 Cylinder valve outlet connections for nitrous oxide shall be Connection No. 326 or Connection No. 910 as described in the mandatory requirements of CGA V-1, *Standard for Compressed Gas Cylinder Valve Outlet and Inlet Connections* (ANSI B57.1).

11.3 Cylinder and Container Storage Requirements.

■ 11.3.1 For the purpose of this section, the health care facility's governing body shall define criteria for determining full cylinders and containers.

■ 11.3.2 Full cylinders and containers shall be stored in accordance with this section.

■ 11.3.3 Full cylinders and containers shall be segregated from all others.

11.3.4* Storage for nonflammable gases equal to or greater than 85 m³ (3000 ft³) at STP shall comply with 5.1.3.3.2 and 5.1.3.3.3 unless such installations are approved existing installations, which shall be permitted to be continued in service.

11.3.5* Storage for nonflammable gases greater than 8.5 m³ (300 ft³), but less than 85 m³ (3000 ft³), at STP shall comply with the requirements in 11.3.5.1 through 11.3.5.7.

11.3.5.1 Storage locations shall be outdoors in an enclosure or within an enclosed interior space of noncombustible or limited-combustible construction, with doors (or gates outdoors) that can be secured against unauthorized entry.

▲ 11.3.5.2 Oxidizing gases such as oxygen and nitrous oxide shall not be stored with any flammable gas, liquid, or vapor.

▲ 11.3.5.3 Oxidizing gases such as oxygen and nitrous oxide shall be separated from combustibles or flammable materials by one of the following:

- (1) Minimum distance of 6.1 m (20 ft)
- (2) Minimum distance of 1.5 m (5 ft) if the entire storage location is protected by an automatic sprinkler system designed in accordance with NFPA 13
- (3) A gas cabinet constructed per NFPA 30 or NFPA 55, if the entire storage location is protected by an automatic sprinkler system designed in accordance with NFPA 13

• 11.3.5.4 Cylinder and container storage locations shall comply with 5.1.3.2.12 with respect to temperature limitations.

11.3.5.5 Cylinder or container restraints shall comply with 11.6.2.3.

11.3.5.6 Smoking, open flames, electric heating elements, and other sources of ignition shall be prohibited within storage locations and within 6.1 m (20 ft) of outside storage locations.

11.3.5.7 Cylinder valve protection caps shall comply with 11.6.2.2(4).

11.3.6 Storage for nonflammable gases with a total volume equal to or less than 8.5 m³ (300 ft³) shall comply with the requirements in 11.3.6.1 and 11.3.6.2.

▲ 11.3.6.1 Individual cylinder storage associated with a smoke compartment in accordance with NFPA 101 shall not be required to be stored in enclosures.

11.3.6.2 Precautions in handling cylinders specified in 11.3.6.1 shall be in accordance with 11.6.2.

11.3.7 When small-size (A, B, D, or E) cylinders are in use, they shall be attached to a cylinder stand or to medical equipment designed to receive and hold compressed gas cylinders.

11.3.8 Individual small-size (A, B, D, or E) cylinders available for immediate use in patient care spaces shall not be considered to be in storage.

11.3.9 Cylinders shall not be chained to portable or movable apparatus such as beds and oxygen tents.

11.3.10 Signs.

▲ 11.3.10.1 Storage locations meeting the requirements of 11.3.4 or 11.3.5 shall have precautionary signage, readable from a distance of 1.5 m (5 ft), displayed on each door or gate of the storage room or enclosure.

11.3.10.2 Sign(s) shall include the following wording as a minimum:

CAUTION

OXIDIZING GAS(ES) STORED WITHIN

NO SMOKING

11.4 Performance Criteria and Testing.

11.4.1 Portable Patient Care Gas Equipment.

11.4.1.1* Anesthetic apparatus shall be subject to approval by the authority having jurisdiction.

11.4.1.2* Each yoke on anesthetic apparatus constructed to allow attachment of a small cylinder equipped with a flush-type valve shall have two pins installed as specified in the mandatory requirements of CGA V-1, *Standard for Compressed Gas Cylinder Valve Outlet and Inlet Connections* (ANSI B57.1).

11.4.1.3 Testing.

11.4.1.3.1 Interventions requiring testing shall include, but not be limited to, the following:

- (1) Alteration of pipeline hose or pipeline fittings
- (2) Alteration of internal piping
- (3) Adjustment of selector switches or flush valves
- (4) Replacement or repair of flowmeters or bobbins

11.4.1.3.2 After any adjustment or repair involving use of tools, or any modification of the gas piping supply connections or the pneumatic power supply connections for the anesthesia ventilator, or other pneumatically powered device, if one is present, and before use on patients, the gas anesthesia apparatus shall be tested at the final common path to the patient to determine that oxygen, and only oxygen, is delivered from the oxygen flowmeters and the oxygen flush valve, if any.

11.4.1.3.3 Before the gas anesthesia apparatus is returned to service, each fitting and connection shall be checked to verify its proper indexing to the respective gas service involved.

11.4.1.3.4 Before the gas anesthesia apparatus is returned to service, an oxygen analyzer, or a similar device, shall be used to verify the oxygen concentration.

11.4.1.4* Yoke-type connections between anesthesia apparatus and flush-type cylinder valves (commonly used with anesthetic gas cylinders) shall be of the Connection No. 860 type in accordance with the mandatory requirements of CGA V-1, *Standard for Compressed Gas Cylinder Valve Outlet and Inlet Connections* (ANSI B57.1).

11.4.2 Apparatus for Administering Respiratory Therapy.

▲ 11.4.2.1 Oxygen-delivery equipment intended to rest on the floor shall be equipped with a base designed to render the entire assembly stable during storage, transport, and use.

11.4.2.2 Oxygen enclosures of rigid materials shall be fabricated of noncombustible materials.

11.4.2.3 Equipment supplied from cylinders or containers shall be designed and constructed for service at full cylinder or container pressure or constructed for use with, or equipped with, pressure reducing regulators.

11.4.2.4 Humidification or reservoir jars containing liquid to be dispersed into a gas stream shall be made of transparent or translucent material, shall be impervious to contained solutions and medications, and shall allow observation of the liquid level and consistency.

11.4.2.5 Humidifiers and nebulizers shall be equipped with provisions for overpressure relief or alarm if the flow becomes obstructed.

11.4.2.6 Humidifiers and nebulizers shall be incapable of tipping or shall be mounted so that any tipping or alteration from the vertical shall not interfere with function or accuracy.

11.4.3 Nonpatient Gas Equipment.

11.4.3.1 Carts and Hand Trucks.

11.4.3.1.1 Construction. Carts and hand trucks for cylinders and containers shall be constructed for the intended purpose, be self-supporting, and be provided with appropriate chains or stays to retain cylinders or containers.

11.4.3.2* Medical Devices. Medical devices not for patient care and requiring oxygen USP shall meet the following:

- (1) Be listed for the intended purpose by the United States Food and Drug Administration
- (2) Be under the direction of a licensed medical professional, if connected to the piped distribution system
- (3) Not be permanently attached to the piped distribution system
- (4) Be installed and used per the manufacturer's instructions
- (5) Be equipped with a backflow prevention device

11.5 Administration.

11.5.1 Policies.

11.5.1.1 Elimination of Sources of Ignition.

11.5.1.1.1 Smoking materials (e.g., matches, cigarettes, lighters, lighter fluid, tobacco in any form) shall be removed from patients receiving respiratory therapy.

11.5.1.1.2* When a nasal cannula and its associated supply tubing are delivering oxygen outside of a patient care space, no sources of open flame shall be permitted in the site of intentional expulsion.

11.5.1.1.3* When any other oxygen delivery equipment not specified in 11.5.1.1.2 is in use, no sources of open flame shall be permitted in the area of administration.

11.5.1.1.4* Solid fuel-burning appliances shall not be permitted in the area of administration.

11.5.1.1.5* Sparking toys shall not be permitted in any patient care space.

11.5.1.1.6 Nonmedical appliances that have hot surfaces or sparking mechanisms shall not be permitted within oxygen-delivery equipment or within the site of intentional expulsion.

11.5.1.2 Misuse of Flammable Substances.

11.5.1.2.1 Flammable or combustible aerosols or vapors, such as alcohol, shall not be used in oxygen-enriched atmospheres.

11.5.1.2.2 Oil, grease, or other flammable substances shall not be used on/in oxygen equipment.

11.5.1.2.3 Flammable and combustible liquids shall not be permitted within the site of intentional expulsion.

11.5.1.3 Servicing and Maintenance of Equipment.

11.5.1.3.1 Defective equipment shall be immediately removed from service.

11.5.1.3.2 Areas designated for the servicing of oxygen equipment shall be clean and free of oil, grease, or other flammable substances.

11.5.1.3.3* A scheduled preventive maintenance program shall be followed.

11.5.2 Gases in Cylinders and Liquefied Gases in Containers.

11.5.2.1 Qualification and Training of Personnel.

11.5.2.1.1* Personnel concerned with the application and maintenance of medical gases and others who handle medical gases and the cylinders that contain the medical gases shall be trained on the risks associated with their handling and use.

11.5.2.1.2 Health care facilities shall provide programs of continuing education for their personnel.

11.5.2.1.3 Continuing education programs shall include periodic review of safety guidelines and usage requirements for medical gases and their cylinders.

11.5.2.1.4 Equipment shall be serviced only by personnel trained in the maintenance and operation of the equipment.

11.5.2.1.5 If a bulk cryogenic system is present, the supplier shall provide annual training on its operation.

11.5.2.2 Transfilling Cylinders.

11.5.2.2.1 Mixing of compressed gases in cylinders shall be prohibited.

11.5.2.2.2* Transfilling of gaseous oxygen from one cylinder to another shall be in accordance with the mandatory requirements in the mandatory requirements of CGA P-2.5, *Transfilling of High Pressure Gaseous Oxygen to Be Used for Respiration*.

11.5.2.2.3 Transfilling of any gases from one cylinder to another in the patient care vicinity shall be prohibited.

11.5.2.3 Transfilling Liquid Oxygen. Transfilling of liquid oxygen shall comply with 11.5.2.3.1 or 11.5.2.3.2, as applicable.

11.5.2.3.1 Transfilling to liquid oxygen base reservoir containers or to liquid oxygen portable containers over 344.74 kPa (50 psi) shall include the following:

- (1) A designated area separated from any portion of a facility wherein patients are housed, examined, or treated by a fire barrier of 1 hour fire-resistive construction.
- (2) The area is mechanically ventilated, is sprinklered, and has ceramic or concrete flooring.
- (3) The area is posted with signs indicating that transfilling is occurring and that smoking in the immediate area is not permitted.
- (4) The individual transfilling the container(s) has been properly trained in the transfilling procedures.

11.5.2.3.2* Where transfilling to liquid oxygen portable containers at 344.74 kPa (50 psi) and under, the following conditions shall be met:

- (1) The area is well ventilated and has noncombustible flooring.
- (2) The area is posted with signs indicating that smoking in the area is not permitted.
- (3) The individual transfilling the liquid oxygen portable container has been properly trained in the transfilling procedure.
- (4) The mandatory requirements of CGA P-2.6, *Transfilling of Liquid Oxygen Used for Respiration*, are met.

11.5.2.4* Filling Cylinders from Oxygen Concentrators. Filling cylinders from oxygen concentrators, including in the patient care vicinity, shall be in accordance with the manufacturer's instructions, not to exceed the limits in 11.5.2.4.1 through 11.5.2.4.4.

11.5.2.4.1 The cylinder contents shall not exceed 700 L (25 ft³).

11.5.2.4.2 The flow shall not exceed 5 L/min (0.2 ft³/min).

11.5.2.4.3 The pressure shall not exceed the DOT rating of the cylinder or 20,700 kPa (3000 psi), whichever is less.

11.5.2.4.4 The cylinders shall be in accordance with DOT requirements or those of the applicable regulatory agency.

▲ 11.5.2.5 Ambulatory Patients. Areas where ambulatory patients on oxygen therapy are permitted access shall be flame- and smoke-free areas.

11.5.3 Use (Including Information and Warning Signs).

11.5.3.1 Labeling.

11.5.3.1.1 Equipment listed for use in oxygen-enriched atmospheres shall be so labeled.

11.5.3.1.2 Oxygen-metering equipment and pressure reducing regulators shall be conspicuously labeled as follows:

OXYGEN — USE NO OIL

11.5.3.1.3 Flowmeters, pressure reducing regulators, and oxygen-dispensing apparatus shall be clearly and permanently labeled, designating the gas or mixture of gases for which they are intended.

11.5.3.1.4 Apparatus whose calibration or function is dependent on gas density shall be labeled as to the proper supply gas gauge pressure (kPa/psi) for which it is intended.

11.5.3.1.5 Oxygen-metering equipment, pressure reducing regulators, humidifiers, and nebulizers shall be labeled with the name of the manufacturer or supplier.

11.5.3.1.6 Cylinders and containers shall be labeled in accordance with the mandatory requirements of CGA C-7, *Guide to Classification and Labeling of Compressed Gases*. Color coding shall not be utilized as a primary method of determining cylinder or container content.

11.5.3.1.7 All labeling shall be durable and withstand cleansing or disinfection.

11.5.3.2* Signs.

11.5.3.2.1 In health care facilities where smoking is not prohibited, precautionary signs readable from a distance of 1.5 m (5 ft) shall be conspicuously displayed wherever supplemental oxygen is in use and in aisles and walkways leading to such an area.

11.5.3.2.2 The signs shall be attached to adjacent doorways or to building walls or be supported by other appropriate means.

11.5.3.2.3 In health care facilities where smoking is prohibited and signs are prominently (strategically) placed at all major entrances, secondary signs with no smoking language shall not be required.

11.5.3.2.4 The nonsmoking policies shall be strictly enforced.

11.5.3.3 Transportation, Storage, and Use of Equipment.

11.5.3.3.1 Flow-control valves on administering equipment shall be closed prior to connection and when not in use.

11.5.3.3.2 Apparatus shall not be stored or transported with liquid agents in reservoirs.

11.5.3.3.3 Care shall be taken in attaching connections from gas services to equipment and from equipment to patients.

11.5.3.3.4 Fixed or adjustable orifice mechanisms, metering valves, pressure reducing regulators, and gauges shall not be connected directly to high pressure cylinders, unless specifically listed for such use and provided with appropriate safety devices.

11.5.3.3.5 Equipment shall only be serviced by qualified personnel.

11.6 Operation and Management of Cylinders.

11.6.1 Administration. Administrative authorities of health care organizations shall provide policies and procedures for safe practices.

11.6.1.1 Purchase specifications shall include the following:

- (1) Specifications for cylinders
- (2) Marking of cylinders, regulators, and valves
- (3) Proper connections on the cylinders supplied to the facility

11.6.1.2 Training procedures shall include the following:

- (1) Maintenance programs in accordance with the manufacturer's recommendations for the piped gas system
- (2) Use and transport of equipment and the proper handling of cylinders, containers, hand trucks, supports, and valve protection caps
- (3) Verification of gas content and mechanical connection specificity of each cylinder or container prior to placing it into service

11.6.1.3 Policies for enforcement shall include the following:

- (1) Regulations for the storage and handling of cylinders and containers of oxygen and nitrous oxide
- (2) Prompt evaluation of all signal warnings and all necessary measures taken to re-establish the proper functions of the medical gas and vacuum systems
- (3) Organizational capability and resources to cope with a complete loss of any medical gas or vacuum system
- (4) Successful completion of all tests required in 5.1.12.4 prior to the use of any medical gas or vacuum piping system for patient care
- (5) Locations intended for the delivery vehicle delivering cryogenic liquid to bulk cryogenic liquid systems to remain open and not be used for any other purpose (e.g., vehicle parking, storage of trash containers)

11.6.2 Special Precautions for Handling Oxygen Cylinders and Manifolds. Handling of oxygen cylinders and manifolds shall be based on the mandatory requirements of CGA G-4, *Oxygen*.

11.6.2.1 Oxygen cylinders, containers, and associated equipment shall be protected from contact with oil or grease by means of the following specific precautions:

- (1) Oil, grease, or readily flammable materials shall not be permitted to come in contact with oxygen cylinders, valves, pressure reducing regulators, gauges, or fittings.

- (2) Pressure reducing regulators, fittings, or gauges shall not be lubricated with oil or any other flammable substance.
- (3) Oxygen cylinders or apparatus shall not be handled with oily or greasy hands, gloves, or rags.

11.6.2.2 Equipment associated with oxygen shall be protected from contamination by means of the following specific precautions:

- (1) Particles of dust and dirt shall be cleared from cylinder valve openings by slightly opening and closing the valve before applying any fitting to the cylinder valve.
- (2) The high pressure valve on the oxygen cylinder shall be opened slowly before bringing the apparatus to the patient or the patient to the apparatus.
- (3) An oxygen cylinder shall not be draped with any materials such as hospital gowns, masks, or caps.
- (4) Cylinder-valve protection caps, where provided, shall be kept in place and be hand-tightened, except when cylinders are in use or connected for use.
- (5) Valves shall be closed on all empty cylinders in storage.

11.6.2.3 Cylinders shall be protected from damage by means of the following specific procedures:

- (1) Oxygen cylinders shall be protected from abnormal mechanical shock, which is liable to damage the cylinder, valve, or safety device.
- (2) Oxygen cylinders shall not be stored near elevators or gangways or in locations where heavy moving objects will strike them or fall on them.
- (3) Cylinders shall be protected from tampering by unauthorized individuals.
- (4) Cylinders or cylinder valves shall not be repaired, painted, or altered.
- (5) Safety relief devices in valves or cylinders shall not be tampered with.
- (6) Valve outlets clogged with ice shall be thawed with warm — not boiling — water.
- (7) A torch flame shall not be permitted, under any circumstances, to come in contact with a cylinder, cylinder valve, or safety device.
- (8) Sparks and flame shall be kept away from cylinders.
- (9) Even if they are considered to be empty, cylinders shall not be used as rollers, supports, or for any purpose other than that for which the supplier intended them.
- (10) Large cylinders (exceeding size E) and containers larger than 45 kg (100 lb) weight shall be transported on a proper hand truck or cart complying with 11.4.3.1.
- (11) Freestanding cylinders shall be properly chained or supported in a proper cylinder stand or cart.
- (12) Cylinders shall not be supported by radiators, steam pipes, or heat ducts.

11.6.2.4 Cylinders and their contents shall be handled with care, which shall include the following specific procedures:

- (1) Oxygen fittings, valves, pressure reducing regulators, or gauges shall not be used for any service other than that of oxygen.
- (2) Gases of any type shall not be mixed in an oxygen cylinder or any other cylinder.
- (3) Oxygen shall always be dispensed from a cylinder through a pressure reducing regulator.
- (4) The cylinder valve shall be opened slowly, with the face of the indicator on the pressure reducing regulator pointed away from all persons.

- (5) Oxygen shall be referred to by its proper name, *oxygen*, not air, and liquid oxygen shall be referred to by its proper name, not liquid air.
- (6) Oxygen shall not be used as a substitute for compressed air.
- (7) The markings stamped on cylinders shall not be tampered with, because it is against federal statutes to change these markings.
- (8) Markings used for the identification of contents of cylinders shall not be defaced or removed, including decals, tags, and stenciled marks, except those labels/tags used for indicating cylinder status (e.g., full, in use, empty).
- (9) The owner of the cylinder shall be notified if any condition has occurred that might allow any foreign substance to enter a cylinder or valve, giving details and the cylinder number.
- (10) Neither cylinders nor containers shall be placed in the proximity of radiators, steam pipes, heat ducts, or other sources of heat.
- (11) Very cold cylinders or containers shall be handled with care to avoid injury.

11.6.2.5 Oxygen equipment that is defective shall not be used until one of the following tasks has been performed:

- (1) It has been repaired by competent in-house personnel.
- (2) It has been repaired by the manufacturer or his or her authorized agent.
- (3) It has been replaced.

11.6.2.6 Pressure reducing regulators that are in need of repair or cylinders having valves that do not operate properly shall not be used.

11.6.3 Special Precautions for Making Cylinder and Container Connections.

11.6.3.1 Cylinder valves shall be opened and connected in accordance with the following procedure:

- (1) Make certain that apparatus and cylinder valve connections and cylinder wrenches are free of foreign materials.
- (2) Turn the cylinder valve outlet away from personnel following these safety procedures:
 - (a) Stand to the side — not in front and not in back.
 - (b) Before connecting the apparatus to the cylinder valve, momentarily open the cylinder valve to eliminate dust.
- (3) Make connection of the apparatus to the cylinder valve, and tighten the connection nut securely with a wrench.
- (4) Release the low-pressure adjustment screw of the pressure-reducing regulator completely.
- (5) Slowly open cylinder valve to the full-open position.
- (6) Slowly turn in the low-pressure adjustment screw on the pressure reducing regulator until the proper operating pressure is obtained.
- (7) Open the valve to the utilization apparatus.

11.6.3.2 Connections for containers shall be made in accordance with the container **manufacturer's** operating instructions.

11.6.4 Special Precautions for the Care of Safety Mechanisms.

11.6.4.1 Personnel using cylinders and containers and other equipment covered in this chapter shall be familiar with the **the mandatory requirements** of CGA Pin-Index Safety System and the CGA Diameter-Index Safety System, which are both designed to prevent utilization of the wrong gas.

11.6.4.2 Safety relief mechanisms, noninterchangeable connectors, and other safety features shall not be removed, altered, or replaced.

11.6.5 Special Precautions — Storage of Cylinders and Containers.

11.6.5.1 Storage shall be planned so that cylinders can be used in the order in which they are received from the supplier.

11.6.5.2 If empty and full cylinders are stored within the same enclosure, empty cylinders shall be segregated from full cylinders.

11.6.5.2.1 When the facility employs cylinders with integral pressure gauge, it shall establish the threshold pressure at which a cylinder is considered empty.

11.6.5.3 Empty cylinders shall be marked to avoid confusion and delay if a full cylinder is needed in a rapid manner.

11.6.5.4 Cylinders stored in the open shall be protected as follows:

- (1) Against extremes of weather and from the ground beneath to prevent rusting
- (2) During winter, against accumulations of ice or snow
- (3) During summer, screened against continuous exposure to direct rays of the sun in those localities where extreme temperatures prevail

N 11.6.5.5* Storage of nitrous oxide cylinders shall be secured against unauthorized access.

11.7 Liquid Oxygen Equipment.

11.7.1 General. The storage and use of liquid oxygen in liquid oxygen base reservoir containers and liquid oxygen portable containers shall comply with the following, or storage and use shall be in accordance with the adopted fire prevention code.

11.7.2 Information and Instructions. The liquid oxygen seller shall provide the user with documentation that includes, but is not limited to, the following:

- (1) Manufacturer's instructions, including labeling for storage and use of the containers
- (2) Requirements for storage and use of containers away from ignition sources, exits, electrical hazards, and high-temperature devices
- (3) Methods for container restraint to prevent falling
- (4) Requirements for container handling
- (5) Safeguards for refilling of containers

11.7.3 Container Storage, Use, and Operation.

11.7.3.1* Containers shall be stored, used, and operated in accordance with the manufacturer's instructions and labeling.

11.7.3.2 Containers shall not be placed in the following areas:

- (1) Where they can be tipped over by the movement of a door
- (2) Where they interfere with foot traffic
- (3) Where they are subject to damage from falling objects
- (4) Where exposed to open flames and high-temperature devices

11.7.3.3* Liquid oxygen base reservoir containers shall be secured by one of the following methods while in storage or

use to prevent tipping over caused by contact, vibration, or seismic activity:

- (1) Securing to a fixed object with one or more restraints
- (2) Securing within a framework, stand, or assembly designed to resist container movement
- (3) Restraining by placing the container against two points of contact

11.7.3.4 Liquid oxygen base reservoir containers shall be transported by a cart or hand truck designed for such use, unless a container is equipped with a roller base.

11.7.3.5* Liquid Oxygen Portable Containers.

11.7.3.5.1 Liquid oxygen portable containers shall be kept in an upright position.

11.7.3.5.2 Liquid oxygen portable containers shall not be carried under clothing or other covering.

11.7.3.5.3 Liquid oxygen portable containers shall be kept away from ignition sources, electrical hazards, and high temperature devices during filling and use.

11.7.3.6 The transfilling of containers shall be in accordance with the manufacturer's instructions and the requirements of 11.7.3.6.1 through 11.7.3.6.2.

11.7.3.6.1 Liquid oxygen containers shall be filled outdoors or in compliance with 11.5.2.3.1.

11.7.3.6.1.1* A drip pan compatible with liquid oxygen shall be provided under the liquid oxygen base reservoir container's filling and vent connections used during the filling process, unless the filling is performed on a noncombustible surface such as concrete.

11.7.3.6.2 Liquid oxygen portable containers shall be permitted to be filled indoors when the liquid oxygen base reservoir container is designed for filling such containers and the written instructions provided by the container manufacturer are followed.

11.7.4 Maximum Quantity.

11.7.4.1 The maximum total quantity of liquid oxygen permitted in storage and in use in a patient bed location or patient care vicinity shall be 120 L (31.6 gal), provided that the patient bed location or patient care vicinity, or both, are separated from the remainder of the facility by fire barriers and horizontal assemblies having a minimum fire resistance rating of 1 hour in accordance with the adopted building code.

N 11.7.4.2 One liquid oxygen portable container [limited to 1.5 L (0.396 gal) capacity] per patient is permitted to be stored or used in a patient bed location or patient care vicinity without having to meet the fire separation requirements of 11.7.4.1.

Chapter 12 Emergency Management

12.1* Applicability. This chapter shall apply to new and existing health care facilities.

12.1.1* This chapter shall provide those with the responsibility for emergency management in health care facilities with the criteria to assess, mitigate, prepare for, respond to, and recover from emergencies of any origin.

Δ 12.1.2 This chapter shall be the source for emergency management in health care facilities and is based on the foundations of *NFPA 1600*.

12.1.3 This chapter shall aid in developing, maintaining, and evaluating effective emergency management programs in new and existing facilities.

12.2 Responsibilities.

12.2.1* Authority Having Jurisdiction.

12.2.1.1 The authority having jurisdiction shall be cognizant of the requirements of a health care facility with respect to its uniqueness for continued operation of the facility in an emergency.

12.2.1.2 The authority having jurisdiction shall ensure health care facility emergency management programs meet the requirements of this chapter.

12.2.2 Senior Management.

12.2.2.1 The senior management shall actively participate in and support emergency management planning.

12.2.2.2 Senior management shall provide the required resources to develop and support the emergency management program.

N 12.2.2.3 At least one representative of senior management shall provide a documented review of after-action reports and the annual evaluation of the emergency operations plan (EOP).

N 12.2.2.4 Senior management shall direct the prioritization of opportunities for improvement identified during exercises and actual events.

12.2.2.5 Senior management shall appoint a program coordinator.

12.2.3* Emergency Management Committee. The emergency management committee shall include representatives of senior management and clinical and support services.

12.2.3.1* The membership of the emergency management committee shall include a chairperson, the emergency program coordinator, and leadership representatives of the following key areas:

- (1) Senior management
- (2) Medical staff
- (3) Nursing
- (4) Infection prevention
- (5) Facilities engineering
- (6) Safety/industrial hygiene
- (7) Security
- (8) Information technology
- (9) Materials management
- (10) Other key areas within the organization

12.2.3.2 The emergency management committee shall have the responsibility for the emergency management program within the facility.

12.2.3.3* The emergency management committee shall model the emergency operations plan on an incident command system (ICS) in coordination with federal, state, and local emergency response agencies, as applicable.

12.3 Emergency Management Categories. The application of requirements in this chapter shall be based on the emergency management category of the health care facility as defined in Table 12.3.

12.4 General.

12.4.1 Health care facilities shall develop an emergency management program with a documented emergency operations plan based on the category of the health care facility as defined in Table 12.3.

12.4.1.1 The emergency management program shall include elements as required to manage an emergency during all four phases: mitigation, preparedness, response, and recovery.

12.4.1.2 The emergency management program shall comply with applicable regulations, directives, policies, and industry standards of practice.

12.4.2 When developing its emergency management program, the facility shall communicate its needs and vulnerabilities to community emergency response agencies and identify the capabilities of its community in supporting their mission.

12.4.3 The medical facility, in combination with the local or federal authorities, or both, shall establish the required emergency management category as defined in Table 12.3.

12.5 Emergency Management Category 1 and Emergency Management Category 2 Requirements.

12.5.1 All emergency management Category 1 and emergency management Category 2 health care facilities shall be required to develop and maintain an emergency management program that addresses all program elements as prescribed in 12.5.2 and 12.5.3.

12.5.2 The elements and complexity of the subsequent code sections in this chapter shall apply, as appropriate to the hazard vulnerability analysis (HVA), the community's expectations, and the leadership's defined mission of the health care facility.

12.5.3 Program Elements.

12.5.3.1 Hazard Vulnerability Analysis (HVA).

12.5.3.1.1 A hazard vulnerability analysis (HVA) shall be conducted to identify and prioritize hazards that pose a threat to the facility and can affect the demand for its services.

Table 12.3 Emergency Management Categories

Emergency Management Category	Definition
1	Those inpatient facilities that remain operable to provide advanced life support services to injured responders and disaster victims. These facilities manage the existing inpatient load as well as plan for the influx of additional patients as a result of an emergency.
2	Those inpatient or outpatient facilities that augment the critical mission. These facilities manage the existing inpatient or outpatient loads but do not plan to receive additional patients as a result of an emergency or do not plan to remain operable should essential utilities or services be lost.

12.5.3.1.2* The hazards to be considered shall include, but not be limited to, the following:

- (1) Natural hazards (geological, meteorological, and biological)
- (2) Human-caused events (accidental or intentional)
- (3) Technological events

12.5.3.1.3 The analysis shall include the potential impact of the hazards on conditions including, but not limited to, the following:

- (1)* Continuity of operations
- (2) Care for new and existing patients/residents/clients
- (3) Health, safety, and security of persons in the affected area
- (4) Support of staff
- (5) Property, facilities, and infrastructure
- (6) Environmental impact
- (7) Economic and financial conditions
- (8) Regulatory and contractual obligations
- (9) Reputation of, or confidence in, the facility

12.5.3.1.4 The facility shall prioritize the hazards and threats identified in the HVA with input from the community.

12.5.3.2 Mitigation.

12.5.3.2.1 The facility shall develop and implement a strategy to eliminate hazards or mitigate the effects of hazards that cannot be eliminated.

12.5.3.2.2 A mitigation strategy shall be developed for priority hazards defined by the HVA.

12.5.3.2.3 The mitigation strategy shall consider, but not be limited to, the following:

- (1) Use of applicable building construction standards
- (2) Hazard avoidance through appropriate land-use practices
- (3) Relocation, retrofitting, or removal of structures at risk
- (4) Removal or elimination of the hazard
- (5) Reduction or limitation of the amount or size of the hazard
- (6) Segregation of the hazard from that which is to be protected
- (7) Modification of the basic characteristics of the hazard
- (8) Control of the rate of release of the hazard
- (9) Provision of protective systems or equipment for both cyber or physical risks
- (10) Establishment of hazard warning and communications procedures
- (11) Redundancy or duplication of essential personnel, critical systems, equipment, information, operations, or materials

12.5.3.3 Preparedness.

12.5.3.3.1 The facility shall prepare for any emergency as determined by the HVA by organizing and mobilizing essential resources.

12.5.3.3.2 The facility shall maintain a current, documented inventory of the assets and resources it has on-site that would be needed during an emergency, such as medical, surgical, and pharmaceutical resources; water; fuel; staffing; food; and linen.

12.5.3.3.3 The facility shall identify the resource capability shortfalls from 96 hours of sustainability and determine if mitigation activities are necessary and feasible.

12.5.3.3.4 The facility shall establish a protocol for monitoring the quantity of assets and resources as they are utilized.

12.5.3.3.5 The facility shall write an emergency operations plan (EOP) that describes a command structure and the following critical functions within the facility during an emergency:

- (1) Communications
- (2) Resources and assets
- (3) Safety and security
- (4) Clinical support activities
- (5) Essential utilities
- (6) Exterior connections
- (7) Staff roles

12.5.3.3.6 Critical Function Strategies. During the development of the EOP, the facility shall consider the strategies required in 12.5.3.3.6.1 through 12.5.3.3.6.8 in order to manage critical functions during an emergency within the facility.

12.5.3.3.6.1 Communications. The facility shall plan for the following during an emergency:

- (1) Initial notification and ongoing communication of information and instructions to staff
- (2) Initial notification and ongoing communication with the external authorities
- (3) Communication with the following:
 - (a) Patients and their families (responsible parties)
 - (b) Responsible parties when patients are relocated to alternative care sites
 - (c) Community and the media
 - (d) Suppliers of essential materials, services, and equipment
 - (e) Alternative care sites
- (4) Definition of when and how to communicate patient information to third parties
- (5)* Establishment of backup communications systems
- (6) Cooperative planning with other local or regional health care facilities, including the following:
 - (a) Exchange of information relating to command operations, including contact information
 - (b) Staffing and supplies that could be shared
 - (c) System to locate the victims of the event

12.5.3.3.6.2 Resources and Assets. The facility shall plan for the following during an emergency:

- (1) Acquiring medical, pharmaceutical, and nonmedical supplies
- (2) Replacing medical supplies and equipment that will be used throughout response and recovery
- (3) Replacing pharmaceutical supplies that will be consumed throughout response and recovery
- (4) Replacing nonmedical supplies that will be depleted throughout response and recovery
- (5) Managing staff support activities, such as housing, transportation, incident stress debriefing, sanitation, hydration, nutrition, comfort, morale, and mental health
- (6) Managing staff family support needs, such as child care, elder care, pet care, and communication to home
- (7) Providing staff, equipment, and transportation vehicles needed for evacuation

12.5.3.3.6.3* Safety and Security. The facility shall plan for the following during an emergency:

- (1) Internal security and safety operations
- (2) Roles of agencies such as police, sheriff, and national guard
- (3) Managing hazardous materials and waste
- (4) Radioactive, biological, and chemical isolation and decontamination
- (5) Patients susceptible to wandering
- (6) Controlling entrance into the health care facility during emergencies
- (7) Conducting a risk assessment with applicable authorities if it becomes necessary to control egress from the health care facility
- (8) Controlling people movement within the health care facility
- (9) Controlling traffic access to the facility

12.5.3.3.6.4 Clinical Support Activities. The facility shall plan for the following during an emergency:

- (1) Clinical activities that could need modification or discontinuation during an emergency, such as patient scheduling, triage, assessment, treatment, admission, transfer, discharge, and evacuation
- (2) Clinical services for special needs populations in the community, such as pediatric, geriatric, disabled, and chronically ill patients, and those with addictions (Emergency Management Category 1 only)
- (3) Patient cleanliness and sanitation
- (4) Behavioral needs of patients
- (5) Mortuary services
- (6) Evacuation both horizontally and, when required by circumstances, vertically, when the environment cannot support care, treatment, and services
- (7) Transportation of patients, and their medications and equipment, and staff to an alternative care site(s) when the environment cannot support care, treatment, and services
- (8) Transportation of pertinent patient information, including essential clinical and medication-related information, to an alternative care site(s) when the environment cannot support care, treatment, and services
- (9) Documentation and tracking of patient location and patient clinical information

Δ 12.5.3.3.6.5* Essential Utilities and Systems. The facility shall plan for the following utilities and systems during an emergency, as applicable:

- (1) Electricity
- (2) Potable water
- (3) Nonpotable water
- (4) Wastewater
- (5) HVAC
- (6) Fire protection
- (7) Fuel for building operations
- (8) Fuel for essential transportation
- (9) Medical gas and vacuum
- (10) Information technology

12.5.3.3.6.6 Exterior Connections. For essential utility systems in Emergency Management Category 1 facilities only, and based on the facility's HVA, consideration shall be given to the installation of exterior building connectors to allow for the attachment of portable emergency utility modules.

12.5.3.3.6.7 Staff Roles.

(A) Staff roles shall be defined for the areas of communications, resources and assets, safety and security, essential utilities, and clinical activities.

(B) Staff shall receive training for their assigned roles in the EOP.

(C) The facility shall communicate to licensed independent health care providers their roles in the EOP.

(D) The facility shall provide staff and other personnel with a form of identification, such as identification cards, wrist bands, vests, hats, badges, or computer printouts.

(E) The facility shall include in its plan the alerting and managing of all staff in an emergency.

12.5.3.3.6.8 The facility shall include the following in its EOP:

- (1)* Standard command structure that is consistent with its community
- (2) Reporting structure consistent with the command structure
- (3) Activation and deactivation of the response and recovery phases, including the authority and process
- (4) Facility capabilities and appropriate response efforts when the facility cannot be supported from the outside for extended periods in the six critical areas with an acceptable response, including examples such as the following:
 - (a) Resource conservation
 - (b) Service curtailment
 - (c) Partial or total evacuation consistent with the staff's designated role in community response plan
- (5) Alternative treatment sites to meet the needs of the patients

12.5.3.3.7 Staff Education.

12.5.3.3.7.1 Each facility shall implement an educational program in emergency management.

12.5.3.3.7.2 The educational program shall include an overview of the components of the emergency management program and concepts of the incident command system (ICS).

12.5.3.3.7.3 Individuals who are expected to perform as incident commanders or to be assigned to specific positions within the command structure shall be trained in and familiar with the ICS and the particular levels at which they are expected to perform.

12.5.3.3.7.4 Education concerning the staff's specific duties and responsibilities shall be conducted.

12.5.3.3.7.5 General overview education of the emergency management program and the ICS shall be conducted at the time of hire.

12.5.3.3.7.6 Department- and staff-specific education shall be conducted upon appointment to department/staff assignments or positions and annually thereafter.

12.5.3.3.8* Testing Emergency Plans and Operations.

12.5.3.3.8.1 The facility shall test its EOP at least twice annually, either through functional or full-scale exercises or actual events.

12.5.3.3.8.2 Exercises shall be based on the HVA priorities and be as realistic as feasible.

12.5.3.3.8.3 For Emergency Management Category 1 only, an influx of volunteer or simulated patients shall be tested annually, either through a functional or full-scale exercise or an actual event. (See Table 12.3.)

12.5.3.3.8.4 Annual table top, functional, or full-scale exercises shall include the following:

- (1) Community integration
- (2) Assessment of sustainability

12.5.3.3.8.5 For Emergency Management Category 1 only, if so required by the community designation to receive infectious patients, the facility shall conduct at least one exercise a year that includes a surge of infectious patients. (See Table 12.3.)

12.5.3.3.8.6 The identified exercises shall be conducted independently or in combination.

12.5.3.3.9 Scope of Exercises.

12.5.3.3.9.1 Exercises shall be monitored by at least one designated evaluator who has knowledge of the facility's plan and who is not involved in the exercise.

12.5.3.3.9.2 Exercises shall monitor the critical functions.

12.5.3.3.9.3 The facility shall conduct a debriefing session not more than 72 hours after the conclusion of the exercise or the event.

12.5.3.3.9.4 The debriefing shall include all key individuals, including observers; administration; clinical staff, including a physician(s); and appropriate support staff.

12.5.3.3.9.5 Exercises and actual events shall be critiqued to identify areas for improvement.

12.5.3.3.9.6 The critiques required by 12.5.3.3.9.5 shall identify deficiencies and opportunities for improvement based upon monitoring activities and observations during the exercise.

12.5.3.3.9.7 Opportunities for improvement identified in critiques shall be incorporated in the facility's improvement plan.

12.5.3.3.9.8* Improvements made to the emergency management program shall be evaluated in subsequent exercises.

12.5.3.4 Response.

12.5.3.4.1* The facility shall declare itself in an emergency mode based on current conditions that leadership considers extraordinary.

12.5.3.4.2 Once an emergency mode has been declared, the facility shall activate its EOP.

12.5.3.4.3 The decision to activate the EOP shall be made by the incident commander designated within the plan, in accordance with the facility's activation criteria.

12.5.3.4.4 The decision to deactivate the EOP shall be made by the incident commander in the health care organization in coordination with the applicable external command authority.

12.5.3.4.5* The organization shall make provisions for emergency credentialing of volunteer clinical staff.

12.5.3.4.5.1 At a minimum, a peer evaluation of skill shall be conducted to validate proficiency for volunteer clinical staff.

12.5.3.4.5.2 Prior to beginning work, the identity of other volunteers offering to assist during response activities shall be verified.

12.5.3.4.5.3 Personnel designated or involved in the EOP of the health care facility shall be supplied with a means of identification, which shall be worn at all times in a visible location.

N 12.5.3.4.5.4 Identification issued to volunteers shall distinguish volunteers from staff members.

12.5.3.4.6 The command staff shall actively monitor conditions present in the environment and remain in communication with community emergency response agencies during an emergency response.

12.5.3.4.7 When conditions approach untenable, the command staff, in combination with community emergency response agencies, shall determine when to activate the facility evacuation plan.

12.5.3.4.8 Evacuation to the alternative care site shall follow the planning conducted during the preparedness phase.

12.5.3.4.9* Crisis Standards of Care. Crisis standards of care shall be developed through a communitywide approach, as approved by the authority having jurisdiction.

12.5.3.4.9.1 The decision to implement crisis standards of care shall be coordinated with the community leadership.

12.5.3.4.9.2 Upon implementation of crisis standards of care in a community, the following shall be considered:

- (1) The triage process
- (2) The allocation of medical services across the population

N 12.5.3.4.9.3 Standards of care shall be returned to normal at the earliest feasible time.

12.5.3.4.10 Medical Surge Capacity and Capability. The requirements of 12.5.3.4.10.1 and 12.5.3.4.10.2 shall apply only to those facilities designated as Emergency Management Category 1 as defined by the HVA.

12.5.3.4.10.1* The facility shall plan for medical surge capacity and capability.

12.5.3.4.10.2 The triage process shall be implemented as follows:

- (1) The arriving victim shall be assessed into the following cohorts:
 - (a) Risk to others, as follows:
 - i. Mentally unstable
 - ii. Contaminated
 - iii. Infectious
 - (b) Risk to self, as follows:
 - i. Emotionally impaired
 - ii. Suicidal
 - (c) Risk of death or permanent injury, as follows:
 - i. Walking wounded
 - ii. Severely injured but stable
 - iii. Suffering from life-threatening injury
 - iv. Beyond care

- (2) Patients shall be admitted for treatment depending on facility capacity, the facility's specialty, and clinical need.
- (3) Creation of ancillary clinical space shall have adequate utility support for the following:
 - (a) HVAC
 - (b) Sanitation
 - (c) Lighting
 - (d) Proximity to operating room (OR)

• **12.5.3.4.11** Health care facilities shall have a designated media spokesperson to facilitate news releases during the response process.

12.5.3.4.12 An area shall be designated for media representatives to assemble where they will not interfere with the operations of the health care facility.

12.5.3.5* Recovery.

12.5.3.5.1 Plans shall reflect measures needed to restore operational capability to pre-disaster levels.

12.5.3.5.2 Fiscal aspects shall be considered with respect to restoration costs and possible cash flow losses associated with the disruption.

12.5.3.5.3 Facility leadership shall accept and accommodate federal, state, and local assistance that will be beneficial for recovery of operations.

12.5.3.5.4 No party to recovery shall take action to unfairly limit lawful competition once recovery operations are completed.

12.5.3.5.5 Recovery shall not be deemed complete until infection control decontamination efforts are validated.

12.5.3.6 Administration.

12.5.3.6.1 The facility shall modify, as necessary, its HVA, EOP, supply chain (including the current emergency supplies inventory), and other components of the emergency management program, as a result of exercises, actual events, and annual review.

12.5.3.6.2 The facility shall maintain written records of drills, exercises, and training as required by this chapter for a period of 3 years.

Chapter 13 Security Management

13.1* Applicability. This chapter shall apply to new and existing health care facilities.

13.2* Security Management Plan.

13.2.1 A health care facility shall have a security management plan.

13.2.2* The scope, objectives, performance, and effectiveness of the security plan shall be tested at a frequency shown to be necessary by review of the security vulnerability assessment (SVA) in accordance with Section 13.3.

13.3 Security Vulnerability Assessment (SVA).

13.3.1* At least annually, the health care facility shall conduct a security vulnerability assessment (SVA).

N 13.3.2 The facility shall modify, as necessary, its SVA as a result of exercises, national or local events, and annual review.

13.3.3 The SVA shall evaluate the potential security risks posed by the physical and operational environment of the health care facility to all individuals in the facility.

13.3.4 The facility shall implement procedures and controls in accordance with the risks identified by the SVA.

13.4 Responsible Person.

13.4.1 A person(s) shall be appointed by the leadership of the health care facility to be responsible for all security management activities.

13.4.2 The duties of the person assigned as required by 13.4.1 shall include, but not be limited to, the following, as identified in the SVA:

- (1) Provide identification for patients, staff, and other people entering the facility
- (2) Control access in and out of security-sensitive areas
- (3) Define and implement procedures as follows:
 - (a) Security incident
 - (b) Hostage situation
 - (c)* Bomb (explosive device or threat)
 - (d) Criminal threat
 - (e) Labor action
 - (f) Disorderly conduct
 - (g) Workplace violence
 - (h) Restraining order
 - (i) Prevention of, and response to, infant or pediatric abduction
 - (j) Situations involving VIPs or the media
 - (k) Maintenance of access to emergency areas
 - (l) Civil disturbance
 - (m) Forensic patients
 - (n) Patient elopement
 - (o) National Terrorism Advisory System (NTAS) or equivalent
 - (p) Suspicious material or package
 - (q) Suspicious powder or substance
 - (r) Use of force policy
 - (s) Security staffing augmentation
 - (t) Active shooter
- (4) Provide security at alternate care sites or vacated facilities
- (5) Control vehicular traffic on the facility property
- (6) Protect the facility assets, including property and equipment
- (7) Provide policy for interaction with law enforcement agencies
- (8) Comply with applicable laws, regulations, and standards regarding security management operations
- (9) Educate and train the facility security force to address the following:
 - (a) Customer service
 - (b) Use of physical restraints
 - (c) Use of force
 - (d) Response criteria
 - (e) Fire watch procedures
 - (f) Lockdown procedures
 - (g) Emergency notification procedures
 - (h) Emergency communications procedures

13.5 Security-Sensitive Areas.

13.5.1 All security-sensitive areas, as identified by the SVA, shall be protected as appropriate.

13.5.2 Emergency department security shall include appropriate protection, including the following:

- (1)* Control and limitation of access by the general public
- (2) Private duress alarm at the nurses' station and reception for summoning immediate assistance
- (3) Access-control of treatment area
- (4) Lockdown procedure to secure the area when conditions threaten the viability of the department
- (5) Bullet-resisting glazing material, as deemed necessary by review of the SVA

▲ 13.5.3 Pediatric and infant care areas shall have a security plan for the prevention of, and response to, pediatric and infant abduction that shall include appropriate protections, such as the following:

- (1) Control and limitation of access by the general public
- (2) Screening by nursing prior to allowing persons access to infant care areas
- (3) Matching protocol with staff clearance to pair infants with parents
- (4) System to monitor and track the location of pediatric and infant patients
- (5)* Facility alert system and lockdown procedures
- (6) Use of electronic monitoring, tracking, and access control equipment
- (7) Use of an automated and standardized facility-wide alerting system to announce pediatric or infant abduction
- (8) Remote exit locking or alarming
- (9) Staff observation of all persons and inspection of all packages leaving the premises
- (10) Prohibition on birth announcements by staff
- (11) Detection of the presence of nonidentified individual constitutes security breach
- (12) Movement of infants restricted to bassinets only — no hand carries
- (13) Health care staff wear unique identification or uniforms
- (14) Secure storage of scrubs and uniforms, both clean and dirty
- (15) Education in pediatric and infant abduction as follows:
 - (a) Health care staff are familiar with infant abduction scenarios
 - (b) Parents know not to leave a child or an infant unattended or in the care of an unidentified person
 - (c) Parents know that they have the right to refuse to release their child to any individual without validation of official hospital identification
- (16) Visiting family and friends not permitted to enter any nursery area with an infant or a newborn from the outside
- (17) Infant abduction drills conducted periodically to test effectiveness of chosen measures

13.5.4* Medication storage and work areas shall be secured against admittance of unauthorized personnel through the use of the following:

- (1) Physical access control
- (2) Unique identification for the area
- (3) Secure storage and controlled dispensing of drugs

13.5.5 Clinical and research laboratories shall be secured against admittance of unauthorized personnel through appropriate protections, such as the following:

- (1) Physical access control
- (2) Unique identification for the area
- (3) Secure storage and controlled dispensing of regulated chemical, biological, and radiological materials

13.5.6 Dementia or behavioral health units shall be secured against the admittance or release of unauthorized personnel through appropriate protections, such as the following:

- (1) Physical access control
- (2) Unique identification for the area
- (3)* Procedure to prevent entry of contraband prior to a person being admitted into the unit or department
- (4) Elopement precautions
- (5) Maintenance of color photos with the medical information of current patients to aid in identification

13.5.7 Forensic patient treatment areas shall provide appropriate protections, such as the following:

- (1)* Law enforcement attending the patient at all times
- (2) Treatment performed in an area separate from other patients
- (3) Restraints applied or removed only under forensic staff control

13.5.8 Communications, data infrastructure, and medical records storage areas shall be secured against the admittance of unauthorized personnel or unauthorized release of confidential information through the use of appropriate protections, such as the following:

- (1) Physical access control
- (2) Unique identification for the area
- (3) Surveillance equipment
- (4) Data encryption and password protection

13.6 Access and Egress Security Measures.

13.6.1 Public visitation controls shall be enforced.

13.6.2 After-hours entrance by the public shall be restricted to designated areas, such as entrance lobbies and emergency departments.

13.6.3 Health care facility security controls and procedures shall comply with life safety requirements for egress.

13.6.3.1* Security plans for health care occupancies shall address access and egress control during periods of quarantine and other events in conjunction with emergency agencies.

13.7* Media Control.

13.7.1 The security management plan shall include procedures to accommodate media representatives.

13.7.1.1* A person shall be designated to serve as media contact and representative for the organization in regard to media interactions.

13.7.2* An area shall be designated for assembly of media representatives.

13.7.3 A security or facility staff member shall remain with the media representative(s) at all times.

13.7.4 Media representatives shall be escorted when granted access to the health care facility outside of the area designated in 13.7.2.

13.8* Crowd Control.

13.8.1 The security management plan shall include processes and procedures for controlling access to the health care facility.

13.8.2 The security management plan shall provide procedures for crowd control for management of those demanding access to a health care facility.

13.8.3 The procedures for crowd control shall provide for the coordination and collaboration of security and law enforcement.

13.9 Access Control Equipment.

13.9.1 Exterior entrances shall be provided with locking devices.

13.9.2 Locking devices shall comply with applicable federal, state, and local requirements.

13.9.3 Locking devices shall be properly installed and be in good working order.

13.9.4* The facility shall operate a key control program.

13.10* Employment Practices. Employers shall ensure a high level of integrity in the workplace by using the following practices:

- (1) Background checks of employees with access to critical assets
- (2) Background checks of outside contractors' employees
- (3) Drug testing program for employees

13.11* Security Operations.

13.11.1* Post orders shall be written for security personnel.

13.11.2 Security personnel training shall include, but not be limited to, the following:

- (1) Customer service
- (2) Emergency procedures
- (3) Patrol methods
- (4) De-escalation training
- (5) Use of physical restraints
- (6) Use of force

13.12 Program Evaluation.

13.12.1* Periodic drills shall be conducted at various times and locations.

13.12.2 The drills shall be critiqued for plan effectiveness and to identify opportunities for improvement.

13.12.3 Identified opportunities for improvement shall be incorporated into the security plan.

13.12.4 The security plan shall be evaluated at least annually.

13.12.5 The evaluation of the security management plan shall include a review of laws, regulations, and standards applicable to the security program.

Chapter 14 Hyperbaric Facilities

14.1* Scope. The scope of this chapter shall be as specified in 1.1.12.

14.1.1 Applicability.

14.1.1.1 This chapter shall apply to new facilities.

14.1.1.2 The following sections of this chapter shall apply to both new and existing facilities:

- (1) 14.2.4.1.1 (excluding subsections)
- (2) 14.2.4.1.1.1
- (3) 14.2.4.1.2
- (4) 14.2.4.1.3 (excluding subsections)
- (5) 14.2.4.1.3.3
- (6) 14.2.4.3.3 (and subsections)
- (7) 14.2.4.4 (and subsections)
- (8) 14.2.5.3
- (9) 14.2.6.1.4 (excluding subsection)
- (10) 14.2.6.1.5
- (11) 14.2.6.1.7
- (12) 14.3.4.3.5 (and subsection)
- (13) 14.2.8.1
- (14) 14.2.8.2 (and subsection)
- (15) 14.2.9.3.1 through 14.2.9.3.5
- (16) 14.2.9.3.9 (and subsection)
- (17) 14.2.9.3.15.4
- (18) 14.2.9.3.16.5
- (19) 14.2.9.3.17 (and subsections)
- (20) 14.2.9.4.1.3
- (21) 14.2.9.6 (and subsections)
- (22) 14.2.10.3 through 14.2.10.2.2 (and subsections)
- (23) 14.2.11.2.5
- (24) 14.3.1 (and subsections)
- (25) 14.3.2.1.1 through 14.3.2.1.6
- (26) 14.3.2.4 through 14.3.2.6 (and subsection)
- (27) 14.3.3 and 14.3.4 (and subsections)

14.1.1.3 This chapter shall also apply to the altered, renovated, or modernized portion of an existing system or individual component.

14.1.1.4 Existing construction or equipment shall be permitted to be continued in use when such use does not constitute a distinct hazard to life.

14.1.2 Classification of Chambers.

14.1.2.1 General. Chambers shall be classified according to occupancy in order to establish appropriate minimum essentials in construction and operation.

14.1.2.2* Occupancy. Hyperbaric chambers shall be classified according to the following criteria:

- (1) Class A — Human, multiple occupancy
- (2) Class B — Human, single occupancy
- (3) Class C — Animal, no human occupancy

14.1.3 Category.

14.1.3.1 Category 1 Hyperbaric Care.

N 14.1.3.1.1 Where interruption or failure of medical gas supply is likely to cause major injury or death of patients, staff, or visitors, the medical gas system shall be Category 1 for use in this chapter.

N 14.1.3.1.2 Where interruption or failure of electrical service is likely to cause major injury or death of patients, staff, or visitors, the electrical service shall be Category 1 for use in this chapter.

14.1.3.2 Category 2 Hyperbaric Care.

N 14.1.3.2.1 Where interruption or failure of medical gas supply is likely to cause minor injury of patients, staff, or visitors, the medical gas system shall be considered Category 2 for use in this chapter.

N 14.1.3.2.2 Where interruption or failure of electrical service is likely to cause minor injury of patients, staff, or visitors, the electrical service shall be Category 2 for use in this chapter.

14.1.3.3 Category 3 Hyperbaric Care.

N 14.1.3.3.1 Where interruption or failure of medical gas supply is not likely to cause injury to patients, staff, or visitors, the medical gas system shall be considered Category 3 for use in this chapter.

N 14.1.3.3.2 Where interruption or failure of electrical service is not likely to cause injury to patients, staff, or visitors, the electrical service shall be Category 3 for use in this chapter.

14.1.3.4 Category 4 Care. (Reserved)

N 14.1.4 Applicable Code. Hyperbaric facilities that are conducting any form of treatment and are not located in a designated health care facility, including residential occupancies, shall comply with the requirements of the applicable code.

14.2 Construction and Equipment.

14.2.1 Housing for Hyperbaric Facilities.

14.2.1.1 For Class A chambers located inside a building, the chamber(s) and all ancillary service equipment shall be protected by 2-hour fire-resistant-rated construction.

14.2.1.1.1* Freestanding, dedicated buildings containing only a Class A chamber(s) and ancillary service equipment shall not be required to be protected by 2-hour fire-resistant-rated construction.

14.2.1.1.2 Class B and C chambers located inside a building shall not be required to be protected by 2-hour fire-resistant-rated construction.

14.2.1.1.3 Trailer or vehicle-mounted facilities shall be permitted without a 2-hour fire-resistant-rated perimeter.

14.2.1.1.4 When trailer or vehicle-mounted facilities are located contiguous to a health care facility or another structure, a 2-hour fire-resistant-rated barrier shall be placed between the facility and the contiguous structure.

14.2.1.1.5 Where building exterior walls form part of the facility boundary, that portion of the facility boundary shall not require 2-hour fire-resistant-rated construction.

14.2.1.1.6* If there are connecting doors through such common walls of contiguity, they shall be at least B-label, 1½-hour fire doors.

14.2.1.1.7 When used for hyperbaric procedures, the room or rooms housing the Class A or Class B chambers shall be for the exclusive use of the hyperbaric operation.

14.2.1.1.8 Service equipment (e.g., compressors) shall be permitted to be located in multi-use spaces meeting the requirements of 14.2.1.1.

14.2.1.1.9 The supporting foundation for any chamber shall be designed to support the chamber.

14.2.1.1.9.1 If on-site hydrostatic testing will be performed, the chamber supporting foundation shall be designed to support an additional water weight.

Δ 14.2.1.2* The room housing a Class A, Class B, or Class C chamber and any ancillary equipment rooms shall be provided protection by one of the following systems:

- (1)* A hydraulically calculated automatic wet pipe sprinkler system meeting the requirements of NFPA 13
- (2) An automatic water mist fire protection system installed in accordance with NFPA 750
- (3)* A clean agent fire protection system in accordance with NFPA 2001

14.2.1.2.1 Class A, Class B, or Class C chambers not contiguous to a health care facility and located in a mobile vehicle-mounted facility shall not be required to be protected as specified in 14.2.1.2.

N 14.2.1.2.2 The room housing a Class A, Class B, or Class C chamber shall contain a minimum of one 2-A:10B:C portable fire extinguisher.

14.2.1.3 Hyperbaric Piping Requirements.

14.2.1.3.1* Except where otherwise required by this chapter, piping systems dedicated to the hyperbaric chamber shall meet the requirements of ANSI/ASME PVHO-1, *Safety Standard for Pressure Vessels for Human Occupancy*, for hyperbaric facility piping systems.

14.2.1.3.2 Shutoff valves accessible to facility personnel shall be provided for piping specified in 14.2.1.3.1 at the point of entry to the room housing the chamber(s).

14.2.1.3.3 The supply piping for all air, oxygen, or other breathing mixtures from certified commercially supplied cylinders and portable containers shall be provided with a particulate filter of 66 microns or finer.

Δ 14.2.1.3.3.1 The particulate filter shall meet the construction requirements of ANSI/ASME PVHO-1, *Safety Standard for Pressure Vessels for Human Occupancy*.

N 14.2.1.3.3.2 The particulate filter shall be located as close as practical to the source.

14.2.1.4 Hyperbaric Medical Oxygen System Requirements.

14.2.1.4.1 Where medical oxygen systems are installed for hyperbaric use, the hyperbaric area(s) or facility shall be treated as a separate zone.

14.2.1.4.2 The requirements of Chapter 5 shall apply to the medical oxygen system for hyperbaric use, from the source of supply to the first in-line valve located downstream of the zone valve(s).

14.2.1.4.3 The requirements of ANSI/ASME PVHO-1, *Safety Standard for Pressure Vessels for Human Occupancy*, shall apply to the medical oxygen system for hyperbaric use, starting immediately downstream of the first in-line valve located after the zone valve(s).

Δ 14.2.1.4.4 Hyperbaric oxygen systems for Category 1, Category 2, and Category 3 hyperbaric care connected directly to a hospital's oxygen system shall comply with Section 5.1, as applicable, except as noted in 14.2.1.4.4.1.

14.2.1.4.4.1 **Central Supply Systems.** Oxygen systems shall comply with 5.1.3.5, as applicable, except as follows:

- (1) An emergency oxygen supply connection (EOSC) shall not be required for the hyperbaric oxygen system.
- (2) An in-building emergency reserve (IBER) shall not be required for the hyperbaric oxygen system.

• 14.2.1.4.5 Hyperbaric stand-alone oxygen systems for Category 1 and Category 2 hyperbaric care shall comply with Section 5.1, as applicable, except as noted in 14.2.1.4.5.1.

14.2.1.4.5.1 **Central Supply Systems.** Oxygen systems shall comply with 5.1.3.5, as applicable, except as follows:

- (1) An EOSC shall not be required for the hyperbaric oxygen system.
- (2) An IBER shall not be required for the hyperbaric oxygen system.

14.2.1.4.6 **Warning Systems.**

14.2.1.4.6.1 Oxygen systems shall comply with 5.1.9, as applicable, except that warning systems shall be permitted to be a single master/area alarm panel.

14.2.1.4.6.2 The alarm panel shall be located in the room housing the chamber(s) to allow for easy audio and visual monitoring by the chamber operator.

14.2.1.4.7 Hyperbaric stand-alone oxygen systems for Category 3 hyperbaric care shall comply with Section 5.2, as applicable, except as noted in 14.2.1.4.7.1.

14.2.1.4.7.1 **Central Supply Systems.** Oxygen systems shall comply with 5.1.3.5, as applicable, except as follows:

- (1) If the operating oxygen supply consists of high pressure cylinders designed with a primary and secondary source, no reserve supply shall be required.
- (2) If the operating oxygen supply consists of liquid containers designed with a primary and secondary source, a reserve with a minimum supply of 15 minutes shall be required.
- (3) If the operating oxygen supply consists of a bulk primary, a reserve with a minimum supply of 15 minutes shall be required.
- (4) An EOSC shall not be required for the hyperbaric oxygen system.
- (5) An IBER shall not be required for the hyperbaric oxygen system.

14.2.1.5 **Hyperbaric Medical Air System Requirements.**

14.2.1.5.1 Where medical air systems are installed for hyperbaric use, the hyperbaric area(s) or facility shall be treated as a separate zone.

14.2.1.5.2 Chapter 5 requirements shall apply to the medical air system for hyperbaric use, from the source of supply to the first in-line valve located downstream of the zone valve(s).

14.2.1.5.3 ANSI/ASME PVHO-1, *Safety Standard for Pressure Vessels for Human Occupancy*, requirements shall apply to the medical air system for hyperbaric use, starting immediately

downstream of the first in-line valve located after the zone valve(s).

14.2.1.5.4 Where a medical air system is installed for hyperbaric treatments, it shall comply with the requirements for the appropriate level as determined in 14.2.1.5.4.1 through 14.2.1.5.4.7.

14.2.1.5.4.1 Hyperbaric medical air systems for Category 1, Category 2, and Category 3 hyperbaric care connected directly to a hospital's medical air system shall comply with Section 5.2, as applicable.

14.2.1.5.4.2 **Reserved.**

14.2.1.5.4.3 Hyperbaric stand-alone medical air systems for Category 1 and Category 2 hyperbaric care shall comply with Section 5.2, as applicable.

14.2.1.5.4.4 **Reserved.**

14.2.1.5.4.5 Medical air systems for Category 1 and Category 2 hyperbaric care shall comply with Section 5.2, as applicable, except that warning systems shall be permitted to be a single master/area alarm panel.

14.2.1.5.4.6 Hyperbaric stand-alone medical systems for Category 3 hyperbaric care shall comply with Section 5.2, as applicable, except as noted in 14.2.1.5.4.7.

14.2.1.5.4.7 Medical air systems shall comply with Section 5.2 as applicable, except as follows:

- (1) Area and master alarms shall not be required for Category 3 hyperbaric care.
- (2) A gas cylinder header per Section 5.2 with sufficient cylinder connections to provide for at least an average day's supply with the appropriate number of connections being determined after consideration of delivery schedule, proximity of the facility to alternate supplies, and the facility's emergency plan shall be permitted.
- (3) A medical air cylinder directly connected to a Class B or Class C chamber and used to provide air to that chamber shall be permitted to be in the same room as the chamber.
- (4) Where a cylinder is used as described in 14.2.1.5.4.7(3), the cylinder shall be considered to be "in use" and shall not be counted when determining the total volume of medical gas outside a storage area in Section 11.3.

14.2.1.6 **Storage and Handling of Medical Gases.** Storage and handling of medical gases shall meet the applicable requirements of Chapter 5 and Chapter 11.

14.2.2 **Fabrication of the Hyperbaric Chamber.**

14.2.2.1* Chambers for human occupancy and their supporting systems shall be designed and fabricated to meet ANSI/ASME PVHO-1, *Safety Standard for Pressure Vessels for Human Occupancy*, by personnel qualified to fabricate vessels under such codes.

14.2.2.1.1 Piping systems for hyperbaric facilities shall be required to meet only the requirements of this chapter and section "Piping" of ANSI/ASME PVHO-1, *Safety Standard for Pressure Vessels for Human Occupancy*.

14.2.2.1.2 Piping that is installed in concealed locations in the building housing the hyperbaric facility, such as inside building

walls or above false ceilings, shall use only those joining procedures permitted by Chapter 5.

14.2.2.2 The chamber shall be stamped in accordance with ANSI/ASME PVHO-1, *Safety Standard for Pressure Vessels for Human Occupancy*.

14.2.2.3 As a minimum, animal chambers shall be designed, fabricated, and stamped to meet ASME *Boiler and Pressure Vessel Code* Section VIII, Division 1 code requirements.

14.2.2.4 The floor of a Class A chamber shall be designed to support equipment and personnel necessary for the operation of the chamber according to its expected purpose.

14.2.2.4.1 The floor of Class A chambers shall be noncombustible.

14.2.2.4.2 If a bilge is installed, access to the bilge shall be provided for cleaning purposes.

14.2.2.4.3 If the interior floor of a Class A chamber consists of removable floor (deck) plates, the plates shall be mechanically secured and electrically bonded to the chamber to ensure a positive electrical ground and to prevent movement of the plate, which could cause injury to personnel.

14.2.2.5 The interior surface of Class A chambers shall be unfinished or treated with a paint/coating in accordance with 14.2.2.5.1.

▲ **14.2.2.5.1*** Interior paint/coating shall meet the performance criteria of NFPA 101, Class A interior finish, when tested in accordance with ASTM E84, *Standard Test Method for Surface Burning Characteristics of Building Materials*, or ANSI/UL 723, *Standard for Test for Surface Burning Characteristics of Building Materials*.

14.2.2.5.2* One additional application of paint shall be permitted, provided total paint thickness does not exceed $\frac{1}{28}$ in. (0.9 mm).

▲ **14.2.2.5.3** If the interior of a Class A chamber is treated (painted), the cure procedure and minimum duration for each layer of paint/coating to off-gas shall be in accordance with the manufacturer's application instructions.

14.2.2.5.4* If sound-deadening materials are employed within a hyperbaric chamber, they shall be limited-combustible materials.

14.2.2.6* Viewing ports, access ports for piping and wiring or monitoring, and related leads shall be installed during initial fabrication of the chamber.

14.2.2.6.1 Access ports in Class A chambers, access ports for monitoring, and other electrical circuits shall be housed in enclosures that are weatherproof, both inside and outside the chamber, for protection in the event of sprinkler activation.

14.2.2.6.2 Viewports and penetrator plates shall be designed and fabricated according to ANSI/ASME PVHO-1, *Safety Standard for Pressure Vessels for Human Occupancy*.

14.2.3 Illumination.

14.2.3.1 Unless designed for chamber use, sources of illumination shall be mounted outside the pressure chamber and arranged to shine through chamber ports or through chamber penetrators designed for fiber-optic or similar lighting.

14.2.3.1.1 Lighting fixtures used in conjunction with viewports shall be designed so that temperature ratings for the viewport material given in ANSI/ASME PVHO-1 are not exceeded.

14.2.3.1.2 Gasket material shall be of a type that allows the movement of thermal expansion and shall be selected for the temperatures, pressures, and composition of gases involved.

14.2.3.1.2.1 Gaskets or O-rings shall be confined to grooves or enclosures, which will prevent their being blown out or squeezed from the enclosures or compression flanges.

14.2.3.2 Lighting permanently installed inside the chamber and portable lighting for temporary use inside the chamber shall meet the requirements of 14.2.9.3.15.

14.2.3.3 Emergency lighting for the interior of the chamber shall be provided.

14.2.4 Chamber Ventilation.

14.2.4.1 Ventilation of Class A Chambers.

14.2.4.1.1 The minimum ventilation rate for a Class A chamber shall be 0.085 m³/min (3 ft³/min) of air per chamber occupant who is not using a breathing-mask overboard dump system that exhausts exhaled gases.

14.2.4.1.1.1 The minimum threshold rate shall be 0.085 m³/min (3 ft³/min).

14.2.4.1.1.2 Provision shall be made for ventilation during nonpressurization of Class A chambers as well as during pressurization.

14.2.4.1.2* Ventilation shall not be required when saturation operations are conducted in the chamber, provided that carbon dioxide removal and odor control are accomplished and that the monitoring requirements of 14.2.10.4.1 and 14.2.10.5 are met.

14.2.4.1.3 Individual breathing apparatus shall be available inside a Class A chamber for each occupant for use in the event that the chamber atmosphere is fouled by combustion or otherwise.

14.2.4.1.3.1 The breathing mixture supplied to breathing apparatus shall be independent of chamber atmosphere.

14.2.4.1.3.2 The breathing gas supply shall be designed for simultaneous use of all breathing apparatus.

14.2.4.1.3.3 Breathing apparatus shall function at all pressures that can be encountered in the chamber.

14.2.4.1.3.4 In the event of a fire within a chamber, provision shall be made to simultaneously switch all breathing apparatus to an air supply that is independent of the chamber atmosphere.

14.2.4.2 Sources of Air for Chamber Atmospheres.

14.2.4.2.1* Sources of air for chamber atmospheres shall be such that toxic or flammable gases are not introduced.

14.2.4.2.2 Compressor intakes shall be located away from air contaminated by exhaust from activities of vehicles, internal combustion engines, stationary engines, or building exhaust outlets.

14.2.4.2.3 Air supply for chamber atmosphere shall be monitored as required in 14.2.10.6.

14.2.4.2.4 The use of conventional oil-lubricated compressors shall be permitted, provided that they are fitted with air treatment packages designed to meet the requirements of 14.2.10.6.

14.2.4.2.5 Air compressor installations shall consist of two or more individual compressors with capacities such that required system flow rates can be maintained on a continuous basis with any single compressor out of operation, unless 14.2.9.2.6 is satisfied.

14.2.4.2.5.1 Each compressor shall be supplied from separate electrical branch circuits.

14.2.4.2.6 Air compressor installations that supply medical air to piped gas systems as well as to hyperbaric facilities shall meet the requirements of 5.1.3.6.3 and this chapter.

14.2.4.2.7 Air compressor installations that are used exclusively for hyperbaric facilities shall meet the requirements of this chapter only.

14.2.4.3 Temperature and Humidity Control.

14.2.4.3.1 Warming or cooling of the atmosphere within a Class A chamber shall be permitted by circulating the ambient air within the chamber over or past coils through which a constant flow of warm or cool water or water/glycol mixture is circulated.

14.2.4.3.2* Class A chambers that are not used in the capacity of an operating room shall maintain a temperature that is comfortable for the occupants [usually 22°C ±2°C (75°F ±5°F)].

14.2.4.3.3 Whenever the Class A chamber is used as an operating room, it shall be ventilated, and the atmosphere shall be conditioned according to the minimum requirements for temperature in hospital operating rooms.

14.2.4.3.3.1 If inhalation anesthetic agents are being utilized (e.g., halothane, isoflurane, sevoflurane, desflurane), a closed anesthetic system with exhaled gas scavenging and overboard dumping shall be employed.

14.2.4.3.3.2 Flammable inhalation anesthetics (e.g., cyclopropane, ethyl ether, ethylene, and ethyl chloride) shall not be employed.

14.2.4.3.4 Dehumidification shall be permitted through the use of cold coils.

14.2.4.3.5 Humidification by the use of an air-powered water nebulizer shall be permitted.

14.2.4.3.6 Noncombustible packing and nonflammable lubricant shall be employed on the fan shaft.

14.2.4.4 Ventilation of Class B Chambers.

14.2.4.4.1* The minimum ventilation rate for a Class B chamber shall be 0.0283 m³/min (1 ft³/min).

14.2.4.4.2 Class B chambers not designed for 100 percent oxygen environment shall comply with the monitoring requirements of 14.2.10.4.

14.2.4.4.3 For Class B chambers equipped with a breathing apparatus, the breathing apparatus shall function at all pressures that can be encountered in the chamber.

14.2.5 Emergency Depressurization.

14.2.5.1 Class A chambers shall be capable of depressurizing from 3 ATA (304.0 kPa) to ambient pressure in not more than 6 minutes.

14.2.5.2 Class B chambers shall be capable of depressurizing from 3 ATA (304.0 kPa) to ambient pressure in not more than 2 minutes.

14.2.5.3* A means for respiratory and eye protection from combustion products allowing unrestricted mobility shall be available outside a Class A or Class B chamber for use by personnel in the event the air in the vicinity of the chamber is fouled by smoke or other combustion products.

14.2.6 Fire Protection in Class A Chambers.

14.2.6.1 General.

14.2.6.1.1 A fire suppression system consisting of independently supplied and operating handline- and deluge-type water spray systems shall be installed in all Class A chambers.

14.2.6.1.2 Design of the fire suppression system shall be such that failure of components in either the handline or deluge system will not render the other system inoperative.

14.2.6.1.3 System design shall be such that activation of either the handline or the deluge system shall automatically cause the following:

- (1) Visual and aural indication of activation shall occur at the chamber operator's console.
- (2) All ungrounded electrical leads for power and lighting circuits contained inside the chamber shall be disconnected.
- (3) Emergency lighting (*see 14.2.3.3*) and communication, where used, shall be activated.

14.2.6.1.3.1 Intrinsically safe circuits, including sound-powered communications, shall be permitted to remain connected when either the handline or the deluge system is activated.

14.2.6.1.4 A means of communication shall be provided at the chamber operator's control console for notifying the fire department.

N 14.2.6.1.4.1 If the building housing the hyperbaric facility has a central fire alarm system, the communication shall be a pull-station connected to the system.

14.2.6.1.4.2 Trailer or vehicle-mounted facilities not contiguous to a health care facility shall conform to one of the following:

- (1) They shall comply with 14.2.6.1.4.
- (2) They shall have a means for immediately contacting the local fire department.

14.2.6.1.5* Fire blankets and portable carbon dioxide extinguishers shall not be installed in or carried into the chamber.

14.2.6.1.6 Booster pumps, control circuitry, and other electrical equipment involved in fire suppression system operation shall be powered from a critical branch of the essential electrical system as specified in 14.2.9.2.1.2.

14.2.6.1.7 Signs prohibiting the introduction of flammable liquids, gases, and other articles not permitted by this chapter into the chamber shall be posted at the chamber entrance(s).

14.2.6.1.8 The fire suppression system shall be permitted to be supplied from the local potable water service.

14.2.6.2 Deluge System. A fixed water deluge extinguishing system shall be installed in all chamber compartments that are designed for manned operations.

14.2.6.2.1 In chambers that consist of more than one chamber compartment (lock), the design of the deluge system shall meet the requirements of 14.2.6.2 when the chamber compartments are at different depths (pressures).

14.2.6.2.2 The deluge system in different compartments (locks) shall operate independently or simultaneously.

14.2.6.2.3 Fixed deluge systems shall not be required in chamber compartments that are used strictly as personnel transfer compartments (locks) and for no other purposes.

14.2.6.2.4* Manual activation and deactivation deluge controls shall be located at the operator's console and in each chamber compartment (lock) containing a deluge system.

14.2.6.2.4.1 Controls shall be designed to prevent unintended activation.

14.2.6.2.5 Water shall be delivered from the fixed discharge nozzles as specified in 14.2.6.2.7 within 3 seconds of activation of any affiliated deluge control.

14.2.6.2.6* Average spray density at floor level shall be not less than 81.5 L/min/m² (2 gpm/ft²), with no floor area larger than 1 m² (10.76 ft²) receiving less than 40.75 L/min/m² (1 gpm/ft²).

14.2.6.2.7 Water shall be available in the deluge system to maintain the flow specified in 14.2.6.2.6 simultaneously in each chamber compartment (lock) containing the deluge system for 1 minute.

14.2.6.2.7.1 The limit on maximum extinguishment duration shall be governed by the chamber capacity (bilge capacity also, if so equipped) or its drainage system, or both.

14.2.6.2.8 The deluge system shall have stored pressure to operate for at least 15 seconds without electrical branch power.

N 14.2.6.2.9 All dedicated storage vessels used to provide the deluge system with water shall be fitted with a suitable water level indicator, with the level displayed at the chamber console.

N 14.2.6.2.10 Deluge systems using pressurized water vessels shall be designed to prevent the driving gas supply from pressurizing the hyperbaric chamber if all the water is driven out of the water vessel.

14.2.6.3 Handline System. A handline extinguishing system shall be installed in all chamber compartments (locks).

14.2.6.3.1 At least two handlines shall be strategically located in treatment compartments (locks).

14.2.6.3.2 At least one handline shall be located in each personnel transfer compartment (lock).

14.2.6.3.3 If any chamber compartment (lock) is equipped with a bilge access panel, at least one handline shall reach the bilge area.

14.2.6.3.4 Handlines shall have a 12.7 mm (0.5 in.) minimum internal diameter and shall have a rated operating pressure greater than the highest supply pressure of the supply system.

14.2.6.3.5 Each handline shall be activated by a manual, quick-opening, quarter-turn valve located within the compartment (lock).

14.2.6.3.5.1 A hand-operated spring-return to close valves at the discharge end of handlines shall be permitted.

14.2.6.3.6 Handlines shall be equipped with override valves that are accessible to personnel outside the chamber.

14.2.6.3.7 The water supply for the handline system shall be designed to ensure a 345 kPa (50 psi) minimum water pressure above the maximum chamber pressure.

14.2.6.3.7.1 The system shall be capable of supplying a minimum of 18.9 L/min (5 gpm) simultaneously to each of any two of the handlines at the maximum chamber pressure for a period of not less than 4 minutes.

14.2.6.4 Automatic Detection System. Automatic fire detection systems shall not be required.

14.2.6.4.1 Surveillance fire detectors responsive to the radiation from flame shall be employed.

14.2.6.4.1.1 The type and arrangement of detectors shall be such as to respond within 1 second of flame origination.

14.2.6.4.2* The number of detectors employed and their location shall be selected to cover the chamber interior.

14.2.6.4.3 The system shall be powered from the critical branch of the essential electrical system or shall have automatic battery backup.

14.2.6.4.4 If used to automatically activate the deluge system, the requirements for manual activation/deactivation in 14.2.6.2.4 and deluge system response time in 14.2.6.2.5 shall still apply.

14.2.6.4.5 The system shall include self-monitoring functions for fault detection and fault alarms and indications.

14.2.6.4.6 Automatic fire detection equipment, when used, shall meet the applicable requirements in 14.2.9.3.

14.2.7 Pneumatic Controls for Class A Chambers. Class A chambers that utilize pneumatically operated controls that are related to fire suppression system operation, breathing gases, or rapid exhaust valves shall be equipped with a means to operate such controls or intended function in the event that the pneumatic supply fails.

14.2.8 Fire Protection in Class B and Class C Chambers. Class B and Class C chambers shall not be required to comply with 14.2.6.

14.2.8.1 Signs prohibiting the introduction of flammable liquids, gases, and other articles not permitted by this chapter into the chamber shall be posted at the chamber entrance(s).

14.2.8.2 A means for communication shall be provided within the room housing the chamber(s) for notifying the fire department.

N 14.2.8.2.1 If the building housing the hyperbaric facility has a central fire alarm system, the communication shall be a pull-station connected to the system.

14.2.8.2.2 Trailer or vehicle-mounted facilities not contiguous to a health care facility shall conform to one of the following:

- (1) They shall comply with 14.2.8.2.
- (2) They shall have a means for immediately contacting the local fire department.

14.2.9 Electrical Systems.

14.2.9.1 General.

▲ **14.2.9.1.1** The requirements of *NFPA 70* or local electrical codes shall apply to electrical wiring and equipment in hyperbaric facilities within the scope of this chapter, except as such rules are modified in 14.2.9.

14.2.9.1.2 All hyperbaric chamber service equipment, switchboards, panels, or control consoles shall be located outside of, and in the vicinity of, the chamber.

14.2.9.1.3 Console or module spaces containing both oxygen piping and electrical equipment shall be either one of the following:

- (1) Mechanically or naturally ventilated
- (2) Continuously monitored for excessive oxygen concentrations whenever the electrical equipment is energized

14.2.9.1.4 For the fixed electrical installation, none of the following shall be permitted inside the chamber:

- (1) Circuit breakers
- (2) Line fuses
- (3) Motor controllers
- (4) Relays
- (5) Transformers
- (6) Ballasts
- (7) Lighting panels
- (8) Power panels

• **14.2.9.1.5** All electrical equipment connected to, or used in conjunction with, hyperbaric patients shall comply with the requirements of Chapter 10 and with the applicable subparagraphs of 14.2.9.3.

14.2.9.1.6 In the event of activation of the room sprinkler system, electrical equipment shall be protected from sprinkler water but shall not be required to remain functional if manual means to control and decompress the chamber are provided.

14.2.9.2 Electrical Service.

■ **14.2.9.2.1*** All hyperbaric facilities equipped with any of the following electrically driven feature shall be provided with some means of backup electric power:

- (1)* Chamber room emergency lighting, installed per *NFPA 101*, Section 7.9.
- (2)* Chamber emergency lighting, whether internally or externally mounted
- (3)* Chamber intercommunications
- (4)* Alarm systems, including flame detectors
- (5)* Chamber fire suppression system equipment and controls
- (6)* Electrical controls used for chamber pressurization and ventilation control

14.2.9.2.1.1 Electrical control and alarm system design shall be such that hazardous conditions (e.g., loss of chamber pressure control, deluge activation, spurious alarms) do not occur during power interruption or during power restoration.

■ **14.2.9.2.1.2** Booster pumps in the chamber fire suppression system shall be on separate branch circuits serving no other loads.

▲ **14.2.9.2.2** Article 700 of *NFPA 70* shall apply to hyperbaric systems located in facilities other than health care facilities.

14.2.9.2.3 Hyperbaric electrical service for Category 1 or 2 hyperbaric care shall be supplied from two independent sources of electric power.

14.2.9.2.3.1 For hyperbaric facilities using a prime-mover-driven generator set, they shall be designated as the life safety and critical branches and shall meet the requirements of Chapter 6 for hyperbaric systems based in health care facilities.

14.2.9.2.3.2 Electrical equipment associated with life-support functions of hyperbaric facilities shall be connected to the critical branch of the essential electrical system, which requires that such equipment shall have electrical power restored within 10 seconds of interruption of normal power.

• **14.2.9.2.4** Electric motor-driven compressors and auxiliary electrical equipment normally located outside the chamber and used for chamber atmospheric control shall be connected to the equipment system (see Chapter 6) or the life safety and critical branches (see *NFPA 70*, Article 700), as applicable.

14.2.9.2.5 Electric motor-driven compressors and auxiliary electrical equipment shall be arranged for delayed-automatic or manual connection to the alternate power source so as to prevent excessive current draw on the system during restarting.

14.2.9.2.6 Where reserve air tanks or a nonelectric compressor(s) is provided to maintain ventilation airflow within the chamber and supply air for chamber pressurization, the compressor(s) and auxiliary equipment shall not be required to have an alternate source of power.

• **14.2.9.3* Wiring and Equipment Inside Class A Chambers.** The general rules of 14.2.9.3.1 through 14.2.9.3.17.6 shall be satisfied in the use of electrical devices and equipment. These requirements are intended to protect against the elevated fire risks known to exist in a pressurized air environment and shall not be construed as classifying the chamber interior as a Class I (as defined in *NFPA 70*, Article 500) hazardous location.

14.2.9.3.1 Equipment or equipment components installed in, or used in, the chamber shall not present an explosion or implosion hazard under the conditions of hyperbaric use.

14.2.9.3.2 All equipment shall be rated, or tested and documented, for intended hyperbaric conditions prior to use.

14.2.9.3.3 Only the electrical equipment necessary for the safe operation of the chamber and for required patient care shall be permitted in the chamber.

14.2.9.3.4 Only portable equipment necessary for the logistical and operational support shall be permitted in the chamber during manned pressurization.

14.2.9.3.5 Where conformance with Class I, Division 1 requirements is specified in 14.2.9.3.7, conformance with Class I, Division 2 requirements shall be permitted to be substituted.

14.2.9.3.6 Wires and Cables. Wires and cables used inside the chamber shall be resistant to the spread of fire by complying with 14.2.9.3.6.1 or shall be contained within equipment described in 14.2.9.3.6.2.

14.2.9.3.6.1 Wires and cables shall comply with the spread of fire requirements of "UL Flame Exposure, Vertical Tray Flame Test" in UL 1685, *Standard for Vertical-Tray Fire-Propagation and*

Smoke-Release Test for Electrical and Optical-Fiber Cables, or shall exhibit damage (char length) not to exceed 1.5 m (4 ft 11 in.) when performing the CSA “Vertical Flame Test — Cables in Cable Trays,” as described in CSA C22.2 No. 0.3-M, *Test Methods for Electrical Wires and Cables*.

14.2.9.3.6.2 Wires and cables that form an integral part of electrical equipment approved or listed specifically for use inside hyperbaric chambers, including patient leads, shall not be required to comply with the requirements of 14.2.9.3.6.1.

14.2.9.3.7 Wiring Methods.

14.2.9.3.7.1 Fixed wiring shall be installed in threaded RMC or IMC conduit utilizing the following waterproof components:

- (1) Threaded metal joints
- (2) Fittings
- (3) Boxes
- (4) Enclosures

14.2.9.3.7.2 A continuous ground shall be maintained between all conductive surfaces enclosing electrical circuits and the chamber hull using approved grounding means.

14.2.9.3.7.3 All threaded conduit shall be threaded with an NPT standard conduit cutting die that provides a 19 mm taper per 0.3 m (0.75 in. taper per 1 ft).

14.2.9.3.7.4 All threaded conduit shall be made wrench-tight to prevent sparking when fault current flows through the conduit system.

▲ **14.2.9.3.7.5** Wiring classified as intrinsically safe for any group location and installed in accordance with Article 504 of *NFPA 70* shall be permitted.

▲ **14.2.9.3.7.6** Threaded, liquidtight flexible metal conduit installed in accordance with Article 350 of *NFPA 70* shall be permitted when protected from damage by physical barriers such as equipment panels.

14.2.9.3.8 Drainage. Means of draining fixed conduit and fixed equipment enclosures shall be provided.

▲ **14.2.9.3.9 Flexible Electrical Cords.** Flexible cords used to connect portable utilization equipment to the fixed electrical supply circuit shall meet all the following requirements:

- (1) They shall be of a type approved for extra-hard use in accordance with Table 400.4 of *NFPA 70*.
- (2) Electrically conductive casings of all portable equipment for use inside the chamber shall be grounded.
- (3) They shall meet the requirements of 501.140 of *NFPA 70*.

14.2.9.3.9.1 The normal cord supplied with the portable utilization equipment shall be permitted when the portable device is rated at less than 2 A and the cord is positioned out of traffic and protected from physical abuse.

14.2.9.3.10* Receptacles Installed Inside the Chamber.

14.2.9.3.10.1 Receptacles shall be waterproof.

14.2.9.3.10.2 Receptacles shall be of the type providing for connection to the grounding conductor of the flexible cord.

14.2.9.3.10.3 Receptacles shall be supplied from isolated power circuits meeting the requirements of 14.2.9.4.2.

14.2.9.3.10.4 The design of the receptacle shall be such that sparks cannot be discharged into the chamber environment when the plug is inserted or withdrawn under electrical load.

14.2.9.3.10.5 One of the following shall be satisfied to protect against inadvertent withdrawal of the plug under electrical load:

- (1) The receptacle–plug combination shall be of a locking type.
- (2) The receptacle shall carry a label warning against unplugging under load, and the power cord shall not present a trip hazard for personnel moving in the chamber.

14.2.9.3.11 Switches. Switches in the fixed wiring installation shall be waterproof.

14.2.9.3.11.1* Switch make and break contacts shall be housed in the electrical enclosure so that no sparks from arcing contacts can reach the chamber environment.

14.2.9.3.12* Temperature. No electrical equipment installed or used in the chamber shall have an operating surface temperature in excess of 85°C (185°F).

14.2.9.3.13 Exposed Live Electrical Parts. No exposed live electrical parts shall be permitted, except as specified in 14.2.9.3.13.1 and 14.2.9.3.13.2.

14.2.9.3.13.1 Exposed live electrical parts that are intrinsically safe shall be permitted.

14.2.9.3.13.2 Exposed live electrical parts that constitute patient monitoring leads, which are part of electromedical equipment, shall be permitted, provided that they meet the requirements of 14.2.9.3.17.

▲ **14.2.9.3.14* Motors.** Motors located in the chamber and that are not a component of medical equipment shall meet one of the following requirements:

- (1) They shall comply with 501.125(A)(1) of *NFPA 70*.
- (2) They shall be totally enclosed in accordance with 501.125(A)(2) or 501.125(A)(3) of *NFPA 70*.

14.2.9.3.15* Lighting.

14.2.9.3.15.1 Lighting installed or used inside the chamber shall be of a type that is not damaged by exposure to 1½ times the maximum allowable working pressure (MAWP).

14.2.9.3.15.2 Permanently installed fixtures shall meet the following requirements:

- (1) They shall be rated and approved for Class I (Division 1 or 2) classified areas.
- (2) They shall have lens guards installed.
- (3) They shall be located away from areas where they would experience physical damage from the normal movement of people and equipment.

14.2.9.3.15.3 Ballasts and other energy storage components that are part of the lighting circuit shall be installed outside the chamber in accordance with 14.2.9.1.4.

14.2.9.3.15.4 Portable fixtures intended for spot illumination shall be shatterproof or protected from physical damage.

14.2.9.3.16 Low-Voltage, Low-Power Equipment. The requirements of 14.2.9.3.16.1 through 14.2.9.3.16.5 shall apply to sensors and signaling, alarm, communications, and remote-

control equipment installed or used in the chamber for operation of the chamber.

14.2.9.3.16.1* Equipment shall be isolated from main power by one of the following means:

- (1) Design of the power supply circuit
- (2) Opto-isolation
- (3) Other electronic isolation means

14.2.9.3.16.2 Circuits such as headset cables, sensor leads, and so forth, not enclosed as required in 14.2.9.3.7, shall meet one of the following requirements:

- (1) They shall be part of approved intrinsically safe equipment.
- (2) They shall be limited by circuit design to not more than 28 V and 0.5 A under normal or circuit-fault conditions.

14.2.9.3.16.3 Chamber speakers shall be of a design in which the electrical circuitry and wiring is completely enclosed.

14.2.9.3.16.4 The electrical rating of chamber speakers shall not exceed 28 V rms and 25 W.

14.2.9.3.16.5 Battery-operated, portable intercom headset units shall meet the requirements of 14.2.9.3.17.5 for battery-operated devices.

14.2.9.3.17 Portable Patient Care-Related Electrical Appliances.

14.2.9.3.17.1 The appliance shall be designed, constructed, inspected, and maintained in accordance with Chapter 10.

14.2.9.3.17.2 The electrical and mechanical integrity of the appliance shall be verified and documented through an ongoing maintenance program as required in Chapter 10.

14.2.9.3.17.3 The appliance shall conform to the requirements of 14.2.9.3.1 and 14.2.9.3.12.

14.2.9.3.17.4 Appliances that utilize oxygen shall not allow oxygen accumulation in the electrical portions of the equipment under normal and abnormal conditions.

14.2.9.3.17.5 Battery-Operated Devices. Battery-operated devices shall meet the following requirements:

- (1) Batteries shall be fully enclosed and secured within the equipment enclosure.
- (2) Batteries shall not be damaged by the maximum chamber pressure to which they are exposed.
- (3) Batteries shall be of a sealed type that does not off-gas during normal use.
- (4) Batteries or battery-operated equipment shall not undergo charging while located in the chamber.
- (5) Batteries shall not be changed on in-chamber equipment while the chamber is in use.
- (6) The equipment electrical rating shall not exceed 12 V and 48 W.

14.2.9.3.17.6 Cord-Connected Devices. Cord-connected devices shall meet the following requirements:

- (1) All portable, cord-connected equipment shall have an on/off power switch.
- (2) The equipment electrical rating shall not exceed 120 V and 2 A, unless the electrical portions of the equipment are inert-gas purged.
- (3) The plug of cord-connected devices shall not be used to interrupt power to the device.

N 14.2.9.3.18* Gas Purging. Gas purging of AC and DC equipment used inside the chamber shall be permitted using inert gas or air.

14.2.9.4 Grounding and Ground-Fault Protection.

Δ 14.2.9.4.1 All chamber hulls shall be grounded to an electrical ground or grounding system that meets the requirements of Article 250, Grounding and Bonding, Section III, Grounding Electrode System and Grounding Electrode Conductor, of *NFPA 70*.

Δ 14.2.9.4.1.1 Grounding conductors shall be secured as required by Article 250, Grounding and Bonding, Section III, Grounding Electrode System and Grounding Electrode Conductor, of *NFPA 70*.

Δ 14.2.9.4.1.2 The material, size, and installation of the grounding conductor shall meet the requirements of Article 250, Grounding and Bonding, Section VI, Equipment Grounding and Equipment Grounding Conductors, of *NFPA 70* for equipment grounding conductors.

14.2.9.4.1.3 The resistance between the grounded chamber hull and the electrical ground shall not exceed 1 ohm.

14.2.9.4.2 All ac electrical power circuits located within the chamber shall be supplied from an ungrounded electrical system equipped with a line isolation monitor with signal lamps and audible alarms.

Δ 14.2.9.4.2.1 The circuits specified in 14.2.9.4.2 shall meet the requirements of 517.160(A) and 517.160(B) of *NFPA 70*.

14.2.9.4.2.2 Branch circuits shall not exceed 125 V or 15 A.

Δ 14.2.9.4.3 Wiring located both inside and outside the chamber, that serves line level circuits and equipment located inside the chamber, shall meet the grounding and bonding requirements of 501.30 of *NFPA 70*.

14.2.9.5 Wiring Outside the Chamber. Those electrical components that must remain functional for the safe termination of a dive following activation of the room sprinkler system shall be enclosed in waterproof housing.

Δ 14.2.9.5.1 All associated conduits shall meet the following requirements:

- (1) They shall be waterproof.
- (2) They shall meet the requirements of *NFPA 70*.
- (3) They shall be equipped with approved drains.

14.2.9.5.2* All other electrical devices outside the chamber shall meet the requirements of *NFPA 70*.

14.2.9.6 Additional Wiring and Equipment Requirements Inside Class B Chambers. The requirements in 14.2.9.6 shall apply to Class B chambers whether they are pressurized with oxygen or with air.

14.2.9.6.1 Electrical equipment inside Class B chambers shall be restricted to communications functions and patient physiological monitoring leads.

14.2.9.6.1.1* Each circuit shall be designed to limit the electrical energy to wire leads into the chamber under normal or fault conditions to not more than 28 V and 4.0 W. This requirement shall not exclude more stringent requirements imposed by other codes governing electromedical apparatus.

14.2.9.6.1.2 Communications wires shall be protected from physical damage and from coming into contact with flammable materials in the chamber by barriers or conduit.

14.2.9.6.1.3 Patient monitoring leads shall be part of approved electromedical apparatus meeting the requirements in 14.2.9.3.17.

14.2.9.6.2 Lighting inside the chamber shall be supplied from external sources.

14.2.9.6.3 No materials shall be permitted in a Class B chamber whose temperature exceeds 50°C (122°F), nor shall any electrical circuit inside a Class B chamber operate at a temperature exceeding 50°C (122°F).

14.2.10 Communications and Monitoring.

14.2.10.1 General.

14.2.10.1.1 Electrical monitoring equipment used inside the chamber shall comply with the applicable requirements of 14.2.9.

Δ 14.2.10.1.2 Detectors, sensors, transducers, and communications equipment located inside the chamber shall meet the requirements of 14.2.9.3.16 for Class A chambers and 14.2.9.6 for Class B chambers.

14.2.10.1.3 Wiring methods in the chamber shall meet the applicable requirements in 14.2.9.3.

14.2.10.1.4 The following equipment shall be installed outside the chamber or shall meet the requirements of 14.2.9.3.16:

- (1) Control equipment
- (2) Power amplifiers
- (3) Output transformers
- (4) Monitors associated with communications and monitoring equipment

14.2.10.2* Intercommunications.

14.2.10.2.1* An intercommunications system shall connect all personnel compartments (locks) and the chamber operator's control console.

14.2.10.2.2* Closed-circuit television monitoring of the chamber interior shall be employed for chamber operators who do not have direct visual contact with the chamber interior from their normal operating location.

14.2.10.2.3 Oxygen mask microphones shall be intrinsically safe at the maximum proposed pressure and 95 ± 5 percent oxygen.

14.2.10.3 Combustible Gas Detection.

14.2.10.3.1 The chamber atmosphere shall be continuously monitored for combustible gas concentrations whenever any volatile agents are used in the chamber. (See 14.2.4.3.3.1.)

14.2.10.3.1.1 The monitor shall be set to provide audible and visual alarms at 10 percent lower explosive limit (LEL) for the particular gas used.

14.2.10.4 Oxygen Monitoring.

Δ 14.2.10.4.1 Oxygen levels shall be continuously monitored in any chamber in which nitrogen is added to the chamber or to reduce the volumetric concentration of oxygen in the atmosphere.

14.2.10.4.1.1 Oxygen monitors shall be equipped with audible and visual alarms.

N 14.2.10.4.1.2 Sample response time, at all treatment levels, shall be no more than 30 seconds.

14.2.10.4.2* Oxygen levels shall be continuously monitored in Class A chambers when breathing mixtures containing in excess of 21 percent oxygen by volume are being breathed by patients or attendants, when any flammable agents are present in the chamber, or when both conditions exist.

14.2.10.4.2.1 Audible and visual alarms shall indicate volumetric oxygen concentrations in excess of 23.5 percent range for Class A chambers.

N 14.2.10.4.2.2* At least one sample port shall be equipped with a removable extension to allow for spot-checking of any location within the chamber.

14.2.10.5 Carbon Dioxide Monitoring. The chamber atmosphere shall be monitored for carbon dioxide levels during saturation operations whenever ventilation is not used.

14.2.10.6* Chamber Gas Supply Monitoring.

14.2.10.6.1* As a minimum, the air supplied from compressors to Class A chambers shall meet the requirements for CGA Grade E.

14.2.10.6.2 As a minimum, the air supplied from compressors to Class B chambers shall meet the requirements for CGA Grade E with the additional limit of no condensable hydrocarbons.

14.2.10.6.3 When air cylinders are used to provide breathing air in Class A or Class B chambers, the breathing air shall be medical air USP.

14.2.10.6.4 When cylinders are used to provide oxygen in Class A or Class B chambers, the gas shall be oxygen USP.

14.2.11 Other Equipment and Fixtures.

14.2.11.1 All furniture permanently installed in the hyperbaric chamber shall be grounded.

14.2.11.2* Exhaust from all classes of chambers shall be piped outside of the building.

14.2.11.2.1 Each Class B chamber shall have an independent exhaust line.

14.2.11.2.2 The point of exhaust shall not create a hazard.

14.2.11.2.3 The point of exhaust shall not allow reentry of gases into the building.

14.2.11.2.4 The point of exhaust shall be protected by the provision of a minimum of 0.3 cm (0.12 in.) mesh screen and situated to prevent the intrusion of rain, snow, or airborne debris.

14.2.11.2.5* The point of exhaust shall be identified as an oxygen exhaust by a sign prohibiting smoking or open flame and the sign shall include a pictograph indicating "no smoking" and "no open flame — flame" in accordance with NFPA 170.

14.3 Administration and Maintenance.

14.3.1 General.

14.3.1.1 Purpose. Section 14.3 contains requirements for administration and maintenance that shall be followed as an adjunct to physical precautions specified in Section 14.2.

14.3.1.2* Recognition of Hazards. The nature and recognition of hyperbaric hazards are outlined in Annex B of this document and shall be reviewed by the safety director.

14.3.1.3 Responsibility.

14.3.1.3.1 Personnel having responsibility for the hyperbaric facility, and those responsible for licensing, accrediting, or approving institutions or other facilities in which hyperbaric installations are employed, shall establish and enforce programs to fulfill the provisions of this chapter.

14.3.1.3.2* Each hyperbaric facility shall designate an on-site hyperbaric safety director to be in charge of all hyperbaric equipment and the operational safety requirements of this chapter.

14.3.1.3.2.1 The safety director shall participate with facility management personnel and the hyperbaric physician(s) in developing procedures for operation and maintenance of the hyperbaric facility.

14.3.1.3.2.2 The safety director shall make recommendations for departmental safety policies and procedures.

14.3.1.3.2.3 The safety director shall have the authority to restrict or remove any potentially hazardous supply or equipment items from the chamber.

14.3.1.3.3* The governing board shall be responsible for the care and safety of patients and personnel.

14.3.1.3.4* By virtue of its responsibility for the professional conduct of members of the medical staff of the health care facility, the organized medical staff shall adopt and enforce regulations with respect to the use of hyperbaric facilities located in health care facilities.

14.3.1.3.4.1 The safety director shall participate in the development of these regulations.

14.3.1.3.5* The safety director shall ensure that electrical, monitoring, life-support, protection, and ventilating arrangements in the hyperbaric chamber are inspected and tested as part of the routine maintenance program of the facility.

14.3.1.4 Rules and Regulations.

14.3.1.4.1* General. The administrative, technical, and professional staffs shall jointly develop policies for management of the hyperbaric facility.

14.3.1.4.1.1 Upon adoption, the management policies shall be available in the facility.

14.3.1.4.2 The medical director of hyperbaric medicine and the safety director shall jointly develop the minimum staff qualifications, experience, and complement based on the following:

- (1) Number and type of hyperbaric chambers in use
- (2) Maximum treatment capacity
- (3) Type of hyperbaric therapy normally provided

14.3.1.4.3 All personnel, including those involved in maintenance and repair of the hyperbaric facility, shall be trained on the purpose, application, operation, and limitations of emergency equipment.

14.3.1.4.4 When an inspection, test, or maintenance procedure of the fire suppression system results in the system being placed out of service, a protocol shall be followed that notifies appropriate personnel and agencies of the planned or emergency impairment.

14.3.1.4.5 A sign indicating the fire suppression system is out of service shall be conspicuously placed on the operating console until the fire suppression system is restored to service.

14.3.1.4.6 During chamber operations with an occupant(s) in a chamber, the operator shall be physically present and shall maintain visual or audible contact with the control panel or the chamber occupant(s).

N 14.3.1.5 Emergency Procedures.

14.3.1.5.1 Emergency procedures specific to the hyperbaric facility shall be established.

14.3.1.5.2* All personnel shall be trained in emergency procedures.

14.3.1.5.3 Personnel shall be trained to control the chamber and decompress occupants when all powered equipment has been rendered inoperative.

14.3.1.5.4* Emergency procedures and fire training drills shall be conducted at least annually and documented by the safety director.

N 14.3.1.5.4.1 The time required to evacuate all persons from a hyperbaric area with a full complement of chamber occupants all at treatment pressure shall be measured annually.

N 14.3.1.5.4.2 The occupants for the timed evacuation drill shall be permitted to be simulated.

14.3.1.6 General.

14.3.1.6.1 Potential Ignition Sources.

14.3.1.6.1.1* The following shall be prohibited from inside the chamber and the immediate vicinity outside the chamber:

- (1) Smoking
- (2) Open flames
- (3) Hot objects

14.3.1.6.1.2 The following shall be prohibited from inside the chamber:

- (1) Personal warming devices (e.g., therapeutic chemical heating pads, hand warmers, pocket warmers)
- (2) Cell phones and pagers
- (3) Sparking toys
- (4) Personal entertainment devices

N 14.3.1.6.1.3* Prior to each hyperbaric treatment a pretreatment, safety check to identify and remove prohibited items shall be performed and documented by a qualified person.

14.3.1.6.2 Flammable Gases and Liquids.

14.3.1.6.2.1 Flammable agents, including devices such as laboratory burners employing bottled or natural gas and cigarette lighters, shall be prohibited inside the chamber and from the proximity of the compressor intake.

14.3.1.6.2.2 For Class A chambers, flammable agents used for patient care, such as alcohol swabs, parenteral alcohol-based pharmaceuticals, and topical creams, shall be permitted in the chamber if the following conditions are met:

- (1) Such use is approved by the safety director or other authority having jurisdiction.
- (2)* The quantities of such agents are limited so that they are incapable of releasing sufficient flammable vapor into the chamber atmosphere to exceed the LEL for the material.
- (3) A safety factor is included to account for the localized concentrations, stratification, and the absence of ventilation.
- (4) The oxygen monitoring requirement of 14.2.10.4.2 is observed.

14.3.1.6.2.3 Flammable liquids, gases, or vapors shall not be permitted inside any Class B chamber.

14.3.1.6.3* Personnel.

14.3.1.6.3.1 Antistatic procedures, as directed by the safety director, shall be employed whenever atmospheres containing more than 23.5 percent oxygen by volume are used.

14.3.1.6.3.2 In Class A and Class B chambers with atmospheres containing more than 23.5 percent oxygen by volume, electrical grounding of the patient shall be ensured by the provision of a high-impedance conductive pathway in contact with the patient's skin.

14.3.1.6.3.3 Shoes having ferrous nails that make contact with the floor shall not be permitted to be worn in Class A chambers.

14.3.1.6.4* Textiles.

14.3.1.6.4.1 Except where permitted in 14.3.1.6.4.3, silk, wool, or synthetic textile materials, or any combination thereof, shall be prohibited in Class A or Class B chambers.

14.3.1.6.4.2* Garments permitted inside of chambers shall be as follows:

- (1) Garments fabricated of 100 percent cotton or a blend of cotton and polyester fabric shall be permitted in Class A chambers.
- (2) Garments fabricated of 100 percent cotton, or a blend of cotton and polyester fabric containing no more than 50 percent polyester, shall be permitted in Class B chambers.

14.3.1.6.4.3* The physician or surgeon in charge, with the concurrence of the safety director, shall be permitted to use one of the following prohibited items in the chamber:

- (1) Suture material
- (2) Alloplastic devices
- (3) Bacterial barriers
- (4) Surgical dressings
- (5) Biological interfaces
- (6) Synthetic textiles

14.3.1.6.4.4 Physician and safety director approval to use prohibited items shall be stated in writing for all prohibited materials employed. (See A.14.3.1.3.2.)

14.3.1.6.4.5 Upholstered Furniture.

Δ (A) Upholstered furniture (fixed or portable) shall be resistant to smoldering (or cigarette) ignition in accordance with one of the following:

- (1) The components of the upholstered furniture shall meet the requirements for Class 1 when tested in accordance with NFPA 260.
- (2) Mocked-up composites of the upholstered furniture shall have a char length not exceeding 1½ in. (38 mm) when tested in accordance with NFPA 261.

(B) Upholstered furniture shall have limited rates of heat release when tested in accordance with ASTM E1537, *Standard Test Method for Fire Testing of Upholstered Furniture*, or with California Technical Bulletin 133, *Flammability Test Procedure for Seating Furniture for Use in Public Occupancies*, as follows:

- (1) The peak rate of heat release for the single upholstered furniture item shall not exceed 80 kW.
- (2) The total heat released by the single upholstered furniture item during the first 10 minutes of the test shall not exceed 25 MJ.

14.3.1.6.4.6 Mattresses.

N (A) Mattress components shall have a char length not exceeding 2 in. (51 mm) when tested in accordance with 16 CFR 1632, "Standard for the Flammability of Mattresses and Mattress Pads" (FF 4-72), or NFPA 260.

N (B) Mattresses shall have limited rates of heat release when tested in accordance with ASTM E1590, *Standard Test Method for Fire Testing of Mattresses*, or California Technical Bulletin 129, *Flammability Test Procedure for Mattresses for Use in Public Buildings*, as follows:

- (1) The peak rate of heat release for the mattress shall not exceed 100 kW.
- (2) The total heat released by the mattress during the first 10 minutes of the test shall not exceed 25 MJ.

14.3.1.6.4.7 Fill materials contained within upholstered furniture and mattresses shall comply with the open flame test in Section A-1 of the 2000 edition of California Technical Bulletin 117, *Requirements, Test Procedure and Apparatus for Testing the Flame Retardance of Resilient Filling Materials Used in Upholstered Furniture*.

14.3.1.6.4.8 For materials with fire-retardant coatings, the material shall be maintained in accordance with the manufacturer's instructions to retain the fire-retardant properties.

14.3.1.6.4.9 Exposed foamed plastic materials shall be prohibited.

14.3.1.6.5 The use of flammable hair sprays, hair oils, and skin oils shall be prohibited for all chamber occupants/patients as well as personnel.

14.3.1.6.5.1 Whenever possible, patients shall be stripped of all clothing, particularly if it is contaminated by dirt, grease, or solvents, and then reclothed. (See A.14.3.1.6.4.)

14.3.1.6.5.2 All cosmetics, lotions, and oils shall be removed from the patient's body and hair.

14.3.1.6.6 All other fabrics used in the chamber, such as sheets, pillow cases, and blankets, shall conform to 14.3.1.6.4.1 and 14.3.1.6.4.2.

14.3.1.6.7 Drapes used within the chamber shall meet the flame propagation performance criteria contained in **Test 1 or Test 2**, as appropriate, of NFPA 701.

14.3.1.6.8 Clothing worn by patients in Class A or Class B chambers and personnel in Class A chambers shall, prior to each treatment, conform to the following:

- (1) They shall be issued by the hyperbaric facility or specifically approved by the safety director for hyperbaric use.
- (2) They shall be uncontaminated.
- (3) They shall be devoid of prohibited articles prior to chamber pressurization.

14.3.1.6.9* Paper brought into the chamber shall be stored in a closed metal container.

14.3.1.6.10 Containers used for paper storage shall be emptied after each chamber operation.

14.3.2 Equipment.

14.3.2.1 All equipment used in the hyperbaric chamber shall comply with Section 14.2, including the following:

- (1) All electrical and mechanical equipment necessary for the operation and maintenance of the hyperbaric facility
- (2) Any medical devices and instruments used in the facility

14.3.2.1.1 Use of unapproved equipment shall be prohibited. (See 14.3.1.6.4.3.)

14.3.2.1.2 The following devices shall not be operated in the hyperbaric chamber unless approved by the safety director for such use:

- (1) Portable X-ray devices
- (2) Electrocautery equipment
- (3) High-energy devices

14.3.2.1.3 Photographic equipment employing the following shall not remain in the chamber when the chamber is pressurized:

- (1) Photoflash
- (2) Flood lamps

Δ **14.3.2.1.4** The use of Class 1 or Class 2 lasers as defined by ANSI Z136.3, *American National Standard for the Safe Use of Lasers in Health Care*, shall be permitted.

14.3.2.1.5 Equipment known to be, or suspected of being, defective shall not be introduced into any hyperbaric chamber or used in conjunction with the operation of such chamber until repaired, tested, and accepted by qualified personnel and approved by the safety director. (See 14.3.1.3.2.)

Δ **14.3.2.1.6** Equipment that does not meet the temperature requirements of 500.8(A), 500.8(B), and 500.8(C) of NFPA 70 shall not be permitted in the chamber.

14.3.2.2* The following shall be all-metal to the extent possible:

- (1) Oxygen containers
- (2) Valves
- (3) Fittings
- (4) Interconnecting equipment

14.3.2.3 The following shall be compatible with oxygen under service conditions:

- (1) Valve seats

- (2) Gaskets
- (3) Hose
- (4) Lubricants

14.3.2.4 Equipment used inside the chamber requiring lubrication shall be lubricated with oxygen-compatible material.

14.3.2.4.1 Factory-sealed antifriction bearings shall be permitted to be used with standard hydrocarbon lubricants in Class A chambers that do not employ atmospheres of increased oxygen concentration.

14.3.2.5* Equipment made of the following shall be prohibited from the chamber interior:

- (1) Cerium
- (2) Magnesium
- (3) Magnesium alloys

14.3.2.6* In the event that radiation equipment is introduced into a hyperbaric chamber, hydrocarbon detectors shall be installed.

14.3.2.6.1 In the event that flammable gases are detected in excess of 1000 ppm, radiation equipment shall not be operated until the chamber atmosphere is cleared.

14.3.3 Handling of Gases.

14.3.3.1 The institution's administrative personnel shall develop policies for safe handling of gases in the hyperbaric facility. (See 14.3.1.6.2.)

14.3.3.2 Oxygen and other gases shall not be introduced into the chamber in the liquid state.

14.3.3.3 Flammable gases shall not be used or stored in the chamber or in the hyperbaric facility.

14.3.3.4* Pressurized containers of gas shall be permitted to be introduced into the hyperbaric chamber, provided that the container and its contents are approved for such use by the safety director.

14.3.4 Inspection, Testing and Maintenance.

14.3.4.1 General.

14.3.4.1.1 The hyperbaric safety director shall ensure that all valves, regulators, meters, and similar equipment used in the hyperbaric chamber are compensated for use under hyperbaric conditions and tested as part of the routine maintenance program of the facility.

14.3.4.1.1.1 Pressure relief valves shall be tested and calibrated as part of the routine maintenance program of the facility.

Δ **14.3.4.1.2** The hyperbaric safety director shall ensure that all gas outlets are labeled or stenciled in accordance with CGA C-7, *Guide to Classification and Labeling of Compressed Gases*.

Δ **14.3.4.1.3** The requirements set forth in Section 5.1 and NFPA 55 concerning the storage, location, and special precautions required for medical gases shall be followed.

14.3.4.1.4 Storage areas for hazardous materials shall not be located in the room housing the hyperbaric chamber. (See 14.2.1.)

Δ **14.3.4.1.4.1** Flammable gases, except as provided in 14.3.1.6.2.2(1), shall not be used or stored in the hyperbaric room.

14.3.4.1.5 All replacement parts and components shall conform to original design specification.

14.3.4.1.6* Air from compressors shall be sampled at least every 6 months and after major repair or modification of the compressor(s).

14.3.4.2 Maintenance Logs.

14.3.4.2.1 Installation, repairs, and modifications of equipment related to a chamber shall be evaluated by engineering personnel, tested under pressure, and approved by the safety director.

14.3.4.2.1.1 Logs of all tests shall be maintained.

14.3.4.2.2 Operating equipment logs shall be maintained by engineering personnel.

14.3.4.2.2.1 Operating equipment logs shall be signed before chamber operation by the person in charge. (See A.14.3.1.3.2.)

14.3.4.2.3 Operating equipment logs shall not be taken inside the chamber.

14.3.4.3 Fire Protection Equipment Inside for Class A Hyperbaric Chambers.

14.3.4.3.1 Electrical switches, valves, and electrical monitoring equipment associated with fire detection and extinguishment shall be visually inspected before each chamber pressurization.

N 14.3.4.3.1.1 Where provided, water level indicators shall be visually inspected before each chamber pressurization.

N 14.3.4.3.1.2 Where provided, air pressure gauges shall be visually inspected before each chamber pressurization.

Δ 14.3.4.3.2 Fire detection equipment shall be tested each week.

14.3.4.3.2.1 Testing shall include activation of trouble circuits and signals.

N 14.3.4.3.3 Full testing, including discharge of extinguishing media, shall be conducted annually.

N 14.3.4.3.4 Inspection, testing, and maintenance of the water storage tanks for Class A chambers shall be in accordance with applicable sections of Chapter 9 of NFPA 25.

14.3.4.3.5* The deluge and handline systems shall be functionally tested at least semiannually per 14.2.6.2.7 for deluge systems and 14.2.6.3.7 for handline systems.

14.3.4.3.5.1 Following the test, all valves shall be placed in their baseline position.

14.3.4.3.5.2 If a bypass system is used, it shall not remain in the test mode after completion of the test.

14.3.4.3.5.3 During initial construction, or whenever changes are made to the installed deluge system that will affect the spray pattern, testing of spray coverage to demonstrate conformance to the requirements of 14.2.6.2.6 shall be performed at surface pressure and at maximum operating pressure.

(A) The requirements of 14.2.6.2.6 shall be satisfied under both surface pressure and maximum operating pressure.

14.3.4.3.5.4 A detailed record of the test results shall be maintained and a copy sent to the hyperbaric facility safety director.

14.3.4.3.5.5 Inspection, testing, and maintenance of hyperbaric fire suppression systems shall be performed by a qualified person.

14.3.4.4 Electrical Safeguards.

14.3.4.4.1 All electrical circuits shall be tested in accordance with the routine maintenance program of the facility.

14.3.4.4.1.1 Electrical circuit tests shall include the following:

- (1) Ground-fault check to verify that no conductors are grounded to the chamber
- (2) Test of normal functioning (see 14.2.9.2.3.2)

14.3.4.4.1.2 In the event of fire, all nonessential electrical equipment within the chamber shall be de-energized before extinguishing the fire.

(A) Smoldering, burning electrical equipment shall be de-energized before extinguishing a localized fire involving only the equipment. (See 14.2.6.)

• 14.3.4.5 Furniture and Grounding.

14.3.4.5.1 Conductive devices on furniture and equipment shall be inspected to ensure that they are free of wax, lint, or other extraneous material that could insulate them and defeat the conductive properties.

14.3.4.5.2* Casters or furniture leg tips shall not be capable of impact sparking.

14.3.4.5.3 Casters shall not be lubricated with oils or other flammable materials.

14.3.4.5.4 Lubricants shall be oxygen compatible.

14.3.4.5.5 Wheelchairs and gurneys with bearings lubricated and sealed by the manufacturer shall be permitted in Class A chambers where conditions prescribed in 14.2.10.4 are met.

14.3.4.6* Electrostatic Safeguards.

N 14.3.4.6.1 Conductive accessories shall meet conductivity and antistatic requirements.

N 14.3.4.6.2* Patient ground shall be verified in Class B chambers prior to each chamber operation.

N 14.3.4.6.3* Patient ground shall be verified in Class A chambers prior to chamber operation whenever atmospheres containing more than 23.5 percent oxygen by volume are used.

N 14.3.4.6.4 Chamber ground shall be verified to be in accordance with 14.2.9.4.1.3 for Class A and Class B chambers as part of the preventive maintenance program of the facility.

14.3.4.6.5* Materials containing rubber shall be inspected as part of the routine maintenance program of the facility, especially at points of kinking.

14.3.4.7* Housekeeping. A housekeeping program shall be implemented, whether or not the facility is in regular use.

14.3.4.7.1 The persons assigned to the task of housekeeping shall be trained in the following:

- (1) Potential damage to the equipment from cleaning procedures
- (2) Potential personal injury
- (3) Specific cleaning procedures
- (4) Equipment not to be cleaned

N Chapter 15 Dental Gas and Vacuum Systems

N 15.1 Applicability. This chapter shall apply to dental health care facilities that qualify to install dental gas and vacuum piping systems.

N 15.1.1 Category 1 dental piped gas and piped vacuum system requirements shall be applied in facilities where general anesthesia and deep sedation is performed, as defined in 3.3.66.1 and 3.3.66.2.

N 15.1.2 Category 2 dental piped gas and piped vacuum system requirements shall be applied in facilities where only moderate and minimal sedation is performed, as defined in 3.3.66.3 and 3.3.66.4.

N 15.1.3 Category 3 dental piped gas and piped vacuum system requirements shall be applied in facilities where minimal or no sedation is performed, as defined in 3.3.66.4.

N 15.1.4 A single facility shall be permitted to include dental gas and vacuum systems for more than one category of dental piped gas and vacuum systems.

N 15.1.5 An existing system that is not in strict compliance with the requirements of this code shall be permitted to continue in use as long as the authority having jurisdiction has determined that such use does not constitute a distinct hazard to life.

N 15.1.6 The following sections of this chapter shall apply to the operation, management, and maintenance of Category 2 dental gas and vacuum systems in both new and existing facilities:

- (1) 15.1.5
- (2) 15.2
- (3) 15.4.2.4.3
- (4) 15.4.2.4.5
- (5) 15.4.2.4.13
- (6) 15.4.2.5.14
- (7) 15.4.2.6.4
- (8) 15.4.9

N 15.1.7 The following sections of this chapter shall apply to the operation, management, and maintenance of Category 3 dental gas and vacuum systems in both new and existing facilities:

- (1) 15.1.5
- (2) 15.2
- (3) 15.5.8

N 15.2 Nature of Hazards of Gas and Vacuum Systems. Potential fire and explosion hazards associated with positive-pressure dental gas systems and vacuum systems shall be considered in the design, installation, testing, operation, and maintenance of these systems.

N 15.3 Category 1 Dental Gas and Vacuum Systems.

N 15.3.1 General. Facilities that perform deep sedation and general anesthesia associated with implant dentistry and oral surgery shall meet the requirements for Category 1 dental gas and vacuum systems.

N 15.3.1.1 The requirements for Category 1 dental gas and vacuum systems for the operation, management, and maintenance of gas and vacuum piping systems shall apply to both new and existing facilities within the scope of this chapter and in accordance with 5.1.1.5.

N 15.3.2 Category 1 Medical Gas Systems (Dental).

N 15.3.2.1 Medical Gas and Vacuum Sources.

N 15.3.2.1.1 Central Supply System Identification and Labeling. Category 1 systems shall comply with 5.1.3.1.

N 15.3.2.1.2 Central Supply Operations. Category 1 systems shall comply with 5.1.3.2.

N 15.3.2.1.3 Central Supply System Locations. Category 1 systems shall comply with 5.1.3.3.

N 15.3.2.1.4 Central Supply Systems. Category 1 systems shall comply with 5.1.3.5.

N 15.3.2.1.5 Medical Air Supply Systems. Category 1 systems shall comply with 5.1.3.6, except as follows:

- (1) Medical air compressors, dryers, aftercoolers, filters, and regulators shall be permitted to be simplex.
- (2) The facility staff shall develop their emergency plan to deal with the loss of medical air.

N 15.3.2.1.6 Oxygen supply systems using concentrators shall be permitted to consist of two sources, one of which shall be a cylinder header with sufficient cylinder connections for an average day's supply.

N 15.3.2.1.7 Medical-Surgical Vacuum Systems. Category 1 systems shall comply with 5.1.3.7, except as follows:

- (1) Medical-surgical vacuum systems shall be permitted to be simplex.
- (2) The facility staff shall develop their emergency plan to deal with the loss of medical-surgical vacuum.

N 15.3.2.1.8 WAGD Systems. Category 1 systems shall comply with 5.1.3.8, except as follows:

- (1) Medical WAGD pumps shall be permitted to be simplex.
- (2) The facility staff shall develop their emergency plan to deal with the loss of WAGD.

N 15.3.2.2 Valves. Category 1 systems shall comply with 5.1.4.

N 15.3.2.3 Station Outlets and Inlets. Category 1 systems shall comply with 5.1.5.

N 15.3.2.4 Manufactured Assemblies. Category 1 systems shall comply with 5.1.6.

N 15.3.2.5 Surface-Mounted Medical Gas Rails. Category 1 systems shall comply with 5.1.7.

N 15.3.2.6 Pressure and Vacuum Indicators. Category 1 systems shall comply with 5.1.8.

N 15.3.2.7 Warning Systems. Warning systems associated with Category 1 systems shall provide the master, area, and local alarm functions of a Category 1 system as required in 5.1.9, except as follows:

- (1) Warning systems shall be permitted to be a single alarm panel.
- (2) The alarm panel shall be located in an area of continuous surveillance while the facility is in operation.
- (3) Pressure and vacuum switches/sensors shall be mounted at the source equipment with a pressure indicator at the master alarm panel.

N 15.3.2.8 Medical Gas Distribution. Category 1 systems shall comply with 5.1.10.

N 15.3.2.9 Labeling and Identification. Category 1 systems shall comply with 5.1.11.

N 15.3.2.10 Performance Criteria and Testing (Medical Gas, Medical–Surgical Vacuum, and WAGD). Category 1 systems shall comply with 5.1.12.

N 15.3.2.11 Support Gases. Category 1 systems shall comply with 5.1.13 except as follows:

- (1) Nitrogen source equipment shall be permitted to be installed in enclosures for Category 3 medical gases or in a mechanical room.
- (2) Nitrogen source equipment shall include the following:
 - (a) One or more cylinders of nitrogen NF, each providing at least one average day's supply
 - (b) A manifold, if primary and secondary cylinders are provided
 - (c) A line pressure regulating valve
 - (d) A check valve downstream from the pressure regulating valve
 - (e) A pressure relief valve set at 50 percent above the normal line pressure and located downstream from the check valve
 - (f) A pressure relief valve discharge piped to outdoors at a point that will not create a probable hazard and that is turned down to prevent the entry of rain or snow

N 15.3.2.12 Medical Gas and Vacuum Operation and Management. Category 1 systems shall comply with 5.1.14.

N 15.3.3 Category 1 Dental Air and Vacuum Piping Systems.

N 15.3.3.1 General.

N 15.3.3.1.1 Dental air and vacuum piping systems shall include dental support gases and dental vacuum systems.

N 15.3.3.1.2 Dental vacuum systems shall include dental vacuum and nitrous oxide scavenging.

N 15.3.3.2 Equipment Locations for Dental Air and Vacuum Systems.

N 15.3.3.2.1 General. Any of the following systems shall be permitted to be located together in the same room:

- (1) Medical air compressor supply sources
- (2) Dental air compressor sources and reserve headers
- (3) Dental-surgical vacuum sources
- (4) Dental vacuum sources
- (5) WAGD sources
- (6) Any other compressor, vacuum pump, or electrically powered machinery

N 15.3.3.2.2 Cylinders and Containers. Cylinders and containers for gases shall be handled in accordance with Chapter 11.

N 15.3.3.2.3 Ventilation. The following source locations for motor-driven equipment shall be adequately ventilated to prevent accumulation of heat:

- (1) Medical air sources
- (2) Instrument air sources
- (3) Dental compressed air sources
- (4) Dental-surgical vacuum sources
- (5) Dental vacuum sources
- (6) WAGD sources

N 15.3.3.3 Dental Gas and Vacuum Source Equipment.

N 15.3.3.3.1 General.

N 15.3.3.3.1.1 The capacity of source equipment shall be based on the design requirements for the facility, including the number of gas outlets, vacuum inlets, and other connections, and their individual capacities.

N 15.3.3.3.1.2 The system design requirements shall be included in the data used for testing and verifying the operation of the gas and vacuum piping systems.

N 15.3.3.4* Dental Air.

N 15.3.3.4.1 General.

N 15.3.3.4.1.1 Dental air shall be used as a support gas for driving dental tools and shall be permitted to be used to supply air-driven equipment. Dental compressed air shall not be used for respiration.

N 15.3.3.4.1.2 Dental air outlets shall not be interchangeable with any other gas outlets, including oxygen, nitrous oxide, medical air, instrument air, and nitrogen.

N 15.3.3.4.2 Dental Air Compressor Units.

N 15.3.3.4.2.1 Dental air compressor units shall include dental air compressors, vibration isolation, air receivers, coalescent air filters, adsorption dryers, exhaust silencer/filters, moisture indicators, and service access manifolds, electrical disconnects, motor wiring, and controls.

N 15.3.3.4.2.2 Air compressors shall be scroll dental, reciprocating dental, or the oil-free dental types.

N 15.3.3.5* Dental Vacuum.

N 15.3.3.5.1 General.

N 15.3.3.5.1.1 Dental vacuum shall be used for oral evacuation and nitrous oxide scavenging.

N 15.3.3.5.1.2 Dental vacuum inlets shall not be interchangeable with any other vacuum inlets, including dental-surgical vacuum.

N 15.3.3.5.2 Dental Vacuum Units.

N 15.3.3.5.2.1 Dental vacuum units shall include dental vacuum pumps, vibration isolation, separation tanks, vacuum inlet, vacuum exhaust, condensate drain, motor wiring, and controls.

N 15.3.3.5.2.2 Dental vacuum pumps shall be dental dry vacuum or dental liquid (wet) ring pumps. Pumps shall be oil-free or oil-lubricated, and suitable for nitrous oxide scavenging.

N 15.3.3.6 Nitrous Oxide Scavenging.

N 15.3.3.6.1 General.

N 15.3.3.6.1.1 The use of scavenging shall be limited to portions of dental facilities where moderate or minimal sedation is administered. WAGD shall be provided where the dental treatment involves general anesthesia or deep sedation.

N 15.3.3.6.1.2 Active nitrous oxide scavenging shall include the use of a nasal mask on the patient. The nasal mask shall be connected to a scavenging inlet in the dental vacuum system through a flow-limiting adapter.

N 15.3.3.6.1.3 Nitrous oxide scavenging inlets shall not be interchangeable with any other vacuum inlets, including medical-surgical vacuum, dental vacuum, and WAGD.

N 15.3.3.6.2 Connection to Dental Vacuum. Scavenging connections to the dental vacuum system shall be a direct high-volume evacuation (HVE) connection to a high-volume vacuum port with a capacity of 45 L/min (1.6 cfm).

N 15.3.3.7 Piping for Dental Air and Vacuum Systems.

N 15.3.3.7.1 General.

N 15.3.3.7.1.1 Piping for dental compressed air systems shall comply with 15.3.3.7.2.

N 15.3.3.7.1.2 Piping for dental vacuum systems and scavenging systems shall comply with 15.3.3.7.3.

N 15.3.3.7.2 Piping for Dental Air Systems.

N 15.3.3.7.2.1 General. Pipe, fittings, and joints in piping for dental compressed air systems shall be in accordance with 15.3.3.7.2.2 through 15.3.3.7.2.5.

N 15.3.3.7.2.2 Pipe. Pipe under 15.3.3.7.2 shall comply with the following:

- (1) ASTM B819, *Standard Specification for Seamless Copper Tube for Medical Gas Systems, Type L or K*.
- (2) ASTM B88, *Standard Specification for Seamless Copper Water Tube, Type L or K*.
- (3) ASTM B280, *Standard Specification for Seamless Copper Tubing for Air Conditioning and Refrigeration Field Service, ACR tube (O.D. size)*.

N 15.3.3.7.2.3 Copper tube shall be hard temper or annealed (soft temper).

N 15.3.3.7.2.4 Fittings. Fittings for piping under 15.3.3.7.2 shall be permitted to be any of the following acceptable joining methods:

- (1) Brazed or soldered fittings conforming to ASME B16.22, *Wrought Copper and Copper Alloy Solder-Joint Pressure Fittings*
- (2) Brazed fittings conforming to ANSI/ASME B16.50, *Wrought Copper and Copper Alloy Braze-Joint Pressure Fittings*
- (3) Brazed fittings conforming to ASME B16.22 with socket depths equal to or greater than braze-joint pressure fittings in compliance with ANSI/ASME B16.50
- (4) Flared fittings conforming to ASME B16.26, *Cast Copper Alloy Fittings for Flared Copper Tubes*
- (5) Compression fittings (¾ in. maximum size)

N 15.3.3.7.2.5 Joints. Joints for piping under 15.3.3.7.2 shall comply with the following:

- (1) Joints shall be brazed, soldered, threaded, flared, or the compression type.
- (2) Where joints are brazed, they shall comply with the requirements of 15.4.6.
- (3) Soldered joints shall be made in accordance with ASTM B828, *Standard Practice for Making Capillary Joints by Soldering of Copper and Copper Alloy Tube and Fittings*, using a “lead-free” solder filler metal containing not more than 0.2 percent lead by volume that complies with ASTM B32, *Standard Specification for Solder Metal*.

N 15.3.3.7.3 Piping for Dental Vacuum Systems and Scavenging Systems.

N 15.3.3.7.3.1 General. Piping for dental vacuum systems and scavenging systems shall be copper, PVC plastic, or CPVC plastic.

N 15.3.3.7.3.2 Copper Piping. Copper piping under 15.3.3.7.3 shall be in accordance with 15.3.3.7.3.2(A) through 15.3.3.7.3.2(D).

N (A) Copper Tube. Copper tubing shall comply with the following:

- (1) ASTM B819, *Standard Specification for Seamless Copper Tube for Medical Gas Systems, Type L or K*
- (2) ASTM B88, *Standard Specification for Seamless Copper Water Tube, Type L or K*
- (3) ASTM B280, *Standard Specification for Seamless Copper Tubing for Air Conditioning and Refrigeration Field Service, ACR tube (O.D. size)*

N (B) Copper tube shall be hard temper or annealed (soft temper).

N (C) Copper Fittings. Copper fittings shall comply with the following:

- (1) Brazed or soldered fittings conforming to ASME B16.22, *Wrought Copper and Copper Alloy Solder-Joint Pressure Fittings*
- (2) Brazed fittings conforming to ANSI/ASME B16.50, *Wrought Copper and Copper Alloy Braze-Joint Pressure Fittings*
- (3) Brazed fittings conforming to ASME B16.22 with socket depths equal to or greater than braze-joint pressure fittings conforming to ANSI/ASME B16.50
- (4) Flared fittings conforming to ASME B16.26, *Cast Copper Alloy Fittings for Flared Copper Tubes*
- (5) Compression fittings (¾ in. maximum size)

N (D) Joints for Copper Piping. Joints in copper tubing shall be in accordance with the following:

- (1) Joints shall be brazed, soldered, threaded, flared, or the compression type.
- (2) Where joints are brazed, they shall comply with the requirements of 15.4.6.
- (3) Soldered joints shall be made in accordance with ASTM B828, *Standard Practice for Making Capillary Joints by Soldering of Copper and Copper Alloy Tube and Fittings*, using a “lead-free” solder filler metal containing not more than 0.2 percent lead by volume that complies with ASTM B32, *Standard Specification for Solder Metal*.

N 15.3.3.7.3.3 PVC Plastic Piping. PVC plastic piping under 15.3.3.7.3 shall be in accordance with the following:

- (1) PVC plastic pipe shall be Schedule 40 or Schedule 80, conforming to ASTM D1785, *Standard Specification for Poly (Vinyl Chloride) (PVC) Plastic Pipe, Schedules 40, 80, and 120*.
- (2) PVC plastic fittings shall be Schedule 40 or Schedule 80 to match the pipe, conforming to ASTM D2466, *Standard Specification for Poly (Vinyl Chloride) (PVC) Plastic Pipe Fittings, Schedule 40*, or ASTM D2467, *Standard Specification Poly (Vinyl Chloride) (PVC) Plastic Pipe Fittings, Schedule 80*.
- (3) Joints in PVC plastic piping shall be solvent-cemented in accordance with ASTM D2672, *Standard Specification for Joints for IPS PVC Pipe Using Solvent Cement*.

N 15.3.3.7.3.4 CPVC Plastic Piping. CPVC plastic piping under 15.3.3.7.3 shall be in accordance with the following:

- (1) CPVC IPS plastic pipe shall be Schedule 40 or Schedule 80, conforming to ASTM F441/F441M, *Standard Specification for Chlorinated Poly (Vinyl Chloride) (CPVC) Plastic Pipe, Schedules 40 and 80*.
- (2) CPVC IPS plastic fittings shall be Schedule 40 or Schedule 80 to match the pipe, conforming to ASTM F438, *Standard Specification for Socket-Type Chlorinated Poly (Vinyl Chlorinated) (CPVC) Plastic Pipe Fittings, Schedule 40*, or ASTM F439, *Standard Specification for Chlorinated Poly (Vinyl Chlorinated) (CPVC) Plastic Pipe Fittings, Schedule 80*.
- (3) CPVC CTS plastic pipe and fittings $\frac{1}{2}$ in. through 2 in. size shall be SDR 11, conforming to ASTM D2846/D2846M, *Standard Specification for Chlorinated Poly (Vinyl Chloride) (CPVC) Plastic Hot- and Cold-Water Distribution Systems*.
- (4) Solvent cement for joints in CPVC plastic piping shall comply with ASTM F493, *Solvent Cements for CPVC Pipe and Fittings*.

N 15.4 Category 2 Dental Gas and Vacuum Systems.

N 15.4.1 General.

N 15.4.1.1 Category 2 dental gas and vacuum system shall be limited to facilities that, at most, provide moderate and minimal sedation.

N 15.4.1.2 The medical gases shall be limited to oxygen and nitrous oxide.

N 15.4.1.3 The dental support gases shall be provided from a dental air source system.

N 15.4.1.4 The vacuum systems shall be dental vacuum and nitrous oxide scavenging.

N 15.4.1.5 All connections within Category 2 medical gas (oxygen and nitrous oxide) shall be gas-specific to prevent cross-connections with other piping systems, including vacuum, water, and drive gas.

N 15.4.1.6 Station outlets and piped outlets for Category 2 medical gas and dental air having nonstandard operating pressures shall comply with the following additional requirements:

- (1) Be gas-specific.
- (2) Be pressure-specific where a single gas is piped at more than one operating pressure.
- (3) Be a D.I.S.S connection if operated at a gauge pressure in excess of 550 kPa (80 psi).
- (4) Be designed to prevent the removal of the adapter until the pressure has been relieved, if operated at a gauge pressure between 1380 kPa and 2070 kPa (200 psi and 300 psi).

N 15.4.1.7 Requirements for Category 2 dental gas and vacuum systems relating to the operation, management, and maintenance of oxygen and nitrous oxide piping systems shall apply both new and existing facilities as specified in 15.1.6.

N 15.4.2 Medical Gas Systems (Oxygen and Nitrous Oxide).

N 15.4.2.1 Installer Qualifications (Oxygen and Nitrous Oxide).

N 15.4.2.1.1 Installers of medical gas systems shall be certified in accordance with ASSE 6010, *Professional Qualification Standard for Medical Gas Systems Installers*, regardless of the capacity of the source equipment.

N 15.4.2.1.2 Installers of medical gas systems shall not use their certification to oversee installation by noncertified personnel.

N 15.4.2.1.3 Brazing of medical gas piping systems shall be performed by individuals who are qualified in accordance with 15.4.6.1.

N 15.4.2.1.4 Prior to any installation work involving brazing, the installer of the medical gas piping systems shall provide documentation required by 15.4.6.1 for the qualifications of the brazing procedures and individual brazers.

N 15.4.2.2 Central Supply System Identification and Labeling (Oxygen and Nitrous Oxide).

N 15.4.2.2.1 Cylinders, containers, and tanks shall be designed, fabricated, tested, and marked (stamped) in accordance with regulations of DOT, Transport Canada (TC) *Transportation of Dangerous Goods Regulations*, or the ASME *Boiler and Pressure Vessel Code*, "Rules for the Construction of Unfired Pressure Vessels," Section VIII. [55:7.1.5.1]

N 15.4.2.2.2 Cylinder contents shall be identified by attached labels or stencils naming the contents in accordance with the mandatory requirements of CGA C-7, *Guide to Classification and Labeling of Compressed Gases*.

N 15.4.2.2.3 Liquid containers shall have additional product identification visible from all directions with a minimum of 51 mm (2 in.) high letters such as a 360-degree wraparound tape for medical liquid containers.

N 15.4.2.2.4 Cryogenic liquid containers shall be provided with gas-specific outlet connections in accordance with the mandatory requirements of CGA V-5, *Diameter-Index Safety System (Noninterchangeable Low Pressure Connections for Medical Gas Applications)*, or CGA V-1, *Standard for Compressed Gas Cylinder Valve Outlet and Inlet Connections*.

N 15.4.2.2.5 Cylinder and cryogenic liquid container outlet connections shall be affixed in such a manner as to be integral to the valve(s), unremovable with ordinary tools, or so designed as to render the attachment point unusable when removed.

N 15.4.2.2.6 The contents of cylinders and cryogenic liquid containers shall be verified prior to use.

N 15.4.2.2.7 Labels shall not be defaced, altered, or removed, and connecting fittings shall not be modified.

N 15.4.2.2.8 Locations containing positive-pressure gases other than oxygen and medical air shall have their door(s) labeled as follows:

Positive-Pressure Gases
NO Smoking or Open Flame
Room May Have Insufficient Oxygen
Open Door and Allow Room to Ventilate Before Entering

N 15.4.2.2.9 Locations containing central supply systems or cylinders containing only oxygen or medical air shall have their door(s) labeled as follows:

Medical Gases
NO Smoking or Open Flame

N 15.4.2.3 Central Supply System Operations (Oxygen and Nitrous Oxide).

N 15.4.2.3.1 The use of adapters or conversion fittings to adapt one gas-specific fitting to another shall be prohibited.

N 15.4.2.3.2 Cylinders and containers shall be handled in strict accordance with 11.6.2.

N 15.4.2.3.3 Only gas cylinders, reusable shipping containers, and their accessories shall be permitted to be stored in rooms containing central supply systems or gas cylinders.

N 15.4.2.3.4 No flammable materials, cylinders containing flammable gases, or containers containing flammable liquids shall be stored in rooms with gas cylinders.

N 15.4.2.3.5 If cylinders are wrapped when received, the wrappers shall be removed prior to storage.

N 15.4.2.3.6 Cylinders without correct markings or whose markings and gas-specific fittings do not match shall not be used.

N 15.4.2.3.7 Cryogenic liquid storage units intended to supply gas to the facility shall not be used to transfill other liquid storage vessels.

N 15.4.2.3.8 Care shall be exercised when handling cylinders that have been exposed to freezing temperatures or containers that contain cryogenic liquids to prevent injury to the skin.

N 15.4.2.3.9 Cylinders containing compressed gases and containers for volatile liquids shall be kept away from radiators, steam piping, and like sources of heat.

N 15.4.2.3.10 Where cylinder valve protection caps are supplied, they shall be secured tightly in place unless the cylinder is connected for use.

N 15.4.2.3.11 Containers shall not be stored in a tightly closed space.

N 15.4.2.3.12 Cylinders in use and in storage shall be prevented from reaching temperatures in excess of 52°C (125°F).

N 15.4.2.3.13 Central supply systems for nitrous oxide and carbon dioxide using cylinders or portable containers shall be prevented from reaching temperatures lower than the recommendations of the central supply system's manufacturer but shall never be lower than -7°C (20°F) or greater than 52°C (125°F).

N 15.4.2.4 Locations of Medical Gas Source Equipment (Oxygen and Nitrous Oxide).

N 15.4.2.4.1 Gas storage locations in facilities with Category 2 medical gas systems with a total of all gases in cylinders or containers, except nitrogen, connected and in storage at one time that does not exceed 85 m³ (3000 ft³) at standard temperature and pressure (STP), or 142 m³ (5000 ft³) (STP) if oxygen is stored in a DOT specification 4 L (cryogenic liquid) container shall comply with 15.4.2.4.3 through 15.4.2.4.13.

N 15.4.2.4.2 Gas storage locations in facilities with Category 2 medical gas systems with a total of all gases in cylinders or containers exceeding quantities listed in 15.4.2.4.1 shall comply with 5.1.3.3.

N 15.4.2.4.3 Enclosures shall serve no purpose other than to contain the medical gas source equipment (oxygen and nitrous

oxide), except that nitrogen source equipment and compressed air cylinders shall be permitted in the enclosure.

N 15.4.2.4.4 Storage of full or empty gas cylinders, or both, shall be permitted in the same enclosure.

N 15.4.2.4.5 Air compressors, vacuum pumps, and other equipment shall not be located in enclosures for medical gas cylinders (oxygen and nitrous oxide source equipment).

N 15.4.2.4.6 If enclosures are outdoors or remote from the treatment facilities that they serve, they shall be kept locked.

N 15.4.2.4.7 Cylinders in use and in storage shall be prevented from reaching temperatures in excess of 52°C (125°F). Nitrous oxide cylinders shall be prevented from reaching temperatures lower than -7°C (20°F).

N 15.4.2.4.8 Only gas cylinders, reusable shipping containers, and their accessories shall be permitted to be stored in rooms containing central supply systems or gas cylinders.

N 15.4.2.4.9 No flammable materials, cylinders containing flammable gases, or containers containing flammable liquids shall be stored in rooms with gas cylinders.

N 15.4.2.4.10 Indoor enclosures shall not communicate directly with medical gas (oxygen and nitrous oxide) use points or storage locations for oxidizers.

N 15.4.2.4.11 Outdoor enclosures that are adjacent to a building wall shall be located such that the distance to any window or door of the adjacent building is greater than 3.05 m (10 ft).

N 15.4.2.4.12 Enclosures for medical gas (oxygen and nitrous oxide) source equipment shall be provided with doors or gates.

N 15.4.2.4.13 Cylinders in service or in storage shall be individually secured and located to prevent falling or being knocked over.

N 15.4.2.5 Medical Gas Source Equipment (Oxygen and Nitrous Oxide).

N 15.4.2.5.1 Mechanical means shall be provided to ensure that the medical gas source equipment is connected to the correct medical gas distribution piping system.

N 15.4.2.5.2 Cylinder valve outlets for oxygen and nitrous oxide shall comply with CGA V-1, *Standard for Compressed Gas Cylinder Valve Outlet and Inlet Connections*.

N 15.4.2.5.3 Threaded connections to manifolds shall comply with CGA V-5, *Diameter-Index Safety System (Noninterchangeable Low Pressure Connections for Medical Gas Applications)*.

N 15.4.2.5.4 A check valve shall be provided downstream of each pressure regulator.

N 15.4.2.5.5 A pressure relief valve set at 50 percent above the normal line pressure shall be located downstream of the check valve in 15.4.2.5.4.

N 15.4.2.5.6 Pressure relief valves shall be brass, bronze, or stainless steel and designed for oxygen service.

N 15.4.2.5.7 Hose and flexible connectors shall have a gauge pressure rating not less than 6895 kPa (1000 psi).

- N 15.4.2.5.8** Materials used in central supply systems shall meet the following requirements:
- (1) In those portions of systems intended to handle oxygen at gauge pressures equal to or greater than 2413 kPa (350 psi), interconnecting hose shall contain no polymeric materials.
 - (2) In those portions of systems intended to handle oxygen or nitrous oxide material, construction shall be compatible with oxygen under the temperatures and pressures to which the components can be exposed.
 - (3) If potentially exposed to cryogenic temperatures, materials shall be designed for low temperature service.
 - (4) If intended for outdoor installation, materials shall be installed per the manufacturer's requirements.
- N 15.4.2.5.9** Flexible connectors of other than all-metal construction that connect manifolds to the gas distribution piping shall not exceed 1.52 m (5 ft) in length and shall not penetrate walls, floors, ceilings, or partitions.
- N 15.4.2.5.10** Medical gas source equipment that serves one or two treatment facilities shall include two banks of one or more cylinders of oxygen and (if used) two banks of one or more cylinders of nitrous oxygen, each bank containing at least one average day's supply.
- N 15.4.2.5.11** The two banks of each medical gas source shall be manifolded so that either bank can supply its distribution piping system.
- N 15.4.2.5.12** Where the source equipment is remote from a single treatment facility and an in use bank is unable to supply the system, the manifold shall automatically switch to the secondary bank.
- N 15.4.2.5.13** Where the source equipment serves multiple treatment facilities and an in use bank is unable to supply the system, the manifold shall automatically switch to the secondary bank.
- N 15.4.2.5.14** Where the source equipment is not remote and is accessible from a single treatment facility served and an in use bank is unable to supply the system, the manifold shall be manually or automatically switched to the secondary bank.
- N 15.4.2.6 Emergency Shutoff Valves (Oxygen and Nitrous Oxide).**
- N 15.4.2.6.1*** Where a central medical gas supply is remote from a single treatment facility, the main supply line shall be provided with an emergency shutoff valve located in the single treatment facility so as to be accessible from all use-point locations in an emergency.
- N 15.4.2.6.2** Where a central medical gas supply system supplies two treatment facilities, each facility shall be provided with an emergency shutoff valve located in that treatment facility so as to be accessible from all use-point locations in an emergency.
- N 15.4.2.6.3** Emergency shutoff valves shall be labeled to indicate the gas controlled by the shutoff valve and shall shut off only the gas to the treatment facility that they serve.
- N 15.4.2.6.4** A remotely activated shutoff valve at a gas supply manifold shall not be used for emergency shutoff.
- N 15.4.2.6.4.1** For clinical purposes, such a remote valve actuator shall not fail-close in the event of loss of electric power.
- N 15.4.2.6.4.2** Where remote actuators are the type that fail-open, it shall be mandatory that cylinder shutoff valves be closed whenever the system is not in use.
- N 15.4.2.7 Station Outlets and Risers (Oxygen and Nitrous Oxide).**
- N 15.4.2.7.1** Each gas outlet shall be gas-specific.
- N 15.4.2.7.2** Gas outlets shall consist of a primary and a secondary valve or assembly.
- N 15.4.2.7.3** Each gas outlet shall be legibly identified.
- N 15.4.2.7.4** Threaded outlets shall be noninterchangeable connections complying with the mandatory requirements of CGA V-5, *Diameter-Index Safety System (Noninterchangeable Low Pressure Connections for Medical Gas Applications)*.
- N 15.4.2.7.5** Factory-installed copper inlet tubes on station outlets extending no further than 205 mm (8 in.) from the body of the terminal shall be not less than DN8 (NPS 1/4) (3/8 in. O.D.) size, with 8 mm (0.3 in.) minimum inside diameter.
- N 15.4.2.8 Manufactured Assemblies (Oxygen and Nitrous Oxide).** Category 2 systems shall comply with 5.1.6.
- N 15.4.2.9 Pressure and Vacuum Indicators (Oxygen and Nitrous Oxide).** Category 2 systems shall comply with 5.1.8.
- N 15.4.2.10 Warning Systems (Oxygen and Nitrous Oxide).** Category 2 warning systems shall comply with 5.2.9, except as follows:
- (1) Warning systems shall be permitted to be a single alarm panel.
 - (2) The alarm panel shall be located in an area of continuous surveillance while the facility is in operation.
 - (3) Pressure and vacuum switches/sensors shall be mounted at the source equipment with a pressure indicator at the master alarm panel.
 - (4) Warning systems for medical gas systems shall provide the following alarms:
 - (a) Oxygen main line pressure low
 - (b) Oxygen main line pressure high
 - (c) Oxygen changeover to secondary bank or about to changeover (if automatic)
 - (d) Nitrous oxide main line pressure low
 - (e) Nitrous oxide main line pressure high
 - (f) Nitrous oxide changeover to secondary bank or about to changeover (if automatic)
 - (5) Audible and noncancelable alarm visual signals shall indicate if the pressure in the main line increases or decreases 20 percent from the normal operating pressure.
 - (6) Visual indications shall remain until the situation that caused the alarm is resolved.
 - (7) Pressure switches/sensors shall be installed downstream of any emergency shutoff valves and any other shutoff valves in the system and shall cause an alarm for the medical gas if the pressure decreases or increases 20 percent from the normal operating pressure.
 - (8) A cancelable audible indication of each alarm condition that produces a sound at the alarm panel shall reinitiate the audible signal if another alarm condition occurs while the audible signal is silenced.
- N 15.4.2.11 Labeling and Identification.** Category 2 systems shall comply with 5.1.11.

N 15.4.3 Category 2 Dental Air and Vacuum Piping Systems.**N 15.4.3.1 General.**

N 15.4.3.1.1 Dental air and vacuum piping systems shall include dental support gases and dental vacuum systems.

N 15.4.3.1.2 Dental vacuum systems shall include dental vacuum and nitrous oxide scavenging.

N 15.4.3.2 Equipment Locations for Dental Air and Vacuum Systems.

N 15.4.3.2.1 General. Any of the following systems shall be permitted to be located together in the same room:

- (1) Dental air compressor sources and reserve headers
- (2) Dental-surgical vacuum sources
- (3) Dental vacuum sources
- (4) Any other compressor, vacuum pump, or electrically powered machinery

N 15.4.3.2.2 Cylinders and Containers. Cylinders and containers for gases shall be handled in accordance with Chapter 11.

N 15.4.3.2.3 Ventilation for Motor-Driven Equipment. The following source locations shall be adequately ventilated to prevent accumulation of heat:

- (1) Medical air sources
- (2) Instrument air sources
- (3) Dental compressed air sources
- (4) Dental-surgical vacuum sources
- (5) Dental vacuum sources
- (6) WAGD sources

N 15.4.3.3 Dental Gas and Vacuum Source Equipment.**N 15.4.3.3.1 General.**

N 15.4.3.3.1.1 The capacity of source equipment shall be based on the design requirements for the facility, including the number of gas outlets, vacuum inlets, and other connections, and their individual capacities.

N 15.4.3.3.1.2 The system design requirements shall be included in the data used for testing and verifying the operation of the gas and vacuum piping systems.

N 15.4.3.3.2 Dental Air.**N 15.4.3.3.2.1 General.**

N (A) Dental air shall be used as a support gas for driving dental tools and shall be permitted to be used to supply air-driven equipment. Dental compressed air shall not be used for respiration.

N (B) Dental air outlets shall not be interchangeable with any other gas outlets, including oxygen, nitrous oxide, medical air, instrument air, and nitrogen.

N 15.4.3.3.2.2 Dental Air Compressor Units.

N (A) Dental air compressor units shall include dental air compressors, vibration isolation, air receivers, coalescent air filters, adsorption dryers, exhaust silencer/filters, moisture indicators, service access manifolds, electrical disconnects, motor wiring, and controls.

N (B) Air compressors shall be scroll dental, reciprocating dental, or the oil-free dental types.

N 15.4.3.3.3 Dental Vacuum.**N 15.4.3.3.3.1 General.**

N (A) Dental vacuum shall be used for oral evacuation and nitrous oxide scavenging.

N (B) Dental vacuum inlets shall not be interchangeable with any other vacuum inlets, including dental-surgical vacuum.

N 15.4.3.3.3.2 Dental Vacuum Units.

N (A) Dental vacuum units shall include dental vacuum pumps, vibration isolation, separation tanks, vacuum inlet, vacuum exhaust, condensate drain, motor wiring, and controls.

N (B) Dental vacuum pumps shall be dental dry vacuum or dental liquid (wet) ring pumps. Pumps shall be oil-free or oil-lubricated and suitable for nitrous oxide scavenging.

N 15.4.3.3.4 Nitrous Oxide Scavenging.**N 15.4.3.3.4.1 General.**

N (A) The use of scavenging shall be limited to portions of dental facilities where moderate or minimal sedation is administered. WAGD shall be provided where the dental treatment involves general anesthesia or deep sedation.

N (B) Active nitrous oxide scavenging shall include the use of a nasal mask on the patient. The nasal mask shall be connected to a scavenging inlet in the dental vacuum system through a flow-limiting adapter.

N (C) Nitrous oxide scavenging inlets shall not be interchangeable with any other vacuum inlets, including medical-surgical vacuum, dental vacuum, and WAGD.

N 15.4.3.3.4.2 Connection to Dental Vacuum. Scavenging connections to the dental vacuum system shall be a direct high-volume evacuation (HVE) connection to a high-volume vacuum port with a capacity of 45 L/min (1.6 cfm).

N 15.4.3.4 Category 2 Warning Systems (Oxygen and Nitrous Oxide).**N 15.4.3.4.1 General.**

N 15.4.3.4.1.1 The warning systems in Category 2 dental gas and vacuum systems shall comply with applicable requirements of 5.2.9 and 15.4.3.4.2 through 15.4.3.4.4.

N 15.4.3.4.1.2 The master, area, and local alarm functions shall be permitted to be provided by a single alarm panel, as indicated in 5.2.9.

N 15.4.3.4.2 Master Alarm Panels.

N 15.4.3.4.2.1 A master alarm panel shall be located in the facility at a point of continuous surveillance when the facility is in operation.

N 15.4.3.4.2.2 The master alarm panel shall indicate the following:

- (1) Oxygen supply pressure ± 20 percent from normal
- (2) Nitrous oxide supply pressure ± 20 percent from normal
- (3) Changeover of oxygen supply source
- (4) Changeover of nitrous oxide supply source

N 15.4.3.4.3 Area Alarm Panels.

N 15.4.3.4.3.1 An area alarm panel shall be centrally located where two or more treatment areas are supplied from the same zoned dental gas and vacuum piping.

N 15.4.3.4.3.2 Area alarm panels shall indicate the following:

- (1) Oxygen supply pressure ± 20 percent from normal
- (2) Nitrous oxide supply pressure ± 20 percent from normal

N 15.4.3.4.4 Local Alarms.

N 15.4.3.4.4.1 Local alarms shall be located in source equipment control panels or separate control panels in the equipment rooms for source equipment.

N 15.4.4 Piping for Category 2 Medical Gas, Dental Air, and Vacuum Systems.**N 15.4.4.1 General.**

N 15.4.4.1.1 Piping for the following systems shall comply with 15.4.4.2:

- (1) Oxygen
- (2) Nitrous oxide

N 15.4.4.1.2 Piping for dental air systems shall comply with 15.4.4.3.

N 15.4.4.1.3 Piping for dental vacuum systems and scavenging systems shall comply with 15.4.4.4.

N 15.4.4.2 Piping for Oxygen and Nitrous Oxide Systems.

N 15.4.4.2.1 Cleaning for Oxygen Service. For oxygen and nitrous oxide, the pipe, fittings, valves, gas/vacuum outlets/inlets, and other piping components shall be cleaned for oxygen by the manufacturer prior to installation in accordance with CGA G-4.1, *Cleaning Equipment for Oxygen Service*. Fittings shall be permitted to be cleaned by a supplier or agency other than the manufacturer.

N 15.4.4.2.2 Pipe. Pipe shall be hard-drawn seamless copper tube conforming to ASTM B819, *Standard Specification for Seamless Copper Tube for Medical Gas Systems, Type L or K*.

N 15.4.4.2.3 Fittings.

N 15.4.4.2.3.1 Fittings shall be brazed, memory metal, or axially swaged.

N 15.4.4.2.3.2 Brazed fittings shall be the wrought copper capillary type complying with the following:

- (1) ASME B16.22, *Wrought Copper and Copper Alloy Solder-Joint Pressure Fittings*
- (2) ANSI/ASME B16.50, *Wrought Copper and Copper Alloy Braze-Joint Pressure Fittings*
- (3) ASME B16.22 with socket depths equal to or greater than brazed joint pressure fittings in accordance with ANSI/ASME B16.50

N 15.4.4.2.3.3 Cast copper alloy fittings shall not be used with field-brazed joints.

N 15.4.4.2.3.4 Memory metal fittings shall be rated for not less than 538°C (1000°F) and 2070 kPa (300 psi) and shall be installed by qualified technicians in accordance with the manufacturer's instructions.

N 15.4.4.2.3.5 Axially swaged couplings shall be elastic strain preloaded with metal-to-metal seats, rated for not less than

538°C (1000°F) and 2070 kPa (300 psi), and shall provide permanent, nonseparable joints. Fittings shall be installed by qualified technicians in accordance with the manufacturer's instructions.

N 15.4.4.2.4 Joints.

N 15.4.4.2.4.1 Brazed. Brazing of copper joints shall be in accordance with 15.4.6.

N 15.4.4.2.4.2 Threaded. Threaded joints shall be limited to connections to pressure indicators, alarm devices, and source equipment and shall comply with the following:

- (1) Threads shall be tapered complying with ASME B1.20.1, *Pipe Threads, General Purpose, Inch*.
- (2) Threads shall be made up with polytetrafluoroethylene (PTFE) tape or other thread sealant recommended for oxygen service, with the sealant applied to the male threads only.

N 15.4.4.2.4.3 Prohibited Joints. The following joints shall be prohibited under 15.4.4.2.4:

- (1) Flared and compression connections, including connections to station outlets, alarm devices, and other components
- (2) Push-lock connections
- (3) Straight-threaded connections, including unions
- (4) Pipe crimping tools used to permanently stop the flow of medical gas and vacuum piping

N 15.4.4.3 Piping for Dental Air Systems.

N 15.4.4.3.1 General. Pipe, fittings, and joints in piping for dental compressed air systems shall be in accordance with 15.4.4.3.2 through 15.4.4.3.4.

N 15.4.4.3.2 Pipe. Pipe under 15.4.4.3 shall comply with the following:

- (1) ASTM B819, *Standard Specification for Seamless Copper Tube for Medical Gas Systems, Type L or K*.
- (2) ASTM B88, *Standard Specification for Seamless Copper Water Tube, Type L or K*.
- (3) ASTM B280, *Standard Specification for Seamless Copper Tubing for Air Conditioning and Refrigeration Field Service*, ACR tube (O.D. size).

N 15.4.4.3.2.1 Copper tube shall be hard temper or annealed (soft temper).

N 15.4.4.3.3 Fittings. Fittings for piping under 15.4.4.3 shall be permitted to be any of the following acceptable joining methods:

- (1) Brazed or soldered fittings conforming to ASME B16.22, *Wrought Copper and Copper Alloy Solder-Joint Pressure Fittings*
- (2) Brazed fittings conforming to ANSI/ASME B16.50, *Wrought Copper and Copper Alloy Braze-Joint Pressure Fittings*
- (3) Brazed fittings conforming to ASME B16.22 with socket depths equal to or greater than braze-joint pressure fittings in compliance with ANSI/ASME B16.50
- (4) Flared fittings conforming to ASME B16.26, *Cast Copper Alloy Fittings for Flared Copper Tubes*
- (5) Compression fittings ($\frac{3}{4}$ in. maximum size)

N 15.4.4.3.4 Joints. Joints for piping under 15.4.4.3 shall comply with 15.4.4.3.4.1 through 15.4.4.3.4.3.

N 15.4.4.3.4.1 Joints shall be brazed, soldered, threaded, flared, or the compression type.

N 15.4.4.3.4.2 Where joints are brazed, they shall comply with the requirements of 15.4.6.

N 15.4.4.3.4.3 Soldered joints shall be made in accordance with ASTM B828, *Standard Practice for Making Capillary Joints by Soldering of Copper and Copper Alloy Tube and Fittings*, using a “lead-free” solder filler metal containing not more than 0.2 percent lead by volume that complies with ASTM B32, *Standard Specification for Solder Metal*.

N 15.4.4.4 Piping for Dental Vacuum Systems and Scavenging Systems.

N 15.4.4.4.1 General. Piping for dental vacuum systems and scavenging systems shall be copper, PVC plastic, or CPVC plastic.

N 15.4.4.4.2 Copper Piping. Copper piping under 15.4.4.4 shall be in accordance with 15.4.4.4.2.1 through 15.4.4.4.2.3.

N 15.4.4.4.2.1 Copper Tube. Copper tubing shall be hard temper or annealed (soft temper) and shall comply with the following:

- (1) ASTM B819, *Standard Specification for Seamless Copper Tube for Medical Gas Systems, Type L or K*
- (2) ASTM B88, *Standard Specification for Seamless Copper Water Tube, Type L or K*
- (3) ASTM B280, *Standard Specification for Seamless Copper Tubing for Air Conditioning and Refrigeration Field Service, ACR tube (O.D. size)*

N 15.4.4.4.2.2 Copper Fittings. Copper fittings shall comply with the following:

- (1) Brazed or soldered fittings conforming to ASME B16.22, *Wrought Copper and Copper Alloy Solder-Joint Pressure Fittings*
- (2) Brazed fittings conforming to ANSI/ASME B16.50, *Wrought Copper and Copper Alloy Braze-Joint Pressure Fittings*
- (3) Brazed fittings conforming to ASME B16.22 with socket depths equal to or greater than braze-joint pressure fittings conforming to ANSI/ASME B16.50
- (4) Flared fittings conforming to ASME B16.26, *Cast Copper Alloy Fittings for Flared Copper Tubes*
- (5) Compression fittings ($\frac{3}{4}$ in. maximum size)

N 15.4.4.4.2.3 Joints for Copper Piping. Joints in copper tubing shall be in accordance with the following:

- (1) Joints shall be brazed, soldered, threaded, flared, or the compression type.
- (2) Where joints are brazed, they shall comply with the requirements of 15.4.6.
- (3) Soldered joints shall be made in accordance with ASTM B828, *Standard Practice for Making Capillary Joints by Soldering of Copper and Copper Alloy Tube and Fittings*, using a “lead-free” solder filler metal containing not more than 0.2 percent lead by volume that complies with ASTM B32, *Standard Specification for Solder Metal*.

N 15.4.4.4.3 PVC Plastic Piping. PVC plastic piping under 15.4.4.4 shall be in accordance with the following:

- (1) PVC plastic pipe shall be Schedule 40 or Schedule 80, conforming to ASTM D1785, *Standard Specification for Poly(Vinyl Chloride) (PVC) Plastic Pipe, Schedules 40, 80, and 120*.

- (2) PVC plastic fittings shall be Schedule 40 or Schedule 80 to match the pipe, conforming to ASTM D2466, *Standard Specification for Poly(Vinyl Chloride) (PVC) Plastic Pipe Fittings, Schedule 40*, or ASTM D2467, *Standard Specification for Poly(Vinyl Chloride) (PVC) Plastic Pipe Fittings, Schedule 80*.

- (3) Joints in PVC plastic piping shall be solvent-cemented in accordance with ASTM D2672, *Standard Specification for Joints for IPS PVC Pipe Using Solvent Cement*.

N 15.4.4.4.4 CPVC Plastic Piping. CPVC plastic piping under 15.4.4.4 shall be in accordance with the following:

- (1) CPVC IPS plastic pipe shall be Schedule 40 or Schedule 80, conforming to ASTM F441/F441M, *Standard Specification for Chlorinated Poly (Vinyl Chloride) (CPVC) Plastic Pipe, Schedules 40 and 80*.
- (2) CPVC IPS plastic fittings shall be Schedule 40 or Schedule 80 to match the pipe, conforming to ASTM F438, *Standard Specification for Socket-Type Chlorinated Poly (Vinyl Chloride) (CPVC) Plastic Pipe Fittings, Schedule 40*, or ASTM F439, *Standard Specification for Chlorinated Poly (Vinyl Chloride) (CPVC) Plastic Pipe Fittings, Schedule 80*.
- (3) CPVC CTS plastic pipe and fittings $\frac{1}{2}$ in. through 2 in. size shall be SDR 11, conforming to ASTM D2846/D2846M, *Standard Specification for Chlorinated Poly(Vinyl Chloride) (CPVC) Plastic Hot- and Cold-Water Distribution Systems*.
- (4) Solvent cement for joints in CPVC plastic piping shall comply with ASTM F493, *Solvent Cements for CPVC Pipe and Fittings*.

N 15.4.4.5 Piping for Nitrogen. Nitrogen piping in dental facilities shall comply with 15.4.4.2, including cleaning for oxygen service.

N 15.4.5 Installation of Medical Gas, Dental Air, and Vacuum Piping.

N 15.4.5.1 General.

N 15.4.5.1.1 Gas and vacuum piping systems shall be as listed in Section 15.4.

N 15.4.5.1.2 Piping materials shall be as listed in 15.4.4.

N 15.4.5.2 Pipe Sizing. Piping systems shall be designed and sized to deliver the required flow rates at the utilization pressures.

N 15.4.5.3 Minimum Pipe Sizes. The minimum size of the following piping shall be as follows:

- (1) Category 2 oxygen piping shall be not less than DN10 (NPS $\frac{3}{8}$ in.) ($\frac{1}{2}$ in. O.D.) size.
- (2) Category 2 nitrous oxide piping shall be not less than DN8 (NPS $\frac{1}{4}$ in.) ($\frac{3}{8}$ in. O.D.) size.

N 15.4.5.4 Location of Piping. Piping shall not be located where subject to contact with oil.

N 15.4.5.5 Protection of Piping.

N 15.4.5.5.1 Piping shall be protected against freezing, corrosion, and physical damage.

N 15.4.5.5.2 Piping exposed in corridors and other locations where subject to physical damage from the movement of equipment shall be protected.

N 15.4.5.6 Pipe Support.

N 15.4.5.6.1 Piping shall be supported from the building structure.

N 15.4.5.6.2 Hangers and supports shall comply with and be installed in accordance with MSSSP-58, *Pipe Hangers and Supports — Materials, Design, Manufacture, Selection, Application, and Installation*.

N 15.4.5.6.3 Hangers and supports shall be sized for the tube or pipe being supported.

N 15.4.5.6.4 In potentially damp locations, copper tube hangers and supports that are in contact with the tube shall be plastic-coated or otherwise electrically insulated from the tube.

N 15.4.5.6.5 The maximum support spacing for copper tube shall be in accordance with Table 15.4.5.6.5.

N 15.4.5.6.6 The maximum support spacing for plastic pipe shall be in accordance with Table 15.4.5.6.6.

N 15.4.5.7 Underground Piping Outside of Buildings.

N 15.4.5.7.1 Buried piping outside of buildings shall be installed below the local level of frost penetration.

N 15.4.5.7.2 The installation procedure for underground piping shall prevent physical damage to the piping while being backfilled.

N Table 15.4.5.6.5 Maximum Copper Tube Support Spacing

Pipe Size	Hanger Spacing	
	mm	ft
DN8 (NPS ¼) (⅜ in. O.D.)	1520	5
DN10 (NPS ⅜) (½ in. O.D.)	1830	6
DN15 (NPS ½) (⅝ in. O.D.)	1830	6
DN20 (NPS ¾) (⅞ in. O.D.)	2130	7
DN25 (NPS 1) (1⅛ in. O.D.)	2440	8
DN32 (NPS 1¼) (1⅜ in. O.D.)	2740	9
DN40 (NPS 1½) (1⅝ in. O.D.)	3050	10
and larger		
Vertical risers, all sizes, every floor, but not to exceed	4570	15

N Table 15.4.5.6.6 Maximum Plastic Pipe Support Spacing

Pipe Size	Hanger Spacing	
	mm	ft
DN15 (NPS ½) (⅝ in. O.D.)	1220	4
DN20 (NPS ¾) (⅞ in. O.D.)	1220	4
DN25 (NPS 1) (1⅛ in. O.D.)	1320	4.33
DN32 (NPS 1¼) (1⅜ in. O.D.)	1320	4.33
DN40 (NPS 1½) (1⅝ in. O.D.)	1420	4.66
DN50 (NPS 2) (2⅜ in. O.D.)	1420	4.66
DN65 (NPS 2½) (2⅞ in. O.D.)	1520	5
and larger		
Vertical risers, all sizes, every floor, but not to exceed	3040	10

N 15.4.5.7.3 If the underground piping is protected by a conduit, cover, or other enclosure, the following requirements shall be met:

- (1) Access during construction shall be provided at the joints for visual inspection and leak testing.
- (2) The conduit, cover, or enclosure shall be self-draining and not retain groundwater in prolonged contact with copper tubing.

N 15.4.5.7.4 Buried piping that is subject to surface loads shall be buried at a depth that will protect the piping, its enclosure, or both, from excessive stresses.

N 15.4.5.7.5 The minimum backfill cover above the top of the piping or its enclosure shall be 900 mm (36 in.), except that the minimum cover shall be permitted to be reduced to 450 mm (18 in.) where there is no potential for damage from surface loads or surface conditions.

N 15.4.5.7.6 Trenches shall be excavated so that the piping or its enclosure has firm, substantially continuous bearing on the bottom of the trench.

N 15.4.5.7.7 Backfill shall be clean, free from material that can damage the pipe, and compacted.

N 15.4.5.7.8 A continuous warning tape or marker shall be placed immediately above the piping or its enclosure to clearly identify the pipeline by specific name.

N 15.4.5.7.9 A continuous warning means shall also be placed above the pipeline at approximately one-half the depth of burial.

N 15.4.5.7.10 Where buried piping is extended into a building through a wall sleeve, the outdoor end of the sleeve shall be sealed watertight to prevent the entrance of groundwater into the building.

N 15.4.5.8 Underground Piping Within Buildings.

N 15.4.5.8.1 The installation procedure for underground piping shall prevent physical damage to the piping while being backfilled.

N 15.4.5.8.2 If the underground piping is protected by a conduit, cover, or other enclosure, access shall be provided at the joints during construction for visual inspection and leak testing.

N 15.4.5.8.3 The piping shall be backfilled with clean sand or gravel.

N 15.4.5.9 Piping Within Floor Slabs Prohibited. Dental gas and vacuum piping shall not be installed within floor slabs.

N 15.4.5.10 Hose and Flexible Connectors.

N 15.4.5.10.1 Hose and flexible connectors, both metallic and nonmetallic, shall be no longer than necessary and shall not penetrate or be concealed in walls, floors, ceilings, or partitions.

N 15.4.5.10.2 Hose and flexible connectors, metallic or nonmetallic, shall have a minimum burst gauge pressure of 6895 kPa (1000 psi).

N 15.4.5.10.3 Medical gas hose and flexible connectors shall be oxygen compatible.

N 15.4.5.10.4 Hose and flexible connectors shall be clearly identified as to the gas content.

N 15.4.5.10.5 Hose and flexible connectors for dental medical gases shall be gas-specific and not be permitted to conduct any other gas, gas mixture, or liquid.

N 15.4.6 Brazing Copper Tubing.

N 15.4.6.1 Qualification of Brazing Procedures and Brazers.

N 15.4.6.1.1 Brazing procedures and brazer performance for the installation of dental piping shall be in accordance with either Section IX, "Welding and Brazing Qualifications," of the ASME Boiler and Pressure Vessel Code, or AWS B2.2/B2.2M, *Standard for Brazing Procedure and Performance Qualification*, both as modified by 15.4.6.

N 15.4.6.1.2 Brazers shall be qualified by visual examination of the test coupons followed by sectioning.

N 15.4.6.1.3 The brazing procedure specification shall address cleaning, joint clearance, overlap, internal purge gas, purge gas flow rate, and filler metal.

N 15.4.6.1.4 The brazing procedure qualification record and the record of brazer performance qualification shall document the filler metal used, cleaning, joint clearance, overlap, internal purge gas and flow rate during brazing of the coupon, and the absence of internal oxidation in the completed coupon.

N 15.4.6.1.5 Brazing procedures qualified by a technically competent group or agency shall be permitted under the following conditions:

- (1) The brazing procedure specification and the procedure qualification record meet the requirements of this code.
- (2) The employer obtains a copy of both the brazing procedure specification and the supporting qualification record from the group or agency and signs and dates these records, thereby accepting responsibility for the qualifications that were performed by the group or agency.
- (3) The employer qualifies at least one brazer following each brazing procedure specification used.

N 15.4.6.1.6 An employer shall be permitted to accept brazer qualification records of a previous employer under the following conditions:

- (1) The brazer has been qualified following the same procedure that the new employer uses or an equivalent procedure.
- (2) The new employer obtains a copy of the record of brazer performance qualification tests from the previous employer and signs and dates these records, thereby accepting responsibility for the qualifications performed by the previous employer.

N 15.4.6.1.7 Performance qualifications of brazers shall remain in effect indefinitely, unless the brazer does not braze with the qualified procedure for a period exceeding 6 months or there is a specific reason to question the ability of the brazer.

N 15.4.6.2 Brazed Joints.

N 15.4.6.2.1 Brazed tube joints shall be of the socket type.

N 15.4.6.2.2 Brazed joints shall be made using a brazing alloy that exhibits a melting temperature in excess of 538°C

(1000°F) to retain the integrity of the piping system in the event of fire exposure.

N 15.4.6.2.3 Filler metals shall bond with and be metallurgically compatible with the base metal being joined.

N 15.4.6.2.4 Filler metals shall comply with ANSI/AWS A5.8M/A5.8, *Specification for Filler Metals for Brazing and Braze Welding*.

N 15.4.6.2.5 Copper-to-copper joints shall be brazed using a copper-phosphorus or copper-phosphorus-silver brazing filler metal (i.e., BCuP series) without flux.

N 15.4.6.2.6 Joints to be brazed in place shall be accessible for necessary preparation, assembly, heating, filler application, cooling, cleaning, and inspection.

N 15.4.6.3 Cutting Tube Ends.

N 15.4.6.3.1 Tube ends shall be cut square using a sharp tubing cutter to avoid deforming the tube.

N 15.4.6.3.2 The cutting wheels on tubing cutters shall be free from grease, oil, or other lubricants not recommended for oxygen service.

N 15.4.6.3.3 The cut ends of the tube shall be rolled smooth or deburred with a sharp, clean deburring tool, taking care to prevent chips from entering the tube.

N 15.4.6.4 Cleaning Joints for Brazing.

N 15.4.6.4.1 The interior surfaces of tubes, fittings, and other components that are cleaned for oxygen service shall be stored and handled to avoid contamination prior to assembly and brazing.

N 15.4.6.4.2 The exterior surfaces of tube ends shall be cleaned prior to brazing to remove any oxides and surface dirt and to roughen the surfaces to prepare them for brazing.

N 15.4.6.4.3 Nonabrasive pads shall be used to clean the exterior surfaces of tube ends.

N 15.4.6.4.4 The use of steel wool, sand cloth, or wire brushes shall be prohibited.

N 15.4.6.4.5 The cleaning process shall not result in grooving the surfaces to be joined.

N 15.4.6.4.6 After being abraded, the surfaces shall be wiped using a clean, lint-free white cloth.

N 15.4.6.4.7 Tubes, fittings, valves, and other components shall be visually examined internally before being joined to verify that they have not become contaminated for oxygen service and that they are free of obstructions or debris.

N 15.4.6.4.8 Material that has become contaminated internally and is not clean for oxygen service shall not be installed.

N 15.4.6.4.9 Joints shall be brazed within 8 hours after being cleaned for brazing.

N 15.4.6.5 Brazing Dissimilar Metals.

N 15.4.6.5.1 Flux shall only be used when brazing dissimilar metals, such as copper and bronze or brass, using a silver brazing filler metal (i.e., BAg series).

N 15.4.6.5.2 Cast metals shall not be field brazed.

- N 15.4.6.5.3** Surfaces shall be cleaned for brazing in accordance with 15.4.6.4.
- N 15.4.6.5.4** Flux shall be applied sparingly to minimize contamination of the inside of the tube with flux.
- N 15.4.6.5.5** The flux shall be applied and worked over the cleaned surfaces to be brazed using a stiff bristle brush to ensure complete coverage and wetting of the surfaces with flux.
- N 15.4.6.5.6** Where possible, short sections of copper tube shall be brazed onto the noncopper component, and the interior of the subassembly shall be cleaned of flux prior to installation in the piping system.
- N 15.4.6.5.7** On joints DN20 (NPS $\frac{3}{4}$) ($\frac{7}{8}$ in. O.D.) size and smaller, flux-coated brazing rods shall be permitted to be used in lieu of applying flux to the surfaces to be joined.
- N 15.4.6.6 Nitrogen Purge.**
- N 15.4.6.6.1** While being brazed, joints shall be continuously purged with oil-free, dry nitrogen NF to prevent the formation of copper oxide on the inside surface of the joint.
- N 15.4.6.6.2** The source of the nitrogen purge gas shall be monitored, and the installer shall be audibly alerted when the content is low.
- N 15.4.6.6.3** The nitrogen purge gas flow rate shall not be high enough to produce a positive pressure in the piping system.
- N 15.4.6.6.4** The nitrogen purge gas flow shall be controlled by the use of both a pressure regulator and a flowmeter or a combination thereof.
- N 15.4.6.6.5** Pressure regulators alone shall not be used to control nitrogen purge gas flow rates.
- N 15.4.6.6.6** During and after installation, openings in the piping system shall be kept capped or plugged to maintain a nitrogen atmosphere within the piping and to prevent debris or other contaminants from entering the system.
- N 15.4.6.6.7** While a joint is being brazed, a discharge opening shall be provided on the opposite side of the joint from where the nitrogen purge gas is being introduced.
- N 15.4.6.6.8** The flow of nitrogen purge gas shall be maintained until the joint is cool to the touch.
- N 15.4.6.6.9** After the joint has cooled, the purge discharge opening shall be plugged or capped to prevent contamination of the inside of the tube and maintain the nitrogen atmosphere within the piping system.
- N 15.4.6.7 Assembling and Heating Brazed Joints.**
- N 15.4.6.7.1** Tube ends shall be inserted either fully into the depth of the fitting socket or to a mechanically limited depth that is not less than the minimum cup depth (i.e., overlap) specified in ANSI/ASME B16.50, *Wrought Copper and Copper Alloy Braze-Joint Pressure Fittings*.
- N 15.4.6.7.2** Where flux is permitted, joints shall be heated slowly until the flux has liquefied.
- N 15.4.6.7.3** After flux has liquefied, or where flux is not permitted to be used, the joint shall be heated quickly to the brazing temperature, taking care not to overheat the joint.
- N 15.4.6.7.4** Techniques for heating joints, applying the brazing filler metal, and making the horizontal, vertical, and large-diameter joints shall be as described in sections on applying heat and brazing horizontal and vertical joints in Chapter VIII, "Brazed Joints," in the CDA *Copper Tube Handbook*.
- N 15.4.6.8 Inspection of Brazed Joints.**
- N 15.4.6.8.1** After brazing, the outside of all joints shall be cleaned by washing with water and a wire brush to remove any residue and allow clear visual inspection of the joint.
- N 15.4.6.8.2** Where flux has been used, the wash water shall be hot.
- N 15.4.6.8.3** Each joint shall be visually inspected after cleaning the outside surfaces.
- N 15.4.6.8.4** Joints exhibiting the following conditions shall not be permitted:
- (1) Flux or flux residue (where flux or flux-coated BAg rods are used with dissimilar metals)
 - (2) Base metal melting or erosion
 - (3) Unmelted filler metal
 - (4) Failure of the filler metal to be clearly visible all the way around the joint at the interface between the socket and the tube
 - (5) Cracks in the tube or component
 - (6) Cracks in the filler metal
 - (7) Failure of the joint to hold the test pressure under the installer-performed initial pressure test (*see 15.4.7.4.4*) and standing pressure test (*see 15.4.7.4.6*)
- N 15.4.6.8.5** Joints that are identified as defective under conditions specified in 15.4.6.8.4(2) or 15.4.6.8.4(5) shall be replaced.
- N 15.4.6.8.6** Joints that are found to be defective under conditions specified in 15.4.6.8.4(1), 15.4.6.8.4(3), 15.4.6.8.4(4), 15.4.6.8.4(6), or 15.4.6.8.4(7) shall be permitted to be repaired, except that no joint shall be reheated more than once before being replaced.
- N 15.4.7 Performance Criteria and Testing (Oxygen and Nitrous Oxide).**
- N 15.4.7.1 Testing and Verification.**
- N 15.4.7.1.1 General.**
- N 15.4.7.1.1.1** Inspection and testing shall be performed on all new piped oxygen and nitrous oxide systems, additions, renovations, temporary installations, or repaired systems to ensure, by a documented procedure, that the following have been completed:
- (1) All applicable provisions of this code have been adhered to.
 - (2) System integrity has been achieved or maintained.
 - (3) Piping systems are ready for testing and verification.
 - (4) Piping systems are performing in accordance with their design requirements.
- N 15.4.7.1.1.2** The inspection and testing reports shall be submitted directly to the party that contracted for the testing, who shall submit the reports through channels to the responsible authority and any others that are required.
- N 15.4.7.1.1.3** Reports shall contain detailed listings of all findings and results.

- N 15.4.7.1.1.4** The responsible facility authority shall review the inspection and testing records prior to the use of any systems to ensure that all findings and results of the inspection and testing have been successfully completed before use.
- N 15.4.7.1.1.5** All documentation pertaining to inspections and testing shall be maintained on-site within the facility.
- N 15.4.7.2 Required Testing and Verification.**
- N 15.4.7.2.1 Category 2 Medical Gas Systems (Oxygen and Nitrous Oxide).** All Category 2 oxygen and nitrous oxide piping systems indicated in 15.4.2 shall be initially tested in accordance with 15.4.7.4.
- N 15.4.7.2.2** The oxygen and nitrous oxide piping systems shall be verified in accordance with 15.4.7.5.
- N 15.4.7.3 Qualification of System Testers and Verifiers (Oxygen and Nitrous Oxide).**
- N 15.4.7.3.1** Individuals who perform the initial and final tests of the oxygen and nitrous oxide piping systems shall be certified to ASSE 6010, *Professional Qualifications Standard for Medical Gas Systems Installers*, or verifiers who comply with 15.4.7.3.2.
- N 15.4.7.3.2** Individuals who verify the oxygen and nitrous oxide piping systems shall be certified to ASSE 6030, *Professional Qualifications Standard for Medical Gas Systems Verifiers*.
- N 15.4.7.4 Initial Testing of Piping Systems (Oxygen and Nitrous Oxide).**
- N 15.4.7.4.1 General.**
- N 15.4.7.4.1.1** The initial tests required by 15.4.7.4 shall be performed prior to either the final tests or the verification tests listed in 15.4.7.5.
- N 15.4.7.4.1.2** The test gas for gas piping systems shall be oil-free, dry nitrogen NF.
- N 15.4.7.4.1.3** Where manufactured assemblies are to be installed, the initial tests required by 15.4.7.4 shall be performed as follows:
- (1) After completion of the distribution piping but before the standing pressure test
 - (2) Prior to installation of manufactured assemblies supplied through flexible hose or flexible tubing
 - (3) For all station outlets/inlets on installed manufactured assemblies supplied through copper tubing
- N 15.4.7.4.1.4** Where plastic vacuum and plastic scavenging piping systems are installed, they shall be visually inspected for cross-connections to positive-pressure systems before applying positive test pressures to the copper piping systems.
- N 15.4.7.4.1.5** Where brazed joints in copper tubing are found to be defective, they shall be repaired if permitted by 15.4.6.8.6 or replaced if required by 15.4.6.8.5, and retested. The piping shall be repaired if necessary.
- N 15.4.7.4.1.6** During the process of initial testing, the identification and labeling of the medical gas and vacuum piping shall be checked.
- N 15.4.7.4.2 Initial Piping Blowdown (Oxygen and Nitrous Oxide).** Piping in dental air and vacuum distribution systems shall be blown clear by means of oil-free, dry nitrogen NF after installation of the distribution piping but before installation of station outlet/inlet rough-in assemblies and other system components (e.g., pressure/vacuum alarm devices, pressure/vacuum indicators, pressure relief valves, manifolds, and source equipment).
- N 15.4.7.4.3 Initial Cross-Connection Test for Copper Piping Systems.**
- N 15.4.7.4.3.1** Copper piping shall not be tested before any plastic piping.
- N 15.4.7.4.3.2** It shall be determined that no cross-connections exist between the various medical gas and vacuum piping systems.
- N 15.4.7.4.3.3** All piping systems shall be reduced to atmospheric pressure.
- N 15.4.7.4.3.4** Sources of test gas shall be disconnected from all piping systems except for the one system being tested.
- N 15.4.7.4.3.5** The system under test shall be charged with oil-free, dry nitrogen NF to a gauge pressure of 345 kPa (50 psi).
- N 15.4.7.4.3.6** After the installation of the individual faceplates with appropriate adapters matching outlet/inlet labels, each individual outlet/inlet in each installed medical gas and vacuum piping system shall be checked to determine that the test gas is dispensed only from the piping system tested.
- N 15.4.7.4.3.7** The initial cross-connection test in 15.4.7.4.3 shall be repeated for each installed medical gas and vacuum piping system with copper piping.
- N 15.4.7.4.3.8** Any cross-connections shall be removed and the associated piping repaired and leak tested.
- N 15.4.7.4.3.9** The proper labeling and identification of system outlets/inlets shall be confirmed during these tests.
- N 15.4.7.4.4 Initial Pressure Test.**
- N 15.4.7.4.4.1** Each section of the piping in positive-pressure gas systems and copper vacuum systems shall be pressure tested. Plastic vacuum and plastic scavenging piping shall not be pressure tested.
- N 15.4.7.4.4.2** Initial pressure tests shall be conducted as follows:
- (1) After blowdown of the distribution piping
 - (2) After installation of station outlet/inlet rough-in assemblies
 - (3) Prior to the installation of components of the distribution piping system that would be damaged by the test pressure (e.g., pressure/vacuum alarm devices, pressure/vacuum indicators, and line pressure relief valves)
- N 15.4.7.4.4.3** The source shutoff valve shall remain closed during the pressure tests.
- N 15.4.7.4.4.4** The test pressure for oxygen and nitrous oxide piping shall be 1.5 times the system operating pressure but not less than a gauge pressure of 1035 kPa (150 psi).
- N 15.4.7.4.4.5*** The test pressure shall be maintained until each joint has been examined for leakage by means of a leak detectant that is safe for use with oxygen and does not contain ammonia.
- N 15.4.7.4.4.6** Any leaks shall be located, repaired (if permitted), or replaced (if required) by the installer, and retested.

N 15.4.7.4.5 Initial Piping Purge Test.

N 15.4.7.4.5.1 The outlets in each oxygen and nitrous oxide piping system shall be purged to remove any particulate matter from the distribution piping.

N 15.4.7.4.5.2 Using appropriate adapters, each outlet shall be purged with an intermittent high-volume flow of test gas until the purge produces no discoloration in a clean white cloth.

N 15.4.7.4.5.3 The purging shall be started at the closest outlet to the piping shutoff valve and continue to the furthest outlet from the shutoff valve.

N 15.4.7.4.6 Standing Pressure Test for Oxygen and Nitrous Oxide Piping.

N 15.4.7.4.6.1 After successful completion of the initial pressure tests in 15.4.7.4.4, the gas distribution piping shall be subject to a standing pressure test.

N 15.4.7.4.6.2 Tests shall be conducted after the final installation of station outlet valve bodies, faceplates, and other distribution system components (e.g., pressure alarm devices, pressure indicators, line pressure relief valves, manufactured assemblies, and hoses).

N 15.4.7.4.6.3 The source valve shall be closed during this test.

N 15.4.7.4.6.4 The piping systems shall be subjected to 24-hour standing pressure tests using oil-free, dry nitrogen NF.

N 15.4.7.4.6.5 Test pressures shall be 20 percent above the normal system operating line pressure.

N 15.4.7.4.6.6 At the conclusion of the tests, there shall be no change in the test pressure except that attributed to specific changes in ambient temperature.

N 15.4.7.4.6.7 Any leaks shall be located, repaired (if permitted), or replaced (if required) by the installer, and retested. The piping shall be repurged if necessary.

N 15.4.7.4.6.8 The 24-hour standing pressure tests shall be witnessed by the authority having jurisdiction or its designee. A form indicating that these tests have been performed and witnessed shall be provided to the verifier at the start of the verification tests in 15.4.7.5.

N 15.4.7.5 Verification of Piping Systems (Oxygen and Nitrous Oxide).**N 15.4.7.5.1 General.**

N 15.4.7.5.1.1 The oxygen and nitrous oxide piping systems requiring initial testing and verification shall be as indicated in 15.4.7.2 for the different dental facilities.

N 15.4.7.5.1.2 Required verification of oxygen and nitrous oxide piping systems shall be performed only after all initial tests required in 15.4.7.4 have been completed.

N 15.4.7.5.1.3 The test gas shall be oil-free, dry nitrogen NF or the system gas or vacuum where permitted.

N 15.4.7.5.1.4 Verification shall be conducted by a party technically competent and experienced in the field of medical gas and vacuum piping system testing and certified for ASSE 6030, *Professional Qualifications Standard for Medical Gas Systems Verifiers*.

N 15.4.7.5.1.5 Verification shall be performed by a party other than the installing contractor.

N 15.4.7.5.1.6 All required verification tests shall be performed after installation of any manufactured assemblies supplied through tubing or flexible hose.

N 15.4.7.5.1.7 Where there are multiple possible connection points for terminals, each possible position shall be tested independently.

N 15.4.7.5.1.8 Where brazed joints in copper tubing are found to be defective, they shall be repaired if permitted by 15.4.6.8.6 or replaced if required by 15.4.6.8.5, and retested. The piping shall be repurged if necessary.

N 15.4.7.5.1.9 During the process of verification, the presence and proper labeling of source equipment, station outlets/inlets, zone valve boxes, shutoff valves, and alarms shall be checked.

N 15.4.7.5.2 Verifier Standing Pressure Test. Oxygen and nitrous oxide piping systems requiring verification shall be subjected to a 10-minute standing pressure test at operating line pressure using the following procedure:

- (1) After the system is filled with nitrogen or the source gas, the source valve shall be closed.
- (2) The piping system shall show no decrease in pressure after not less than 10 minutes.
- (3) Any leaks shall be located, repaired (if permitted), or replaced (if required) by the installer, and retested.

N 15.4.7.5.3 Verifier Cross-Connection Test. The piping systems shall be tested for cross-connections between the systems using the following procedure:

- (1) All medical gas and vacuum piping systems shall be reduced to atmospheric pressure.
- (2) All sources of test gas for all of the gas and vacuum systems, with the exception of the one system to be checked, shall be disconnected.
- (3) The system being checked shall be pressurized to a gauge pressure of 345 kPa (50 psi).
- (4) With adapters matching outlet labels, each individual station outlet/inlet of all medical gas and vacuum systems installed shall be checked to determine that test gas is dispensed only from the outlets/inlets of the piping system being tested.
- (5) The source of test gas shall be disconnected, and the system that was tested reduced to atmospheric pressure.
- (6) Each additional piping system shall be tested until all gas and vacuum piping systems requiring verification are free of cross-connections.
- (7) Any cross-connections shall be removed and the associated piping repaired and tested for leaks.

N 15.4.7.5.4 Verifier Piping Purge Test.

N 15.4.7.5.4.1 To remove any traces of particulate matter deposited in the oxygen and nitrous oxide piping during construction, a heavy, intermittent purging of the piping shall be done.

N 15.4.7.5.4.2 The appropriate adapter shall be obtained and high purge rates of at least 225 NI/min (8 SCFM) shall be put on each outlet.

N 15.4.7.5.4.3 After each purge is started, it shall be rapidly interrupted several times until the purge produces no discoloration in a white cloth loosely held over the adapter during the purge.

- N 15.4.7.5.4.4** To avoid possible damage to the outlet and its components, this test shall not be conducted using any implement other than the proper adapter.
- N 15.4.7.5.4.5** No pronounced or objectionable odor shall be discernible from any positive pressure outlet.
- N 15.4.7.5.5 Verifier Piping Particulate Test.**
- N 15.4.7.5.5.1** For each oxygen and nitrous oxide system, the cleanliness of the piping system shall be verified.
- N 15.4.7.5.5.2** The test shall be performed with the use of oil-free, dry nitrogen NF.
- N 15.4.7.5.5.3** A minimum of 1000 L (35 ft³) of gas shall be filtered through a clean, white 0.45 micron filter at a minimum flow rate of 100 NL/min (3.5 SCFM).
- N 15.4.7.5.5.4** Twenty five percent of the zones shall be tested at the outlet most remote from the source.
- N 15.4.7.5.5.5** The filter shall accrue no more than 0.001 g (1 mg) of matter from any outlet tested.
- N 15.4.7.5.5.6** If any outlet fails this test, the most remote outlet in every zone shall be tested.
- N 15.4.7.5.6 Verifier Piping Purity Test.**
- N 15.4.7.5.6.1** For each oxygen and nitrous oxide system, the purity of the piping system shall be verified in accordance with 15.4.7.5.6.
- N 15.4.7.5.6.2** These tests shall be performed with oil-free, dry nitrogen NF or the system gas.
- N 15.4.7.5.6.3** The outlet most remote from the source shall be tested for total nonmethane hydrocarbons and compared to the test of the source gas.
- N 15.4.7.5.6.4** If the system gas is used as the source gas, it shall be tested at the source equipment.
- N 15.4.7.5.6.5** The difference between the two tests shall in no case exceed 5 ppm of total nonmethane hydrocarbons.
- N 15.4.7.5.6.6** The difference between the two tests shall in no case exceed 5 ppm of halogenated hydrocarbons.
- N 15.4.7.5.6.7** The moisture concentration of the outlet test shall not exceed 500 ppm or an equivalent pressure dew point of -12°C (10°F) at a gauge pressure of 345 kPa (50 psi).
- N 15.4.7.5.7 Verifier Final Tie-in Test.**
- N 15.4.7.5.7.1** Prior to the connection of any work or any extension or addition to an existing piping system, the verification tests in 15.4.7.5 shall be successfully performed on the new work.
- N 15.4.7.5.7.2** Each joint in the final connection between the new work and the existing system shall be leak-tested with the gas of system designation at the normal operating pressure by means of a leak detectant that is safe for use with oxygen and does not contain ammonia.
- N 15.4.7.5.7.3** For oxygen and nitrous oxide, immediately after the final brazed connection is made and leak-tested, an outlet in the new piping and an outlet in the existing piping that are immediately downstream from the point or area of intrusion shall be purged in accordance with the applicable requirements of 15.4.7.5.4.
- N 15.4.7.5.7.4** Before the new work is used for patient care, oxygen and nitrous oxide shall be tested for operational pressure and gas concentration in accordance with 15.4.7.5.8 and 15.4.7.5.9.
- N 15.4.7.5.7.5** Permanent records of these tests shall be maintained.
- N 15.4.7.5.8 Verifier Operational Pressure Test.**
- N 15.4.7.5.8.1** Operational pressure tests shall be performed at each station outlet or terminal where the user makes connections and disconnections.
- N 15.4.7.5.8.2** Tests shall be performed with the gas of system designation.
- N 15.4.7.5.8.3** All medical gas outlets with a gauge pressure of 345 kPa (50 psi), including oxygen and nitrous oxide, shall deliver 50 SLPM (1.8 SCFM) with a pressure drop of not more than 35 kPa (5 psi) and static pressure of 345 kPa to 380 kPa (50 psi to 55 psi).
- N 15.4.7.5.9 Verifier Gas Concentration Test.** After purging each system with the gas of system designation, the following shall be performed:
- (1) Each pressure gas source and outlet shall be analyzed for concentration of gas, by volume.
 - (2) Analysis shall be conducted with instruments designed to measure the specific gas dispensed.
 - (3) Allowable concentrations shall be as follows:
 - (a) Oxygen ≥99 percent
 - (b) Nitrous oxide ≥99 percent
 - (c) Other gases ±1 percent unless otherwise specified
- N 15.4.8 Performance Criteria and Testing (Dental Air and Vacuum).**
- N 15.4.8.1 Dental Air and Vacuum Systems Testing.**
- N 15.4.8.1.1 General.**
- N 15.4.8.1.1.1** Inspection and testing shall be performed on all new piped dental gas and vacuum systems, additions, renovations, temporary installations, or repaired systems to ensure, by a documented procedure, that the following have been completed:
- (1) All applicable provisions of this code have been adhered to.
 - (2) System integrity has been achieved or maintained.
 - (3) Piping systems are ready for testing and verification.
 - (4) Piping systems are performing in accordance with their design requirements.
- N 15.4.8.1.1.2** The inspection and testing reports shall be submitted directly to the party that contracted for the testing, who shall submit the reports through channels to the responsible authority and any others that are required.
- N 15.4.8.1.1.3** Reports shall contain detailed listings of all findings and results.
- N 15.4.8.1.1.4** The responsible facility authority shall review the inspection and testing records prior to the use of any systems to ensure that all findings and results of the inspection and testing have been successfully completed before use.
- N 15.4.8.1.1.5** All documentation pertaining to inspections and testing shall be maintained on-site within the facility.

N 15.4.8.1.2 Category 2 Dental Air and Vacuum Systems.

N 15.4.8.1.2.1 All Category 2 dental gas and vacuum piping systems indicated in 15.4.3 shall be initially tested in accordance with 15.4.8.1.

N 15.4.8.1.2.2 The support gas systems and vacuum systems (i.e., dental air, dental vacuum, and scavenging) shall be final tested in accordance with 15.4.8.1.7 and 15.4.8.1.8.

N 15.4.8.1.3 Initial Testing of Piping Systems.

N 15.4.8.1.3.1 General.

- (A) Where plastic vacuum and plastic scavenging piping systems are installed, they shall be visually inspected for cross-connections to oxygen and nitrous oxide systems before applying positive test pressures to the copper piping systems.
- (B) During the process of initial testing, the identification and labeling of the dental gas and vacuum piping shall be checked.

N 15.4.8.1.4 Initial Cross-Connection Test for Plastic Vacuum and Plastic Scavenging Piping Systems.

N 15.4.8.1.4.1 Plastic piping shall be tested before copper piping.

N 15.4.8.1.4.2 Tests shall be conducted to determine that no cross-connections exist between any plastic vacuum piping systems or plastic scavenging piping systems and any copper piping systems.

N 15.4.8.1.4.3 The vacuum or scavenging source shutoff valves for the vacuum or scavenging piping systems shall remain closed during the tests, unless they are being used for the cross-connection test vacuum source.

N 15.4.8.1.4.4 The cross-connection test vacuum shall be a minimum of 300 mm (12 in.) HgV.

N 15.4.8.1.4.5 The source of test vacuum shall be connected only to the vacuum or scavenging piping system being tested.

N 15.4.8.1.4.6 All individual gas system outlets and vacuum or scavenging system inlets shall be checked to determine that the test vacuum is only present in the vacuum or scavenging piping system being tested.

N 15.4.8.1.4.7 The cross-connection tests shall be repeated for each installed vacuum and scavenging system with plastic piping.

N 15.4.8.1.4.8 Any cross-connections shall be removed and the associated piping repaired and leak tested.

N 15.4.8.1.4.9 The proper labeling and identification of system outlets/inlets shall be confirmed during the initial tests.

N 15.4.8.1.5 Initial Pressure Test.

N 15.4.8.1.5.1 Each section of the piping in dental air systems and copper vacuum systems shall be pressure tested. Plastic vacuum and plastic scavenging piping shall not be pressure tested.

N 15.4.8.1.5.2 Initial pressure tests shall be conducted as follows:

- (1) After installation of station outlet/inlet rough-in assemblies
- (2) Prior to the installation of components of the distribution piping system that would be damaged by the test pressure

(e.g., pressure/vacuum alarm devices, pressure/vacuum indicators, and line pressure relief valves)

N 15.4.8.1.5.3 The source shutoff valve shall remain closed during the pressure tests.

N 15.4.8.1.5.4 The test pressure for dental air piping and copper vacuum piping shall be 1.5 times the system operating pressure but not less than a gauge pressure of 1035 kPa (150 psi).

N 15.4.8.1.5.5 The test pressure shall be maintained until each joint has been examined for leakage by means of a leak dete-
cant that is safe for use with oxygen and does not contain ammonia.

N 15.4.8.1.5.6 Any leaks shall be located, repaired (if permitted), or replaced (if required) by the installer, and retested.

N 15.4.8.1.6 Initial Piping Purge Test.

N 15.4.8.1.6.1 The outlets in each dental air piping system shall be purged to remove any particulate matter from the distribution piping.

N 15.4.8.1.6.2 Using appropriate adapters, each outlet shall be purged with an intermittent high-volume flow of test gas until the purge produces no discoloration in a clean white cloth.

N 15.4.8.1.6.3 The purging shall be started at the closest outlet to the piping shutoff valve and continue to the furthest outlet from the shutoff valve.

N 15.4.8.1.7 Standing Pressure Test for Dental Air and Copper Vacuum Piping.

N 15.4.8.1.7.1 After successful completion of the initial pressure tests in 15.4.8.1, the dental air systems and copper vacuum systems shall be subject to a standing pressure test.

N 15.4.8.1.7.2 Tests shall be conducted after the final installation of station outlet valve bodies, faceplates, and other distribution system components (e.g., pressure alarm devices, pressure indicators, line pressure relief valves, manufactured assemblies, and hoses).

N 15.4.8.1.7.3 The source valve shall be closed during this test.

N 15.4.8.1.7.4 The piping systems shall be subjected to 24-hour standing pressure tests using oil-free, dry nitrogen NF.

N 15.4.8.1.7.5 Test pressures shall be 20 percent above the normal system operating line pressure.

N 15.4.8.1.7.6 At the conclusion of the tests, there shall be no change in the test pressure, except that attributed to specific changes in ambient temperature.

N 15.4.8.1.7.7 Any leaks shall be located, repaired (if permitted), or replaced (if required) by the installer, and retested. The piping shall be repurged if necessary.

N 15.4.8.1.8 Standing Vacuum Test for Plastic Vacuum Piping.

N 15.4.8.1.8.1 After successful completion of the initial pressure tests in 15.4.8.1, vacuum distribution piping, including scavenging, shall be subjected to a standing vacuum test.

N 15.4.8.1.8.2 Tests shall be conducted after installation and connection of all components of the vacuum system.

N 15.4.8.1.8.3 The piping systems shall be subjected to a 24-hour standing vacuum test.

N 15.4.8.1.8.4 Test pressure shall be between 300 mm (12 in.) HgV and full vacuum.

N 15.4.8.1.8.5 During the test, the source of test vacuum shall be disconnected from the piping system.

N 15.4.8.1.8.6 At the conclusion of the test, there shall be no change in the vacuum pressure other than that attributed to changes of ambient temperature.

N 15.4.8.1.8.7 Any leaks shall be located, repaired (if permitted), or replaced (if required) by the installer, and retested.

N 15.4.9 Operation and Management.

N 15.4.9.1 System Shutdowns.

N 15.4.9.1.1 Gas and vacuum piping systems shall be shut down at the end of each workday.

N 15.4.9.1.2 Emergency shutoff valves or remote actuators shall not be used for daily shutdown of the systems. Cylinder gas valves shall be used for daily shutdowns.

N 15.4.9.2 Prohibited Interconnections. Two or more piping systems for different gases or different vacuums shall not be interconnected for testing or any other reason.

N 15.4.9.3 Manufacturer's Instructions.

N 15.4.9.3.1 Piping system components shall be installed, adjusted, operated, and maintained in accordance with the manufacturer's instructions.

N 15.4.9.3.2 Copies of the manufacturer's instructions shall be provided to the facility and maintained at the facility.

N 15.4.9.4 Maintenance.

N 15.4.9.4.1 Gas and vacuum system equipment shall be maintained by a qualified person.

N 15.4.9.4.2 Every facility shall establish a procedure for manually turning off the gas supply at the cylinder valves of Category 2 dental gas and vacuum systems at the end of each day.

N 15.4.9.5 Periodic Testing.

N 15.4.9.5.1 Station outlets for oxygen and nitrous oxide shall be tested for flow and pressure on an approved schedule.

N 15.5 Category 3 Dental Gas and Vacuum Systems.

N 15.5.1 General.

N 15.5.1.1 Category 3 dental gas and vacuum systems shall be limited to facilities that perform minimal or no sedation.

N 15.5.1.2 There shall be no medical gases.

N 15.5.1.3 The dental support gases shall be provided from a dental air source system.

N 15.5.1.4 The vacuum system shall be dental vacuum.

N 15.5.2 Category 3 Dental Air and Vacuum Piping Systems.

N 15.5.2.1 General. Dental air and vacuum piping systems shall include dental support gases and dental vacuum systems.

N 15.5.2.2 Vacuum Systems. Dental vacuum systems shall include dental vacuum and nitrous oxide scavenging.

N 15.5.3 Equipment Locations for Dental Air and Vacuum Systems.

N 15.5.3.1 General. Any of the following systems shall be permitted to be located together in the same room:

- (1) Dental air compressor sources and reserve headers
- (2) Dental vacuum sources
- (3) Any other compressor, vacuum pump, or electrically powered machinery

N 15.5.3.2 Cylinders and Containers. Cylinders and containers for gases shall be handled in accordance with Chapter 11.

N 15.5.3.3 Ventilation for Motor-Driven Equipment. The following source locations shall be adequately ventilated to prevent accumulation of heat:

- (1) Dental compressed air sources
- (2) Dental vacuum sources

N 15.5.4 Dental Gas and Vacuum Source Equipment.

N 15.5.4.1 General.

N 15.5.4.1.1 The capacity of source equipment shall be based on the design requirements for the facility, including the number of gas outlets, vacuum inlets, and other connections, and their individual capacities.

N 15.5.4.1.2 The system design requirements shall be included in the data used for testing and verifying the operation of the gas and vacuum piping systems.

N 15.5.4.2 Dental Air.

N 15.5.4.2.1 General.

N 15.5.4.2.1.1 Dental air shall be used as a support gas for driving dental tools and shall be permitted to be used to supply air-driven equipment. Dental compressed air shall not be used for respiration.

N 15.5.4.2.1.2 Dental air outlets shall not be interchangeable with any other gas outlets, including oxygen, nitrous oxide, medical air, instrument air, and nitrogen.

N 15.5.4.2.2 Dental Air Compressor Units.

N 15.5.4.2.2.1 Dental air compressor units shall include dental air compressors, vibration isolation, air receivers, coalescent air filters, adsorption dryers, exhaust silencer/filters, moisture indicators, and service access manifolds, electrical disconnects, motor wiring, and controls.

N 15.5.4.2.2.2 Air compressors shall be scroll dental, reciprocating dental, or the oil-free dental types.

N 15.5.4.3 Dental Vacuum.

N 15.5.4.3.1 General.

N 15.5.4.3.1.1 Dental vacuum shall be used for oral evacuation and nitrous oxide scavenging.

N 15.5.4.3.1.2 Dental vacuum inlets shall not be interchangeable with any other vacuum inlets, including dental-surgical vacuum.

N 15.5.4.3.2 Dental Vacuum Units.

N 15.5.4.3.2.1 Dental vacuum units shall include dental vacuum pumps, vibration isolation, separation tanks, vacuum inlet, vacuum exhaust, condensate drain, motor wiring, and controls.

N 15.5.4.3.2.2 Dental vacuum pumps shall be dental dry vacuum or dental liquid (wet) ring pumps. Pumps shall be oil-free or oil-lubricated and suitable for nitrous oxide scavenging.

N 15.5.5 Piping for Category 3 Dental Gas and Vacuum Systems.

N 15.5.5.1 General.

N 15.5.5.1.1 Piping for dental air systems shall comply with 15.5.5.2.

N 15.5.5.1.2 Piping for dental vacuum systems and scavenging systems shall comply with 15.5.5.3.

N 15.5.5.2 Piping for Dental Air Systems.

N 15.5.5.2.1 General. Pipe, fittings, and joints in piping for dental compressed air systems shall be in accordance with 15.5.5.2.2 through 15.5.5.2.4.

N 15.5.5.2.2 Pipe. Pipe under 15.5.5 shall comply with the following:

- (1) ASTM B819, *Standard Specification for Seamless Copper Tube for Medical Gas Systems, Type L or K*.
- (2) ASTM B88, *Standard Specification for Seamless Copper Water Tube, Type L or K*.
- (3) ASTM B280, *Standard Specification for Seamless Copper Tubing for Air Conditioning and Refrigeration Field Service, ACR tube (O.D. size)*.

N 15.5.5.2.2.1 Copper tube shall be hard temper or annealed (soft temper).

N 15.5.5.2.3 Fittings. Fittings for piping under 15.5.5.2 shall be permitted to be any of the following acceptable joining methods:

- (1) Brazed or soldered fittings conforming to ASME B16.22, *Wrought Copper and Copper Alloy Solder-Joint Pressure Fittings*
- (2) Brazed fittings conforming to ANSI/ASME B16.50, *Wrought Copper and Copper Alloy Braze-Joint Pressure Fittings*
- (3) Brazed fittings conforming to ASME B16.22 with socket depths equal to or greater than braze-joint pressure fittings in compliance with ANSI/ASME B16.50
- (4) Flared fittings conforming to ASME B16.26, *Cast Copper Alloy Fittings for Flared Copper Tubes*
- (5) Compression fittings ($\frac{3}{4}$ in. maximum size)

N 15.5.5.2.4 Joints. Joints for piping under 15.5.5.2 shall comply with the following:

- (1) Joints shall be brazed, soldered, threaded, flared, or the compression type.
- (2) Where joints are brazed, they shall comply with the requirements of 15.4.6.
- (3) Soldered joints shall be made in accordance with ASTM B828, *Standard Practice for Making Capillary Joints by Soldering of Copper and Copper Alloy Tube and Fittings*, using a "lead-free" solder filler metal containing not more than 0.2 percent lead by volume that complies with ASTM B32, *Standard Specification for Solder Metal*.

N 15.5.5.3 Piping for Dental Vacuum Systems and Scavenging Systems.

N 15.5.5.3.1 General. Piping for dental vacuum systems and scavenging systems shall be copper, PVC plastic, or CPVC plastic.

N 15.5.5.3.2 Copper Piping. Copper piping under 15.5.5.3 shall be in accordance with 15.5.5.3.2.1 through 15.5.5.3.2.3.

N 15.5.5.3.2.1 Copper Tube.

N (A) Copper tubing shall comply with the following:

- (1) ASTM B819, *Standard Specification for Seamless Copper Tube for Medical Gas Systems, Type L or K*
- (2) ASTM B88, *Standard Specification for Seamless Copper Water Tube, Type L or K*
- (3) ASTM B280, *Standard Specification for Seamless Copper Tubing for Air Conditioning and Refrigeration Field Service, ACR tube (O.D. size)*

N (B) Copper tube shall be hard temper or annealed (soft temper).

N 15.5.5.3.2.2 Copper Fittings. Copper fittings shall comply with the following:

- (1) Brazed or soldered fittings conforming to ASME B16.22, *Wrought Copper and Copper Alloy Solder-Joint Pressure Fittings*
- (2) Brazed fittings conforming to ANSI/ASME B16.50, *Wrought Copper and Copper Alloy Braze-Joint Pressure Fittings*
- (3) Brazed fittings conforming to ASME B16.22 with socket depths equal to or greater than braze-joint pressure fittings conforming to ANSI/ASME B16.50
- (4) Flared fittings conforming to ASME B16.26, *Cast Copper Alloy Fittings for Flared Copper Tubes*
- (5) Compression fittings ($\frac{3}{4}$ in. maximum size)

N 15.5.5.3.2.3 Joints for Copper Piping. Joints in copper tubing shall be in accordance with the following:

- (1) Joints shall be brazed, soldered, threaded, flared, or the compression type.
- (2) Where joints are brazed, they shall comply with the requirements of 15.4.6.
- (3) Soldered joints shall be made in accordance with ASTM B828, *Standard Practice for Making Capillary Joints by Soldering of Copper and Copper Alloy Tube and Fittings*, using a "lead-free" solder filler metal containing not more than 0.2 percent lead by volume that complies with ASTM B32, *Standard Specification for Solder Metal*.

N 15.5.5.3.3 PVC Plastic Piping. PVC plastic piping under 15.5.5.3 shall be in accordance with the following:

- (1) PVC plastic pipe shall be Schedule 40 or Schedule 80, conforming to ASTM D1785, *Standard Specification for Poly(Vinyl Chloride) (PVC) Plastic Pipe, Schedules 40, 80, and 120*.
- (2) PVC plastic fittings shall be Schedule 40 or Schedule 80 to match the pipe, conforming to ASTM D2466, *Standard Specification for Poly(Vinyl Chloride) (PVC) Plastic Pipe Fittings, Schedule 40*, or ASTM D2467, *Standard Specification for Poly(Vinyl Chloride) (PVC) Plastic Pipe Fittings, Schedule 80*.
- (3) Joints in PVC plastic piping shall be solvent-cemented in accordance with ASTM D2672, *Standard Specification for Joints for IPS PVC Pipe Using Solvent Cement*.

N 15.5.5.3.4 CPVC Plastic Piping. CPVC plastic piping under 15.5.5.3 shall be in accordance with the following:

- (1) CPVC IPS plastic pipe shall be Schedule 40 or Schedule 80, conforming to ASTM F441/F441M, *Standard Specification for Chlorinated Poly (Vinyl Chloride) (CPVC) Plastic Pipe, Schedules 40 and 80*.
- (2) CPVC IPS plastic fittings shall be Schedule 40 or Schedule 80 to match the pipe, conforming to ASTM F438, *Standard Specification for Socket-Type Chlorinated Poly (Vinyl*

Chlorinated) (CPVC) Plastic Pipe Fittings, Schedule 40, or ASTM F439, *Standard Specification for Chlorinated Poly (Vinyl Chlorinated) (CPVC) Plastic Pipe Fittings, Schedule 80.*

- (3) CPVC CTS plastic pipe and fittings ½ in. through 2 in. size shall be SDR 11, conforming to ASTM D2846/D2846M, *Standard Specification for Chlorinated Poly(Vinyl Chloride) (CPVC) Plastic Hot- and Cold-Water Distribution Systems.*
- (4) Solvent cement for joints in CPVC plastic piping shall comply with ASTM F493, *Solvent Cements for CPVC Pipe and Fittings.*

N 15.5.6 Installation of Dental Air and Vacuum Piping.

N 15.5.6.1 General.

N 15.5.6.1.1 Dental air and vacuum piping systems shall be as listed in Section 15.5.2.

N 15.5.6.1.2 Piping materials shall be as listed in Section 15.5.5.

N 15.5.6.2 Pipe Sizing. Piping systems shall be designed and sized to deliver the required flow rates at the utilization pressures.

N 15.5.6.3 Protection of Piping.

N 15.5.6.3.1 Piping shall be protected against freezing, corrosion, and physical damage.

N 15.5.6.3.2 Piping exposed in corridors and other locations where subject to physical damage from the movement of equipment shall be protected.

N 15.5.6.4 Pipe Support.

N 15.5.6.4.1 Piping shall be supported from the building structure.

N 15.5.6.4.2 Hangers and supports shall comply with and be installed in accordance with MSS SP-58, *Pipe Hangers and Supports — Materials, Design, Manufacture, Selection, Application, and Installation.*

N 15.5.6.4.3 Hangers and supports shall be sized for the tube or pipe being supported.

N 15.5.6.4.4 The maximum support spacing for copper tube shall be in accordance with Table 15.5.6.4.4.

N 15.5.6.4.5 The maximum support spacing for plastic pipe shall be in accordance with Table 15.5.6.4.5.

N Table 15.5.6.4.4 Maximum Copper Tube Support Spacing

Pipe Size	Hanger Spacing	
	mm	ft
DN8 (NPS ¼) (⅜ in. O.D.)	1520	5
DN10 (NPS ⅜) (½ in. O.D.)	1830	6
DN15 (NPS ½) (⅝ in. O.D.)	1830	6
DN20 (NPS ¾) (⅞ in. O.D.)	2130	7
DN25 (NPS 1) (1⅛ in. O.D.)	2440	8
DN32 (NPS 1¼) (1⅜ in. O.D.)	2740	9
DN40 (NPS 1½) (1⅝ in. O.D.)	3050	10
and larger		
Vertical risers, all sizes, every floor, but not to exceed	4570	15

N Table 15.5.6.4.5 Maximum Plastic Pipe Support Spacing

Pipe Size	Hanger Spacing	
	mm	ft
DN15 (NPS ½) (⅝ in. O.D.)	1220	4
DN20 (NPS ¾) (⅞ in. O.D.)	1220	4
DN25 (NPS 1) (1⅛ in. O.D.)	1320	4.33
DN32 (NPS 1¼) (1⅜ in. O.D.)	1320	4.33
DN40 (NPS 1½) (1⅝ in. O.D.)	1420	4.66
DN50 (NPS 2) (2⅜ in. O.D.)	1420	4.66
DN65 (NPS 2½) (2⅞ in. O.D.)	1520	5
and larger		
Vertical risers, all sizes, every floor, but not to exceed	3040	10

N 15.5.6.5 Underground Piping Outside of Buildings.

N 15.5.6.5.1 Buried piping outside of buildings shall be installed below the local level of frost penetration.

N 15.5.6.5.2 The installation procedure for underground piping shall prevent physical damage to the piping while being backfilled.

N 15.5.6.5.3 If the underground piping is protected by a conduit, cover, or other enclosure, the following requirements shall be met:

- (1) Access during construction shall be provided at the joints for visual inspection and leak testing.
- (2) The conduit, cover, or enclosure shall be self-draining and not retain groundwater in prolonged contact with copper tubing.

N 15.5.6.5.4 Buried piping that is subject to surface loads shall be buried at a depth that will protect the piping, its enclosure, or both, from excessive stresses.

N 15.5.6.5.5 The minimum backfill cover above the top of the piping or its enclosure shall be 900 mm (36 in.), except that the minimum cover shall be permitted to be reduced to 450 mm (18 in.) where there is no potential for damage from surface loads or surface conditions.

N 15.5.6.5.6 Trenches shall be excavated so that the piping or its enclosure has firm, substantially continuous bearing on the bottom of the trench.

N 15.5.6.5.7 Backfill shall be clean, free from material that can damage the pipe, and compacted.

N 15.5.6.5.8 A continuous warning tape or marker shall be placed immediately above the piping or its enclosure to clearly identify the pipeline by specific name.

N 15.5.6.5.9 A continuous warning means shall also be placed above the pipeline at approximately one-half the depth of burial.

N 15.5.6.5.10 Where buried piping is extended into a building through a wall sleeve, the outdoor end of the sleeve shall be sealed watertight to prevent the entrance of groundwater into the building.

N 15.5.6.6 Underground Piping Within Buildings.

N 15.5.6.6.1 The installation procedure for underground piping shall prevent physical damage to the piping while being backfilled.

N 15.5.6.6.2 The piping shall be backfilled with clean sand or gravel.

N 15.5.6.7 Piping Within Floor Slabs Prohibited. Dental gas and vacuum piping shall not be installed within floor slabs.

N 15.5.7 Performance Criteria and Testing (Dental air and Vacuum).**N 15.5.7.1 Dental Air and Vacuum Systems Testing.****N 15.5.7.1.1 General.**

N 15.5.7.1.1.1 Inspection and testing shall be performed on all new piped dental gas and vacuum systems, additions, renovations, temporary installations, or repaired systems to ensure, by a documented procedure, that the following have been completed:

- (1) All applicable provisions of this code have been adhered to.
- (2) System integrity has been achieved or maintained.
- (3) Piping systems are ready for testing and verification.
- (4) Piping systems are performing in accordance with their design requirements.

N 15.5.7.1.1.2 The inspection and testing reports shall be submitted directly to the party that contracted for the testing, who shall submit the reports through channels to the responsible authority and any others that are required.

N 15.5.7.1.1.3 Reports shall contain detailed listings of all findings and results.

N 15.5.7.1.1.4 The responsible facility authority shall review the inspection and testing records prior to the use of any systems to ensure that all findings and results of the inspection and testing have been successfully completed before use.

N 15.5.7.1.1.5 All documentation pertaining to inspections and testing shall be maintained on-site within the facility.

N 15.5.7.1.2 Required Testing.**N 15.5.7.1.2.1 Category 3 Dental Air and Vacuum Systems.**

N (A) All Category 3 dental gas and vacuum piping systems indicated in 15.5.2 shall be initially tested in accordance with 15.5.7.1.3.

N (B) The support gas systems and vacuum systems (i.e., dental air, dental vacuum, and scavenging) shall be final tested in accordance with 15.5.7.1.3.4 and 15.5.7.1.3.5.

N 15.5.7.1.3 Initial Testing of Piping Systems.**N 15.5.7.1.3.1 General.**

N (A) Where plastic vacuum and plastic scavenging piping systems are installed, they shall be visually inspected for cross-connections to oxygen and nitrous oxide systems before applying positive test pressures to the copper piping systems.

N (B) During the process of initial testing, the identification and labeling of the dental gas and vacuum piping shall be checked.

N 15.5.7.1.3.2 Initial Pressure Test.

N (A) Each section of the piping in dental air systems and copper vacuum systems shall be pressure tested. Plastic vacuum and plastic scavenging piping shall not be pressure tested.

N (B) Initial pressure tests shall be conducted as follows:

- (1) After installation of station outlet/inlet rough-in assemblies
- (2) Prior to the installation of components of the distribution piping system that would be damaged by the test pressure (e.g., pressure/vacuum alarm devices, pressure/vacuum indicators, and line pressure relief valves)

N (C) The source shutoff valve shall remain closed during the pressure tests.

N (D) The test pressure for dental air piping and copper vacuum piping shall be 1.5 times the system operating pressure but not less than a gauge pressure of 1035 kPa (150 psi).

N (E) The test pressure shall be maintained until each joint has been examined for leakage by means of a leak detectant that is safe for use with oxygen and does not contain ammonia.

N (F) Any leaks shall be located, repaired (if permitted), or replaced (if required) by the installer, and retested.

N 15.5.7.1.3.3 Initial Piping Purge Test.

N (A) The outlets in each dental air piping system shall be purged to remove any particulate matter from the distribution piping.

N (B) Using appropriate adapters, each outlet shall be purged with an intermittent high-volume flow of test gas until the purge produces no discoloration in a clean white cloth.

N (C) The purging shall be started at the closest outlet to the piping shutoff valve and continue to the furthest outlet from the shutoff valve.

N 15.5.7.1.3.4 Standing Pressure Test for Dental Air and Copper Vacuum Piping.

N (A) After successful completion of the initial pressure tests in 15.5.7.1.3.2, the dental air systems and copper vacuum systems shall be subject to a standing pressure test.

N (B) Tests shall be conducted after the final installation of station outlet valve bodies, faceplates, and other distribution system components (e.g., pressure alarm devices, pressure indicators, line pressure relief valves, manufactured assemblies, and hoses).

N (C) The source valve shall be closed during this test.

N (D) The piping systems shall be subjected to 24-hour standing pressure tests using oil-free, dry nitrogen NF.

N (E) Test pressures shall be 20 percent above the normal system operating line pressure.

N (F) At the conclusion of the tests, there shall be no change in the test pressure except that attributed to specific changes in ambient temperature.

N (G) Any leaks shall be located, repaired (if permitted), or replaced (if required) by the installer, and retested. The piping shall be repurged if necessary.

N 15.5.7.1.3.5 Standing Vacuum Test for Plastic Vacuum Piping.

- N (A)** After successful completion of the initial pressure tests in 15.5.7.1.3.2, vacuum distribution piping, including scavenging, shall be subjected to a standing vacuum test.
- N (B)** Tests shall be conducted after installation and connection of all components of the vacuum system.
- N (C)** The piping systems shall be subjected to a 24-hour standing vacuum test.
- N (D)** Test pressure shall be between 300 mm (12 in.) HgV and full vacuum.
- N (E)** During the test, the source of test vacuum shall be disconnected from the piping system.
- N (F)** At the conclusion of the test, there shall be no change in the vacuum pressure other than that attributed to changes of ambient temperature.
- N (G)** Any leaks shall be located, repaired (if permitted), or replaced (if required) by the installer, and retested.

N 15.5.8 Operation and Management.

N 15.5.8.1 System Shutdowns. Gas and vacuum piping systems shall be shut down at the end of each workday.

N 15.5.8.2 Manufacturer's Instructions.

N 15.5.8.2.1 Piping system components shall be installed, adjusted, operated, and maintained in accordance with the manufacturer's instructions.

N 15.5.8.2.2 Copies of the manufacturer's instructions shall be provided to the facility and maintained at the facility.

N 15.5.8.3 Maintenance. Dental air and vacuum system equipment shall be maintained by a qualified representative of the equipment manufacturer.

Chapter 16 Features of Fire Protection**16.1 Applicability.**

16.1.1 This chapter shall apply to all new and existing health care facilities.

16.1.2 An existing system that is not in strict compliance with the provisions of this code shall be permitted to be continued in use, unless the authority having jurisdiction has determined that such use constitutes a distinct hazard to life.

16.2 Construction and Compartmentation. Buildings or structures housing a health care facility shall meet the minimum construction and compartmentation requirements of the applicable code.

16.3 Special Hazard Protection for Flammable Liquids and Gases.

Δ 16.3.1 Where required by the provisions of Chapters 11 through 43 of NFPA 101, occupancies with storage, use, and handling of hazardous materials shall comply with the following codes unless otherwise modified by other provisions of this Code: NFPA 30, NFPA 54, NFPA 55, NFPA 58, NFPA 400, and NFPA 495. [101:8.7.3.1]

16.3.2* No storage, use, or handling of hazardous materials shall be permitted in any location where such storage, use, or

handling would jeopardize egress from the structure, unless otherwise permitted by a document listed in 16.3.1. [101:8.7.3.2]

Δ 16.4 Laboratories. Laboratories that use chemicals shall comply with NFPA 45 unless otherwise modified by other provisions of this code. [101:8.7.4.1]

16.5 Utilities.

Δ 16.5.1 General. Utilities shall comply with the requirements of 16.5.1.1 through 16.5.1.4.

Δ 16.5.1.1 Gas. Equipment using gas and related gas piping shall be in accordance with NFPA 54 or NFPA 58 unless such installations are approved existing installations, which shall be permitted to be continued in service. [101:9.1.1]

Δ 16.5.1.2 Electrical Systems. Electrical wiring and equipment shall be in accordance with NFPA 70 unless such installations are approved existing installations, which shall be permitted to be continued in service. [101:9.1.2]

Δ 16.5.1.3 Emergency Generators and Standby Power Systems. Emergency generators and standby power systems, where required for compliance with this code, shall be installed, tested, and maintained in accordance with NFPA 110.

Δ 16.5.1.4 Stored Electrical Energy Systems. Stored electrical energy systems shall be installed, tested, and maintained in accordance with NFPA 111. [101:9.1.4]

16.5.2 Heating, Ventilating, and Air-Conditioning. [101:9.2]

Δ 16.5.2.1* Heating, Ventilating, and Air Conditioning. Air-conditioning, heating, ventilating ductwork, and related equipment shall be in accordance with NFPA 90A, unless such installations are approved existing installations, which shall be permitted to be continued in service.

Δ 16.5.2.2 Ventilating or Heat-Producing Equipment. Ventilating or heat-producing equipment shall be in accordance with NFPA 91, NFPA 211, NFPA 31, NFPA 54, or NFPA 70 as applicable, unless such installations are approved existing installations, which shall be permitted to be continued in service. [101:9.2.2]

Δ 16.5.2.3 Commercial Cooking Operations. Commercial cooking operations shall be protected in accordance with NFPA 96 unless such installations are approved existing installations, which shall be permitted to be continued in service. [101:9.2.3]

Δ 16.5.2.4 Ventilating Systems in Laboratories Using Chemicals. Ventilating systems in laboratories using chemicals shall be in accordance with NFPA 45. [101:9.2.4]

16.5.3 Elevators, Escalators, and Conveyors. [101:9.4]**16.5.3.1 Code Compliance.** [101:9.4.2]

16.5.3.1.1 Except as modified herein, new elevators, escalators, dumbwaiters, and moving walks shall be in accordance with the requirements of ASME A17.1/CSA B44, *Safety Code for Elevators and Escalators*. [101:9.4.2.1]

16.5.3.1.2 Except as modified herein, existing elevators, escalators, dumbwaiters, and moving walks shall be in accordance with the requirements of ASME A17.3, *Safety Code for Existing Elevators and Escalators*. [101:9.4.2.2]

16.5.3.2 Fire Fighters' Emergency Operations. [101:9.4.3]

16.5.3.2.1 All new elevators shall conform to the fire fighters' emergency operations requirements of ASME A17.1/CSA B44, *Safety Code for Elevators and Escalators*. [101:9.4.3.1]

16.5.3.2.2 All existing elevators having a travel distance of 25 ft (7620 mm) or more above or below the level that best serves the needs of emergency personnel for fire-fighting or rescue purposes shall conform to the fire fighters' emergency operations requirements of ASME A17.3, *Safety Code for Existing Elevators and Escalators*. [101:9.4.3.2]

16.5.3.3* Elevator Machine Rooms. Elevator machine rooms that contain solid-state equipment for elevators, other than existing elevators, having a travel distance exceeding 50 ft (15 m) above the level of exit discharge or exceeding 30 ft (9150 mm) below the level of exit discharge shall be provided with independent ventilation or air-conditioning systems to maintain temperature during fire fighters' emergency operations for elevator operation (see 9.4.3 of NFPA 101). The operating temperature shall be established by the elevator equipment manufacturer's specifications. When standby power is connected to the elevator, the machine room ventilation or air-conditioning shall be connected to standby power. [101:9.4.5]

16.5.3.4 Elevator Testing. Elevators shall be subject to periodic inspections and tests as specified in ASME A17.1, *Safety Code for Elevators and Escalators*. All elevators equipped with fire fighters' emergency operations in accordance with 9.4.3 of NFPA 101 shall be subject to a monthly operation with a written record of the findings made and kept on the premises as required by ASME A17.1. [101:9.4.6]

▲ **16.6 Waste Chutes, Incinerators, and Linen Chutes.** Waste chutes, linen chutes, and incinerators shall be installed and maintained in accordance with NFPA 82 unless such installations are approved existing installations, which shall be permitted to be continued in service.

16.6.1 Any waste chute or linen chute, including pneumatic rubbish and linen systems, shall be provided with automatic extinguishing protection in accordance with Section 9.7 of NFPA 101. [101:19.5.4.3]

16.7 Fire Detection, Alarm, and Communications Systems. [101:9.6]**16.7.1* General.** [101:9.6.1]

16.7.1.1 Buildings or structures housing a health care facility shall meet the fire detection, alarm, and communications systems requirements of the applicable code.

▲ **16.7.1.2** A fire alarm system required for life safety shall be installed, tested, and maintained in accordance with the applicable requirements of NFPA 70 and NFPA 72 unless it is an approved existing installation, which shall be permitted to be continued in use. [101:9.6.1.3]

16.7.1.3 For the purposes of this code, a complete fire alarm system shall provide functions for initiation, notification, and control, and shall perform as follows:

- (1) The initiation function provides the input signal to the system.
- (2) The notification function advises that human action is required in response to a particular condition.
- (3) The control function provides outputs to control building equipment to enhance protection of life.

16.7.2 Signal Initiation.

16.7.2.1 Buildings or structures housing a health care facility shall meet the minimum signaling and alarm initiation requirements of the applicable code.

16.7.2.2 Manual fire alarm boxes shall be used only for fire-protective signaling purposes.

16.7.2.2.1 Combination fire alarm and guard's tour stations shall be acceptable.

16.7.2.3 A manual fire alarm box shall be provided in the natural exit access path near each required exit from an area, unless modified by another section of this code.

16.7.2.4* Additional manual fire alarm boxes shall be located so that, on any given floor in any part of the building, no horizontal distance on that floor exceeding 60 m (200 ft) shall need to be traversed to reach a manual fire alarm box. [101:9.6.2.5]

16.7.2.5 For fire alarm systems using automatic fire detection or waterflow detection devices, not less than one manual fire alarm box shall be provided to initiate a fire alarm signal.

16.7.2.5.1 The manual fire alarm box shall be located where required by the authority having jurisdiction.

16.7.2.6 Manual fire alarm boxes shall be accessible, unobstructed, and visible. [101:9.6.2.7]

16.7.2.7 Where a sprinkler system provides automatic detection and alarm system initiation, it shall be provided with an approved alarm initiation device that operates when the flow of water is equal to or greater than that from a single automatic sprinkler.

16.7.3 Smoke Alarms.

▲ **16.7.3.1** Where required by the applicable code, single-station and multiple-station smoke alarms shall be in accordance with NFPA 72.

16.7.3.2 System smoke detectors in accordance with NFPA 72 and arranged to function in the same manner as single-station or multiple-station smoke alarms shall be permitted in lieu of smoke alarms. [101:9.6.2.10.7]

16.7.3.3 The alarms shall sound only within an individual dwelling unit, suite of rooms, or similar area and shall not actuate the building fire alarm system, unless otherwise permitted by the authority having jurisdiction. Remote annunciation shall be permitted.

16.7.4 Occupant Notification. [101:9.6.3]

16.7.4.1 Where required by the applicable code, occupant notification shall be provided to alert occupants of a fire or other emergency.

16.7.4.2 Occupant notification shall be in accordance with 16.7.4.3 unless otherwise provided in 16.7.4.2.1 and 16.7.4.2.2. [101:9.6.3.2]

16.7.4.2.1* Elevator lobby, hoistway, and associated machine room smoke detectors used solely for elevator recall, and heat detectors used solely for elevator power shutdown, shall not be required to activate the building evacuation alarm if the power supply and installation wiring to such detectors are monitored by the building fire alarm system, and if the activation of such

detectors initiates a supervisory signal at a constantly attended location. [101:9.6.3.2.1]

16.7.4.2.2* Smoke detectors used solely for closing dampers or HVAC system shutdown shall not be required to activate the building evacuation alarm, provided that the power supply and installation wiring to the detectors are monitored by the building fire alarm system, and the activation of the detectors initiates a supervisory signal at a constantly attended location. [101:9.6.3.2.2]

16.7.4.3 Defend in Place. For new and existing facilities, where the response to a fire is to defend in place within a safe place in the building, occupant notification shall be in accordance with the facility fire plan.

16.7.4.3.1* Where buildings are required to be subdivided into smoke compartments, fire alarm notification zones shall coincide with one or more smoke compartment boundaries or shall be in accordance with the facility fire plan.

16.7.4.3.2* The private operating mode, as defined in *NFPA 72*, shall be permitted to be used for the placement of notification appliances within the health care and ambulatory health care occupancies of the building.

16.7.4.3.3 The notification signal shall readily identify the smoke zone or the floor area, floor, and building in need of staff response.

16.7.4.3.4 The notification signal shall be heard in all locations in accordance with the facility fire plan.

16.7.4.3.5* In patient care spaces where alarm notification adversely affects patient care, as determined by a risk assessment, alarm notification appliances shall not be required as long as an alternative means of alarm notification is provided.

16.7.4.3.6 Visible signals shall not be required inside surgical operating rooms, patient sleeping rooms, or psychiatric care areas where their operation would interfere with patient treatment.

16.7.4.3.7 Visible signals shall not be required inside exam rooms, special procedure rooms, dressing rooms, and nonpublic toilet rooms where staff is required to respond to those areas in accordance with the facility fire plan.

16.8 Automatic Sprinklers and Other Extinguishing Equipment.

16.8.1 Automatic Sprinklers.

16.8.1.1 Buildings or structures housing a health care facility shall meet the automatic sprinkler system requirements of the applicable code.

Δ 16.8.1.2 Where provided, automatic sprinkler systems shall be installed in accordance with *NFPA 13*.

16.8.1.3* Defend in Place. For new and existing facilities, where the response to a fire is to defend in place within a safe place in the building and not to automatically evacuate the building, sprinkler system zones shall coincide with smoke compartment boundaries or shall be in accordance with the facility fire plan.

Δ 16.8.1.4* Closets. Sprinklers shall not be required in clothes closets of patient sleeping rooms in hospitals where the area of the closet does not exceed 6 ft² (0.55 m²) provided the distance from the sprinkler in the patient sleeping room to the back

wall of the closet does not exceed the maximum distance permitted by *NFPA 13*. [101:18.3.5.10]

16.9 Manual Extinguishing Equipment.

Δ 16.9.1* Portable fire extinguishers shall be selected, installed, inspected, and maintained in accordance with *NFPA 10*.

N 16.9.1.1* Nonferrous-type fire extinguishers shall be provided in MRI rooms and associated spaces.

N 16.9.1.2 Class K fire extinguishers shall be provided for hazards where there is a potential for fires involving combustible cooking media (vegetable or animal oils and fats). [10:6.6.1]

N 16.9.1.3* Clean agent- or water mist-type fire extinguishers shall be provided in operating rooms.

N 16.9.1.4 Clean agent-type fire extinguishers shall be provided in telecommunication entrance facilities and telecommunication equipment rooms.

Δ 16.9.2 Where provided, standpipe and hose systems shall be in accordance with *NFPA 14*.

Δ 16.9.2.1 Where standpipe and hose systems are installed in combination with automatic sprinkler systems, installation shall be in accordance with the appropriate provisions established by *NFPA 13* and *NFPA 14*.

16.9.2.2* Hose or hose outlets shall be permitted to be removed from existing standpipe and hose systems that are not required by the applicable code.

Δ 16.10* Compact Storage. Compact storage shall be protected by sprinklers in accordance with *NFPA 13*.

16.11 Compact Mobile Storage.

16.11.1 Rooms with compact mobile storage units greater than 50 ft² (4.65 m²) shall be protected as a hazardous area in accordance with the applicable code.

16.11.2 Smoke detection shall be installed above compact mobile storage units greater than 50 ft² (4.65 m²) in accordance with *NFPA 72*.

16.11.3* Compact mobile storage units greater than 50 ft² (465 m²) shall be protected by automatic sprinklers in accordance with *NFPA 13*.

16.12 Maintenance and Testing.

Δ 16.12.1 All water-based fire protection systems shall be inspected, tested, and maintained in accordance with *NFPA 25*.

16.12.2 All non-water-based fire protection systems shall be inspected, tested, and maintained in accordance with the applicable *NFPA* standards.

16.13* Fire Loss Prevention in Operating Rooms.

16.13.1 Hazard Assessment.

16.13.1.1 An evaluation shall be made of hazards that could be encountered during surgical procedures.

16.13.1.2 The evaluation shall include hazards associated with the properties of electricity, hazards associated with the operation of surgical equipment, and hazards associated with the nature of the environment.

16.13.1.3 Periodic reviews of surgical operations and procedures shall be conducted with special attention given to any change in materials, operations, or personnel.

16.13.2 Fire Prevention Procedures. Fire prevention procedures shall be established.

16.13.3 Germicides and Antiseptics.

16.13.3.1 Medicaments and alcohol-based hand sanitizers, including those dispersed as aerosols, shall be permitted to be used in anesthetizing locations.

16.13.3.2* Flammable liquid germicides or antiseptics used in anesthetizing locations, whenever the use of electrosurgery, cautery, or a laser is contemplated, shall be packaged as follows:

- (1) In a nonflammable package
- (2) To ensure controlled delivery to the patient in unit dose applicators, swabs, and other similar applicators

16.13.3.3 Whenever the application of flammable liquid germicides or antiseptics is employed in surgeries where the use of electrosurgery, cautery, or a laser is contemplated, time shall be allowed to elapse between application of the germicide or antiseptic and the following:

- (1) Application of drapes, to allow complete evaporation and dissipation of any flammable vehicle remaining
- (2) Use of electrosurgery, cautery, or a laser, to ensure the solution is completely dry and to allow thorough evaporation and dissipation of any flammable vehicle remaining

16.13.3.4 Any solution-soaked materials shall be removed from the operating room prior to draping or use of electrosurgery, cautery, or a laser.

16.13.3.5 Pooling of flammable liquid germicides or antiseptics shall be avoided; if pooling occurs, excess solution shall be wicked, and the germicide or antiseptic shall be allowed to completely dry.

16.13.3.6 A preoperative “time out” period shall be conducted prior to the initiation of any surgical procedure using flammable liquid germicides or antiseptics to verify the following:

- (1) Application site of flammable germicide or antiseptic is dry prior to draping and use of electrosurgery, cautery, or a laser.
- (2) Pooling of solution has not occurred or has been corrected.
- (3) Any solution-soaked materials have been removed from the operating room prior to draping and use of electrosurgery, cautery, or a laser.

16.13.3.7 Whenever flammable aerosols or antiseptics are employed, sufficient time shall be allowed to elapse between deposition and application of drapes to allow complete evaporation and dissipation of any flammable vehicle remaining.

16.13.3.8 Health care organizations shall establish policies and procedures outlining safety precautions related to the use of flammable liquid or aerosol germicides or antiseptics used in anesthetizing locations, as required in 16.13.3.9, whenever the use of electrosurgery, cautery, or a laser is contemplated.

16.13.3.9 Emergency Procedures.

16.13.3.9.1 Procedures for operating room/surgical suite emergencies shall be developed.

16.13.3.9.2 Procedures shall include alarm actuation, evacuation, and equipment shutdown procedures and provisions for control of emergencies that could occur in the operating room, including specific detailed plans for control operations by an emergency control group within the organization or a public fire department.

16.13.3.9.3 Emergency procedures shall be established for controlling chemical spills.

16.13.3.9.4 Emergency procedures shall be established for extinguishing drapery, clothing, or equipment fires.

16.13.3.10 Orientation and Training.

16.13.3.10.1 New operating room/surgical suite personnel, including physicians and surgeons, shall be taught general safety practices for the area and specific safety practices for the equipment and procedures they will use.

16.13.3.10.2 Continuing safety education and supervision shall be provided, incidents shall be reviewed monthly, and procedures shall be reviewed annually.

16.13.3.10.3 Fire exit drills shall be conducted annually or more frequently as determined by the applicable code.

Annex A Explanatory Material

Annex A is not a part of the requirements of this NFPA document but is included for informational purposes only. This annex contains explanatory material, numbered to correspond with the applicable text paragraphs.

A.1.1.10 Because no single model of an emergency management plan is feasible for every health care facility, this chapter is intended to provide criteria for the preparation and implementation of an individual plan. The principles involved are universally applicable; the implementation needs to be tailored to the specific facility.

A.1.1.12 Hyperbaric chambers are found in a variety of settings, including but not limited to hospitals, doctor's offices, private clinics, and business occupancies. Not all hyperbaric facilities are designed or equipped the same. Hyperbaric treatment and facilities are used for a variety of emergent and non-emergent conditions, and the acuity of patients ranges from stable to critical. These variations lead to differences in hyperbaric equipment, ancillary support equipment, and facility location. This chapter is intended to provide minimum safeguards for hyperbaric patients and personnel regardless of the location of the facility.

A.1.5 Although it is common practice for medical appliances to use metric units on their dials, gauges, and controls, many components of systems within the scope of this document are manufactured and used in the United States and employ nonmetric dimensions. Since these dimensions (such as nominal pipe sizes) are not established by the National Fire Protection Association, the Technical Correlating Committee on Health Care Facilities cannot independently change them. Accordingly, this document uses dimensions that are presently in common use by the building trades in the United States. Trade units vary from SI to U.S. customary units, depending on the equipment devices or material.

A.2.1 The documents referenced in this chapter or portions of such documents are referenced within this code and are considered part of the requirements of this document.

Documents referenced in this chapter or portions of such documents are only applicable to the extent called for within other chapters of this code.

Where the requirements of a referenced code or standard differ from the requirements of this code, the requirements of this code govern.

A.3.2.1 Approved. The National Fire Protection Association does not approve, inspect, or certify any installations, procedures, equipment, or materials; nor does it approve or evaluate testing laboratories. In determining the acceptability of installations, procedures, equipment, or materials, the authority having jurisdiction may base acceptance on compliance with NFPA or other appropriate standards. In the absence of such standards, said authority may require evidence of proper installation, procedure, or use. The authority having jurisdiction may also refer to the listings or labeling practices of an organization that is concerned with product evaluations and is thus in a position to determine compliance with appropriate standards for the current production of listed items.

A.3.2.2 Authority Having Jurisdiction (AHJ). The phrase “authority having jurisdiction,” or its acronym AHJ, is used in NFPA documents in a broad manner, since jurisdictions and approval agencies vary, as do their responsibilities. Where public safety is primary, the authority having jurisdiction may be a federal, state, local, or other regional department or individual such as a fire chief; fire marshal; chief of a fire prevention bureau, labor department, or health department; building official; electrical inspector; or others having statutory authority. For insurance purposes, an insurance inspection department, rating bureau, or other insurance company representative may be the authority having jurisdiction. In many circumstances, the property owner or his or her designated agent assumes the role of the authority having jurisdiction; at government installations, the commanding officer or departmental official may be the authority having jurisdiction.

A.3.2.3 Code. The decision to designate a standard as a “code” is based on such factors as the size and scope of the document, its intended use and form of adoption, and whether it contains substantial enforcement and administrative provisions.

A.3.2.6 Listed. The means for identifying listed equipment may vary for each organization concerned with product evaluation; some organizations do not recognize equipment as listed unless it is also labeled. The authority having jurisdiction should utilize the system employed by the listing organization to identify a listed product.

A.3.3.10 Applicator. In the given sense, an applicator is not an electrode, because it does not use a conductive connection to the patient in order to function. A radio frequency “horn” of a diathermy machine is a typical applicator.

A.3.3.12 Atmosphere. As employed in this code, the term *atmosphere* can refer to the environment within or outside of a hyperbaric facility. When used as a measure of pressure, atmosphere is expressed as a fraction of standard air pressure [101.4 kPa (14.7 psi)]. (See the first column of Table D.1 in NFPA 99B.)

▲ A.3.3.12.2 Atmosphere of Increased Burning Rate. The degree of fire hazard of an oxygen-enriched atmosphere varies with the concentration of oxygen and diluent gas and the total pressure. The definition contained in the current edition of

NFPA 53 and in editions of NFPA 56D prior to 1982 did not necessarily reflect the increased fire hazard of hyperbaric and hypobaric atmospheres.

The definition of *atmosphere of increased burning rate* used in Chapter 14 and in NFPA 99B defines an oxygen-enriched atmosphere with an increased fire hazard as it relates to the increased burning rate of material in the atmosphere. It is based on a 1.2 cm/sec (0.47 in./sec) burning rate (at 23.5 percent oxygen at 1 atmosphere absolute) as described in Figure A.3.3.12.2.

This rate can be determined as follows:


[A.3.3.12.2]

$$\frac{23.45}{\sqrt{TP_{atmos}}}$$

where:

TP_{atmos} = total pressure in atmospheres

A.3.3.19.3 Bulk Oxygen System. The oxygen containers can be stationary or movable, and the oxygen can be stored as gas or liquid. The bulk oxygen system terminates at the point where oxygen at service pressure first enters the supply line.

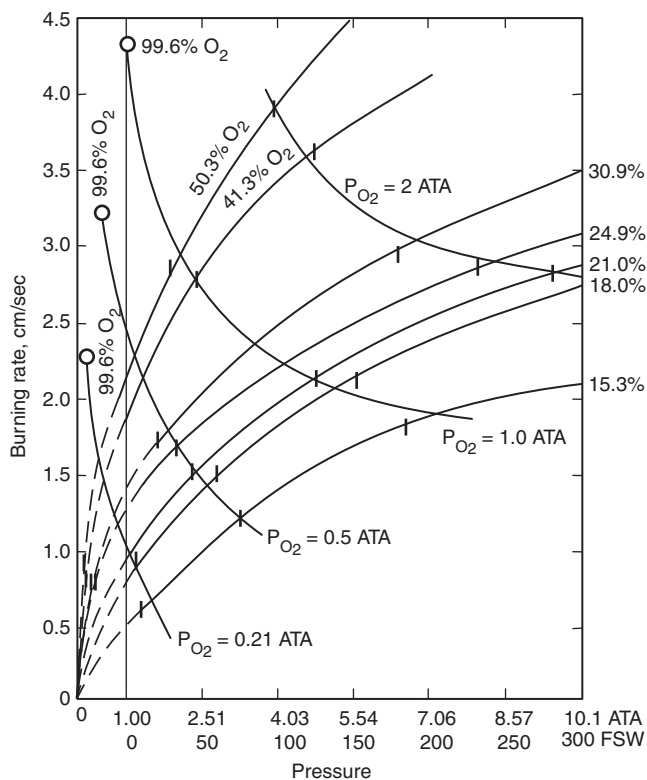

ATA = Atmospheres absolute
FSW = Feet of sea water

FIGURE A.3.3.12.2 Burning Rates of Filter Paper Strips at an Angle of 45 Degrees in N_2 - O_2 Mixtures. (Adapted from Figure 4 of “Technical Memorandum UCRI-721, Chamber Fire Safety.”)

A.3.3.22 Central Supply System. Central supply systems comprise the equipment necessary to produce, condition, control, and monitor the gases or vacuum. They include all equipment from the atmospheric intake on air compressors, exhaust on vacuum pumps, and cylinders or containers for pressurized gases through to the source valve (*see 5.1.4.2*). Examples of central supply systems include air compressor sources, vacuum pump sources, cylinder and container headers and manifolds, liquid bulk gas systems proportioning systems and combinations thereof.

A.3.3.24 Clinical IT Network. A clinical IT network comprises the servers, switches, routers, and voice and data communications equipment that are employed to transport patient-patient-critical clinical data, information, and staff communications over a shared interoperable IT network infrastructure.

A.3.3.26 Combustible Liquid. See NFPA 30 for further information on flash point test procedures.

A.3.3.27 Combustion. Combustion is not limited to a chemical reaction always involving oxygen. Certain metals, such as calcium and aluminum, will burn in nitrogen; nitrous oxide will support the combustion of phosphorus and carbon; and so on. However, this document deals with the more common process of fuels burning in air.

A.3.3.35 Defend in Place. The concept of the term *defend in place* includes, but is not limited to, elements related to moving building occupants from an area of immediate danger to a safe location in the building and containment of the emergency or dangerous condition.

A.3.3.41 Direct Electrical Pathway to the Heart. Electrodes, such as those used for pacing the heart, and catheters filled with conductive fluids, are examples of direct electrical pathways to the heart.

A.3.3.42 Disaster. A disaster can be either an event that causes, or threatens to cause, physical damage and injury to facility personnel or patients within the facility, or an event that requires expansion of facilities to receive and care for a large number of casualties resulting from a disaster that produces no damage or injury to the health care facility and staff, or a combination thereof.

Such a situation creates the need for emergency expansion of facilities, as well as operation of this expanded facility in an unfamiliar environment. Under this definition, the recognition of a disaster situation will vary greatly from one facility to another and from time to time in any given facility. Such recognition and concomitant activation of the Health Care Emergency Preparedness Plan is dependent on mutual aid agreements, facility type, geographic location, bed capacity, bed occupancy at a given time, staff size, staff experience with disaster situations, and other factors. For example, the routine workload of the emergency department of a large metropolitan general hospital would constitute a disaster, requiring activation of the Health Care Emergency Preparedness Plan, were this same workload to be suddenly applied to a small community hospital.

Disasters have a variety of causes, all of which should be considered for effective emergency preparedness planning. Among the most common are natural disasters such as earthquakes, hurricanes, tornadoes, and floods; mass food poisoning; industrial accidents involving explosion or environmental release of toxic chemicals; transportation accidents involving

crashes of trains, planes, or automobiles with resulting mass casualties; civil disturbances; building fires; extensive or prolonged utility failure; collapse of buildings or other occupied structures; and toxic smogs in urban areas. Arson attempts and bomb threats have been made on health care facilities and should, therefore, be considered. Potential admission to the facility of high profile persons should be addressed. Although a high profile admission does not involve mass casualties or the potential for mass casualties, the degree of disruption of normal routine will be sufficient to qualify it as a disasterlike situation.

Disaster plans should reflect a facility's location from potential internal and external disasters. As an example, areas subject to frequent wildland fires should invoke countermeasures for smoke management and air quality maintenance.

A.3.3.44 Double-Insulated Appliances. Double-insulated appliances can be identified by a symbol consisting of a square within a square or wording such as "double-insulated" marked on the appliance. Appliance packaging and documents can also provide identification. Although double-insulated appliances do not require a third wire or pin, some double-insulated appliances have a third conductor or pin solely for purposes of electromagnetic compatibility (EMC).

A.3.3.51 Essential Electrical System. The essential electrical system can be comprised of three branches: life safety branch, critical branch, and equipment branch.

A.3.3.54 Facility Fire Plan. This plan can be either a stand-alone plan or be a part of the emergency operations plan.

A.3.3.57 Flammable. Flammables can be solids, liquids, or gases exhibiting these qualities. Many substances that are nonflammable in air become flammable if the oxygen content of the gaseous medium is increased above 0.235 ATA.

A.3.3.60 Flash Point. Note that the flash point temperature is heavily dependent on the test used to determine it.

A.3.3.62 Flowmeter. A pressure compensated flowmeter should be used to indicate an accurate flow of gas whether the gas is discharged into ambient pressure or into a system at nonambient pressure.

A.3.3.63 Frequency. Formerly, the unit of frequency was cycles per second, a terminology no longer preferred. The waveform can consist of components having many different frequencies, in which case it is called a complex or nonsinusoidal waveform.

A.3.3.64 Fume Hood. Laboratory fume hoods prevent toxic, flammable, or noxious vapors from entering the laboratory; present a physical barrier from chemical reactions; and serve to contain accidental spills.

This definition does not include canopy hoods or recirculation laminar-flow biological-safety cabinets that are not designed for use with flammable materials.

A.3.3.66 General Anesthesia and Levels of Sedation/Analgesia. It should be noted that these are not static conditions. Minimal sedation can easily become moderate sedation, and moderate sedation can progress to deep sedation or general anesthesia.

A.3.3.67 Ground-Fault Circuit Interrupter (GFCI). Class A ground-fault circuit interrupters trip when the current to ground is 6 mA or higher and do not trip when the current to

ground is less than 4 mA. For further information, see UL 943, *Standard for Ground-Fault Circuit Interrupters*. [70, 2017]

▲ **A.3.3.69 Grounding System.** It coordinates with, but can be locally more extensive than, the grounding system described in Article 250 of *NFPA 70*.

▲ **A.3.3.71 Health Care Facilities.** Health care facilities include, but are not limited to, hospitals, nursing homes, limited care facilities, clinics, medical and dental offices, and ambulatory health care centers, whether permanent or movable. This definition applies to normal, regular operations and does not pertain to facilities during declared local or national disasters. A health care facility is not a type of occupancy classification as defined by *NFPA 101*. Therefore, the term *health care facility* should not be confused with the term *health care occupancy*. All health care occupancies (and ambulatory health care occupancies) are considered health care facilities; however, not all health care facilities are considered health care occupancies, as health care facilities also include ambulatory health care occupancies and business occupancies.

■ **A.3.3.72 Health Care Facility's Governing Body.** This definition excludes political governmental agencies, such as authorities having jurisdiction, that exercise local, regional, or national legal jurisdiction over the design, construction, inspection, and operation of a particular health care facility.

■ **A.3.3.77 Hyperbaric Operations.** Such procedures include but are not limited to (a) therapy inside a hyperbaric chamber, (b) changing clothes, (c) vital signs assessments, (d) noninvasive transcutaneous oxygen monitoring, (e) clinical and medical assessments, and (f) minor dressing changes. Debridement or other surgical procedures, application of casting material, application of skin substitutes, and application of bioengineered grafts are not recommended in the chamber room. (HYP)

A.3.3.82 Impedance. The circuit element can consist of any combination of resistance, capacitance, or inductance.

A.3.3.84 Instrument Air. Instrument air is intended for the powering of medical devices unrelated to human respiration (e.g., to remove excess moisture from instruments before further processing, or to operate medical-surgical tools, air-driven booms, pendants, or similar applications).

A.3.3.86 Intrinsically Safe. "Abnormal conditions" can include accidental damage to any part of the equipment or wiring, damage to insulation or other failure of electrical components, application of overvoltage, adjustment and maintenance operations, and other similar conditions.

▲ **A.3.3.89 Isolated Power System.** See *NFPA 70*.

A.3.3.91 Laboratory. These laboratories are not intended to include isolated frozen section laboratories; areas in which oxygen is administered; blood donor rooms in which flammable, combustible, or otherwise hazardous materials normally used in laboratory procedures are not present; and clinical service areas not using hazardous materials.

▲ **A.3.3.94 Limited-Combustible (Material).** Material subject to increase in combustibility or flame spread index beyond the limits herein established through the effects of age, moisture, or other atmospheric condition is considered combustible.

See *NFPA 259* and *NFPA 220*.

A.3.3.96 Liquid. When not otherwise identified, the term *liquid* includes both flammable and combustible liquids. (See also *B.11.1.1*.)

A.3.3.97 Local Signal. Examples would include a gauge, a flag, a light, or some other possible manifestation that allows a maintenance person to stand at the equipment and know what conditions are present (e.g., which header of cylinders is in service). The elements to be displayed are typically those that will also be monitored at the master alarm, but the local signal is visible at the equipment rather than remotely.

A.3.3.100 Manufactured Assembly. Examples are headwalls, columns, ceiling columns, ceiling-hung pendants, movable track systems, and so on.

A.3.3.102 Medical Air. Air supplied from on-site compressors and associated air treatment systems (as opposed to medical air USP supplied in cylinders) that complies with the specified limits is considered medical air. Hydrocarbon carryover from the compressor into the pipeline distribution system could be detrimental to the safety of the end user and to the integrity of the piping system. Mixing of air and oxygen is a common clinical practice, and the hazards of fire are increased if the air is thus contaminated. Compliance with these limits is thus considered important to fire and patient safety. The quality of local ambient air should be determined prior to its selection for compressors and air treatment equipment.

A.3.3.106 Medical Office. Examples include a dental office/clinic, a medical office/clinic, an immediate care facility, and a podiatry office.

A.3.3.121 Nonflammable Medical Gas System. See Chapter 5, Gas and Vacuum Systems.

A.3.3.125 Oxidizing Gas. Oxygen and nitrous oxide are examples of oxidizing gases. There are many others, including halogens.

A.3.3.126 Oxygen. Oxygen's outstanding property is its ability to sustain life and to support combustion. Although oxygen is nonflammable, materials that burn in air will burn much more vigorously and create higher temperatures in oxygen or in oxygen-enriched atmospheres.

A.3.3.126.2 Liquid Oxygen. If spilled, the liquid can cause frostbite on contact with skin.

A.3.3.128 Oxygen Delivery Equipment. If an enclosure such as a mask, hood, incubator, canopy, or tent is used to contain the oxygen-enriched atmosphere, that enclosure is considered to be oxygen-delivery equipment.

A.3.3.130 Oxygen Hood. For additional information, see A.3.3.12.2 and Figure A.3.3.12.2.

A.3.3.132 Oxygen Toxicity (Hyperbaric). Under the pressures and times of exposure normally encountered in hyperbaric treatments, toxicity is a direct function of concentration and time of exposure.

A.3.3.136 Patient Care Space. Business offices, corridors, lounges, day rooms, dining rooms, or similar areas typically are not classified as patient care spaces.

A.3.3.136.1 Category 1 Space. These spaces, formerly known as critical care rooms, are typically where patients are intended to be subjected to invasive procedures and connected to line-operated, patient care-related appliances. Examples include, but are not limited to, special care patient rooms used for critical care, intensive care, and special care treatment rooms such as angiography laboratories, cardiac catheterization laboratories, delivery rooms, operating rooms, post-anesthesia care units, trauma rooms, and other similar rooms.

A.3.3.136.2 Category 2 Space. These spaces were formerly known as general care rooms. Examples include, but are not limited to, inpatient bedrooms, dialysis rooms, in vitro fertilization rooms, procedural rooms, and similar rooms.

A.3.3.136.3 Category 3 Space. These spaces, formerly known as basic care rooms, are typically where basic medical or dental care, treatment, or examinations are performed. Examples include, but are not limited to, examination or treatment rooms in clinics, medical and dental offices, nursing homes, and limited care facilities.

A.3.3.136.4 Category 4 Space. These spaces were formerly known as support rooms. Examples of support spaces include, but are not limited to, anesthesia work rooms, sterile supply, laboratories, morgues, waiting rooms, utility rooms, and lounges. (FUN)

A.3.3.138 Producer. Examples of these producers include vacuum pumps, fans, blowers, and venturis.

A.3.3.141 Patient Lead. A patient lead can be a surface contact (e.g., an ECG electrode), an invasive connection (e.g., implanted wire or catheter), or an incidental long-term connection (e.g., conductive tubing).

It is not intended to include adventitious or casual contacts, such as a push button, bed surface, lamp, hand-held appliance, and so forth.

(Also see 3.3.88, *Isolated Patient Lead*.)

A.3.3.146.5 Operating Pressure. The operating pressure for patient medical gases is typically 345 kPa to 380 kPa (50 psig to 55 psig). The operating pressure for medical support gases is typically 1100 kPa to 1275 kPa (160 psig to 185 psig).

A.3.3.146.6 Partial Pressure. The pressure contributed by other gases in the mixture is ignored. For example, oxygen is one of the constituents of air; the partial pressure of oxygen in standard air, at a standard air pressure of 14.7 psia, is 3.06 psia or 0.208 ATA or 158 mm Hg.

A.3.3.147 Pressure-Reducing Regulator. In hospitals, the term *regulator* is frequently used to describe a regulator that incorporates a flow-measuring device.

A.3.3.150 psig. Under standard conditions, 0 psig is equivalent to 14.7 psia.

A.3.3.156 Remote. A gas storage supply system can be remote from the single treatment facility, but all use points must be contiguous within the facility.

A.3.3.165 Single Treatment Facility. The definition of single treatment facility was established to take into consideration principally single-level installations or those of a practice that could be two-level, but are reached by open stairs within the confines of the single treatment facility. (See Figure A.3.3.165.)

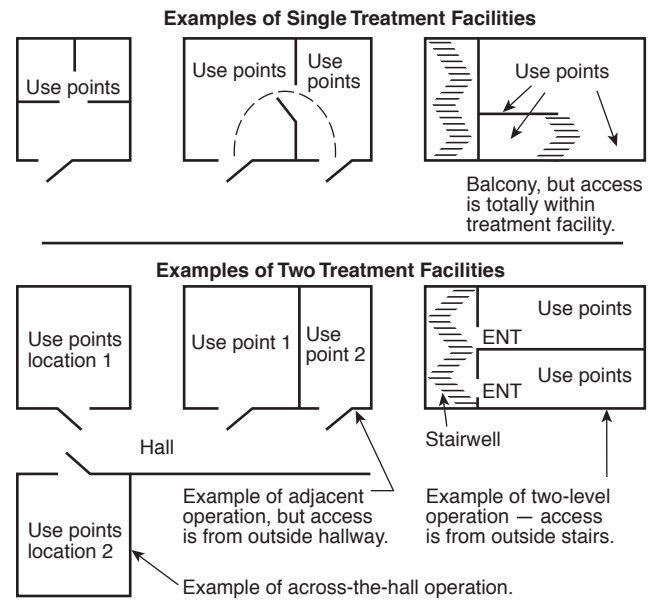


FIGURE A.3.3.165 Examples of Treatment Facilities.

A.3.3.166 Site of Intentional Expulsion. This definition addresses the site of intended expulsion. Actual expulsion can occur at other sites remote from the intended site due to disconnections, leaks, or rupture of gas conduits and connections. Vigilance on the part of the patient care team is essential to ensure system integrity.

For example, for a patient receiving oxygen via a nasal cannula or face mask, the site of expulsion normally surrounds the mask or cannula; for a patient receiving oxygen while enclosed in a canopy or incubator, the site of intentional expulsion normally surrounds the openings to the canopy or incubator; for a patient receiving oxygen while on a ventilator, the site of intentional expulsion normally surrounds the venting port on the ventilator.

A.3.3.172 Surface-Mounted Medical Gas Rail Systems. It is the intent that surface-mounted medical gas rail systems would be permitted in individual patient rooms but would not be permitted to go directly through room walls to adjacent patient rooms. However, it is the intent to permit surface-mounted medical gas rails to be used in a given **Category 1 space** where there can be a partition separating certain patient care functions, essentially leaving the system within the given **Category 1 space**. As an example, two adjacent patient rooms outside of a **Category 1 space** care unit would not be permitted to have a surface-mounted medical gas rail interconnect between the two rooms through the wall. However, in a nursery where there might be one or two segregated areas for isolation, a medical gas rail system supplying more than one isolation room, but within the nursery area, would be permitted to be interconnected with the nursery system.

A.3.3.177.1 Endotracheal Tube. An endotracheal tube can be equipped with an inflatable cuff.

A.3.3.183 Wet Procedure Locations. Routine housekeeping procedures and incidental spillage of liquids do not define a wet procedure location.

A.4.1 Four levels of systems categories are defined in this code, based on the risks to patients and caregivers in the facilities. The categories are as follows:

- (1) Category 1: Systems are expected to work or be available at all times to support patient needs.
- (2) Category 2: Systems are expected to provide a high level of reliability; however, limited short durations of equipment downtime can be tolerated without significant impact on patient care. Category 2 systems support patient needs but are not critical for life support.
- (3) Category 3: Normal building system reliabilities are expected. Such systems support patient needs, but failure of such equipment would not immediately affect patient care. Such equipment is not critical for life support.
- (4) Category 4: Such systems have no impact on patient care and would not be noticeable to patients in the event of failure.

The category definitions apply to equipment operations and are not intended to consider intervention by caregivers or others. Potential examples of areas/systems and their categories of risk follow. A risk assessment should be conducted to evaluate the risk to the patients, staff, and visitors.

- (1) Ambulatory surgical center, two patients with full OR services, Category 1
- (2) Reconstructive surgeon's office with general anesthesia, Category 1
- (3) Procedural sedation site for outpatient services, Category 2
- (4) Cooling Towers in Houston, TX, Category 2
- (5) Cooling Towers in Seattle, WA, Category 3
- (6) Dental office, no general anesthesia, Category 3
- (7) Typical doctor's office/exam room, Category 4
- (8) Lawn sprinkler system, Category 4

A.4.1.1 Major injury can include the following:

- (1) Any amputation
- (2) Loss of the sight of an eye (whether temporary or permanent)
- (3) Chemical or hot metal burn to the eye or any penetrating injury to the eye
- (4) Any injury that results in electric shock and electric burns leading to unconsciousness and that requires resuscitation or admittance to a hospital for 24 hours or more
- (5) Any other injury leading to hypothermia, heat induced illness, or unconsciousness requiring resuscitation or admittance to a hospital for 24 hours or more
- (6) Loss of consciousness caused by asphyxia or lack of oxygen or exposure to a biological agent or harmful substance
- (7) Absorption of any substance by inhalation, skin, or ingestion causing loss of consciousness or acute illness requiring medical treatment
- (8) Acute illness requiring medical treatment where there is reason to believe the exposure was to biological agents, its toxins, or infected materials

A.4.1.2 A minor injury means *not serious* or *involving risk of life*.

A.4.2 Risk assessment should follow procedures such as those outlined in ISO/IEC 31010, *Risk Management — Risk Assessment Techniques*; NFPA 551; SEMI S10-0307E, *Safety Guideline for Risk Assessment and Risk Evaluation Process*; or other formal process. The results of the assessment procedure should be **docu-**

mented and records retained. Figure A.4.2 is a sample risk assessment model that can be used to evaluate the categories.

N A.4.2.2 Classification of risk categories requires a collaborative effort between the health care facility's governing body and the authority having jurisdiction.

A.4.4.1 The provisions of 4.4.1 do not require inherently noncombustible materials to be tested in order to be classified as noncombustible materials.

Δ A.4.4.2 Materials subject to increase in combustibility or flame spread index beyond the limits herein established through the effects of age, moisture, or other atmospheric condition are considered combustible. (See NFPA 259 and NFPA 220.) [101:A.4.6.14]

A.5.1.1 Section 5.1 covers requirements for Category 1 piped gas and vacuum systems; Section 5.2 covers Category 2 piped gas and vacuum systems; and Section 5.3 covers Category 3 piped gas and vacuum systems. Laboratory systems are no longer covered by Chapter 5 (2002 edition).

A.5.1.1.3 These requirements do not restrict the distribution of other inert gases through piping systems.

A.5.1.3 See Figure A.5.1.3. Category 1 source drawings in this annex are representational, demonstrating a possible arrangement of components required by the text. The diagrams are not intended to imply method, materials of construction, or more than one of many possible and equally compliant arrangements. Alternative arrangements are permitted if they meet the intent of the text. Listed paragraphs might not be the only paragraphs that apply.

A.5.1.3.1.1 Regulations of the U.S. Department of Transportation (formerly U.S. Interstate Commerce Commission) outline specifications for transportation of explosives and dangerous articles (49 CFR 171–190). In Canada, the regulations of the Canadian Transport Commission, Union Station, Ottawa, Ontario, apply.

A.5.1.3.1.2 CGA documents contain both mandatory and nonmandatory language. Enforceable language uses the word "shall"; nonmandatory language uses the word "should." This section indicates that NFPA 99 is making reference only to the mandatory requirements in the CGA document.

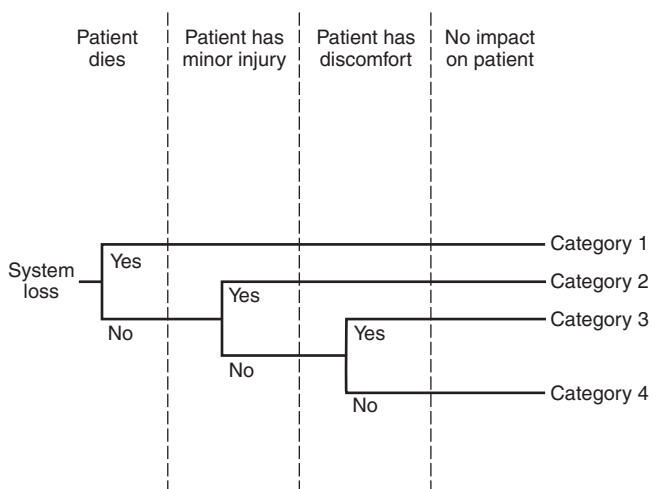


FIGURE A.4.2 Sample Risk Assessment.

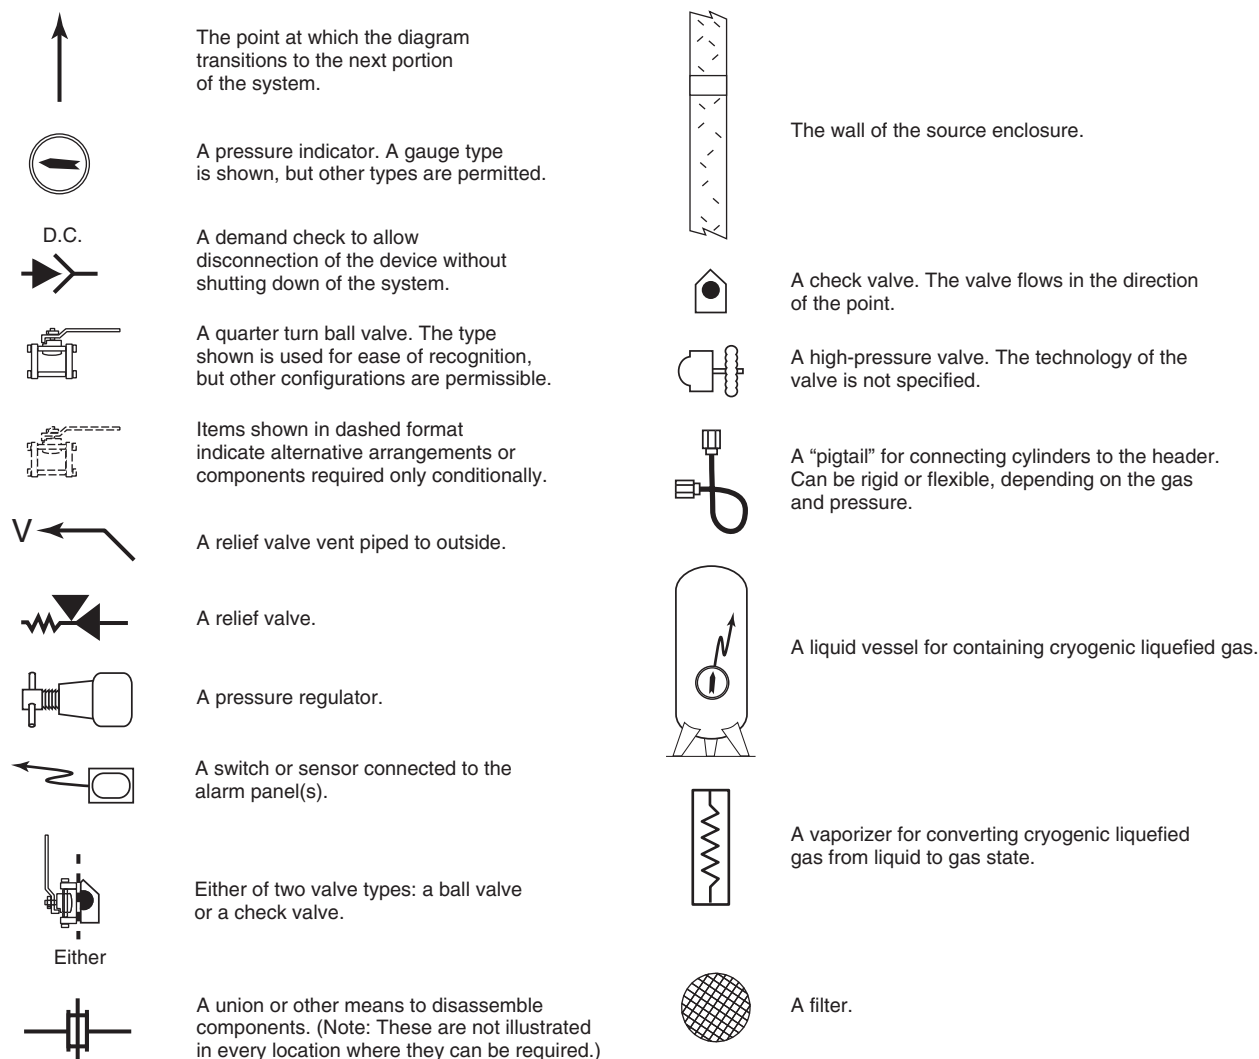


FIGURE A.5.1.3 Legend for Typical Category 1 Source Drawings.

A.5.1.3.3 The bulk supply system should be installed on a site that has been prepared to meet the requirements of NFPA 55 or CGA G-8.1, *Standard for Nitrous Oxide Systems at Customer Sites*. A storage unit(s), reserve, pressure regulation, and a signal actuating switch(es) are components of the supply system. Shutoff valves, piping from the site, and electric wiring from a signal switch(es) to the master signal panels are components of the piping system.

The bulk supply system is normally installed on the site by the owner of this equipment. The owner or the organization responsible for the operation and maintenance of the bulk supply system is responsible for ensuring that all components of the supply system — main supply, reserve supply, supply system signal-actuating switch(es), and delivery pressure regulation equipment — function properly before the system is put in service.

In the locating of central supply systems, consideration should be given to ensuring the resilience of the facility under reasonably anticipated adverse conditions. Examples have included the following:

- (1) Flooding of systems located in basements from extraordinary weather, water main breaks, and sprinkler head failures
- (2) Seismic events that rendered the supply system inoperative
- (3) Degradation of the quality of air at the intake due to a nearby fire and chemical release
- (4) Electrical problems, including failure of motor control centers and failure of switchgear to properly connect

Many of these risks can be ameliorated by care when siting the central supply systems and their utility connections.

A.5.1.3.3.1.1(4) Examples include the concentrator unit, the oxygen reservoir, and regulating devices.

A.5.1.3.3.1.2(5) Examples include the concentrator unit, the oxygen reservoir, and regulating devices.

A.5.1.3.3.1.3(6) This includes individual components on the air side of concentrators.

A.5.1.3.3.1.10 Examples of inert gases include but are not limited to helium and nitrogen.

A.5.1.3.3.2 Electric wiring and equipment in storage rooms for oxygen and nitrous oxide are not required to be explosion-proof.

▲ **A.5.1.3.3.2(7)** The test for walls and floors is ASTM E119, *Standard Test Methods for Fire Tests of Building Construction and Materials*, or UL 263, *Fire Resistance Ratings*. The test for doors is NFPA 252.


A.5.1.3.3.2(8) Electrical devices should be physically protected, such as by use of a protective barrier around the electrical devices, or by location of the electrical device such that it will avoid causing physical damage to the cylinders or containers. For example, the device could be located at or above 1.5 m (5 ft) above finished floor or other location that will not allow the possibility of the cylinders or containers to come into contact with the electrical device as required by this section.

■ **A.5.1.3.3.2(9)** Examples of indirect heating include steam, hot water, and electric heating.

A.5.1.3.3.2(12) Chapter 6 specifies medical gas equipment that should be powered by the essential electrical systems. Electrical equipment that is not essential for the operation of the supply system can be powered by nonessential power (e.g., telemetry, site lighting).

■ **A.5.1.3.3.2(15)** Considerations for this access include proximity to loading docks, access to elevators, and passage of cylinders through public areas.

A.5.1.3.5 See Figure A.5.1.3.5. A four-valve bypass arrangement is illustrated. Three-way valves are permitted in lieu of the four valves shown.

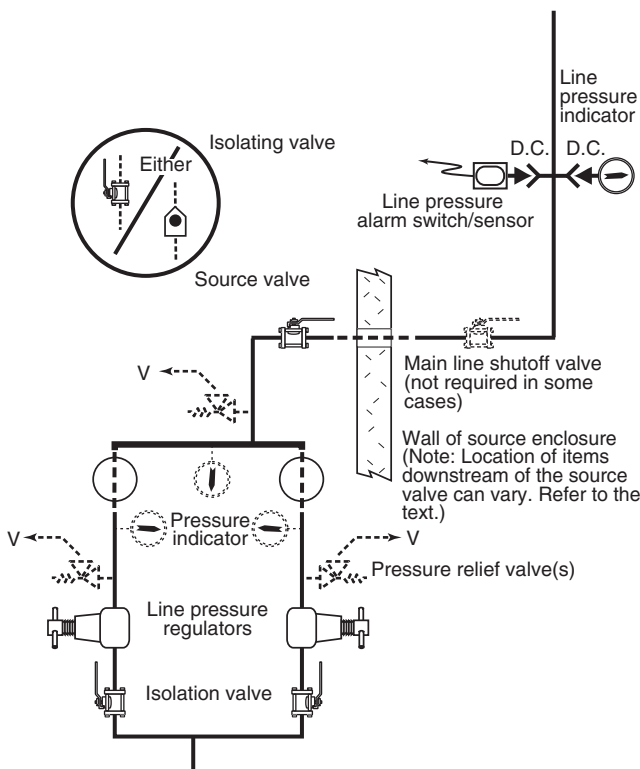

▲ **FIGURE A.5.1.3.5** Typical Arrangement for Line Controls at Pressure Sources.

A.5.1.3.5.4 Components include, but are not limited to, containers, valves, valve seats, lubricants, fittings, gaskets, and interconnecting equipment, including hose. Easily ignitable materials should be avoided.

Compatibility involves both combustibility and ease of ignition. Materials that burn in air will burn violently in pure oxygen at normal pressure and explosively in pressurized oxygen. Also, many materials that do not burn in air will do so in pure oxygen, particularly under pressure. Metals for containers and piping have to be carefully selected, depending on service conditions. The various steels are acceptable for many applications, but some service conditions can call for other materials (usually copper or its alloys) because of their greater resistance to ignition and lower rate of combustion.

Similarly, materials that can be ignited in air have lower ignition energies in oxygen. Many such materials can be ignited by friction at a valve seat or stem packing or by adiabatic compression produced when oxygen at high pressure is rapidly introduced into a system initially at low pressure.

■ **A.5.1.3.5.5.1** The intent of 5.1.3.5.5.1 is to ensure that the pressure at the station outlet is steady and maintained safely within the limits of Table 5.1.11. Traditionally, line pressure regulators were required here as the only allowed control-of-pressure devices. Other methods of control are becoming possible (e.g., variable speed controlled on pressure). The present wording is intended to achieve the performance requirement (see Table 5.1.11) and to allow not only traditional pressure regulators but other control methods as well.

A.5.1.3.5.10 See Figure A.5.1.3.5.10(a) and Figure A.5.1.3.5.10(b). Connection to the gas outlet connection is illustrated. If the liquid outlet connection were used, an external vaporizer could be required.

A.5.1.3.5.10(1) The appropriate number of cylinders should be determined after consideration of delivery schedules, proximity of the facility to alternate supplies, and the emergency plan.

■ **A.5.1.3.5.11** See Figure A.5.1.3.5.11.

A.5.1.3.5.12 See Figure A.5.1.3.5.12.

A.5.1.3.5.13 See Figure A.5.1.3.5.13.

● **A.5.1.3.5.14** For bulk oxygen systems, see NFPA 55. See Figure A.5.1.3.5.14(a) and Figure A.5.1.3.5.14(b). Two possible choices of reserves are illustrated. Both are not required.

A.5.1.3.5.14.4 The local signal arose from the simple need of a maintenance person to know what is going on with any given piece of source equipment. Note that it is not an alarm in the sense of a local or master alarm. It is simply an indicator, which might be a gauge, a flag, a light, or some other possible manifestation that allows a maintenance person to stand at the equipment and know what conditions are present (e.g., which header of cylinders is in service). The elements to be displayed are typically those that will also be monitored at the master alarm, but the local signal is visible at the equipment rather than remotely.

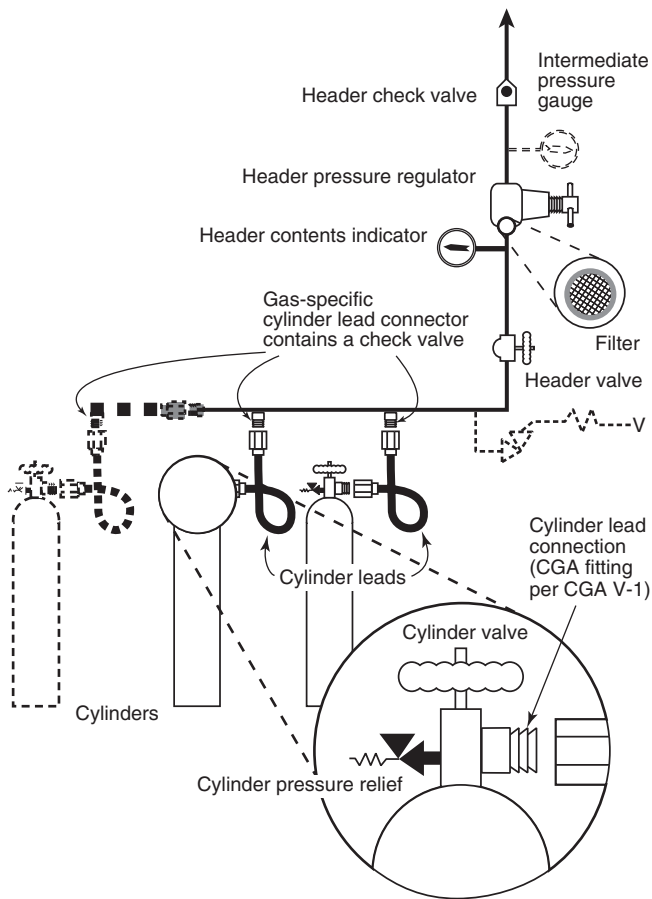


FIGURE A.5.1.3.5.10(a) Header for Gas in Cylinders.

A.5.1.3.5.15 See Figure A.5.1.3.5.15.

If the relief valve on the emergency oxygen supply connection is moved downstream from the check valve in the emergency oxygen line, it should be connected to the system with a demand check fitting.

The emergency oxygen supply connection (EOSC) can be used as a part of the emergency operation plan (EOP) for an unplanned loss of oxygen supply. However, a risk assessment should be conducted by the facility to determine the contingency plan for vital life support and **Category 1 space**. There might need to be interim measures for dealing with the loss of oxygen (e.g., high-pressure oxygen cylinders available for back feeding **Category 1 space**).

A.5.1.3.6 Air supplied from on-site compressor and associated air treatment systems (as opposed to medical air USP supplied in cylinders) that complies with the specified limits is considered medical air. Hydrocarbon carryover from the compressor into the pipeline distribution system could be detrimental to the safety of the end user and to the integrity of the piping system. Mixing of air and oxygen is a common clinical practice, and the hazards of fire are increased if the air is contaminated. Compliance with these limits is thus considered important to fire and patient safety. The quality of local ambient air should be determined prior to its selection for compressors and air treatment equipment. See Figure A.5.1.3.6.

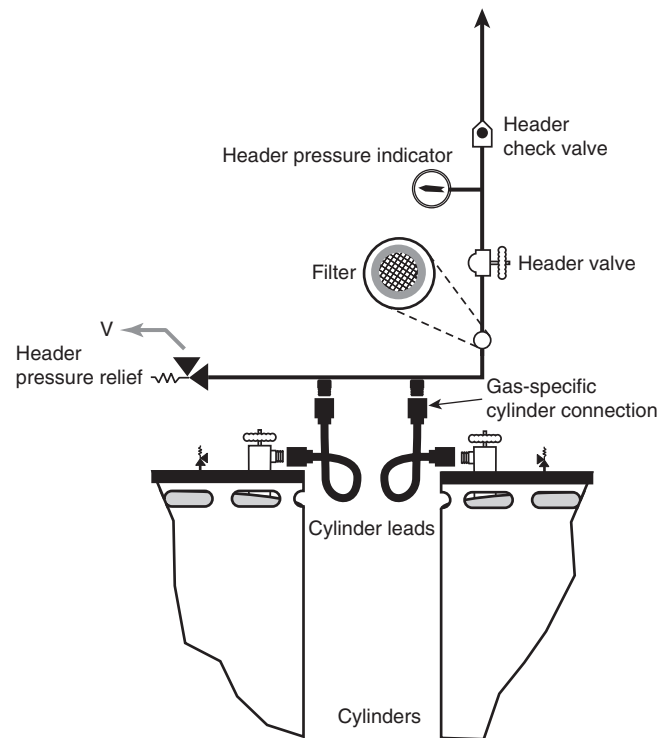


FIGURE A.5.1.3.5.10(b) Header for Cryogenic Gas in Containers.


A.5.1.3.6.1 Supply systems for medical air using compressors draw air of the best available quality from a source of clean local ambient air; add no contaminants in the form of particulate matter, odor, or other gases; and dry, filter, regulate, and supply that air only via the medical air piping distribution system for use exclusively in the application of human respiration.

The utilization of an air treatment system is the joint responsibility of the system designer, the hospital clinical and engineering staffs, and the authority having jurisdiction. Different types of compressors have characteristics that affect the selection of the type of air treatment system. Some air treatment systems impose an additional load upon the compressors that has to be accounted for in the sizing of the system (usable capacity). The compressor duty cycle has to be chosen in accordance with the **manufacturer's** recommendation.

The type of air compressor and air condition at the intake will govern the type of filter provided for the air compressor supply system. All filters should be examined quarterly for the presence of liquids or excessive particulates and replaced according to the **manufacturer's** instructions.

One procedure for reaching a decision on the quality of the medical air is the following:

- (1) Test at the intake and at the sample connection valve.
- (2) If the two purities agree within the limits of accuracy of the test, the compressor system can be accepted.
- (3) If the air is found to exceed the values for medical compressed air as defined in 5.1.3.6.1, the facility can elect to install purification apparatus for the contaminants in question.

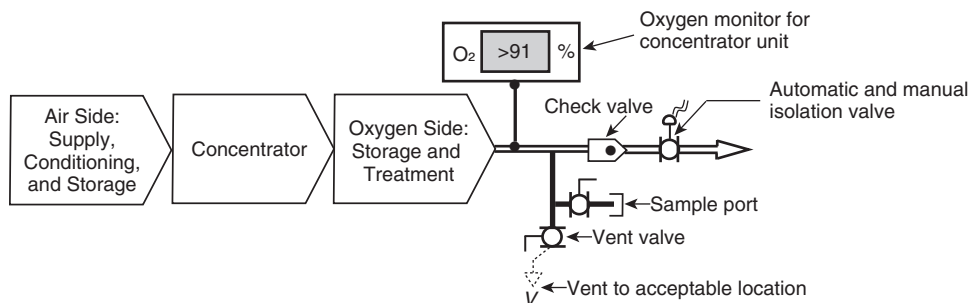

Note: Alternative arrangement might be acceptable

FIGURE A.5.1.3.5.11 Elements of an Oxygen Concentrator Supply Source.

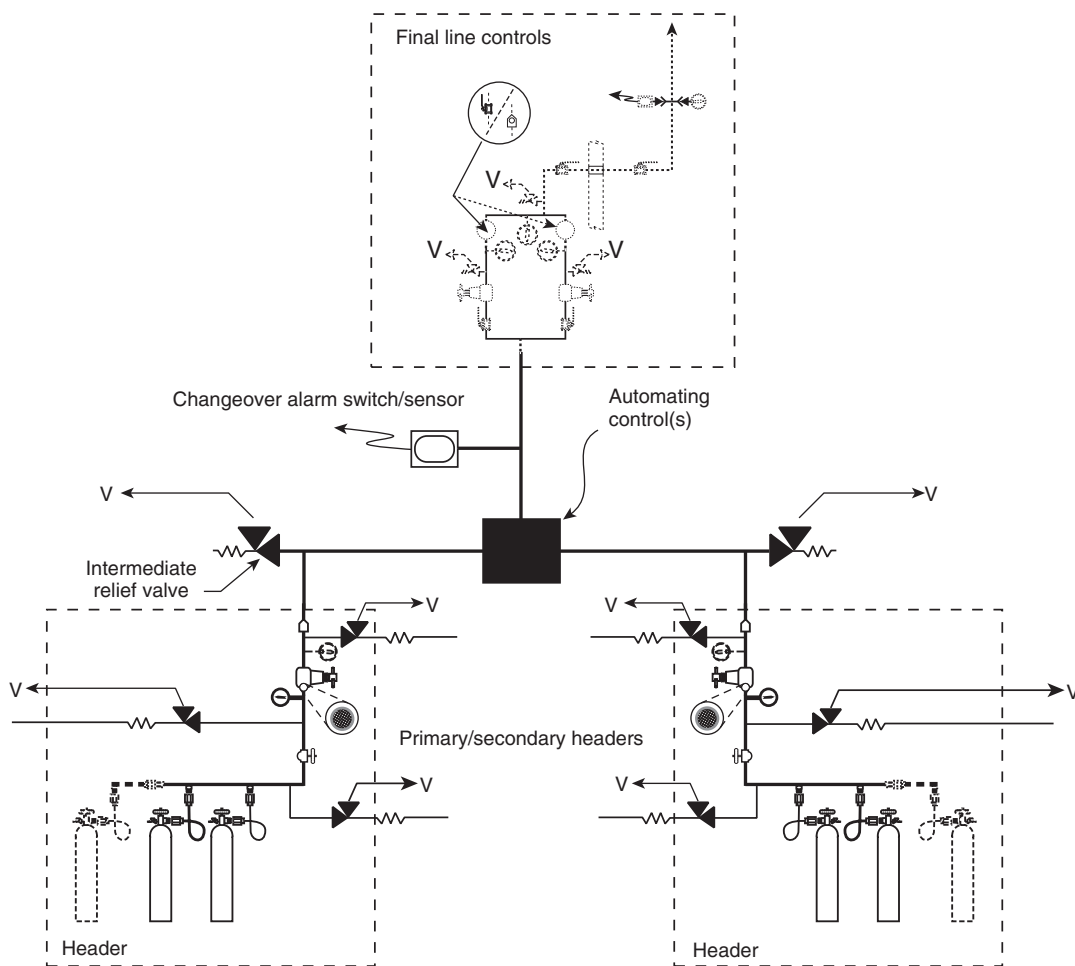


FIGURE A.5.1.3.5.12 Manifold for Gas Cylinders.



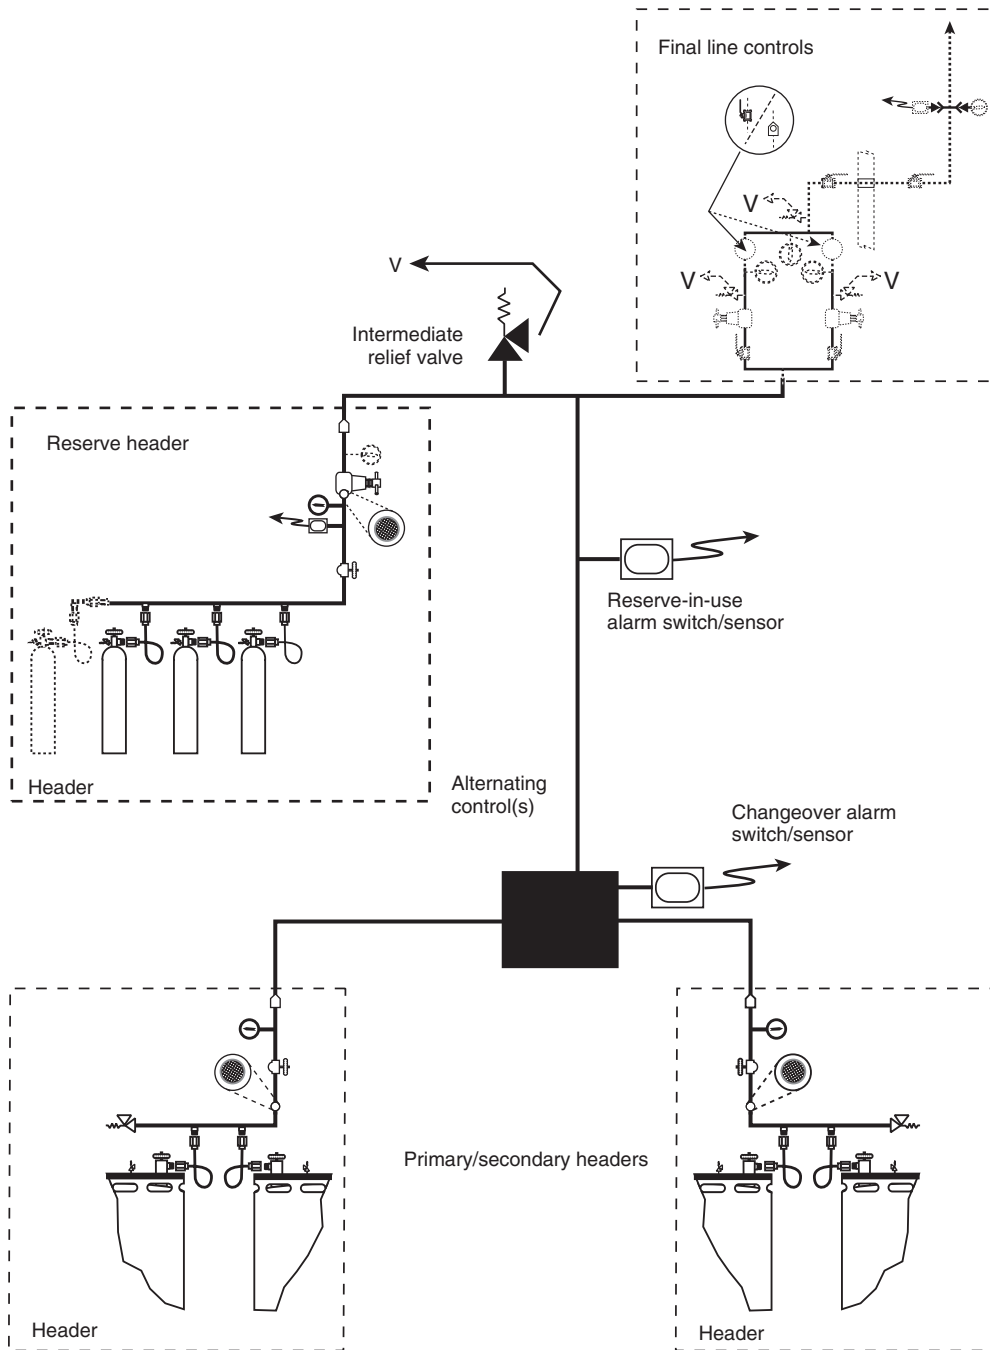


FIGURE A.5.1.3.5.13 Typical Source of Supply for Cryogenic Gas in Containers.

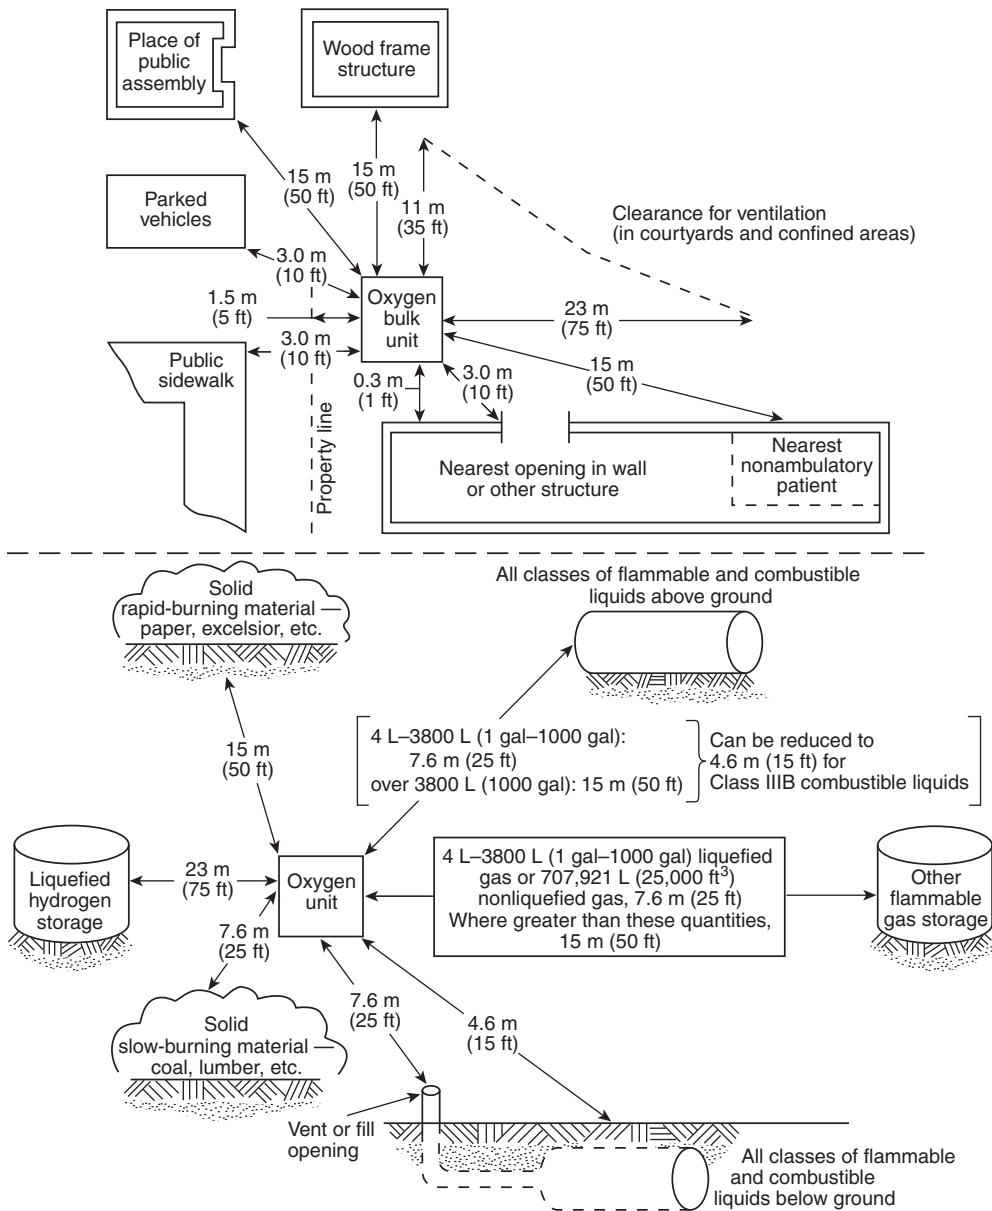

▲ FIGURE A.5.1.3.5.14(a) Distance Between Bulk Oxygen Systems and Exposures.

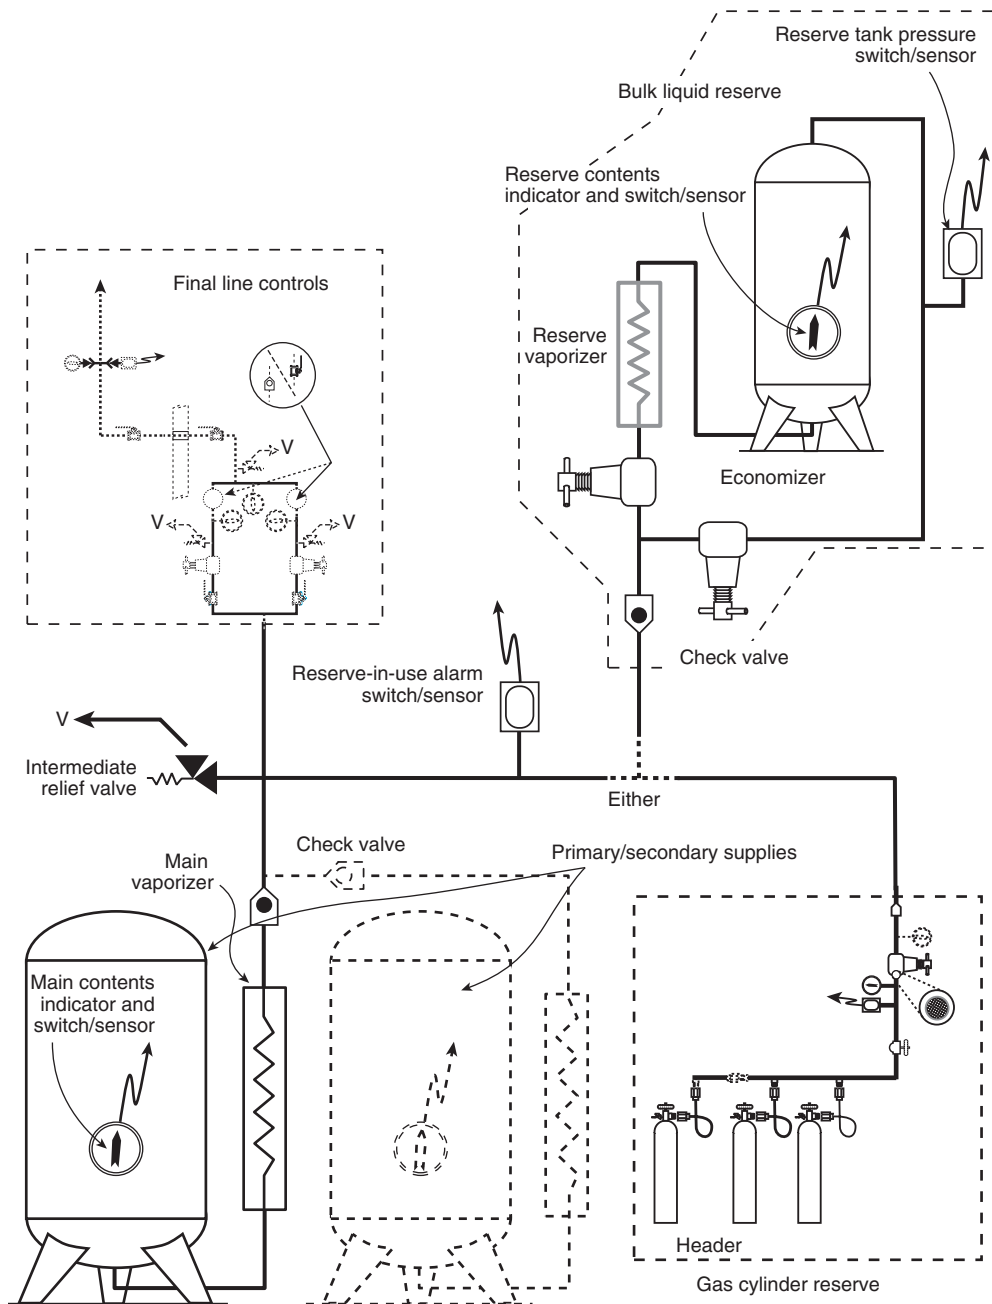

▲ FIGURE A.5.1.3.5.14(b) Typical Source of Supply for Cryogenic Gas in Bulk.

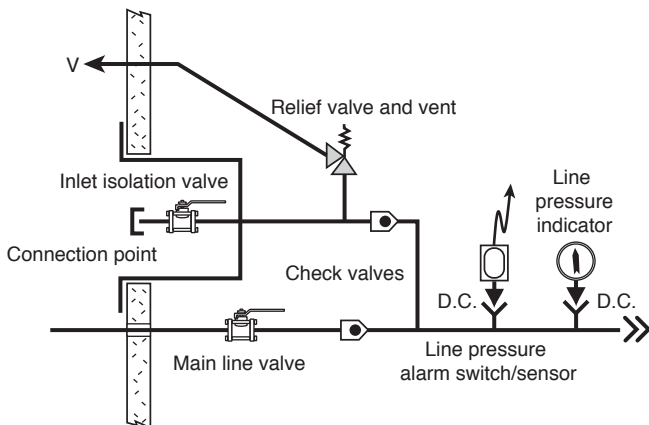


FIGURE A.5.1.3.5.15 Emergency Oxygen Supply Connection.

A.5.1.3.6.2 It is the intent that the medical air piping distribution system support only the intended need for breathable air for such items as intermittent positive pressure breathing (IPPB) and long-term respiratory assistance needs, anesthesia machines, and so forth. The system is not intended to be used to provide engineering, maintenance, and equipment needs for general hospital support use. It is the intent that the life safety nature of the medical air be protected by a system dedicated solely for its specific use.

As a compressed air supply source, a medical air compressor should not be used to supply air for other purposes, because such use could increase service interruptions, reduce service life, and introduce additional opportunities for contamination.

A.5.1.3.6.3 See Figure A.5.1.3.6.

Δ A.5.1.3.6.3.4(A) Examples of 5.1.3.6.3.4(A)(1) are liquid ring and permanently sealed bearing compressors.

An example of 5.1.3.6.3.4(A)(2) is an extended head reciprocating compressor with an atmospheric vent between the compression chamber and the crankcase.

An example of 5.1.3.6.3.4(A)(3) is a rotating element compressor with the compression chamber being nonlubricated and separated from the lubricated gears by at least one shaft seal with an atmospheric vent on both sides. The vent on the lubricated side is provided with a gravity drain to atmosphere.

A.5.1.3.6.3.9(D) A typical example of valving the receiver is shown in Figure A.5.1.3.6.3.9(D).

A.5.1.3.6.3.9(F) The two configurations are equally acceptable. The components can be arranged in either of the arrangements shown in Figure A.5.1.3.6.3.9(F).

N A.5.1.3.6.3.10 The intent of 5.1.3.6.3.10 is to ensure that the pressure at the station outlet is steady and maintained safely within the limits of Table 5.1.11. Traditionally, line pressure regulators were required here as the only allowed control-of-pressure devices. Other methods of control are becoming possible (e.g., variable speed controlled on pressure). The present wording is intended to achieve the performance requirement (see Table 5.1.11) and to allow not only traditional pressure regulators but other control methods as well.

Δ A.5.1.3.6.3.14(A)(9) The proportioning system should be monitored for conditions that can affect air quality during use or in the event of failure, based on the type of proportioning system design used in the system, including monitoring for the following systems and conditions:

- (1) Where proportioning systems used are configured with a primary proportioning system and a reserve medical air manifold per 5.1.3.5.12
- (2) Where proportioning systems used are configured with a primary proportioning system and a reserve proportioning system
- (3) Where proportioning systems used are configured with a primary proportioning system and a reserve medical air compressor per 5.1.3.5.3
- (4) Alarm at a predetermined set point, before the reserve supply begins to supply the system, indicating reserve supply in use
- (5) Alarm at a predetermined set point, before the reserve supply contents fall to one average day's supply, indicating reserve low

Water-in-receiver alarms are not required for a proportioning system.

The engineering controls should include, as a minimum, the following:

- (1) Engineering controls should be in place when the sources of oxygen USP or nitrogen NF, or both, are the same sources as those supplying the oxygen USP or nitrogen NF pipelines, or both, for other uses within the health care facility, and the following should apply:
 - (a) In cases where a new supply system is installed, or in cases where one or more bulk supplies are used to supply the mixer, bulk systems and vaporizers should be sized for total peak demand flow, including peak demand flow to the mixer and any other areas of utilization.
 - (b) Operating limits should be established, at a minimum, for the oxygen and nitrogen source pressures, both high and low, and for the medical air oxygen concentration, both high and low, based upon USP specifications. A process upset can be defined as an excursion in the process windows established for oxygen and nitrogen source pressures or medical air oxygen concentration, or both. A means to detect excursion from these process limits and power failure should be provided.
 - (c) At least one dedicated valve or other control should be installed in the proportioning system and/or the line(s) between the oxygen and/or nitrogen supply system(s) and proportioning system. The purpose of the dedicated control(s) is to prevent the cross contamination of the oxygen and nitrogen lines due to product backflow as follows:
 - i. The control(s) should be separate from the valve(s) or other device(s) used to control oxygen flow and nitrogen flow in normal operation.
 - ii. The control(s) should not cycle in normal operation.
 - iii. If installed in the line(s) between the oxygen or nitrogen supply system(s), or both, and proportioning system, upon activation of the control(s), an alarm should be sent to the

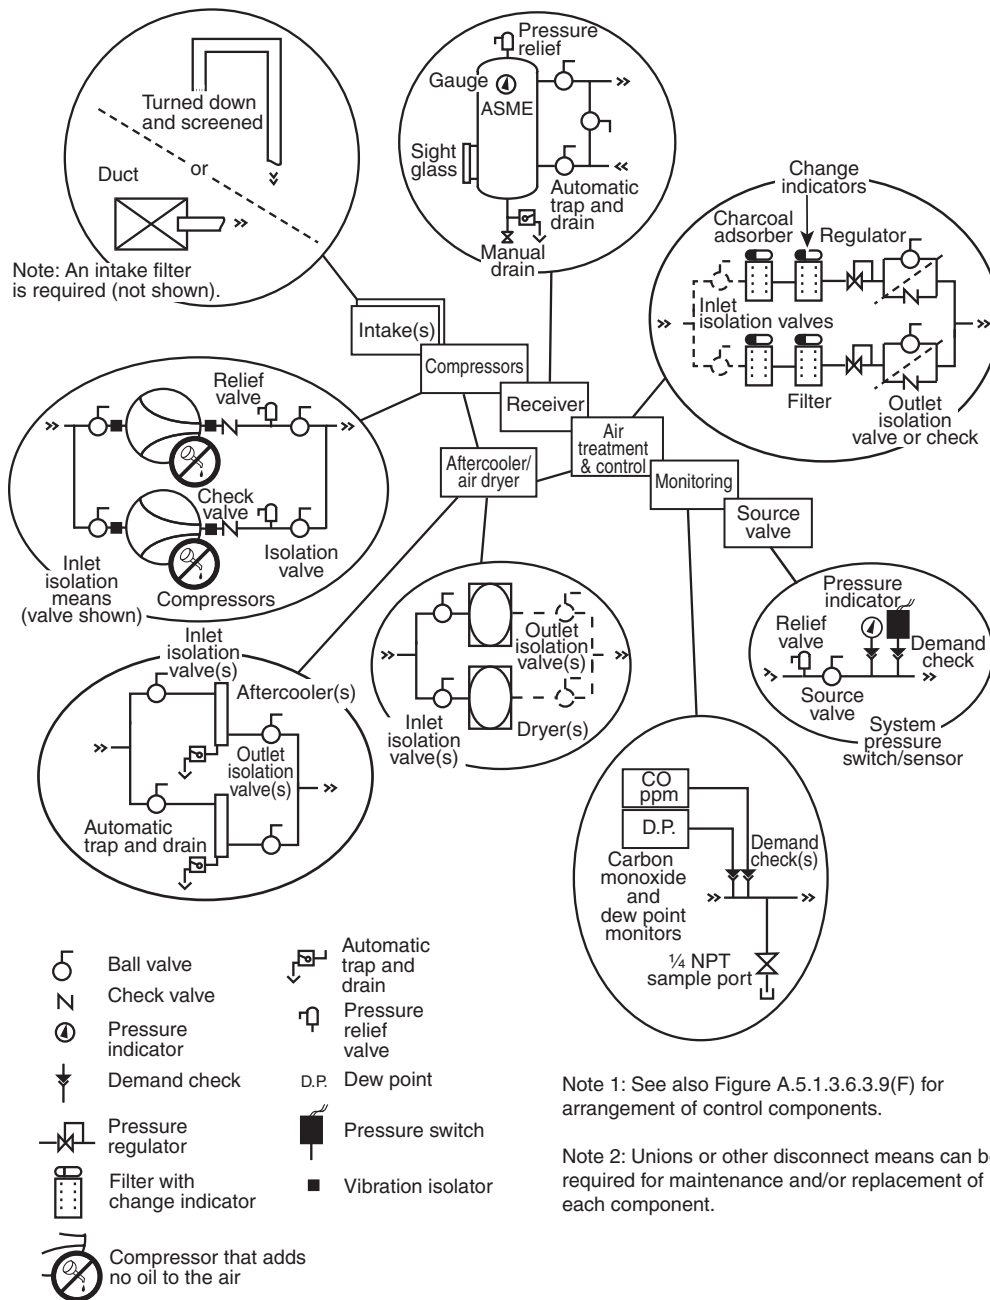


FIGURE A.5.1.3.6 Elements of a Typical Duplex Medical Air Compressor Source System (Category 1 Gas Systems).

- facility. The control(s) cannot exist exclusively via the use of check valves.
- (d) In the event of a process upset, the dedicated control(s) should either positively isolate the supply of oxygen or nitrogen, or both, from the mixer, or the dedicated control(s) should reduce the mixer pressure to less than half of the minimum final line pressure values, each, for the oxygen and nitrogen lines. In the event of a process upset, the control(s) should operate. Manual reset should be required to restart the proportioning system.

A.5.1.3.6.3.14(C)(9) The proportioning system should be monitored for conditions that can affect air quality during use or in the event of failure, based on the type of proportioning system design used in the system, including the following situations:

- (1) Where proportioning systems that are configured with a primary proportioning system and a reserve medical air manifold per 5.1.3.5.12 are used
- (2) Where proportioning systems that are configured with a primary proportioning system and a reserve proportioning system are used

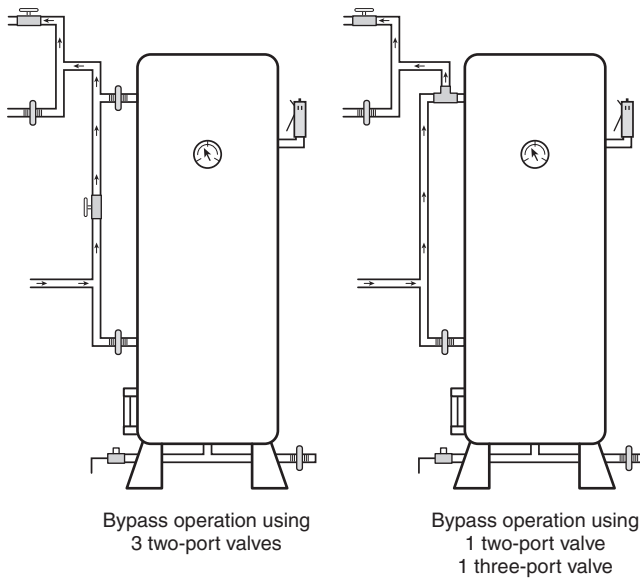


FIGURE A.5.1.3.6.3.9(D) Receiver Valving Arrangement.

- (3) Where proportioning systems that are configured with a primary proportioning system and a reserve medical air compressor per 5.1.3.5.12 are used
- (4) When proportioning systems are configured to alarm at a predetermined set point before the reserve supply begins to supply the system, indicating reserve supply in use
- (5) When proportioning systems are configured to alarm at a predetermined set point before the reserve supply contents fall to one average day's supply, indicating reserve low

Water-in-receiver alarms are not required for proportioning systems.

A.5.1.3.7 See Figure A.5.1.3.7.

A.5.1.3.8 A functioning WAGD system allows the facility to comply with occupational safety requirements by preventing the accumulation of waste anesthetic gases in the work environment.

WAGD using an HVAC (heating, ventilation, and air-conditioning) system are not within the scope of Chapter 5.

Flammable and nonflammable gases are known to be incompatible with some seals and piping used in medical-surgical vacuum systems. If WAGD is to be included as part of the medical-surgical vacuum system, it should be recognized that this

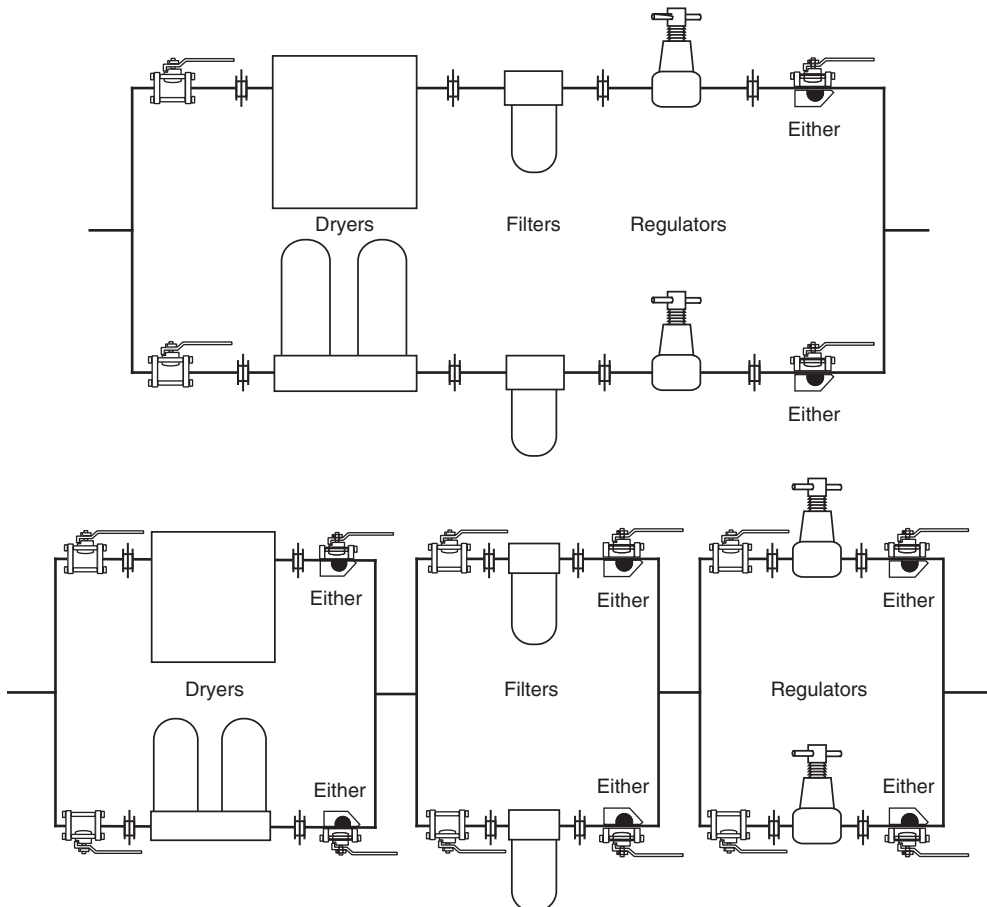


FIGURE A.5.1.3.6.3.9(F) Alternate Valving Sequences for Line Controls in Medical Air.

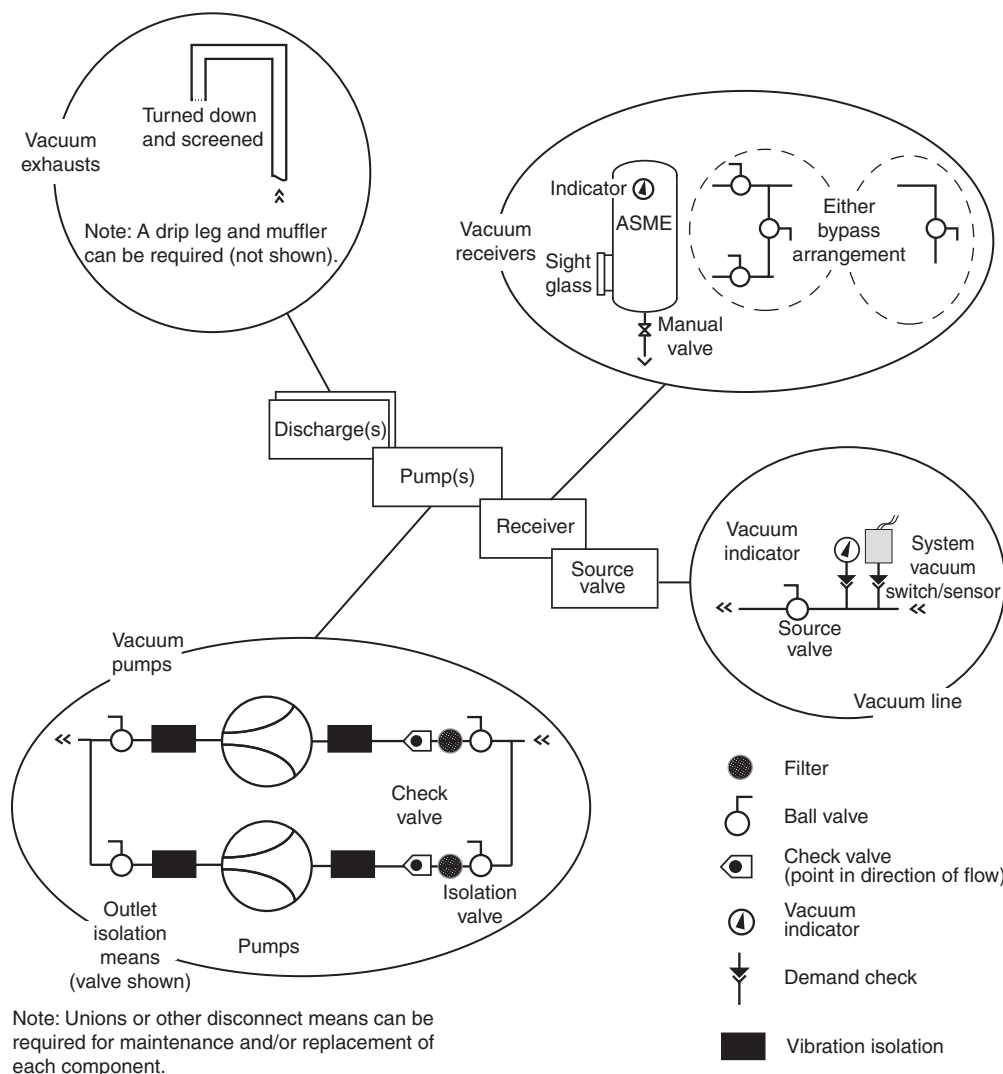


FIGURE A.5.1.3.7 Elements of Typical Duplex Vacuum Source System (Category 1 Vacuum Systems).

activity might cause deterioration of the vacuum system. The station inlet performance tests outlined in 5.1.12.4.10 are extremely important in maintaining the integrity of the medical-surgical vacuum system, and they should be made at more frequent intervals if WAGD is included in the vacuum system.

A.5.1.3.8.1 Interfaces are provided with overpressure, underpressure, overflow, and underflow compensation to ensure the breathing circuit is isolated from the WAGD system.

A.5.1.3.9 See Figure A.5.1.3.9(a), Figure A.5.1.3.9(b), and Figure A.5.1.3.9(c).


A.5.1.3.9.1(2) Oxygen concentrators have inherent risks because they might not be able to instantaneously begin producing oxygen of the necessary concentration and quantity from a “cold start.” For these reasons, cylinder header(s) are often preferable as one or more of the three sources. The cylinders will supply the system while the concentrator pressurizes and purges itself to the desired concentration of oxygen. Cylinders

are also independent of electricity and can provide a supply of oxygen in the event of power interruption.

A.5.1.3.9.1(5) The method used elsewhere in this document to provide these characteristics will be found in the final line regulator requirements under 5.1.3.5.5. This method would be suitable for oxygen supply systems using concentrator(s) as well. However, the pressure differential between the output of the concentrator and the system line pressure is often very small, making the use of regulators problematic. In this case, alternate control arrangements (e.g., pressure control through variable speed drives) might be more effective.

A.5.1.4 See Figure A.5.1.4.

Area alarms are required in critical care locations (e.g., intensive care units, coronary care units, angiography laboratories, cardiac catheterization laboratories, post-anesthesia recovery rooms, and emergency rooms) and anesthetizing locations (e.g., operating rooms and delivery rooms). Refer to definitions for these areas.

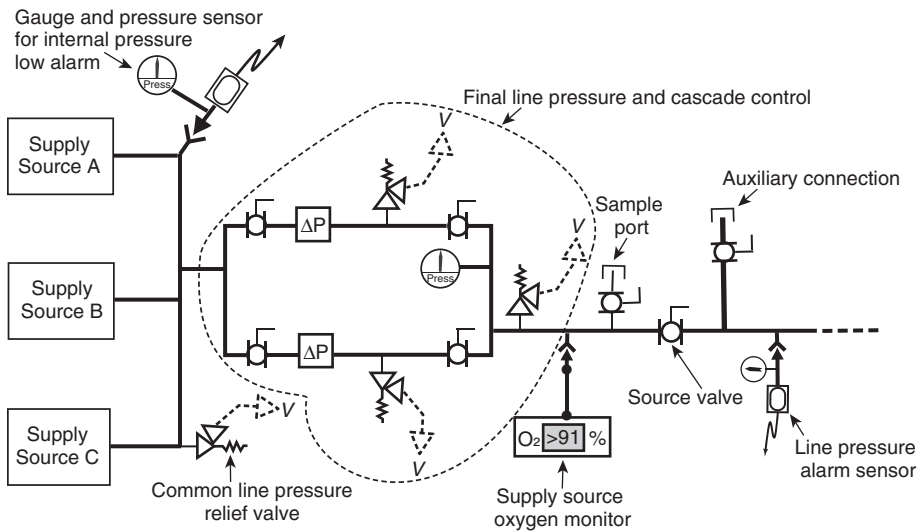

Note: Drawing is illustrative, alternative arrangements might be acceptable.

FIGURE A.5.1.3.9(a) Elements of an Oxygen Concentrator Central Supply Source.

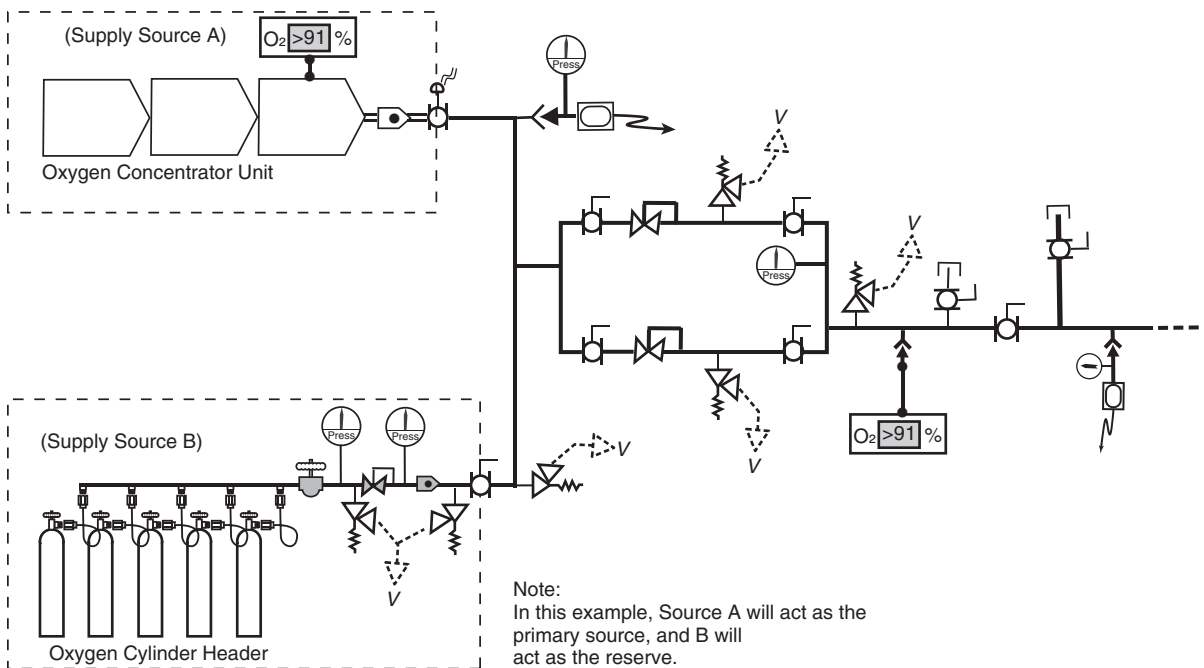


FIGURE A.5.1.3.9(b) Elements of an Oxygen Concentrator Central Supply Source with Two Sources.

A.5.1.4.3 The presence of a main line shutoff valve is optional where the source valve can equally or more effectively perform the same function. An example is a case where the source is within the building or just on the outside of the building and, therefore, there would be no great distance separating the two valves. A source that was physically separate from the building would require both valves to ensure the intervening piping could be controlled.

A.5.1.4.6.1(2) A “standing position” is meant to refer to an average-height individual standing with their feet on the floor in front of the zone valve.

A.5.1.5 Station outlets/inlets should be located at an appropriate height above the floor to prevent physical damage to equipment attached to the outlet. The minimum number of station outlets/inlets for each system that is installed should be provided per the FGI *Guidelines for Design and Construction of Hospitals and Outpatient Facilities* or other federal, state, or local codes.

A.5.1.6 Manufactured assembly examples include headwalls, columns, ceiling columns, ceiling-hung pendants, movable track systems, and so forth. See Figure A.5.1.6.

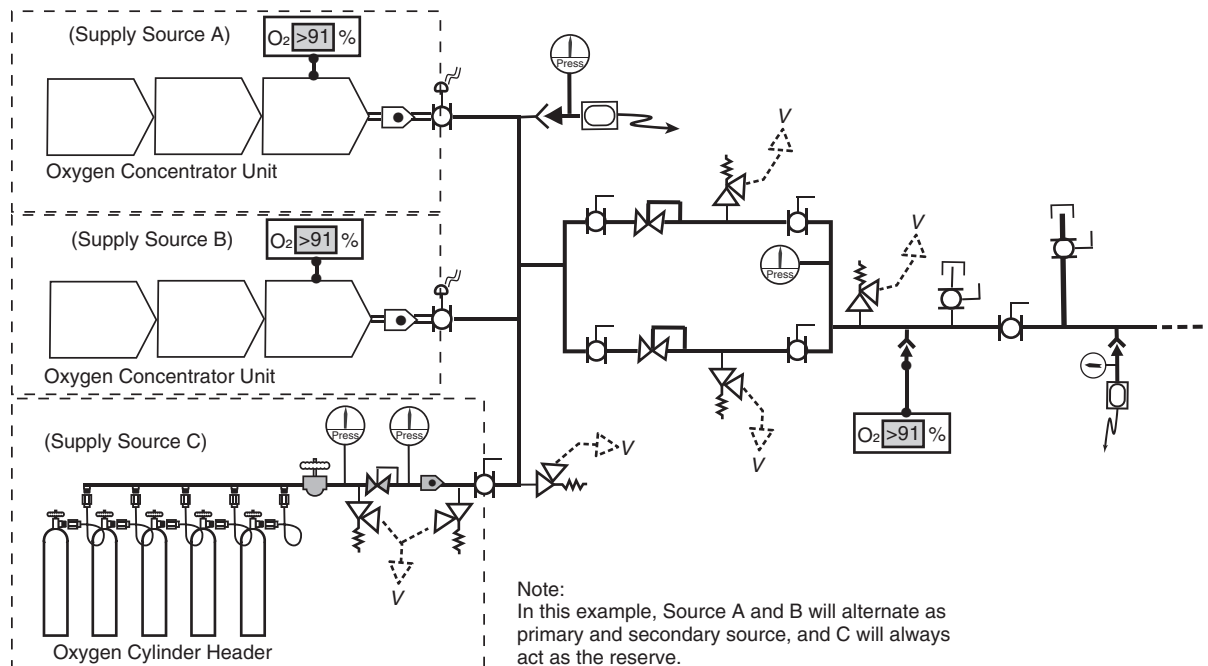


FIGURE A.5.1.3.9(c) One Example of an Oxygen Concentrator Central Supply Source in Practice.

A.5.1.7 It is the intent that surface-mounted medical gas rail systems would be permitted in individual patient rooms but would not be permitted to go directly through room walls to adjacent patient rooms. However, it is the intent to permit surface-mounted medical gas rails to be used in a given **Category 1 space** where there can be a partition separating certain patient care functions, essentially leaving the system within the given **Category 1 space**. As an example, two adjacent patient rooms outside of a **Category 1 space** care unit would not be permitted to have a surface-mounted medical gas rail interconnect between the two rooms through the wall. However, in a nursery where there might be one or two segregated areas for isolation, a medical gas rail system supplying more than one isolation room, but within the nursery area, would be permitted to be interconnected with the nursery system.

A.5.1.7.9 Typical plating would be nickel plating over copper or brass per Federal Specification QQ-N290, Class I, Type 7.

A.5.1.8.1.3 This gauge would therefore be suitable for any operating pressure of 690 kPa to 1380 kPa (100 psig to 200 psig).

A.5.1.9 See Figure A.5.1.4.

A.5.1.9.2 See Table A.5.1.9.2.

A.5.1.9.4 See Table A.5.1.9.4.

A.5.1.9.4(2) Examples of **Category 1 space** include post-anesthesia recovery, intensive care units, and emergency departments.

A.5.1.9.4.1 Area alarm panels should be placed in a location that will most closely fulfill the following criteria (recognizing that no existing location might fulfill all criteria):

- (1) Near or within the location where the staff will most often be present (e.g., a staff base, a nurses' station)

- (2) Where the audible alert will best carry throughout the unit being surveilled
- (3) Where the panel is visible from the largest number of rooms, beds, or stations within the zone
- (4) Where visualization of the panel will not be blocked (e.g., by cabinet doors, carts, room doors, curtains, supplies)
- (5) At a height above the floor at which the panel can be comfortably viewed and at which the mute button can be conveniently accessed


A.5.1.9.4.4(1) This signal is intended to provide immediate warning for loss of, or increase in, system pressure for each individual vital life support and **Category 1 space**.

A.5.1.9.4.4(2) This signal is intended to provide immediate warning for loss of, or increase in, system pressure for all anesthetizing locations supplied from a single branch line — not for each individual operating or delivery room.

A.5.1.9.5 Activation of any of the warning signals should immediately be reported to the department of the facility responsible for the medical gas piping system involved. If the medical gas is supplied from a bulk supply system, the owner or the organization responsible for the operation and maintenance of that system, usually the supplier, should also be notified. As much detail as possible should be provided. See Table A.5.1.9.5.

A.5.1.10.1.4 Operation of piped medical gas systems at gauge pressures in excess of 1275 kPa (185 psi) involves certain restrictions because of the limitations in materials.

A.5.1.10.1.4(2) The listing should include a specific system geometry representative of medical gas systems.

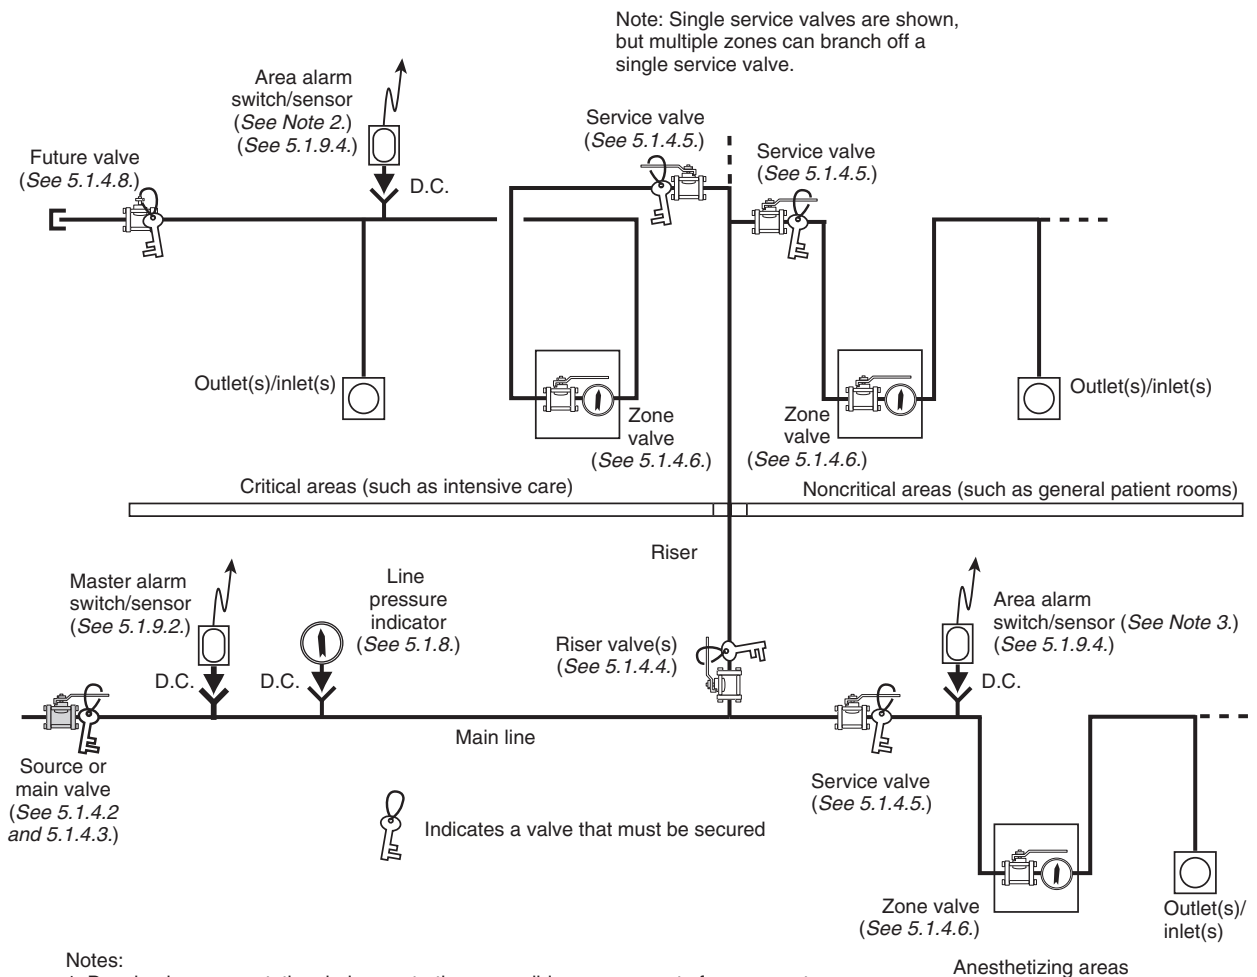

Notes:

1. Drawing is representational, demonstrating a possible arrangement of components required by the text. The diagram is not intended to imply a method, materials of construction, or more than one of many possible and equally compliant arrangements. Alternative arrangements are permitted if they meet the intent of the text.

2. Area alarms are required in critical care locations (examples might include intensive care units, coronary care units, angiography laboratories, cardiac catheterization laboratories, post-anesthesia recovery rooms, and emergency rooms) and anesthetizing locations (examples might include operating rooms and delivery rooms). Refer to definitions for these areas.

3. Locations for switches/sensors are not affected by the presence of service or in-line valves.

FIGURE A.5.1.4 Arrangement of Pipeline Components.

A.5.1.10.3.1 A distinction is made between deep-socket solder-joint fittings (ASME B16.22, *Wrought Copper and Copper Alloy Solder Joint Pressure Fitting*) and those having shallow sockets for brazing (ANSI/ASME B16.50, *Wrought Copper and Copper Alloy Braze Joint Pressure Fitting*). The use of shallow-socket brazing fittings improves the quality of the brazement without decreasing its strength, particularly in larger sizes, which are difficult to heat. See Table A.5.1.10.3.1 for socket depths conforming to ANSI/ASME B16.50. The installer can use ANSI/ASME B16.50 fittings (if available) or have the sockets on ASME B16.22 fittings cut down to ASME B16.50 depths. Where shallow-socket fittings are used for the medical gas piping, care should be taken to avoid their use in other piping systems where joints could be soldered instead of brazed.

A.5.1.10.4.5 The intent is to provide an oxygen-free atmosphere within the tubing and to prevent the formation of copper oxide scale during brazing. This is accomplished by filling the piping with a low-volume flow of low pressure inert gas.

A.5.1.10.4.5.12 This is to ensure a quality joint and to prevent the formation of copper oxide on the inside and outside surfaces of the joint.

A.5.1.10.5.1.5 Gas mixtures are commonly used in GTAW autogenous fusion welding. The identification of a gas mixture as "75He 25Ar" is a common industry term to define a commercially available grade from gas suppliers. If test welding results lead to questions about the mixture percentage or gas quality, another bottle should be substituted and test welds performed.

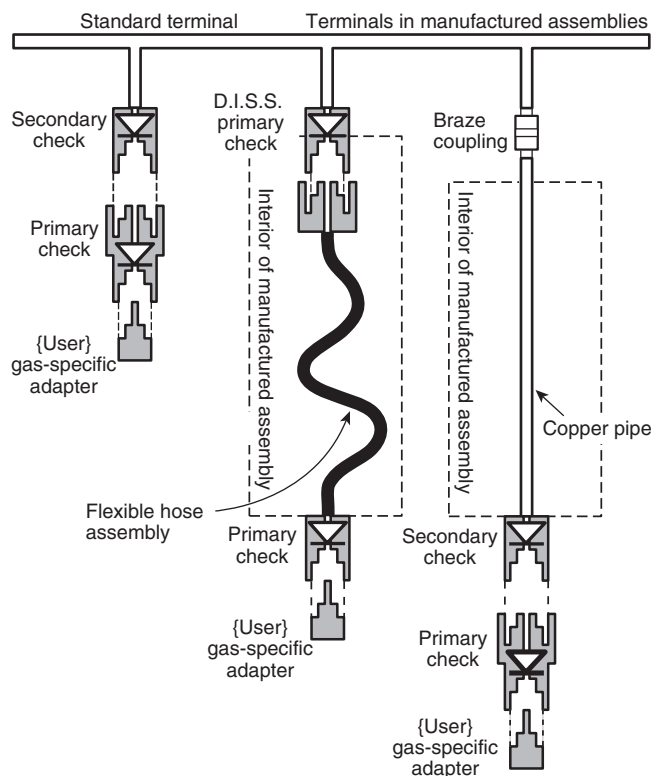


FIGURE A.5.1.6 Terminals in Manufactured Assemblies.

A.5.1.10.8(3) It is intended that the “recommended for oxygen service” apply to both polytetrafluoroethylene tape as well as the “other thread sealant.”

N A.5.1.10.11.4.4 CMT is coated with a nonmetallic jacket with an O.D. equal to a larger copper tube size than CMT. The CMT manufacturer’s installation instructions should identify acceptable solutions.

A.5.1.11 It is recommended that the facility’s normal operating pressure of nitrous oxide be initially set and continually maintained at least 34.5 kPag (5 psig) below the normal operating pressures of the oxygen and medical air.

Piping systems that are connected through blending devices are in effect cross-connected through the device. In the rare event of a failure of the safeties inside the equipment, the possibility of having the gases flow across the device exists. When the device is an anesthesia machine, and one of the gases is nitrous oxide, a pressure in the nitrous oxide pipeline greater than the pressure in the medical air or oxygen system opens the possibility of nitrous oxide flowing into the other pipelines. A patient could then receive a lethal quantity of nitrous oxide from a labeled and indexed medical air or oxygen outlet. Adjusting the pressure as recommended can reduce the likelihood of the causative equipment failure and also reduce the severity of the problem in the event it does occur.

A.5.1.11.2.7 It is not intended that every room be listed on the label, but an area that is easily identifiable by staff needs to be indicated. This can be accomplished with text or by graphical

means such as a map or color coding. The label should be permanently affixed outside and near valve box. The label should not be affixed to a removable cover.

A.5.1.11.4.2 It is not intended that every room be listed on the label, but an area that is easily identifiable by staff needs to be indicated. This can be accomplished with text or by graphical means such as a map or color coding.

A.5.1.12 All testing should be completed before putting a new piping system, or an addition to an existing system, into service. Test procedures and the results of all tests should be made part of the permanent records of the facility of which the piping system forms a part. They should show the room and area designations, dates of the tests, and name(s) of the person(s) conducting the tests.

A.5.1.12.2.3.5 Ammonia is known to cause stress cracking in copper and its alloys.

A.5.1.12.2.6.5 The effect of temperature changes on the pressure of a confined gas is based on the Ideal Gas Law. The final absolute pressure (P2a) equals the initial absolute pressure (P1a) times the final absolute temperature (T2a), divided by the initial absolute temperature (T1a). The relationship is the same for nitrogen, nitrous oxide, oxygen, and compressed air.

Absolute pressure is the gauge pressure reading plus the absolute atmospheric pressure. See Table A.5.1.12.2.6.5 for the absolute atmospheric pressures for elevations at and above sea level.

Absolute temperature K (°R) is the temperature gauge reading °C (°F) plus the absolute zero temperature 273°C (460°F).

Examples of pressure test data at sea level in SI and IP units follow.

The initial test pressure is 415 kPag (60 psig) at 27°C (80°F). A temperature decrease to 18°C (65°F) will cause the test pressure to drop to 400 kPag (57.9 psig).

P1g = 415 kPag, T1g = 27°C, T2g = 18°C, P1g = 60 psig, T1g = 80°F, T2g = 65°F

P1a = 415 + 101 = 516 kPa	P1a = 60 + 14.7 = 74.7 psia
T1a = 27 + 273 = 300K	T1a = 80 + 460 = 540°R
T2a = 18 + 273 = 291K	T2a = 65 + 460 = 525°R
P2a = 516 × 291/300 = 501 kPa	P2a = 74.7 × 525/540 = 72.6 psia
P2g = 501 – 101 = 400 kPag	P2g = 72.6 – 14.7 = 57.9 psig

Δ A.5.1.12.2.7.5 The effect of temperature changes on the vacuum of a confined gas is based on the Ideal Gas Law. The final absolute vacuum (V2a) equals the initial absolute vacuum (V1a) times the final absolute temperature (T2a), divided by the initial absolute temperature (T1a).

Absolute vacuum is the absolute zero pressure 101 kPa (30 inHg) less the vacuum reading below atmospheric. See Table A.5.1.12.2.6.5 for the absolute atmospheric pressures for elevations at and above sea level.

Absolute temperature K (°R) is the temperature gauge reading °C (°F) plus the absolute zero temperature 273°C (460°F).

Table A.5.1.9.2 Requirements for Category 1 Master Alarms for Gas and Vacuum Systems

Alarm Condition	Manifold for Gas Cylinders (5.1.3.5.12)	Manifold for Cryogenic Liquid Cylinders with Reserve (5.1.3.5.13)	Cryogenic Bulk with Cryogenic Reserve (5.1.3.5.14)	Cryogenic Bulk with Cylinder Reserve (5.1.3.5.15)	Medical Air Proportioning System (5.1.3.6.3.13)	Medical Air Compressors (5.1.3.6)	Instrument Air Compressors (5.1.13.3.4)	Medical-Surgical Vacuum Pumps (5.1.3.7)	WAGD Producers (5.1.3.8)	Oxygen Concentrator (5.1.3.9)
Nitrogen main line pressure high	5.1.9.2.4(7)	5.1.9.2.4(7)	5.1.9.2.4(7)	5.1.9.2.4(7)						
Nitrogen main line pressure low	5.1.9.2.4(7)	5.1.9.2.4(7)	5.1.9.2.4(7)	5.1.9.2.4(7)						
Nitrogen changeover to secondary supply	5.1.3.5.12.6 5.1.9.2.4(1)	5.1.3.5.13.9(1), 5.1.9.2.4(1)	5.1.3.5.14.4(5)							
Nitrogen main supply less than 1 day (low contents)			5.1.9.2.4(2), 5.1.3.5.14.4(1)	5.1.9.2.4(2), 5.1.3.5.14.4(1)						
Nitrogen reserve in use		5.1.3.5.13.9(3), 5.1.9.2.4(3)	5.1.9.2.4(3), 5.1.3.5.14.4(2)	5.1.9.2.4(3), 5.1.3.5.14.4(2)						
Nitrogen reserve supply less than 1 day (low contents)		5.1.9.2.4(4), 5.1.3.5.13.9(4)	5.1.9.2.4(5), 5.1.3.5.14.4(3)	5.1.9.2.4(4), 5.1.3.5.14.4(3)						
Nitrogen reserve pressure low (not functional)			5.1.9.2.4(6), 5.1.3.5.14.4(4)							
Carbon dioxide main line pressure high	5.1.9.2.4(7)	5.1.9.2.4(7)	5.1.9.2.4(7)	5.1.9.2.4(7)						
Carbon dioxide main line pressure low	5.1.9.2.4(7)	5.1.9.2.4(7)	5.1.9.2.4(7)	5.1.9.2.4(7)						
Carbon dioxide changeover to secondary supply	5.1.3.5.12.6 5.1.9.2.4(1)	5.1.3.5.13.9(1), 5.1.9.2.4(1)								
Carbon dioxide main supply less than 1 day (low contents)			5.1.9.2.4(2), 5.1.3.5.14.4(1)	5.1.9.2.4(2), 5.1.3.5.14.4(1)						
Carbon dioxide reserve in use		5.1.3.5.13.9(3), 5.1.9.2.4(3)	5.1.9.2.4(3), 5.1.3.5.14.4(2)	5.1.9.2.4(3), 5.1.3.5.14.4(2)						
Carbon dioxide reserve supply less than 1 day (low contents)		5.1.3.5.13.9(4)	5.1.9.2.4(5), 5.1.3.5.14.4(3)	5.1.9.2.4(5), 5.1.3.5.14.4(3)						
Carbon dioxide reserve pressure low (not functional)			5.1.9.2.4(6), 5.1.3.5.14.4(3)							
Medical air main line pressure high	5.1.9.2.4(7)					5.1.9.2.4(7)				
Medical air main line pressure low	5.1.9.2.4(7)					5.1.9.2.4(7)				
Medical air changeover to secondary supply	5.1.3.5.12.6 5.1.9.2.4(1)									
Medical air dew point high						5.1.3.6.3.13(1) 5.1.9.2.4(10)				
Medical air production stop					5.1.9.2.4(13)					
Oxygen main line pressure high	5.1.9.2.4(7)	5.1.9.2.4(7)	5.1.9.2.4(7)	5.1.9.2.4(7)						
Oxygen main line pressure low	5.1.9.2.4(7)	5.1.9.2.4(7)	5.1.9.2.4(7)	5.1.9.2.4(7)						
Oxygen changeover to secondary supply	5.1.3.5.12.6 5.1.9.2.4(1)	5.1.3.5.13.9 (1) 5.1.9.2.4(1)								
Oxygen main supply less than 1 day (low contents)			5.1.9.2.4(2), 5.1.3.5.14.4(1)	5.1.9.2.4(2), 5.1.3.5.14.4(1)						
Oxygen reserve in use		5.1.3.5.13.9(3) 5.1.9.2.4(3) 5.1.9.2.4(5)	5.1.9.2.4(3), 5.1.3.5.14.4(2)	5.1.9.2.4(3), 5.1.3.5.13.9(4) 5.1.3.5.14.4(2)						
Oxygen reserve supply less than 1 day (low contents)			5.1.3.5.14.4(3)	5.1.3.5.14.4(3)						
Oxygen reserve pressure low (not functional)			5.1.9.2.4(6), 5.1.3.5.14.4(3)							
Nitrous oxide main line pressure high	5.1.9.2.4(7)	5.1.9.2.4(7)	5.1.9.2.4(7)	5.1.9.2.4(7)						
Nitrous oxide main line pressure low	5.1.9.2.4(7)	5.1.9.2.4(7)	5.1.9.2.4(7)	5.1.9.2.4(7)						
Nitrous oxide changeover to secondary supply	5.1.3.5.12.6 5.1.9.2.4(1)	5.1.3.5.13.9(1) 5.1.9.2.4(1)								
Nitrous oxide main supply less than 1 day (low contents)			5.1.9.2.4(2), 5.1.3.5.14.4(1)	5.1.9.2.4(2), 5.1.3.5.14.4(1)						
Nitrous oxide reserve in use		5.1.9.2.4(3), 5.1.3.5.13.9(3)	5.1.9.2.4(3), 5.1.3.5.14.4(2)	5.1.9.2.4(3), 5.1.3.5.14.4(2)						

(continues)

Table A.5.1.9.2 *Continued*

Alarm Condition	Manifold for Gas Cylinders (5.1.3.5.12)	Manifold for Cryogenic Liquid Cylinders with Reserve (5.1.3.5.13)	Cryogenic Bulk with Cryogenic Reserve (5.1.3.5.14)	Cryogenic Bulk with Cylinder Reserve (5.1.3.5.15)	Medical Air Proportioning System (5.1.3.6.3.13)	Medical Air Compressors (5.1.3.6)	Instrument Air Compressors (5.1.13.3.4)	Medical-Surgical Vacuum Pumps (5.1.3.7)	WAGD Producers (5.1.3.8)	Oxygen Concentrator (5.1.3.9)
Nitrous oxide reserve supply less than 1 day (low contents)		5.1.3.5.13.9(4)	5.1.9.2.4(5), 5.1.3.5.14.4(3)	5.1.9.2.4(5), 5.1.3.5.14.4(2)						
Nitrous oxide reserve pressure low (not functional)			5.1.9.2.4(6), 5.1.3.5.14.4(4)							
Medical-surgical main line vacuum low								5.1.9.2.4(8)		
WAGD main line vacuum low									5.1.9.2.4(11)	
Local alarm					5.1.9.2.4(9), 5.1.9.5.2, 5.1.3.6.3.14(C)(9)	5.1.3.6.3.12 5.1.9.2.4(9)	5.1.13.3.4.11 5.1.9.2.4(9)	5.1.3.7.8 5.1.9.2.4(9)	5.1.3.8.3.2 5.1.9.2.4(9)	
Instrument air main line pressure high							5.1.9.2.4(7)			
Instrument air main line pressure low							5.1.9.2.4(7)			
Instrument air dew point high							5.1.13.3.4.11(A)(2) 5.1.9.2.4(12)			
Instrument air cylinder reserve in use (if provided)							5.1.13.3.4.11(B)(1)			
Instrument air cylinder reserve less than 1 hour supply							5.1.13.3.4.11(B)(2)			
Oxygen concentrator low concentration										5.1.3.5.11.13(2) 5.1.3.9.2(10)(c) 5.1.3.9.4.1(5) 5.1.9.2.4(14)(b) 5.1.3.5.11.12(5)
Oxygen concentrator offline										5.1.3.9.4.1(5) 5.1.9.2.4(14)(b) 5.1.3.9.4.3(2) 5.1.9.2.4(3) 5.1.9.2.4(14)(c)
Oxygen reserve in use										5.1.3.9.4.3(3) 5.1.9.2.4(4) 5.1.9.2.4(14)(d) 5.1.3.9.4.2(4) 5.1.9.2.4(14)(g) 5.1.3.9.4.2(5) 5.1.9.2.4(14)(h) 5.1.9.2.4(7)
Oxygen reserve supply less than 1 day (low contents)										5.1.9.2.4(7)
Oxygen main line low concentration										5.1.3.9.4.4(1)(a)
Oxygen main line high concentration										5.1.3.9.4.4(2) 5.1.9.2.4(14)(f)
Oxygen main line pressure high										
Oxygen main line pressure low										
Oxygen change of source										
Oxygen concentrator internal pressure low										
Oxygen concentrator local alarm										5.1.9.2.4(9)

Examples of vacuum test data at sea level in SI and IP units follow.

The initial test vacuum is 54 kPa or 16 inHg at 18°C (65°F). A temperature increase to 27°C (80°F) will cause the test vacuum to decrease to 52.5 kPa (15.6 inHg).

For SI units:

$$V1g = 54 \text{ kPa}, T1g = 18^\circ\text{C}, T2g = 27^\circ\text{C}$$

$$V1a = 101 - 54 = +47 \text{ kPaV}$$

$$T1a = 18 + 273 = 291\text{K}$$

$$T2a = 27 + 273 = 300\text{K}$$

$$V2a = 47 \times 300/291 = +48.5 \text{ kPaV}$$

$$V2g = 101 - 48.5 = 52.5 \text{ kPa}$$

For IP units:

$$V1g = 16 \text{ inHg}, T1g = 65^\circ\text{F}, T2g = 80^\circ\text{F}$$

$$V1a = 30 - 16 = +14 \text{ inHgV}$$

$$T1a = 65 + 460 = 525^\circ\text{R}$$

$$T2a = 80 + 460 = 540^\circ\text{R}$$

$$V2a = 14 \times 540/525 = +14.4 \text{ inHgV}$$

$$V2g = 30 - 14.4 = 15.6 \text{ inHg}$$

A.5.1.12.4.2 This is the final pressure test of the completely installed system and is intended to locate any leaks that would be more likely to occur at lower pressure (e.g., leaks in station outlet valve seals).

Table A.5.1.9.4 Requirements for Category 1 Area Alarms

Alarm Condition	Requirement Location
High line pressure (for each gas piped to the area)	5.1.9.4
	5.1.9.4.1
	5.1.9.4.2
	5.1.9.4.4
Low line pressure (for each gas piped to the area)	5.1.9.4
	5.1.9.4.1
	5.1.9.4.2
	5.1.9.4.4
Low medical–surgical vacuum (if piped to the area)	5.1.9.4
	5.1.9.4.1
	5.1.9.4.3
	5.1.9.4.4
Low WAGD vacuum (if piped to the area)	5.1.9.4
	5.1.9.4.1
	5.1.9.4.3
	5.1.9.4.4

A.5.1.12.4.6.4 Odor is checked by sniffing a moderate flow of gas from the outlet being tested. Specific measure of odor in gas is impractical. Gas might have a slight odor but the presence of a pronounced odor should render the piping unsatisfactory.

A.5.1.12.4.8 The detector used for total hydrocarbons is calibrated with a gas that has a known quantity of methane. When a sample is run with this calibrated detector, the result will be total hydrocarbons as methane. Since methane is the one hydrocarbon that does not interact with the body and is present in all air and most oxygen, the actual amount of methane in the sample is subtracted from the total hydrocarbon result to give total non-methane hydrocarbons.

A.5.1.12.4.10.6 Sleep laboratories are an example of where gas flow and concentration are frequently modified.

A.5.1.12.4.11(3) The committee recognizes that current clinical practice is to use analyzers that might not be able to analyze oxygen to current USP requirements of 99 percent and that these analyzers frequently have an error of up to 3 percent.

A.5.1.13.1 Support gas systems are subject to the same hazards as are present in any piped medical gas system, with the additional hazard of operating at higher pressures.

A.5.1.13.3.4 See Figure A.5.1.13.3.4.

A.5.1.13.3.4.7 Drawing intake air from outside in compliance with 5.1.3.6.3.11 is recommended.

A.5.1.14 All cylinders containing compressed gases, such as anesthetic gases, oxygen, or other gases used for medicinal purposes, whether these gases are flammable or not, should comply with the specifications and be maintained in accordance with regulations of the U.S. Department of Transportation.

Cylinder and container temperatures greater than 52°C (125°F) can result in excessive pressure increase. Pressure relief devices are sensitive to temperature and pressure. When relief devices actuate, contents are discharged.

A.5.1.14.1.1 Piping systems for the distribution of flammable gases (e.g., hydrogen, acetylene, natural gas) are outside the scope of this chapter.

A.5.1.14.1.3 Vacuum systems from station inlets to the exhaust discharge should be considered contaminated unless proven otherwise. Methods exist to disinfect the system or portions thereof.

Clogging of regulators, for example, with lint, debris, or dried body fluids, reduces vacuum system performance.

A.5.1.14.1.4 Other examples of prohibited use of medical–surgical vacuum would be scope cleaning, decontamination, and laser plume.

A.5.1.14.2.1 The facility should retain a written or an electronic copy of all findings and any corrections performed.

A.5.1.14.2.2.2 In addition to the minimum inspection and testing in 5.1.14, facilities should consider annually inspecting equipment and procedures and correcting any deficiencies.

A.5.1.14.2.3 The following should be considered in a routine testing, maintenance, and inspection program:

(1) Medical air source, as follows:

- Room temperature
- Shaft seal condition
- Filter condition
- Presence of hydrocarbons
- Room ventilation
- Water quality, if so equipped
- Intake location
- Carbon monoxide monitor calibration
- Air purity
- Dew point

(2) Medical vacuum source — exhaust location

(3) WAGD source — exhaust location

(4) Instrument air source — filter condition

(5) Manifold sources (including systems complying with 5.1.3.5.10, 5.1.3.5.12, 5.1.3.5.13, and 5.1.3.5.14), as follows:

- Ventilation
- Enclosure labeling

(6) Bulk cryogenic liquid source inspected in accordance with NFPA 55

(7) Final line regulation for all positive pressure systems — delivery pressure

(8) Valves — labeling

(9) Alarms and warning systems — lamp and audio operation

(10) Alarms and warning systems, as follows:

- Master alarm signal operation
- Area alarm signal operation
- Local alarm signal operation

(11) Station outlets/inlets, as follows:

- Flow
- Labeling
- Latching/delatching
- Leaks

(12) Medical gas quality

- Purity — Percent Concentration
- Permanent particulates and contaminants
- Odor and moisture

Table A.5.1.9.5 Requirements for Category 1 Local Alarms

Alarm Condition	Medical Air Compressors						
	Oil-less (Sealed Bearing) 5.1.3.6.3.4(A)(1)	Oil-Free (Separated) 5.1.3.6.3.4(A)(2)	Liquid Ring (Water-Sealed) 5.1.3.6.3.4(A)(1)	Instrument Air Compressors	Medical-Surgical Vacuum Pumps	WAGD Producers	Oxygen Concentrators
Low Medical Air Reserve Capacity	5.1.3.6.3.12(F) 5.1.9.5.4(1)	5.1.3.6.3.12(F) 5.1.9.5.4(1)	5.1.3.6.3.12(F) 5.1.9.5.4(1)				
Low Medical Vacuum Reserve Capacity					5.1.3.7.8 5.1.9.5.4(4)		
Low WAGD Reserve Capacity						5.1.3.8.3.2 5.1.9.5.4(5)	
Low Instrument Air Reserve Capacity				5.1.13.3.4.11(A) 5.1.9.5.4(7)			
Carbon monoxide high	5.1.3.6.3.13(2) 5.1.9.5.4(2)	5.1.3.6.3.13(2) 5.1.9.5.4(2)	5.1.3.6.3.13(2) 5.1.9.5.4(2)				
High discharge air temperature	5.1.3.6.3.12(D) 5.1.9.5.4(10)	5.1.3.6.3.12(E)(1) 5.1.9.5.4(10)					
High water in receiver	5.1.3.6.3.12(B) 5.1.9.5.4(8)	5.1.3.6.3.12(B) 5.1.9.5.4(8)	5.1.3.6.3.12(B) 5.1.9.5.4(8)				
High water in separator			5.1.3.6.3.12(C) 5.1.9.5.4(9)				
Medical air dew point high	5.1.3.6.3.13(1) 5.1.9.5.4(3)	5.1.3.6.3.13(1) 5.1.9.5.4(3)	5.1.3.6.3.13(1) 5.1.9.5.4(3)				
Instrument air dew point high				5.1.9.5.4(6) 5.1.13.3.4.11(A)(2)			
Oxygen concentrator low concentration							5.1.3.5.11.13(1) 5.1.3.9.2(10)(c) 5.1.3.9.4.1(3)
Oxygen concentrator high concentration							5.1.3.5.11.13(3) 5.1.3.9.4.1(3)
Oxygen reserve in use							5.1.3.9.4.3(2) 5.1.9.5.4(13)(a) 5.1.3.9.4.3(3)
Oxygen reserve supply less than 1 day (low contents)							5.1.9.5.4(13)(b)
Oxygen main line low concentration							5.1.3.9.4.2(3) 5.1.9.5.4(13)(e)
Oxygen main line high concentration							5.1.3.9.4.2(3) 5.1.9.5.4(13)(f) 5.1.9.5.4(13)(c)
Oxygen change of source							5.1.3.9.4.4(1)(a)
Oxygen concentrator internal pressure low							5.1.3.9.4.4(2) 5.1.9.5.4(13)(d)

A.5.2.1 Section 5.1 covers requirements for Category 1 piped gas and vacuum systems; Section 5.2 covers Category 2 piped gas and vacuum systems; and Section 5.3 covers Category 3 piped gas and vacuum systems. Laboratory systems are no longer covered by Chapter 5 (2002 edition).

A.5.2.14 Medical gas and vacuum systems should be surveyed at least annually for the items that follow and deficient items corrected. Survey of medical air and instrument air sources should include, but not be limited to, the following:

- (1) Dew point monitor (operation and calibration)
- (2) Carbon monoxide monitor (medical air only) (operation and calibration)
- (3) Aftercoolers (condition, operation of drains)
- (4) Operating pressures (cut-in, cut-out, and control pressures)

- (5) All local alarms (verify presence of required alarms, perform electrical test, test lag alarm)
- (6) Receiver elements (auto drain, manual drain, sight glass, pressure gauge)
- (7) Filters (condition)
- (8) Pressure regulators (condition, output pressure)
- (9) Source valve (labeling)
- (10) Intake (location and condition)
- (11) Housekeeping around compressors

Survey of the medical vacuum and the WAGD source(s) should include, but not be limited to, the following:

- (1) Operating vacuum (cut-in, cut-out, and control pressures)
- (2) All local alarms (verify presence of required alarms, perform electrical test, test lag alarm)

Table A.5.1.10.3.1 Socket Depths for ASME B16.50 Brazing Fittings

Tube Size (in.)	Socket Depth (in.)
¼ (⅜ O.D.)	0.17
⅜ (½ O.D.)	0.2
½ (⅝ O.D.)	0.22
¾ (⅞ O.D.)	0.25
1 (1⅞ O.D.)	0.28
1¼ (1⅝ O.D.)	0.31
1½ (1⅝ O.D.)	0.34
2 (2⅞ O.D.)	0.40
2½ (2⅝ O.D.)	0.47
3 (3⅞ O.D.)	0.53
4 (4⅞ O.D.)	0.64
5 (5⅞ O.D.)	0.73
6 (6⅞ O.D.)	0.83

Table A.5.1.12.2.6.5 Pressure Corrections for Elevation

Elevation (ft)	Absolute Atmospheric Pressure			
	kPa	psia	mmHg	inHg
0	101.33	14.70	760.0	29.92
500	99.49	14.43	746.3	29.38
1000	97.63	14.16	733.0	28.86
1500	95.91	13.91	719.6	28.33
2000	94.19	13.66	706.6	27.82
2500	92.46	13.41	693.9	27.32
3000	90.81	13.17	681.2	26.82
3500	89.15	12.93	668.8	26.33
4000	87.49	12.69	656.3	25.84
4500	85.91	12.46	644.4	25.37
5000	84.33	12.23	632.5	24.90

- (3) Receiver elements (manual drain, sight glass, vacuum gauge)
- (4) Source valve (labeling)
- (5) Exhaust (location and condition)
- (6) Housekeeping around pump

Survey of the medical gas manifold source(s) should include, but not be limited to, the following:

- (1) Number of cylinders (damaged connectors)
- (2) Cylinder leads (condition)
- (3) Cascade (switching from one header to another)
- (4) All local alarms (verify presence of required alarms, perform electrical test, test all alarms)
- (5) Source valve (labeling)
- (6) Relief valves (discharge location and condition)
- (7) Leaks
- (8) Security (door or gate locks and signage)
- (9) Ventilation (general operation, housekeeping)
- (10) Housekeeping around manifolds

Survey of medical gas area alarms should include, but not be limited to, the following:

- (1) Locations (visible to staff)
- (2) Signals (audible and visual, use test function)
- (3) Activation at low pressure
- (4) Housekeeping around alarm

Survey of medical gas master alarms should include, but not be limited to, the following:

- (1) Locations (visible to appropriate staff)
- (2) Signals (audible and visual, use test function)
- (3) Activation at low pressure
- (4) Housekeeping around alarm

Survey of zone valves should include, but not be limited to, the following:

- (1) Locations (relationship to terminals controlled)
- (2) Leaks
- (3) Labeling
- (4) Housekeeping around alarm

Survey of medical gas outlet/inlets should include, but not be limited to, the following:

- (1) Flow and function
- (2) Latching/delatching
- (3) Leaks
- (4) General condition (noninterchangeable indexing)

The facility should retain a written or an electronic copy of all findings and any corrections performed.

- **A.6.1** Although complete compliance with this chapter is desirable, variations in existing health care facilities should be considered acceptable in instances where wiring arrangements are in accordance with prior editions of this document or afford an equivalent degree of performance and reliability. Such variations could occur, particularly with certain wiring in separate or common raceways, with certain functions connected to one or another system or branch, or with certain provisions for automatically or manually delayed restoration of power from the alternate (emergency) source of power.

• **N A.6.2.1** Electrical systems can be subject to the occurrence of electrical fires. Grounding systems, overcurrent protective devices, and other subjects discussed in this code could be intended for fire prevention as well as other purposes. This aspect of electrical systems is the primary focus of other NFPA standards and will not be emphasized herein.

• **N A.6.2.4** Facilities in which the normal source of power is supplied by two or more separate central station-fed services experience greater than normal electrical service reliability than those with only a single feed. Such a dual source of normal power consists of two or more electrical services fed from separate generator sets or a utility distribution network that has multiple power input sources and is arranged to provide mechanical and electrical separation so that a fault between the facility and the generating sources is not likely to cause an interruption of more than one of the facility service feeders.

• **N A.6.3.2.1** Assignment of degree of reliability of electrical systems in health care facilities depends on the careful evaluation of the variables at each particular installation. For further information, see ANSI/IEEE 493-2007, *Recommended Practice for the Design of Reliable Industrial and Commercial Power Systems*.

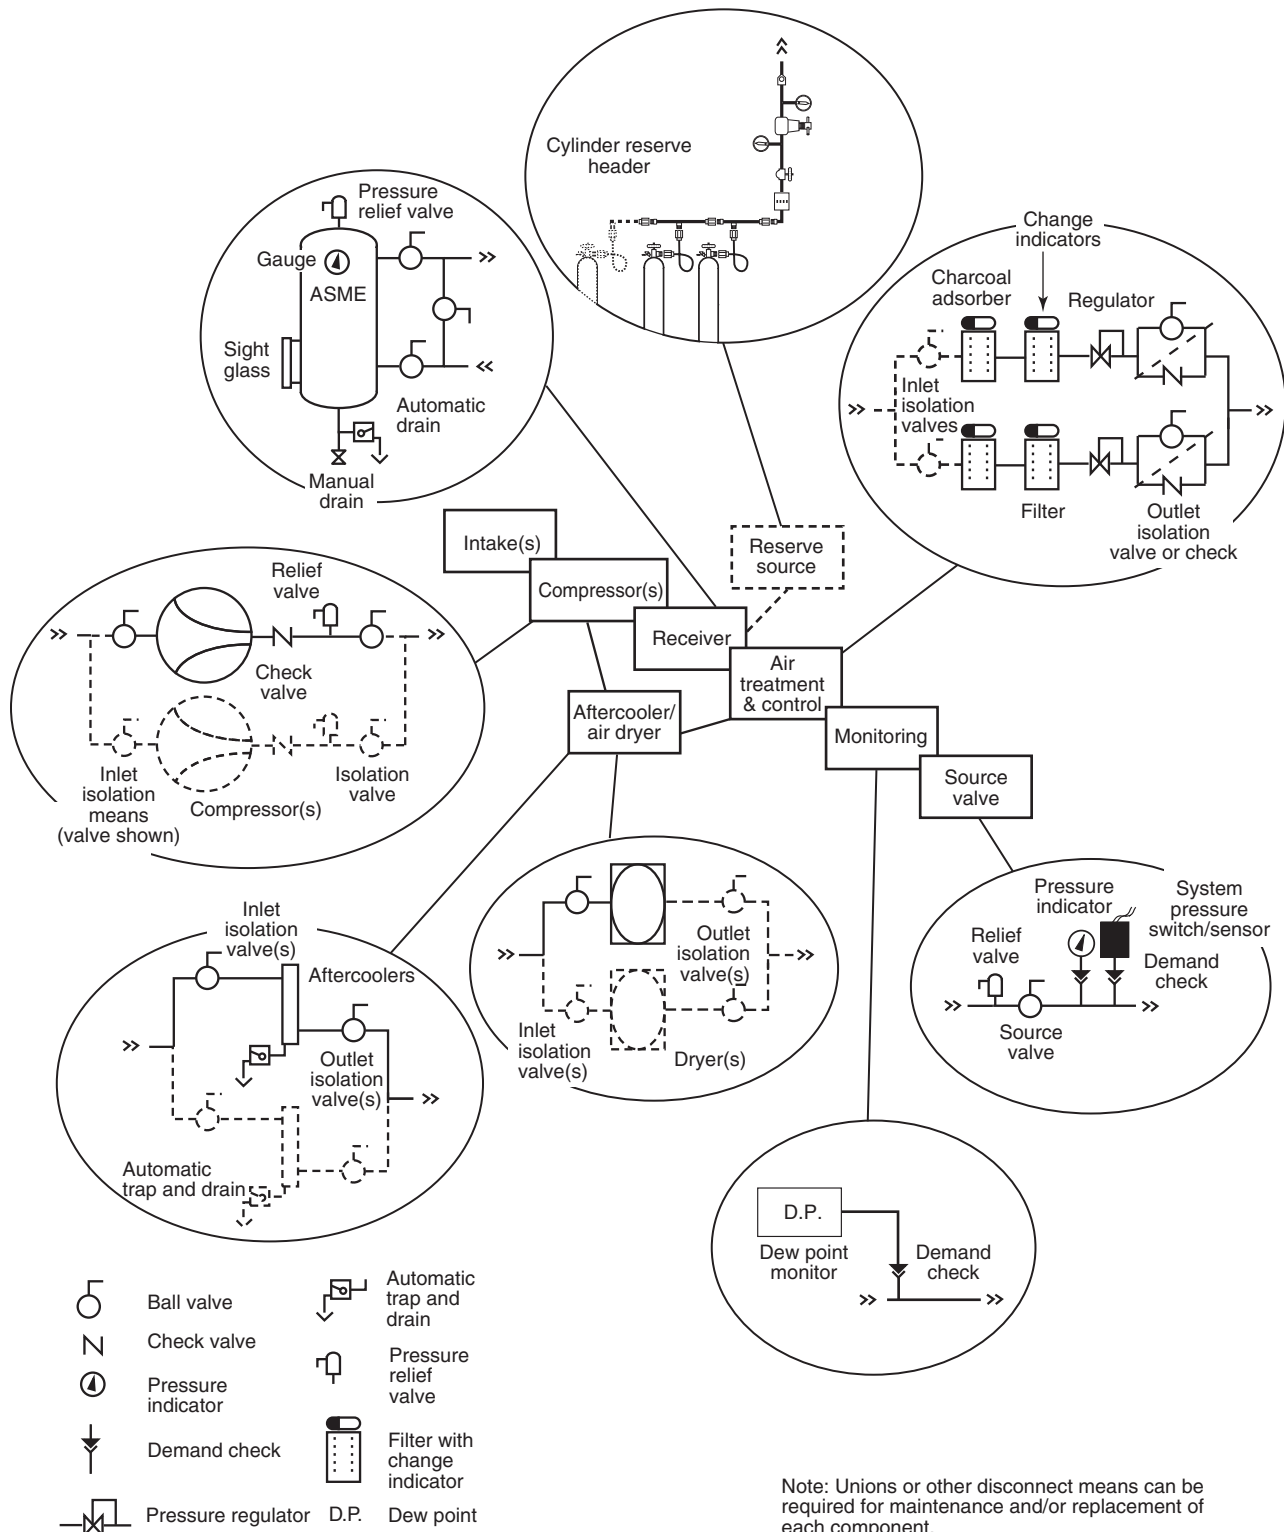


FIGURE A.5.1.13.3.4 Elements of Typical Instrument Air Source.

N A.6.3.2.2.1 It is best, if possible, to employ only one type of receptacle (standard three-prong type) for as many receptacles being served by the same line voltage to avoid the inability to connect life-support equipment in emergencies. The straight-blade, three-prong receptacle is now permitted in all locations in a hospital. Previously, special receptacles were specified in operating room locations and have caused compatibility problems.

N A.6.3.2.2.5 Care should be taken in specifying a system containing isolated ground receptacles, because the grounding impedance is controlled only by the grounding wires and does not benefit from any conduit or building structure in parallel with it.

N A.6.3.2.2.7 A clinical laboratory is a space where diagnostic tests are performed as part of patient care.

A.6.3.2.3.1 Moisture can reduce the contact resistance of the body, and electrical insulation is more subject to failure.

A.6.3.2.3.4 In conducting a risk assessment, the health care governing body should consult with all relevant parties, including, but not limited to, clinicians, biomedical engineering staff, and facility safety engineering staff.

N A.6.3.2.3.8 The health care facility's governing body and designer of record should evaluate the type of protection to be provided against electrical shock to patients and caregivers in wet procedure locations. The application considerations should include but not be limited to the reliability of power to critical equipment and systems.

A.6.3.2.4 The requirement that branch circuits be fed from not more than one distribution panel was introduced for several reasons. A general principle is to minimize possible potential differences between the grounding pins of receptacles in one area by bringing the grounding conductors to a common point. A specific reason is to simplify maintenance by making it easier to find the source for the receptacles in a room. This is particularly a problem in hospitals where emergency conditions might require rapid restoration of power.

A.6.3.2.5.1.5 The requirement for grounding interconnection between the normal and essential power systems follows the principle of minimizing possible potential differences between the grounding pins of receptacles in one area by bringing the grounding conductors to a common point.

N A.6.3.2.5.3 Special grounding methods could be required in patient vicinities immediately adjacent to rooms containing high-power or high-frequency equipment that causes electrical interference with monitors or other electromedical devices. In extreme cases, electromagnetic induction can cause the voltage limits of 6.3.3.1 to be exceeded.

Electromagnetic interference problems can be due to a variety of causes, some simple, others complex. Such problems are best solved one at a time. In some locations, grounding of stretchers, examining tables, or bed frames will be helpful. Where necessary, a patient equipment grounding point should be installed. This can usually be accomplished even after completion of construction by installing a receptacle faceplate fitted with grounding posts. Special grounding wires should not be used unless they are found to be essential for a particular location, because they can interfere with patient care procedures or present trip hazards.

A.6.3.2.8.4 Within the constraints of the equipment provided, consideration should be given to coordinating circuit breakers, fuses, and other overcurrent protective devices so that power interruption in that part of the circuit that precedes the interrupting device closest to a fault is not likely to occur.

- A.6.3.2.9** Patient protection is provided primarily by an adequate grounding system. The ungrounded secondary of the isolation transformer reduces the cross-sectional area of grounding conductors necessary to protect the patient against voltage resulting from fault current by reducing the maximum current in case of a single probable fault in the grounding system. The line isolation monitor is used to provide warning when a single fault occurs. Excessive current in the grounding conductors will not result in a hazard to the patient unless a second fault occurs. If the current in the grounding system does not exceed 10 mA, even under fault conditions, the voltage across 3 m (9.84 ft) of No. 12 AWG wire will not exceed 0.2 mV, and the voltage across 3 m (9.84 ft) of No. 18 AWG grounding conductor in a flexible cord will not exceed 0.8 mV. Allowing 0.1 mV across each connector, the voltage between two pieces of patient-connected equipment will not exceed 2 mV.

The reference grounding point is intended to ensure that all electrically conductive surfaces of the building structure, which could receive heavy fault currents from ordinary (grounded) circuits, are grounded in a manner to bypass these heavy currents from the operating room.

- N A.6.3.2.9.2.1** It is desirable to limit the size of the isolation transformer to 10 kVA or less and to use conductor insulation with low leakage to meet the impedance requirements. Keeping branch circuits short and using insulation with a dielectric constant less than 3.5 and insulation resistance constant greater than 6100 megohmmeters at 16°C (20,000 megohm-ft at 60°F) reduces leakage from line to ground.

To correct milliammeter reading to line impedance, use the following equation:

[A.6.3.2.9.2.1]

$$\text{Line impedance (in ohms)} = \frac{V \cdot 1000}{I}$$

where:

V = isolated power system voltage

I = milliammeter reading made during impedance test

- N A.6.3.2.9.3.1** Protection for the patient is provided primarily by a grounding system. The ungrounded secondary of the isolation transformer reduces the maximum current in the grounding system in case of a single fault between either isolated power conductor and ground. The line isolation monitor provides warning when a single fault occurs, or when excessively low impedance to ground develops, which might expose the patient to an unsafe condition if an additional fault occurs. Excessive current in the grounding conductors will not result from a first fault. A hazard exists if a second fault occurs before the first fault is cleared.

- N A.6.3.2.9.3.3** It is desirable to reduce this monitor hazard current, provided that this reduction results in an increased "not alarm" threshold value for the fault hazard current.

N A.6.3.2.9.3.4 It is desirable to locate the ammeter such that it is conspicuously visible to persons in the anesthetizing location.

The line isolation monitor can be a composite unit, with a sensing section cabled to a separate display panel section on which the alarm and test functions are located, if the two sections are within the same electric enclosure.

N A.6.3.3.1.1 In a conventional grounded power distribution system, one of the line conductors is deliberately grounded, usually at some distribution panel or the service entrance. This grounded conductor is identified as the neutral conductor. The other line conductor(s) is the high side of the line. The loads to be served by this distribution system are fed by the high and neutral conductors.

In addition to the high and neutral conductors, a grounding conductor is provided. One end is connected to the neutral at the point where the neutral is grounded, and the other end leads out to the connected loads. For purposes here, the load connection point will be considered to be a convenience receptacle, with the grounding conductor terminating at the grounding terminal of that receptacle.

This grounding conductor can be a separate wire running from the receptacle back to the remote grounding connection (where it joins the neutral conductor). If that separate conductor does not make any intermediate ground contacts between the receptacle and the remote ground, then the impedance of the connection between the receptacle and the remote ground is primarily the resistance of the grounding conductor itself and is, therefore, predictable.

If, however, the receptacle is also interconnected with the remote ground point by metallic conduit or other metallic building structures, the impedance of the circuit between the receptacle and remote ground is not easily predictable; nor is it easy to measure accurately, although one can be sure that the impedance will be less than that of the grounding wire itself because of the additional parallel paths.

Fortunately, as will become apparent in the paragraphs that follow, the absolute value of the apparent impedance between the grounding contact of an outlet and the remote ground point need not be known or measured with great accuracy.

Ideally, and under no-fault conditions, the grounding system described earlier is supposed to be carrying no current at all. If this were true, then no voltage differences would be found between exposed conductive surfaces of any electrical appliances that were grounded to the grounding contacts of the receptacles that powered them. Similarly, there would be no voltage differences between these appliances and any other exposed metal surface that was also interconnected with the grounding system, provided that no currents were flowing in that interconnection.

Ideal conditions, however, do not prevail, and even when there are no "faults" within an appliance, residual "leakage" current does flow in the grounding conductor of each of the appliances, producing a voltage difference between the chassis of that appliance and the grounding contact of the receptacle that feeds it. Furthermore, this current can produce voltage differences among other appliances plugged into various receptacles on the system.

If, however, a breakdown of insulation between the high side of the line and the chassis of an appliance occurs, the leakage

condition becomes a fault condition, the magnitude of which is limited by the nature of the breakdown, or, in the case of a dead short circuit in the appliance, the magnitude of the fault current is limited only by the residual resistance of the appliance power cord conductors and that of the power distribution system. In the event of such a short circuit, the impedance of the grounding circuit, as measured between the grounding contact of the receptacle that feeds the defective appliance and the remote ground point where the neutral and grounding conductors are joined, should be so small that a large enough fault current will flow to ensure a rapid breaking of the circuit by the overcurrent protective device that serves that receptacle.

For a 20-A branch circuit, a fault current of 40 A or more would be required to ensure a rapid opening of the branch-circuit overcurrent protective device. This corresponds to a circuit impedance of 3 ohms or less, of which the grounding system should contribute 1 ohm or less.

During the time this large fault current flows in the grounding system, the chassis of the defective appliance is raised many volts above other grounded surfaces in the same vicinity. The hazard represented by this condition is minimized by the fact that it exists for only a short time, and, unless a patient simultaneously contacts both the defective appliance and some other grounded surface during this short time interval, there is no hazard. Furthermore, the magnitude of an applied voltage required to produce a serious shock hazard increases as its duration decreases, so the rapidity with which the circuit is interrupted helps reduce shock hazard even if such a patient contact occurs.

If, however, the defect in the appliance is not such as to cause an immediate circuit interruption, then the effect of this intermediate level of fault current on the voltages appearing on various exposed conductive surfaces in the patient care vicinity should be considered.

Because all of this fault current flows in the grounding conductor of the defective appliance's power cord, the first effect is to raise the potential of this appliance above that of the receptacle that feeds it by an amount proportional to the power cord grounding conductor resistance. This resistance is required to be less than 0.15 ohm, so fault currents of 20 A or less, which will not trip the branch-circuit overcurrent protective device, will raise the potential of the defective appliance above the grounding contact of its supply receptacle by only 3 V or less. This value is not hazardous for casual contacts.

The fault current that enters the grounding system at the grounding contact of any receptacle in the patient care vicinity could affect the potential at the grounding contacts of all the other receptacles, and, more importantly, it could produce significant voltage differences between them and other grounded surfaces, such as exposed piping and building structures.

If one grounded point is picked as a reference (a plumbing fixture in or near the patient care vicinity, for example), and the voltage difference is then measured between that reference and the grounding contact of a receptacle, produced by driving some known current into that contact, a direct measure of the effectiveness of the grounding system within the patient care vicinity is obtained. The "figure of merit" can be stated as so many volts per ampere of fault current. The ratio volts per ampere is, of course, impedance; but because the exact path taken by the fault current is not known, and because the way in which the reference point is interconnected with the ground-

ing system is not known, it cannot be stated that this value is the impedance between the receptacle and some specific point, such as the joining of the neutral and grounding conductors. However, it can be stated that this measured value of “effective impedance” is indicative of the effectiveness with which the grounding system minimizes voltage differences between supposedly grounded objects in the patient care vicinity that are produced by ground faults in appliances used in that vicinity. This impedance, which characterizes the ability of the grounding system to maintain nearly equipotential conditions within the patient care vicinity, is of prime importance in assessing shock hazard; but this impedance is not necessarily the same as the impedance between receptacle and remote ground point, which controls the magnitude of the short-circuit current involved in tripping the branch-circuit overcurrent protective device.

Fault currents on the grounding system can also come from neutral-to-ground faults, which allow some current to flow in the neutral and some in the ground. This type of fault is often the cause of interference on EEG and ECG equipment. It is often not recognized easily because, except for 60 Hz interference, the equipment works perfectly properly. It is most easily found by causing a substantial change in the line-to-line load and noting changes in the ground-to-reference voltage.

N A.6.3.3.1.1.4 The grounding system (reference ground and conduit) is to be tested as an integral system. Lifting of grounds from receptacles and fixed equipment is not required or recommended for the performance of this test.

N A.6.3.3.1.3 Effective grounding to safely handle both fault and leakage currents requires following the requirements of both Chapter 6 of NFPA 99 and Article 250 of *NFPA 70*; having good workmanship; and using some techniques that are not found in these documents.

The performance of the grounding system is made effective through the existence of the green grounding wire, the metal raceway, and all of the other building metal. Measurements have shown that it is the metal raceway and building steel that provide most of the effective grounding path of less than 10 milliohms at the receptacle, including plug-to-receptacle impedance. The green grounding wire becomes a backup, not a primary grounding path performer.

Good practice calls for each receptacle to have a good jumper grounding connection to the metal raceway at the receptacle location in addition to having the green grounding wire connecting these points to the grounding bus in the distribution panel. Good workmanship includes seeing that these grounding connections are tight at each receptacle and that all metal raceway joints are secure and tight.

The voltage difference measurements listed in 6.3.3.1.3 in connection with power distribution grounding systems should ideally be made with an oscilloscope or spectrum analyzer in order to observe and measure components of leakage current and voltage differences at all frequencies.

For routine testing, such instruments could be inconvenient. An alternative is to use a metering system that weighs the contribution to the meter reading of the various components of the signal being measured in accordance with their probable physiological effect.

A meter specifically designed for this purpose would have an impedance of approximately 1000 ohms, and a frequency char-

acteristic that was flat to 1 kHz, dropped at the rate of 20 decibels per decade to 100 kHz, and then remaining flat to 1 MHz or higher. This frequency response characteristic could be achieved by proper design of the internal circuits of the amplifier that probably precedes the indicating instrument or by appropriate choice of a feedback network around the amplifier. These details are, of course, left to the instrument designer.

If a meter specifically designed for these measurements is not available, a general-purpose laboratory millivoltmeter can be adapted for the purpose by adding a frequency response-shaping network ahead of the meter. One such suggested network is shown in Figure A.6.3.3.1.3(a).

The circuit shown Figure A.6.3.3.1.3(a) is especially applicable to measurements of leakage current, where the current being measured is derived from a circuit whose source impedance is high compared to 1000 ohms. Under these conditions, the voltage developed across the millivoltmeter will be proportional to the impedance of the network. The network impedance will be 1000 ohms at low frequencies and 10 ohms at high frequencies, and the transition between these two values will occur in the frequency range between 1 kHz and 100 kHz.

The basic low-frequency sensitivity will be 1 mV of meter reading for each 1 mA of leakage current.

The millivoltmeter's own input impedance needs to be very large compared to 1000 ohms (100 kilohms), and the meter should have a flat frequency response to well beyond 100 kHz. (If the meter impedance is lower than 100 kilohms, then the 1000 ohm resistor can be raised to a higher value, such that the impedance of that resistor in parallel with the meter will still be 1000 ohms.)

The circuit in Figure A.6.3.3.1.3(a) can be used for the voltage difference measurements required in Section 6.5, but, because the source impedance will be very low compared to 1000 ohms, the frequency response of the measurement system will remain flat. If any high-frequency components produced, for example, by pickup from nearby radio frequency transmitters appear on the circuit being measured, then they will not be attenuated, and the meter reading will be higher than it should be.

For meter readings below any prescribed limits, this possible error is of no consequence. For borderline cases, it could be significant. To avoid this uncertainty when making voltage-difference measurements, a slightly more elaborate version of a frequency response-shaping network is given in Figure A.6.3.3.1.3(b).

Here the source being measured is separated from the frequency response-shaping network by the combination of the 900 ohm and 100 ohm resistors. The frequency response characteristic is now independent of the circuit being tested.

The millivoltmeter should have an input impedance of 150 kilohms and a frequency response that is flat to well beyond 100 kHz.

This independence is achieved, however, at a loss in signal delivered to the millivoltmeter. The basic low-frequency sensitivity of this metering circuit is 1 mV of meter reading for 10 A of leakage current or, on a voltage basis, 1 mV of meter reading for 10 mV at the input terminals of the network.

For either of the suggested networks, the resistors and capacitors should be mounted in a metal container close to the millivoltmeter to avoid stray pickup by the leads going to the meter.

A.6.3.3.1.4 It is not the intent that each receptacle be tested. It is intended that compliance be demonstrated through random testing. The 10 percent random testing should include a mixture of both normal and emergency receptacles.

A.6.3.4.1.1 Although several approaches to documentation exist in hospitals, the minimum acceptable documentation should identify what was tested, when it was tested, and whether it performed successfully. Adopting a system of exception reporting can be the most efficient form of record keeping for routine rechecks of equipment or systems, thereby minimizing technicians' time in recording the value of each measurement taken. For example, once a test protocol is established, which simply means testing the equipment or system consistent with Chapter 6, the only item (value) that needs to be recorded is the failure or the deviation from the requirements of the chapter that was detected when a corrective action (repair) was undertaken. This approach can serve to eliminate, for example, the need to keep individual room sheets to record measured results on each receptacle or to record measurement values of all types of leakage current tests.

A.6.7 Requirements found in 6.7.1 through 6.7.4 are general requirements for both Type 1 and Type 2 EES.

A.6.7.1.1 *Connection to Dual Source of Normal Power.* For the greatest assurance of continuity of electrical service, the normal source should consist of two separate full-capacity services, each independent of the other. Such services should be selected and installed with full recognition of local hazards of interruption, such as icing and flooding. Where more than one full-capacity service is installed, they should be connected in such a manner that one will pick up the load automatically upon loss of the other, and should be so arranged that the load of the emer-

gency and equipment systems will be transferred to the alternate source (generator set) only when both utility services are de-energized, unless this arrangement is impractical and waived by the authority having jurisdiction. Such services should be interlocked in such a manner as to prevent paralleling of utility services on either primary or secondary voltage levels. Note that, in any installation where it is possible to parallel utility supply circuits (e.g., to prevent interruption of service when switching from one utility source to another) it is imperative to consult the power companies affected as to problems of synchronization. Facilities whose normal source of power is supplied by two or more separate central station-fed services (dual sources of normal power) experience greater reliability than those with only a single feed. *Installation of Generator Sets.* For additional material on diesel engines, see National Research Council Publication 1132, *Diesel Engines for Use with Generators to Supply Emergency and Short Term Electric Power* (see Annex D).

A.6.7.1.2.5.3 The intent of 6.7.1.2.5.3 is as follows:

- (1) Contiguous or same-site nonhospital buildings can be served by the generating equipment. However, such loads should not compromise the integrity of the system serving the hospital. Thus, any such contiguous or same-site nonhospital buildings can be served by the generating equipment only if the transfer means operates in accordance with 6.7.1.2.5.3.
- (2) Within a hospital building, 6.7.5.1.3.2(10) permits "additional" loads on the critical branch and 6.7.5.1.4.4(9) permits "other equipment" on the equipment system in order to provide limited flexibility to a facility to add one or two loads not otherwise listed in 6.7.5.1.3.2(1) through 6.7.5.1.3.2(10), 6.7.5.1.4.3, or 6.7.5.1.4.4(1) through 6.7.5.1.4.4(9) to a critical branch panel or an equipment system panel. This is permitted to prevent the need for an additional panel to serve a small number of selected circuits in a particular area. These sections are not intended to permit large blocks of loads not listed in these sections to be on the critical branch or equipment system. The intent of the division of the essential system loads into systems and branches is to ensure maximum reliability of service to loads considered essential. Every additional load placed onto a system somewhat increases the probability of a failure on the system that threatens the integrity of service to the balance of loads served by the system. Therefore, while "additional" loads and "other equipment" are permitted to be placed onto the critical branch and equipment system in very limited situations, where a facility wants to put large blocks of loads not listed in 6.7.5.1.3.2(1) through 6.7.5.1.3.2(10), 6.7.5.1.4.3, or 6.7.5.1.4.4(1) through 6.7.5.1.4.4(9) onto the generating equipment, the facility is permitted to do so, but only by designating these large blocks of loads as "optional loads" and by complying with 6.7.1.2.5.3.

A.6.7.1.2.7 It is the intent of 6.7.1.2.7 to mandate generator sizing based upon actual demand likely to be produced by the connected load of the essential electrical system(s) at any one time. It is not the intent that generator sizing be based upon connected load or feeder calculation procedures described in *NFPA 70*. Demand calculations should be based upon prudent demand factors and historical data.

A.6.7.1.2.10 During operation, EPS and related equipment reject considerable heat that needs to be removed by proper

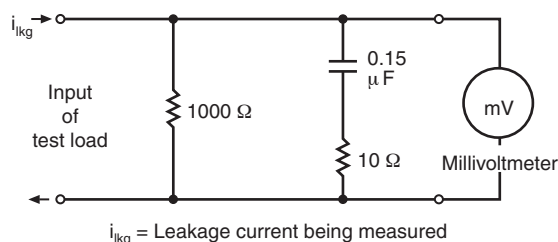


FIGURE A.6.3.3.1.3(a) Circuit Used to Measure Leakage Current with High Source Impedance.

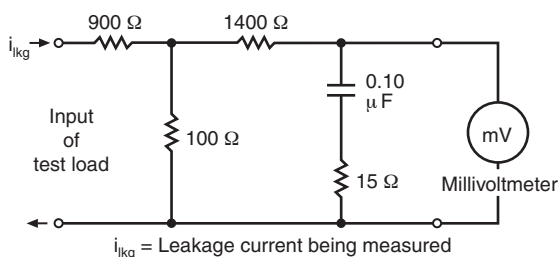


FIGURE A.6.3.3.1.3(b) Circuit Used to Measure Leakage Current with Low Source Impedance.

ventilation or air-cooling. In some cases, outdoor installations rely on natural air circulation, but enclosed installations need properly sized, properly positioned ventilation facilities, to prevent recirculation of cooling air. The optimum position of air-supply louvers and radiator air discharge is on opposite walls, both to the outdoors. [110:A.7.7.1]

- **N A.6.7.1.2.15.3** As a supplement to hard-wired alarm annunciations, it is permissible to have Level 1 and Level 2 EPS and ATS functions monitored off-site. Monitoring stations can include pagers, cell phones, and Internet-connected devices.

A.6.7.1.4.3 This can be accomplished by operating the system continuously.

- **N A.6.7.2** It should be emphasized that the type of system selected and its area and type of coverage should be appropriate to the medical procedures being performed in the facility. For example, a battery-operated emergency light that switches “on” when normal power is interrupted and an alternate source of power for suction equipment, along with the immediate availability of some portable hand-held lighting, would be advisable where oral and maxillofacial surgery (e.g., extraction of impacted teeth) is performed. On the other hand, in dental offices where simple extraction, restorative, prosthetic, or hygienic procedures are performed, only remote corridor lighting for purposes of egress would be sufficient. Emergency power for equipment would not be necessary. As with oral surgery locations, a surgical clinic requiring use of life-support or emergency devices, such as suction machines, ventilators, cauterizers, or defibrillators, would require both emergency light and power.

- **N A.6.7.2.1.2(5)** Careful consideration should be given to the location of the spaces housing the components of the essential electrical system to minimize interruptions caused by natural forces common to the area (e.g., storms, floods, or earthquakes; or hazards created by adjoining structures or activities).

Consideration should also be given to the possible interruption of normal electrical services resulting from similar causes as well as possible disruption of normal electrical service due to internal wiring and equipment failures. Consideration should be given to the physical separation of the main feeders of the essential electrical system from the normal wiring of the facility to prevent possible simultaneous destruction as a result of a local catastrophe.

In selecting electrical distribution arrangements and components for the essential electrical system, high priority should be given to achieving maximum continuity of the electrical supply to the load. Higher consideration should be given to achieving maximum reliability of the alternate power source and its feeders rather than protection of such equipment, provided that the protection is not required to prevent a greater threat to human life such as fire, explosion, electrocution, and so forth, than would be caused by the lack of an essential electrical supply.

- **N A.6.7.2.2.2** It is important that the various overcurrent devices be coordinated, as far as practicable, to isolate faulted circuits and to protect against cascading operation on short-circuit faults. In many systems, however, full coordination could compromise safety and system reliability. Primary consideration also should be given to prevent overloading of equipment by limiting the possibilities of large current inrushes due to instantaneous re-establishment of connections to heavy loads. The

terms coordination and coordinated as used in 6.7.2.2.2 do not cover the full range of overcurrent conditions.

- **N A.6.7.2.2.5.1(A)** Where special loads require more rapid detection of power loss, underfrequency monitoring also might be provided. Upon frequency decay below the lower limit necessary for proper operation of the loads, the transfer switch should automatically initiate transfer to the alternate source. (See A.6.2.15 of NFPA 110.) [110:A.6.2.2.1]

A.6.7.2.2.5.1(A)(2) See 6.2.5 and 6.2.7 of NFPA 110. [110:A.6.2.2.1(2)]

- **N A.6.7.2.2.5.3** Authorized personnel should be available and familiar with manual operation of the transfer switch and should be capable of determining the adequacy of the alternate source of power prior to manual transfer. [110:A.6.2.4]

- **N A.6.7.2.2.5.4** For most applications, a nominal delay of 1 second is adequate. The time delay should be short enough so that the generator can start and be on the line within the time specified for the type classification. [110:A.6.2.5]

- **N A.6.7.2.2.5.7** It is recommended that the timer for delay on retransfer to the primary source be set for 30 minutes. The 30-minute recommendation is to establish a “normalized” engine temperature, when it is beneficial for the engine. NFPA 70 establishes a minimum time requirement of 15 minutes. [110:A.6.2.8]

- **N A.6.7.2.2.5.11** For maintenance purposes, consideration should be given to a transfer switch counter. [110:A.6.2.13]

- **N A.6.7.2.2.5.13** Automatic transfer switches (ATS) can be provided with accessory controls that provide a signal to operate remote motor controls that disconnect motors prior to transfer, and to reconnect them after transfer when the residual voltage has been substantially reduced. Another method is to provide inphase monitors within the ATS in order to prevent retransfer to the primary source until both sources are nearly synchronized. A third method is to use a programmed neutral position transfer switch. See Section 230.95(B) of NFPA 70. [110:A.6.2.15]

- **N A.6.7.2.2.5.15** Standards for nonautomatic transfer switches are similar to those for automatic transfer switches, as defined in 3.3.7.1 and 3.3.7.3 of NFPA 110 with the omission of automatic controls. [110:A.6.2.16]

- **N A.6.7.2.2.8.3** Consideration should be given to the effect that load interruption could have on the load during maintenance and service of the transfer switch.

A.6.7.2.3 Type 1 essential electrical systems are comprised of three separate branches capable of supplying a limited amount of lighting and power service that is considered essential for life safety and effective facility operation during the time the normal electrical service is interrupted for any reason. These three separate branches are the life safety, critical, and equipment branches.

- **N A.6.7.2.3.5(B)** If color is used to identify these receptacles, the same color should be used throughout the facility.

- **N A.6.7.4.1.1.5(A)** When events, such as the issuance of storm warnings, indicate that power outages might be likely, good practice recommends the warming up of generator sets by a regular exercise period. Operation of generator sets for short

intervals should be avoided, particularly with compression ignition engines, since it is harmful to the engines.

Records of changes to the essential electrical system should be maintained so that the actual demand likely to be produced by the connected load will be within the available capacity.

A.6.7.4.1.2.1 Main and feeder circuit breakers should be periodically tested under simulated overload trip conditions to ensure reliability.

A.6.7.5 General requirements from 6.7.1 through 6.7.4 are also applicable to Type 1 EES.

A.6.7.5.1.2.4(3) Departmental installations such as digital dialing systems used for intradepartmental communications could have impaired use during a failure of electrical service to the area. In the event of such failure, those systems that have lighted selector buttons in the base of the telephone instrument or in the desk units known as “director sets” will be out of service to the extent that the lights will not function and that the buzzer used to indicate incoming calls will be silenced. The lack of electrical energy will not prevent the use of telephones for outgoing calls, but incoming calls will not be signaled, nor will intercommunicating calls be signaled. This communication failure should be taken into consideration in planning essential electrical systems.

A.6.7.5.1.3 It is recommended that facility authorities give consideration to providing and properly maintaining automatic battery-powered lighting units or systems to provide minimal task illumination in operating rooms, delivery rooms, and certain special-procedure radiology rooms, where the loss of lighting due to failure of the essential electrical system could cause severe and immediate danger to a patient undergoing surgery or an invasive radiographic procedure.

A.6.7.5.1.3.2(6) Departmental installations such as digital dialing systems used for intradepartmental communications could have impaired use during a failure of electrical service to the area. In the event of such failure, those systems that have lighted selector buttons in the base of the telephone instrument or in the desk units known as “director sets” will be out of service to the extent that the lights will not function and that the buzzer used to indicate incoming calls will be silenced. The lack of electrical energy will not prevent the use of telephones for outgoing calls, but incoming calls will not be signaled, nor will intercommunicating calls be signaled. This communication failure should be taken into consideration in planning essential electrical systems.

A.6.7.5.1.4.3 The equipment in 6.7.5.1.4.3(A)(1) through 6.7.5.1.4.3(A)(3) can be arranged for sequential delayed-automatic connection to the alternate power source to prevent overloading the generator where engineering studies indicate that it is necessary.

A.6.7.5.1.4.4 For elevator cab lighting control and signal system requirements, see 6.7.5.1.2.4(5).

In instances where interruption of normal power would result in other elevators stopping between floors, throw-over facilities should be provided to allow the temporary operation of any elevator for the release of patients or other persons who are confined between floors.

A.6.7.5.1.4.4(2) The outside design temperature is based on the 97½ percent design value, as shown in Chapter 24 of the *ASHRAE Handbook of Fundamentals*.

A.6.7.5.1.4.4(9) Consideration should be given to selected equipment in kitchens, laundries, and radiology rooms and to selected central refrigeration.

It is desirable that, where heavy interruption currents can be anticipated, the transfer load be reduced by the use of multiple transfer devices. Elevator feeders, for instance, might be less hazardous to electrical continuity if they are fed through an individual transfer device.

A.6.7.5.2.1 See *NFPA 70* for installation requirements.

A.6.7.6 General requirements from 6.7.1 through 6.7.4 are also applicable to Type 2 EES.

A.6.7.6.2.1 Type 2 essential electrical systems are comprised of two separate branches capable of supplying a limited amount of lighting and power service that is considered essential for the protection of life and safety and effective operation of the institution during the time normal electrical service is interrupted for any reason. These two separate branches are the life safety and equipment branches.

The number of transfer switches to be used should be based upon reliability, design, and load considerations. Each branch of the essential electrical system should have one or more transfer switches. One transfer switch should be permitted to serve one or more branches in a facility with a maximum demand on the essential electrical system of 150 kVA (120 kW).

A.6.7.6.2.1.5(C)(4) Departmental installations such as digital dialing systems used for intradepartmental communications could have impaired use during a failure of electrical service to the area. In the event of such failure, those systems that have lighted selector buttons in the base of the telephone instrument or in the desk units known as “director sets” will be out of service to the extent that the lights will not function and that the buzzer used to indicate incoming calls will be silenced. The lack of electrical energy will not prevent the use of telephones for outgoing calls, but incoming calls will not be signaled, nor will intercommunicating calls be signaled. This communication failure should be taken into consideration in planning essential electrical systems.

A.6.7.6.2.1.6(E) Other selected equipment can be served by the equipment branch. Note that consideration should be given to selected equipment in kitchens and laundries and to selected central refrigeration.

It is desirable that, where heavy interruption currents can be anticipated, the transfer load be reduced by the use of multiple transfer devices. Elevator feeders, for instance, might be less hazardous to electrical continuity if they are fed through an individual transfer device.

A.6.7.6.2.1.6(E)(1)(a) The outside design temperature is based on the 97½ percent design value, as shown in Chapter 24 of the *ASHRAE Handbook of Fundamentals*.

A.6.7.6.2.1.6(E)(2) For elevator cab lighting, control, and signal system requirements, see 6.7.6.2.1.5(C)(6).

A.6.7.6.3.1 See *NFPA 70* for installation requirements.

A.6.7.6.3.2 If color is used to identify these receptacles, the same color should be used throughout the facility.

A.7.1 Additional information on these systems can be found in IEEE 602, *Recommended Practice for Electric Systems in Health Care Facilities*, and the FGI Guidelines.

▲ **A.7.3.1.2** Additional information can be found in ANSI/TIA 569-D, *Telecommunications Pathways and Spaces*.

- **A.7.3.1.2.1.4(C)** Such systems can include security, nurse call, cable television, patient education, voice, data, head end equipment for clinical systems, and similar low voltage systems.

• **A.7.3.1.2.1.8(B)** Supplying the circuits serving equipment in the telecommunications entrance facility through an uninterrupted power system (UPS) provides a desirable level of redundancy.

A.7.3.1.2.1.8(C) Consideration should be given to the reliability of power supply to the HVAC equipment because of its important function within the telecommunications entrance facility.

A.7.3.1.2.2.2 In combined spaces, care should be taken to provide separation of, and adequate service access for, service provider equipment.

• **A.7.3.3.1.1** Depending on the size and scope of the Category 1 space, an audiovisual type system or tone visual type system may be used for the nurse call system. While both system types provide audible tones and illuminated light sources to annunciate call events, the audiovisual system provides voice communication capabilities to enable staff to speak with patients or other staff at locations remote from the patient's room. Depending on the requirements for the different care areas, combinations of audiovisual and tone visual nurse call system equipment can be used.

A.7.3.3.1.1.3 The fundamental operation of a listed nurse call system provides alerts and notifications of call system events. In addition to the call notifications activated by call stations, a nurse call system should also provide alert notifications for system self-monitoring events to annunciate trouble conditions that can occur within the system itself.

A.7.3.3.1.1.5 A nurse call system can be integrated with a wireless communication system for the purposes of providing supplemental call notifications to staff-carried wireless devices. Such notifications are considered supplemental unless the wireless communication system is listed to ANSI/UL 1069. Supplemental communication systems should be provided with appropriate NRTL safety certifications and listings that are consistent with the intended use as a stand-alone wireless communication system.

The requirements in ANSI/IEC/ISO 80001-1-1, *Risk Management of Medical IT-Networks*, and ANSI/IEC/ISO 80001-2-5, *Application of Risk Management for IT-Networks Incorporating Medical Devices — Part 2-5: Application Guidance — Guidance for Distributed Alarm Systems*, should be followed whenever a nurse call system is integrated with a supplemental communication system.

A.7.3.3.1.2.1 Patient carespaces and nursing unit support areas can contain many types of call stations with varying combinations of call initiation functions (e.g., code call, staff emergency, medical device alarm, help, assistance). A single call station can be equipped and configured to activate a single call type or a number of different call types, and can have bidirectional voice communication capability.

A.7.3.3.1.2.2 Patient stations provide a means for patients to summon assistance from the nursing staff. Calling devices such as listed wired or wireless pillow speakers, pendant controls call cords, and patient- or staff-worn personal pendants are permit-

ted to initiate patient or staff calls. A call station that serves two beds is permitted when beds are located adjacent to each other.

A.7.3.3.1.2.3 Primary signaling of a medical device alarm is a requirement of the medical device itself, per the governing regulatory standard, and is beyond the scope of this code.

A.7.3.3.1.3.1 When two or more call stations are located in the same area and all are visible from any call location, the alarm should be capable of being canceled at any of these locations. This method of call cancellation can be applied to all call station types.

A.7.3.3.1.4 A code call can also be referred to as an emergency resuscitation alarm.

A.7.3.3.1.4.1 When two or more call stations are located in the same area and all are visible from any call location, the alarm should be capable of being canceled at any of these locations. This method of call cancellation can be applied to all call station types.

■ **A.7.3.3.5.2** Currently, no standard exists for the certification of a wireless communication system having the specific intended use as a clinical alarm communication and notification system. While desirable for enhancing clinical communications and optimizing clinical workflow, these types of communication systems have inherent reliability limitations. For example, there is no notification at a wireless pager when it is out of range for receiving messages and there is no alert at the central station that the communication device is unreachable or return confirmation that a message has been delivered or received.

A document with information on how to manage and control risk is ANSI-AAMI-IEC 80001-1, *Application of Risk Management for IT-Networks Incorporating Medical Devices — Part 1: Roles, Responsibilities and Activities*.

There might be manufacturers of FDA-cleared medical equipment that can have wireless communication capabilities and that might be FDA cleared for a specific intended use. Such medical equipment would typically be certified to one or more ANSI/AAMIES60601 standards (e.g., 60601-1-1, *General requirements for safety*; 60601-1-2, *Collateral standard for electromagnetic disturbances*; 60601-1-8, *Collateral standard for alarm systems*; and so forth).

The responsible organization can also contract with a provider of communication equipment to integrate a wireless communication system with nurse call system or with the clinical IT-network for the purposes of enhanced clinical staff communications. However, such an integration would not be listed to any governing standard.

Therefore, where a wireless communication system is integrated with the clinical IT-network and used as a clinical alarm notification or enhanced communication system, it is necessary for the responsible organization to follow and enact the risk management requirements established in ANSI-AAMI-IEC TIR 80001-1, *Application of Risk Management for IT-Networks Incorporating Medical Devices — Part 1: Roles, Responsibilities and Activities*.

Further in this context, the end-to-end system integration and its management need to also conform to the guidelines established in ANSI-AAMI-IEC TIR 80001-2-5, *Application of Risk Management for IT-Networks Incorporating Medical Devices — Part 2-5: Guidance on Distributed Alarm Systems*.

N A.7.3.3.7.1 As the clinical environment becomes more and more automated, integrated and evolved there is a need to ensure that the servers and networking equipment that transport interoperable clinical data and communications over a clinical IT network are properly instituted and sufficiently managed. The ANSI-AAMI-IEC 80001-1, *Application of risk management for IT-networks incorporating medical devices—Part 1: Roles, responsibilities and activities*, is the governing standard by which the clinical IT network needs to be managed.

N A.7.3.3.7.2 While all nurse call systems need to be listed to ANSI/UL 1069, *Safety Standard for Hospital Signaling and Nurse Call Equipment*, not all nurse call systems can be identified for use on a shared clinical IT network. Only those nurse call systems that are listed for use on a shared network are permitted to use the clinical IT network infrastructure.

N A.7.3.3.7.3 To ensure an effective, reliable, and resilient clinical IT network, two independent physical pathways providing network communications need to be provided. Both paths need to be at operational readiness at all times. Operational readiness can be ensured by continuous self-monitoring of each path. All equipment items comprising each clinical IT network path need to be verified for availability by means of communication. End-point terminal equipment items (e.g., computers, monitors, discrete medical devices, discrete devices comprising the nurse call system, and so forth), which are connected to but are not part of the clinical IT network, only require one physical connection to the clinical IT network.

N A.7.3.3.7.4 While each physical path of the clinical IT network can comprise both hardwired and wireless IT networking equipment, each path must maintain independent autonomous operational integrity. Network traffic on one path cannot be allowed to cross-over and utilize the same channel of the other path at any time.

N A.7.3.3.7.6 Examples for operational monitoring of the clinical IT network includes, but is not limited to, the following:

- (1) Environmental changes, including risks associated with data and system security vulnerabilities
- (2) Operational/performance feedback from both automated measurement and user feedback (e.g., speed problems, high error rates, equipment failure, malicious software attacks, and so forth)

A.8.2.1 There are no interdependencies for each type of system (e.g., medical gas, electrical, potable water, nonpotable water, nonmedical compressed air, heating). A risk assessment of each system should be conducted to evaluate the risk to the patient, staff, and visitors.

A.8.3.3 Another source of maximum hot water temperatures would be the FGI Guidelines.

A.9.2.1 There are no interdependencies for each type of system (e.g., medical gas, electrical, potable water, nonpotable water, nonmedical compressed air, plumbing). A risk assessment of each system should be conducted to evaluate the risk to the patient, staff, and visitors. It is possible when applying this section to identify multiple categories of systems serving a single patient. For example see A.4.1.

A.9.3.1.3 Previous editions had required smoke purge systems in these locations. The elimination of flammable anesthetics and limited use of combustible material in modern ORs makes this requirement obsolete.

A.9.3.3.2 ASHRAE Guideline 0, *The Commissioning Process*, and ASHRAE Guideline 1.1, *HVAC&R Technical Requirements for the Commissioning Process*, while not mandatory, can provide guidance for this requirement.

A.9.3.6.3 Paragraph 9.3.6.3 only covers fluids that are stored in enclosed spaces.

A.9.3.6.5.1 See Table A.11.3.4.

N A.9.3.8.1 Inlets can be of any design suitable for the plume capture device in use, provided the design does not permit interconnection to any medical vacuum, WAGD, or housekeeping vacuum systems.

Flow control for the inlets should be as appropriate for the plume capture device in use.

A warning system, such as one that uses a building automation system, that monitors the operation of the source equipment should be provided.

N A.9.3.8.1(1) A dedicated medical plume evacuation system can serve multiple locations. The discharge of a dedicated system can be filtered or unfiltered.

A.10.1 An appliance that yields erroneous data or functions poorly is potentially harmful. Quality and assurance of full appliance performance is not covered, except as it relates to direct electrical or fire injury to patients or personnel.

The material in this annex, as it relates to electrical safety, interprets some of the basic criteria by presenting different methodologies and alternative procedures to achieve the level of safety defined by the criteria.

A.10.1.3 Risk categorization is not appropriate for this chapter. Much of the chapter deals with electrical safety issues. Any line-powered device that does not meet these requirements poses the risk of electric shock to patients or personnel, regardless of where it is used or the clinical application of the device. Shock and fire risk is not dependent on the required reliability of the device or the extent to which patient diagnosis and treatment depends on the device. Even categorization regarding direct cardiac connection or patient contact are not relevant as death or injury can occur in any case.

Δ A.10.2.3.2.4 ANSI/AAMI ES60601-1, *Medical Electrical Equipment*, defines the terms *protective earth conductor* and *functional earth conductor*. A protective earth conductor is relied upon for safety and provides one means of protection from electric shock. A functional earth conductor has no safety function and does not provide a means of protection against electric shock. A double-insulated medical product is permitted (but not required) to have a functional earth conductor that is referred to as a *functional ground conductor*.

N A.10.2.3.6 Consideration should be given to certification of relocatable power taps in accordance with UL 1363A, *Outline of Investigation for Special Purpose Relocatable Power Taps*, which addresses the requirements currently in NFPA 99 and additional safety requirements, such as use of hospital-grade receptacle outlets and plugs, integrity of the enclosures, and testing for grounding and leakage current.

N A.10.2.3.6(1) Tape, adhesive, and hook-and-loop fasteners are not considered to be secure means of attachment.

A.10.2.3.6(2) A means of meeting the requirement is through summation of nameplate ampacity of connected equipment

and proactive administrative actions (e.g. education, signs). A circuit protective device (e.g., circuit breaker, surge protector, supplementary protector), alone, is not considered sufficient.

A.10.2.6 Where existing equipment exceeds 500 μA , methods to reduce leakage current, such as the addition of small isolation transformers to that equipment, or methods that provide equivalent safety by adding redundant equipment ground, are permissible.

A.10.3.1 Visual inspections do not have to be formal or documented by any particular staff member. All staff are expected to be observant of the condition of the equipment they use, including power cord assemblies.

A.10.3.2 There are several methods for measuring ground-wire resistance accurately. Three examples are described as follows and shown in Figure A.10.3.2(a) through Figure A.10.3.2(c):

- (1) *Two-Wire Resistance Technique.* A known current is fed through the unknown resistance. A high-input-impedance voltmeter measures the voltage drop across the resistance, R , and R is calculated as voltage divided by impedance, V/I . This technique measures the lead resistance in series with the unknown resistance. When the unknown resistance is a ground wire (less than 0.15 ohm), the lead resistance is appreciable. This is accounted for by shorting the lead wires together and "zeroing" the voltmeter. The actual resistance, in effect, subtracts out the lead wire resistance. In order for this technique to be reasonably accurate for measuring ground wires, an active high-impedance millivoltmeter has to be used.
- (2) *Four-Wire Resistance Technique.* This technique is very similar to the two-wire resistance technique. The difference is that the known current is fed to the resistance to be measured through a pair of leads separate from the pair of leads to the voltmeter. The voltmeter is measuring the true voltage across the resistance to be measured, regardless of the resistance of the measuring leads. This method eliminates the need for zeroing out the measuring lead resistance.
- (3) *AC Current Method.* This technique utilizes a step-down transformer of known voltage output to feed current through the ground wire and measure the current that flows. The impedance of the ground wire is then calculated by Ohm's law.

Note that the internal impedance of the measuring circuit has to be established with the test leads shorted. This value needs to be subtracted from the test measurement.

A.10.3.3 For complex leakage current waveforms, a single reading from an appropriate metering system can represent the physiologically effective value of the composite waveform,

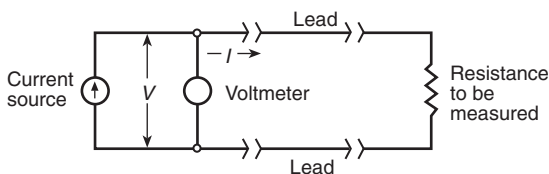


FIGURE A.10.3.2(a) Two-Wire Resistance Technique.

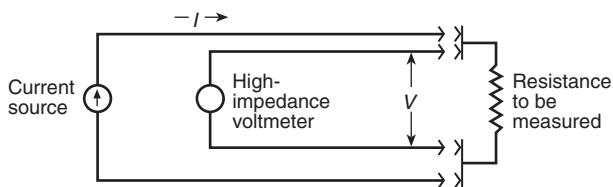


FIGURE A.10.3.2(b) Four-Wire Resistance Technique.

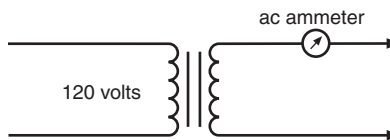


FIGURE A.10.3.2(c) AC Current Method.

provided that the contribution of each component to the total reading is weighted in accordance with 10.3.3.

This weighting can be achieved by a frequency response-shaping network that precedes a flat-response meter, or by a meter whose own frequency response characteristic matches that of 10.3.3.

If the required performance is obtained by a meter with integral response-shaping properties, then that meter should have a constant input resistance of 1000 ohms. (A high-input-impedance meter can be used by shunting a 1000 ohm resistor across the meter's input terminals.)

If, however, the required frequency response is obtained by a network that precedes an otherwise flat-response meter, then the input impedance of the network should be 1000 ohms ± 10 percent, over the frequency range from 0 to 1 MHz, and the frequency response of the network-meter combination should be substantially independent of the impedance of the signal source.

For maximum chassis leakage current permitted (i.e., 300 μA) below 1 kHz, this network will yield the limiting current of 10 mA above 30 kHz.

A suggested input network is shown in Figure A.10.3.3.

A.10.3.3.3 This test is not valid when performed on the load side of an isolation transformer or an isolated power system, because the values obtained will be falsely low.

A.10.3.6 Although the touch current value is 500 μA , the patient lead leakage current limit for nonisolated input has

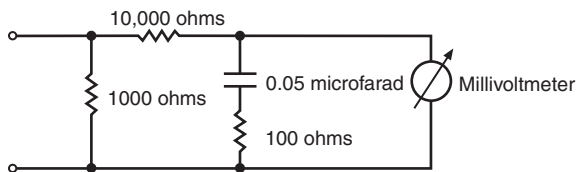


FIGURE A.10.3.3 Leakage Current Measurements (1.0 Millivoltmeter Reading Corresponds to Input Current of 1.0 Microampere).

been intentionally limited to 100 μ A. This decision is in recognition of the need for a greater level of electrical safety for those portions of devices that make direct electrical patient connection.

N A.10.5.2.2 The reference to ANSI/AAMI ES60601-1 is the U.S. version and includes deviations for use in the United States. Other countries often use the IEC version or other versions with deviations.

Δ A.10.5.2.5 Systems should comply with the appropriate medical device or system standards such as ANSI/AAMI ES60601-1, *Medical Electrical Equipment*. Consideration should also be given to the guidance provided as part of the documentation supplied with the individual medical equipment.

Δ A.10.5.4.5 The use of electrical equipment in spaces where there is a high oxygen content is a matter of concern because of the fire hazard. It is particularly a problem where the oxygen is “pure,” that is, 80 percent to 90 percent, because materials that are not very flammable in ordinary air become extremely flammable in pure oxygen.

In medical practice, particularly in surgery, patients are often given supplemental oxygen via respirator, anesthesia machines, and so forth. Such supplemental oxygen can range from room air to 100 percent oxygen. Clearly, different levels of protection are needed.

This code addresses the problem by defining the following three elements of the situation:

- (1) *Type of Air*. An oxygen-enriched atmosphere (OEA) is air that ranges from slightly enriched (23.5 percent, rather than 21 percent) to total oxygen (100 percent).
- (2) *Type of Apparatus*. Oxygen delivery equipment (ODE) is a device that delivers an OEA to a patient.
- (3) *Type of Space*. A site of intentional expulsion (SIE) is a small-volume space where oxygen that has been delivered to the patient is discharged to the ambient air.

When an OEA is within ODE, it is much more likely to have a high concentration of oxygen. Paragraph 10.5.4 therefore advises manufacturers, and A.10.5.4.5 advises users, of precautions to take to reduce the fire hazard. Paragraph 10.5.4 lists four ways of attacking the problem. Note that an OEA can be created not only in a ventilator or oxygen tubing, but also in an oxygen tent or incubator. Special precautions should be taken.

At the other extreme of hazard is a space in the open air, the site of intentional expulsion (SIE). This space is defined as located within 30.5 cm (12 in.) of the exhaust port, because, in most instances, dilution to ambient levels occurs within a few inches of the port; 30.5 cm (12 in.) provides an adequate safety factor. Paragraph 10.5.4.1 provides guidance to minimize this hazard by requiring that only those parts of the apparatus that are intended to be within the SIE are to be of concern. Even these components, such as nurse call buttons, leads, and so forth, do not necessarily need to be listed for use in OEA, because they usually conform to provisions of 10.5.4.1(4); that is, they do not have hot surfaces, and they meet the requirements of Figure 10.5.4.1(a) through Figure 10.5.4.1(f).

The intent of A.10.5.4.5 is to advise users to specify appliances that meet higher requirements where the hazard is higher but not to overspecify where the hazard is minimal. Thus, as they are ordinarily used, nurse call buttons, pillow speakers,

and so forth, do not need to be listed for use in oxygen-enriched atmospheres.

Note, however, that these requirements apply only to the intended use. The user should exercise vigilance to guard against an unintended use or an accidental failure, which can vastly increase the hazard.

A.10.5.4.6 Where possible, combustible materials such as hair, fabric, and paper should be removed from the vicinity where the energy is delivered. Water-soluble surgical jelly has been shown to dramatically reduce the combustibility of such materials.

A.10.5.5.1 Most laboratory fires involve biomedical or other electronic equipment failures. The most common ignition factors are short circuits or ground faults. Electrical wire or cable insulation is the material most likely to first ignite in a clinical laboratory fire. (See Hoeltge, G.A., Miller, A., Klein, B.R., Hamlin, W.B., “Accidental fires in clinical laboratories.”)

A.10.5.6.2 Although several approaches to documentation exist in hospitals, the minimum acceptable documentation should identify what was tested, when it was tested, and whether it performed successfully. Adopting a system of exception reporting can be the most efficient form of record keeping for routine rechecks of equipment or systems, thereby minimizing technicians’ time in recording the value of each measurement taken. For example, once a test protocol is established, which simply means testing the equipment or system consistent with Chapter 10, the only item (value) that needs to be recorded is the failure or the deviation from the requirements of the chapter that was detected when a corrective action (repair) was undertaken. This approach can serve to eliminate, for example, the need to keep individual room sheets to record measured results on each receptacle or to record measurement values of all types of leakage current tests.

A.10.5.8.1 “Personnel” includes physicians, nurses, nursing assistants, engineers, and technicians.

A.10.5.8.3 Qualification for equipment servicing does not always include manufacturer training, as required knowledge and skills can be obtained by other means.

A.11.1.2 Respiratory therapy is an allied health specialty employed with medical direction in the treatment, management, control, diagnostic evaluation, and care of patients with deficiencies and abnormalities of the cardiopulmonary system. (Courtesy of the American Association for Respiratory Therapy, 1720 Regal Row, Dallas, TX 75235.)

Respiratory therapy includes the therapeutic use of the following: medical gases and administration apparatus, environmental control systems, humidification, aerosols, medications, ventilatory support, bronchopulmonary drainage, pulmonary rehabilitation, cardiopulmonary resuscitation, and airway management. (Courtesy of the American Association for Respiratory Therapy, 1720 Regal Row, Dallas, TX 75235.)

There is a continual need for human diligence in the establishment and maintenance of safe practices for respiratory therapy. It is essential for personnel having responsibility for respiratory therapy to establish and enforce appropriate programs to fulfill the provisions of this chapter.

It is the responsibility of the administrative and professional staff of a hospital, or safety director, if one is appointed, to adopt and enforce appropriate regulations for a hospital. In

other health care facilities, responsibility could be assigned to a safety director, or other responsible person, who is, in turn, responsible to the administration.

In institutions having a respiratory therapy service, it is recommended that this service be directly responsible for the administration of Chapter 11. Hazards can be mitigated only when there is continual recognition and understanding.

A.11.1.4 See Chapter 14.

A.11.1.5 Risk categorization is not appropriate for this chapter. Much of the chapter deals with gas equipment safety issues.

Any storage or use of gas equipment in a health care facility presents risks that the requirements of this chapter reduce. Any gas-related device that does not meet these requirements poses the same risk to patients or personnel, regardless of where it is used or its clinical application.

A.11.2.8 It is particularly important that the intermixing of oxidizing and flammable gases under pressure be scrupulously avoided. Such mixing can result in a violent explosion.

Δ A.11.3.4 See Table A.11.3.4.

Δ Table A.11.3.4 Typical Medical Gas Cylinders' Volume and Weight of Available Contents [All Volumes at 21.1°C (70°F) and 101.325 kPa (14.696 psi)]

Cylinder Style and Dimensions	Nominal Volume [L (in. ³)]	Contents	Name of Gas							Mixtures of Oxygen	
			Air	Carbon Dioxide	Helium	Nitrogen	Nitrous Oxide	Oxygen	Helium	CO ₂	
B 8.89 × 33 cm (3½ in. O.D. × 13 in.)	1.43 (87)	kPa (psig) L (ft ³) kg (lb-oz)		5778 (838) 370 (13) 0.68 (1–8)				13,100 (1900) 200 (7) —			
D 10.8 × 43 cm (4¼ in. O.D. × 17 in.)	2.88 (176)	kPa (psig) L (ft ³) kg (lb-oz)	13,100 (1900) 375 (13) —	5778 (838) 940 (33) 1.73 (3–13)	11,032 (1600) 300 (11) —	13,100 (1900) 370 (13) —	5137 (745) 940 (33) 1.73 (3–13)	13,100 (1900) 400 (14) —	*	*	
E 10.8 × 66 cm (4¼ in. O.D. × 26 in.)	4.80 (293)	kPa (psig) L (ft ³) kg (lb-oz)	13100 (1900) 625 (22) —	5778 (838) 1590 (56) 2.92 (6–7)	11,032 (1600) 500 (18) —	13,100 (1900) 610 (22) —	5137 (745) 1590 (56) 2.92 (6–7)	13,100 (1900) 660 (23) —	*	*	
M 17.8 × 109 cm (7 in. O.D. × 43 in.)	21.9 (1337)	kPa (psig) L (ft ³) kg (lb-oz)	13,100 (1900) 2850 (101) —	5778 (838) 7570 (267) 13.9 (30–10)	11,032 (1600) 2260 (80) —	15,169 (2200) 3200 (113) —	5137 (745) 7570 (267) 13.9 (30–10)	15,169 (2200) 3450 (122) —	*	*	
G 21.6 × 130 cm (8½ in. O.D. × 51 in.)	38.8 (2370)	kPa (psig) L (ft ³) kg (lb-oz)	13,100 (1900) 5050 (178) —	5778 (838) 12,300 (434) 22.7 (50–0)	11,032 (1600) 4000 (141) —	15,169 (2200) 5000 (176) —	5137 (745) 13,800 (487) 25.4 (56–0)	15,169 (2200) 6000 (211) —	*	*	
H or K 23.5 × 130 cm (9¼ in. O.D. × 51 in.)	43.6 (2660)	kPa (psig) L (ft ³) kg (lb-oz)	15,169 (2200) 6550 (231) —	5778 (838) 15,840 (559) 29.1 (64)	15,169 (2200) 6000 (212) —	15,169 (2200) 6400 (226) —	5137 (745) 15,800 (558) 29.1 (64)	15,169† (2200†) 6900 (244) —	*	*	

Notes:

These are computed contents based on nominal cylinder volumes and rounded to no greater variance than ±1 percent.

* The pressure and weight of mixed gases will vary according to the composition of the mixture.

†275 ft³/7800 L cylinders at 2490 psig are available on request.

Source: Compressed Gas Association, Inc.

A.11.3.5 When determining the volume of storage, do not consider cylinders and containers that are in use. Only the volume of stored gas that is in excess of 300 ft³ is required to be located in an enclosure, since 11.3.6 already permits up to 300 ft³ without any special storage requirements.

A.11.4.1.1 If the sole source of supply of nonflammable medical gases, such as nitrous oxide and oxygen, is a system of cylinders attached directly to, and supported by, the device (such as a gas anesthesia apparatus) used to administer these gases, it is recommended that two cylinders of each gas be attached to the administering device.

A.11.4.1.2 The Pin-Index Safety System consists of a combination of two pins projecting from the yoke assembly of the apparatus and so positioned as to fit into matching holes drilled into the cylinder valves. It is intended to protect against the possibility of error in attaching the flush-type valves, with which gas cylinders and other sources of gas supply are equipped, to gas apparatus having yoke connections.

A.11.4.1.4 Fabrication specifications are contained in CGA V-1 (ANSI B57.1), *Standard for Compressed Gas Cylinder Valve Outlet and Inlet Connections*. Connection No. 860, shown in that document, illustrates the system. Connection No. 870 (Oxygen, Medical), Connection No. 880 (Oxygen–Carbon Dioxide Mixture), Connection No. 890 (Oxygen–Helium Mixture), Connection No. 900 (Ethylene), Connection No. 910 (Nitrous Oxide), Connection No. 920 (Cyclopropane), Connection No. 930 (Helium), and Connection No. 940 (Carbon Dioxide) are for specific medical gases and gas mixtures and utilize the basic dimensions of Connection 860.

A.11.4.3.2 For example, ozone sterilizers using medical grade oxygen from the piped distribution system should meet the following requirements:

- (1) Not be permanently attached to the piped distribution system
- (2) Be a medical device that has been listed for the intended purpose with the United States Food & Drug Administration
- (3) Operate at or below 5 psig (34.5 kPa)

A.11.5.1.1.2 Outside of a patient care room, 11.5.1.1.2 prohibits sources of open flames within the site of intentional expulsion [1 ft (0.3 m)] of a nasal cannula. No sources of open flame are permitted within the area of administration [15 ft (4.3 m)] for other types of oxygen delivery equipment or in patient care spaces (see 11.5.1.1.3).

The amount of oxygen delivered by a nasal cannula is limited. One ft (0.3 m) is sufficient separation from an oxygen-enriched atmosphere produced by a nasal cannula, which is oxygen delivery equipment used outside of patient care spaces. In the open air, dilution goes to ambient levels (not oxygen-enriched atmosphere) within a few inches of the cannula openings, but 12 in. (300 mm) provides an adequate safety factor. Other oxygen delivery equipment, such as masks, are not included since masks would not typically be associated with mobile patients in health care facilities and can deliver greater quantities of oxygen than nasal cannula.

The household-style nursing homes that include kitchens intended for residents' use and enclosed gas fireplaces present a source of flame ignition to which residents will be exposed. Residents utilizing a nasal cannula would potentially not be allowed to participate in the cooking because it would place

the cooking flame within the site of intentional expulsion. However, they would be allowed in the kitchen area to assist in preparing the food and to socialize with other residents and staff in the kitchen similar to what happens in the kitchens of residential environments.

The primary concern is that flame-producing equipment exists in many places in a nursing home and that it would be impractical to maintain a resident with a nasal cannula a minimum of 15 ft (4.3 m) (Area of Administration) away from the flame-producing equipment. Typical flame-producing equipment found in a nursing home includes the following:

- (1) Candles in chapels
- (2) Open kitchens using gas cooking equipment
- (3) Fireplaces
- (4) Fuel-fired heating equipment
- (5) Private family dining rooms using fuel-fired equipment
- (6) Canned cooking fuel (e.g., used under chafing dishes)

A.11.5.1.1.3 Patients and hospital personnel in the area of administration should be advised of respiratory therapy hazards and regulations.

Visitors should be cautioned of these hazards through the prominent posting of signs. (See 11.3.10.)

A.11.5.1.1.4 Solid fuel-burning appliances include wood-burning fireplaces, wood stoves, and similar appliances. These pose a greater risk in locations where oxygen is being provided than gas-fueled appliances, in part due to their ability to emit embers into the environment.

A.11.5.1.1.5 Such toys have been associated with fire incidents in health care facilities.

A suggested text for precautionary signs for oxygen tent canopies and oxygen hoods used in pediatric nursing units is the following:

CAUTION: OXYGEN IN USE

ONLY TOYS APPROVED BY

NURSES MAY BE GIVEN TO CHILD

A.11.5.1.3.3 Service manuals, instructions, and procedures provided by the manufacturer should be considered in the development of a program for maintenance of equipment. The experience accumulated by the facility and others (evidence-based maintenance) should be used to adjust manufacturer's recommendations whenever and wherever appropriate, even if they indicate no maintenance program is required.

A.11.5.2.1.1 "Personnel" typically includes physicians, nurses, nursing assistants, respiratory therapists, engineers, technicians, and others.

A.11.5.2.2.2 CGA P-2.5 contains both mandatory and nonmandatory language. Enforceable language uses the term shall; nonmandatory language uses the term should. This section indicates that NFPA 99 is making reference only to the mandatory requirements in that document.

A.11.5.2.3.2 CGA P-2.6, *Transfilling of Liquid Oxygen to Be Used for Respiration*, describes the recommended precautions and safety procedures when transfilling liquid oxygen used for respiration. Mishandling of oxygen presents potential hazards to both trained and untrained persons. Organizations engaged in the transfilling of liquid oxygen should ensure that person-

nel are familiar with the hazards of cryogenic liquid oxygen and that they comply with applicable regulations and safety practices.

A.11.5.2.4 Oxygen concentrator filling systems are FDA approved and have been in use for many years with excellent safety records. The inherent risks associated with typical trans-filling do not apply to oxygen concentrator filling compressors.

Limitations were placed on these systems in order to prevent the risks associated with larger, higher flow, or higher pressure systems being introduced into the patient environment. The cylinder size was limited to cylinders normally used for patient ambulation. The filling rate was limited to prevent excessive heating of the cylinder contents. The filling pressure was limited based on the existing industry practice.

A.11.5.3.2 Precautionary signs should be at least 21 cm × 28 cm (8 in. × 11 in.).

Any material that can burn in air will burn more rapidly in the presence of oxygen.

Special signs and additional precautionary measures should be employed whenever foreign languages present a communication problem. (See Figure A.11.5.3.2.)

No electrical equipment is permitted within an oxygen enclosure or within 1.5 m (5 ft) of the enclosure.

■ A.11.6.5.5 For further guidance, refer to CGA P-50, *Site Security Standard*.

A.11.7.3.1 The seller has a responsibility to provide written instructions to the user in accordance with 11.7.2. In fulfilling this responsibility, the seller should explain to the user the use of the equipment being delivered and precautions that are to be taken. The seller's written instructions are intended to make the user aware of the hazards of the material and to provide recommendations that will address the location, restraint, movement, and refill of ambulatory containers when these containers are to be refilled by the user. However, the user has the responsibility to receive, read, and understand the written material regarding storage and use of liquid oxygen and the containers and equipment that are furnished by the seller. In addition to specific information or instructions provided by the seller or equipment manufacturer regarding the storage or use of the equipment and of the liquid oxygen or the containers used, the user remains responsible to see that the containers are used or maintained in accordance with the **seller's** instructions to ensure that they are as follows:

- (1) Located and maintained in accordance with the requirements of 11.7.3.2



▲ FIGURE A.11.5.3.2 Suggested Minimum Text for Precautionary Signs.

- (2) Restrained in accordance with the requirements of 11.7.3.3
- (3) Handled or transported in accordance with the requirements of 11.7.3.4
- (4) Refilled in accordance with the requirements of 11.7.3.6 and the manufacturer's instructions when liquid oxygen ambulatory containers are to be refilled by the user

CGA P-2.7 *Guide for the Safe Storage, Handling, and Use of Small Portable Liquid Oxygen Systems in Health Care Facilities*, describes the recommended precautions and safety procedures to be followed when liquid oxygen systems are used within health care facilities. Mishandling of oxygen presents potential hazards to both trained and untrained persons. It is, therefore, important that personnel who assume responsibility for oxygen equipment and its use be familiar with the hazards of oxygen, the operational characteristic of the equipment, and the precautions to be observed while using it.

A.11.7.3.3 Two points of contact can be provided by using elements of a room or furnishings in the room, such as the walls of a corner of a room, or a wall and a furnishing or object, such as a table or a desk.

A.11.7.3.5 CGA P-2.7, *Guide for the Safe Storage, Handling, and Use of Small Portable Liquid Oxygen Systems in Health Care Facilities*, describes the recommended precautions and safety procedures to be followed when liquid oxygen systems are used within health care facilities, such as a 5 ft separation from electrical appliances during filling and use.

Mishandling of oxygen presents potential hazards to both trained and untrained persons. It is therefore important that personnel who assume responsibility for oxygen equipment and its use be familiar with the hazards of oxygen, the operational characteristic of the equipment, and the precautions to be observed while using it.

A.11.7.3.6.1.1 Drip pans or similar containment devices are used in order to protect against liquid oxygen spillage coming into contact with combustible surfaces, including asphalt, which would elevate the potential for ignition.

A.12.1 Such facilities include, but are not limited to, hospitals, convalescent or nursing homes, and emergency receiving stations. A government authority could formally designate such facilities as disaster treatment centers. Such facilities would not normally include doctors' or dentists' offices, medical laboratories, or school nurseries, unless such facilities are used for treatment of disaster victims. National bioterrorism preparedness efforts call for the use of schools and other large public facilities to provide facilities for mass immunization.

▲ A.12.1.1 Throughout this chapter, wherever the term *hospital* is used, the term should also apply to other types of health care facilities. Applicable facilities include, but are not limited to, hospitals, convalescent or nursing homes, and emergency receiving stations. A government authority could formally designate such facilities as disaster treatment centers. Such facilities would not normally include doctors' or dentists' offices, medical laboratories, or school nurseries, unless such facilities are used for treatment of disaster victims. National bioterrorism preparedness efforts call for the use of schools and other large public facilities to provide facilities for mass immunization. An emergency management program (formerly known as a disaster plan or internal/external plan) encompasses activities across four phases: mitigation, preparedness,